 


ELECTRIC BUG ZAPPER

MO-008C

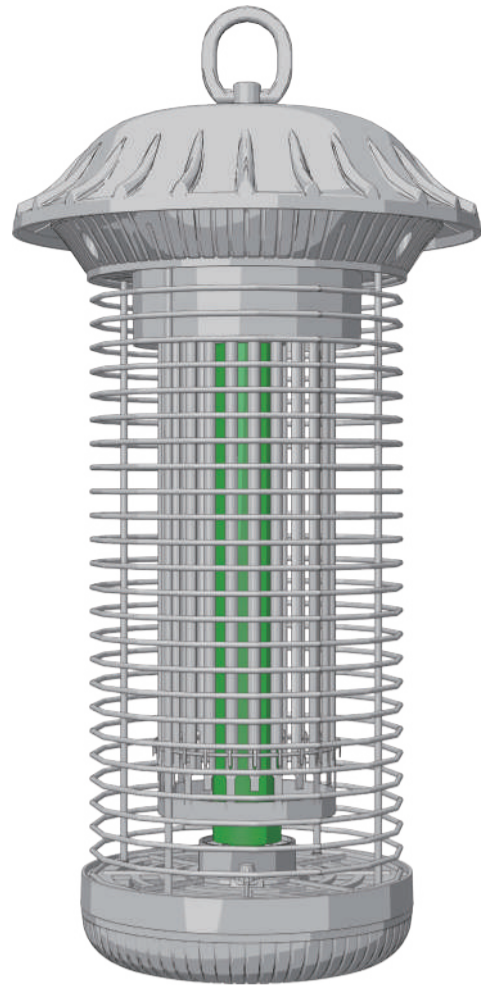

User Manual

Please read these instructions before using the Buzbug Bug Zapper and keep for future reference.

Dear Customer,

Thank you for choosing Buzbug to be a part of your home. At Buzbug, we believe that comfort, health, and peace of mind should never be disrupted by buzzing pests. That is why our journey began with one simple idea — to help families enjoy cleaner, safer, and more relaxing living spaces.

Driven by innovation and environmental awareness, we blend advanced technology with sustainable design to create peaceful, pest-free environments. From energy-saving UV-LEDs to solar-powered outdoor solutions, our products are built to protect your home while supporting a greener future.

Your experience matters to us. If you ever need support, warranty service, or replacement assistance, please feel free to reach out — we're always here to help.

Customer Support & Warranty



24/7 Live Chat
buzbug.com



Email Support
support@buzbug.com



12-Month Product
Warranty

Warm regards,
Team Buzbug

TROUBLESHOOTING

Caution: Unplug the bug zapper and use a screwdriver to safely discharge it before performing any operation.

Problem	Possible Cause	Correction
Bulb does not light and has voltage on the grid.	1. Bulb is loose or not properly seated. 2. Bulb is burned out.	1. Ensure the bulb is correctly installed. 2. Replace the bulb.
Bulb lights, but no high voltage on the grid.	1. Power grid short circuit. 2. Damage to the high-voltage grid wire or circuit board.	1. Check and clean the grids. 2. Contact the Buzbug Customer Service Team for a product replacement.
Intermittent or continuous sparking between grid rods.	1. Distance between grid bars is too small. 2. Foreign material on the grid.	1. Unplug the unit, discharging for 10 seconds with a screwdriver, and adjust the grids by bending them back into alignment. 2. Clean any buildup from the grid.
Bulb is lit but no longer attracts insects.	1. Reduced insect-attracting effectiveness of the bulb over time. 2. Lack of insect bait.	1. Replace a new bulb. 2. Consider placing bait such as fruit peels, ham, or desserts at the bottom of the tray to improve attraction.

Any problems you encounter that are not corrected by the action recommended in this chart should be referred to the **Buzbug Customer Service**.

FCC STATEMENT:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.





Manufacturer: Foshan OSA Electrical Co., Ltd.
Address: Jiangcun Bridge Side, Longzhou Rd, Leliu Town, Shunde, Foshan 528322, Guangdong, China



SPECIFICATION

Product Model: MO-008C
 Input Voltage: AC110V-120V 60HZ (US/CA)
 Rated Power: 10W
 Bulb Model: WA-008
 EPA Est Number: 95663-CHN-1
 Net Weight: 728 g
 Product Size: 12.59 × 6.8 in / 320 × 170 mm

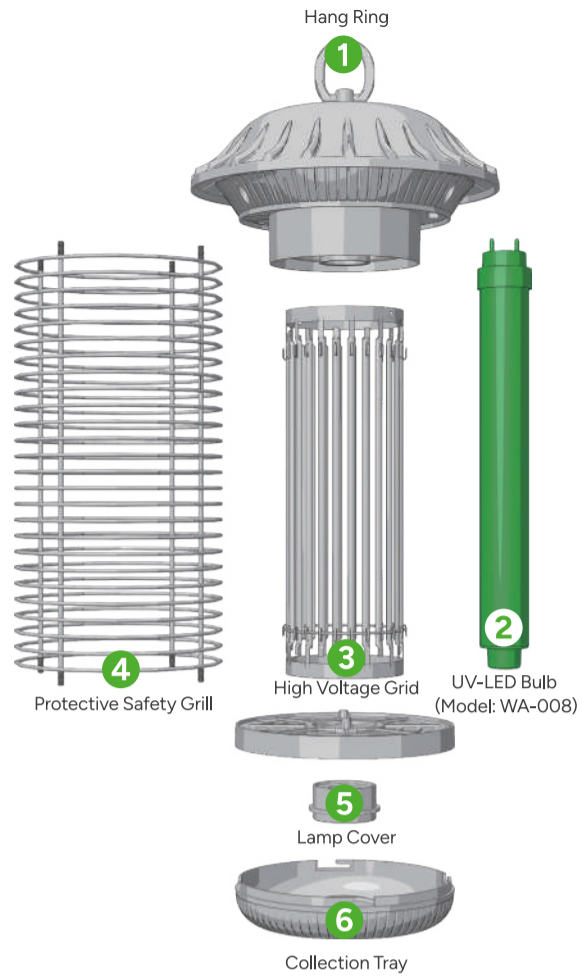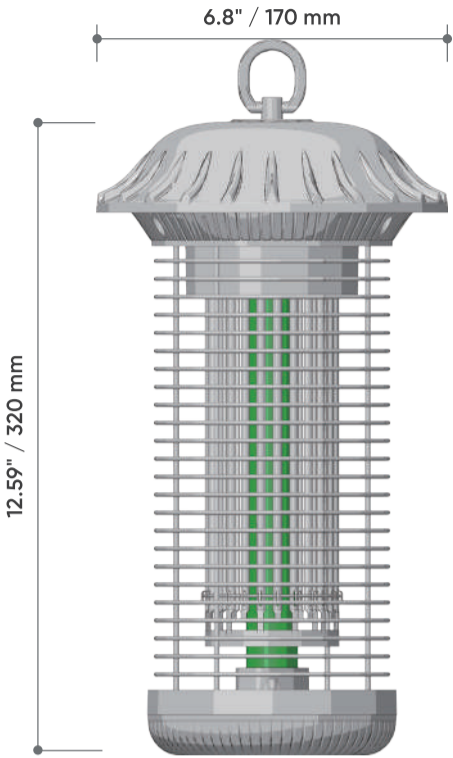

- 1 Hang Ring
- 2 UV-LED Bulb (Model: WA-008)
- 3 High Voltage Grid
- 4 Protective Safety Grill
- 5 Lamp Cover
- 6 Collection Tray

Warning

1. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. Appliance are not suitable for use in barns, stables and similar locations.
4. The appliance is to be kept out of reach of children.
5. The appliance is not to be used in locations where flammable vapour or explosive dust is likely to exist.
6. DANGER: HIGH VOLTAGE. Do not insert any objects or touch the internal metal grid during operation.
7. Disconnect the unit from the main power by unplugging it and wait 1 minute before any cleaning or maintenance.
8. Skin or eye damage may result from prolonged direct viewing of the light produced by the lamp in this apparatus. Install the product at a minimum 1m distance from spaces with continuous 8-hour human activities so that people are not continuously exposed to UV.

INSTALLATION


Choose a sturdy mounting device from which to hang the unit, such as a pole, tree, or other freestanding support.

PLACEMENT

Suitable for bedrooms, living rooms, hotels, restaurants, courtyards, gardens, patios and similar places. Recommended usage:

1. Place the bug zapper in a dark location while it is operating.
2. Position the bug zapper 6–8 ft (≈1.8–2.4 m) above the ground.
3. Close doors and windows to prevent additional mosquitoes from entering.
4. Turn on the bug zapper at least 3 hours before humans occupy the area.
5. For best results, use continuously for 3–5 days.
6. Keep away from flammable materials such as paper, clothes, curtains, or quilts.
7. Keep out of reach of children, pets and animals.



Note: The blue-violet light of the bug zapper is relatively weak compared to natural light or regular bulbs. Avoid using it in brightly lit areas, as insects are less likely to be attracted.

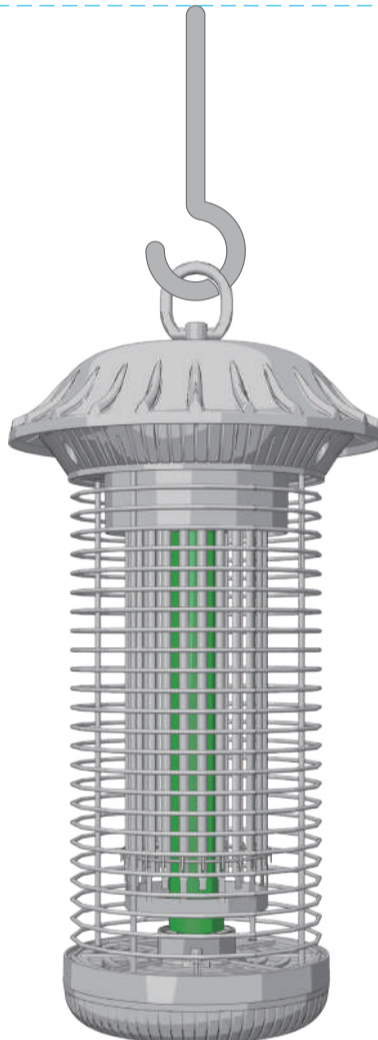

LAMP REPLACEMENT & CLEANING

1. Power Off & Safety Discharge


Unplug the device. Wait at least 1 minute for residual electricity to dissipate. Briefly touch the internal grid with a screwdriver with an insulated handle (5–10 seconds) to safely discharge any remaining charge.

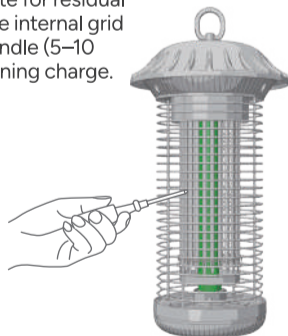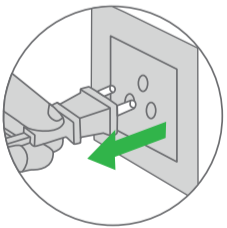

2. Cleaning

- 1 Remove the tray.
- 2 Empty and clean the tray.
- 3 Wipe the metal grid and safety grill with a dry brush or soft cloth.

CAUTION: Do not clean the device with water or a water spray or the like to prevent damage or electrical shock. Avoid abrasive solvents on plastic parts.

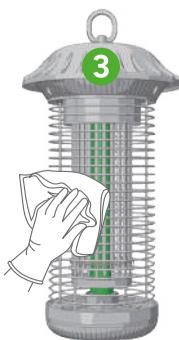

3. Lamp Replacement

- 1 Unscrew the bottom screw with a screwdriver.
- 2 Remove the lamp cover and old lamp. Align the new lamp's tab with the socket tab and insert it.
- 3 Tighten the screws to secure the lamp.

NOTICE: The replacement bulb for MO-008C is Buzbug WA-008. Only this bulb model should be used.

