


SMART DIGITAL PHOTO FRAME

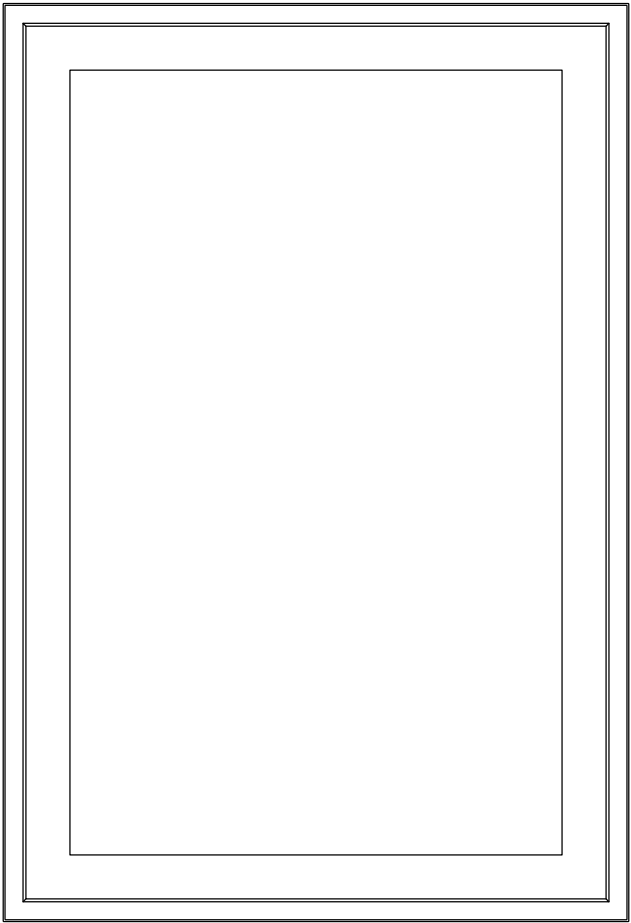

-- User Manual --

Safety Precautions

WARNING: To avoid fire, electric shock or device damage, please comply with the following requirements.

1. Always use the original power adapter for this device. Do not use mismatched chargers.
2. Keep the device away from water and humidity. Do not place it in bathrooms or near water sources. Prevent liquid spillage onto the unit.
3. Do not place the device in high temperature locations, direct sunlight or near heating outlets.
4. Place the device on a stable surface to prevent falling. Do not apply heavy pressure to the display screen.
5. Do not disassemble or modify the device by yourself. In case of abnormal heat or strange odor, cut off power immediately and contact after sales support.
6. This product is for indoor use only. Do not use it outdoors.
7. Keep children under adult supervision during use to avoid hazards caused by tangled power cords.

Packing List

Please check all accessories after opening the package. Contact your dealer if any item is missing.

Calendar Machine Host ×1

Bracket & Power Cord ×1

User Manual ×1

Warranty Card ×1

Warranty Statement

1. This product complies with national three guarantee policy. Please keep purchase receipt for warranty service.
2. Free warranty is NOT available for damage caused by water ingress, dropping, physical impact or unauthorized disassembly.
3. Please keep your warranty card properly.

Product Introduction

Appearance Description

Front: Display screen, shows calendar main interface, schedules, to do items and cloud frame photos.

Back: Power port, reset hole, support bracket (for desktop placement).

Reset Hole Instruction: When the device freezes, gently press the reset hole with a thin needle to restart the device.

Main Screen Interface

Main interface displays: Date, Weekday, Weather, Tasks, To do Schedules, Wi Fi status icon.

Quick Start (First time Power on)

Power on

Plug the power cord into the calendar machine. Connect the included 5V 2A adapter to mains power, the device will power on automatically.

Follow the on screen startup wizard, select system language and tap **【Next】** .

Select network and connect Wi Fi, then tap **【Next】** after successful connection.

APP Download: Android users: Search for "LinkTime" in application stores and install it. iOS users: Search for "LinkTime" in App Store and install it.

Enter home page after APP installation is completed.

Connect WiFi

Select and connect a 2.4GHz Wi Fi network (5G Wi Fi is not supported).

Enter Wi Fi password to complete connection. The device will synchronize system time automatically when network is available, tap **【Next】** .

Note: Wi Fi passwords are case sensitive. Double check your password if connection fails.

Download APP & Bind Device

Two ways to download APP:

Scan the QR code displayed on calendar machine screen to download APP (supports Android & iOS).

Search "LinkTime" in mobile application stores for installation.

Binding Steps:

Launch LinkTime APP, register or log in to your account.

Tap **【Add Device】** in APP, scan the binding QR code shown on calendar machine screen.

Hint: One calendar machine can be shared and accessed by multiple family member accounts.

Calendar Machine Hardware Operation

View Schedules

Check all schedules, to do tasks and reminders directly on main screen.

Task Completion Check off

Tap task item to mark it as completed once finished.

Cloud Photo Frame Mode

Switch to photo frame mode to display photos pushed from APP.

Alarm Mode

Set alarm reminders via mobile APP.

System Settings

WIFI: Wi Fi connection & network information view

General: Language, date & time setup, SD card formatting, factory data reset

Display: Manual screen brightness adjustment

Sound: Mute, notification volume, alarm volume, key tone switch

Calendar: Set first day of week for calendar view

Photo: Slide show auto play, picture switch interval, time & weather display toggle

Screen: Saver Device model, firmware version, device QR code

Help: OTA firmware upgrade (Keep Wi Fi & power connected; do NOT power off during upgrade)

.About: APP download QR code, member binding QR code, model, firmware

12.Version: serial number, MAC address, IP address, storage information

Calendar Machine APP Instructions (Android & iOS)

The supporting APP enables remote device management from mobile phone. Changes made in APP will synchronize automatically to calendar machine hardware.

Add To do / Task

Tap **【+】** on APP home page to create new task.

Input task title, select date and reminder time. Tap microphone icon for quick voice input.

Save the task; it will appear on corresponding calendar date with pop up reminder when due.

Check the box to mark task as completed.

Photo Album

Enter photo album page and tap **【+】** to select images.

Tap "Done", you may select "Sync to Cloud Album".

Tap upload. Upload succeeds when transfer list shows "N photo(s) uploaded successfully".

Cloud Album Information

Free quota: 20 photos for storage. Paid membership: Larger expandable storage space. Membership packages and benefits are subject to in APP display.

Alarm

Tap **【+】** on APP alarm page to add new alarm.

Configure repeat cycle, label, snooze, voice prompt and snooze duration.

Save settings; alarms will trigger reminders on calendar machine.

Multi user Family Sharing Settings

Multiple family members can manage one calendar machine.

Bring up **【Member Binding QR Code】** on calendar machine screen. Family members scan this QR code via LinkTime APP to join the device.

Permission Description:

Administrator: Unbind device, manage all family members.

Ordinary Family Member: Create, edit and delete self created schedules only.

Maintenance

1. 1.Screen Cleaning: Power off device first. Wipe screen with soft dry cloth. Do not pour liquid directly onto screen. Avoid heavy alcohol based cleaners.
2. 2.Do not block device ventilation openings.
3. 3.Unplug power cord if the device will not be used for a long time.
4. 4.Prevent hard objects from scratching the display panel.

FCC

FCCID:2BWVA-Y101

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not in-stalled and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FAQ Troubleshooting

Notice: Factory reset erases all local schedules and binding information. Device needs to be re bound after reset. Please contact after sales support if problems persist after following below steps.

Symptom	Solution
Device cannot power on	Check adapter, power socket and power cord connection. Try another power socket.
Fail to connect Wi Fi	Make sure you use 2.4GHz Wi Fi. Verify password. Move device closer to router. Reboot router and calendar machine.
APP modifications not updated on calendar machine	Confirm device Wi Fi is online. Restart calendar machine. Log out and re login APP. Check network connection.
Screen lagging / frozen	Press reset hole to reboot device. Perform factory reset if issue remains (all local data will be erased).
Incorrect date & time	Ensure device is connected to network; time will sync automatically.
Cannot receive pushed photos	Confirm device is online. Avoid oversized image files. Re send photos.

Technical Specifications

Screen:	10.1 inch
Power Supply:	5V 2A (Use original adapter only)
NetworkWiFi:	2.4G
Operating:	Temperature0℃ 40℃
Overall:	Dimension254mm × 173mm × 124.5mm
Installation:	MethodDesktop Bracket/Wall mountable