

 
## Product Illustration

Thank you for purchasing this complete set of NEEWER String Lights. You can control this product with the NEEWER Home app to elevate your home decoration.

## Package Contents



Light Strip



Power Adapter




Controller



User Manual

## Product Overview

 EN

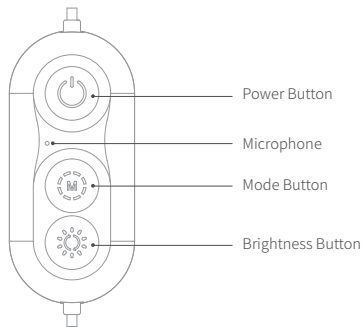

**Power Button:** Power on/off (short press).  
Reset (long press for 5 seconds).


**Microphone:** For the Music Modes.

**Mode Button:** Short press to cycle through 7 modes: Warm White, Cool White, Scene 1, Scene 2, Scene 3, Music Mode 1, Music Mode 2.

**Brightness Button:** Short/long press to adjust brightness.

## Assembly Guide

 1. Connect the light strip to a power source and check if it lights up.
2. Measure and plan the required length. Fix the beginning of the strip in place, then cut off the excess.



3. Attach the end cap, then open the NEEWER Home app to start using.



## Directions for Use

Pairing the lights with the **NEEWER Home** app.

1. Download "**NEEWER Home**" from App Store (iOS) or Google Play (Android).
2. Enable Bluetooth on your phone. Open the app, tap "+" icon at the upper right corner and search for "NS01". Tap the device name and add.
3. Only supports 2.4GHz Wi-Fi routers (802.11 b/g/n). 5GHz is not supported



Android



iOS

## Specifications

Mode	NS01
Input	24VDC 1.5A (3m/9.8Ft) ; 24VDC 2A (5m/16.4Ft)
Color	RGB
Operating temperature	-10~40°C/14~104°C

## Note

1. Do not drop the product, subject it to collisions, or severe impacts.
2. Keep away from inflammable and explosive items.

## Troubleshooting

EN

### 1. Lights won't turn on

- a. Check the power supply first. Long press the power button for 5 seconds to reset, then short press it to power on.
- b. Make sure the contacts are connected properly.

### 2. Can't pair with the NEEWER Home app

- a. Make sure Bluetooth is enabled on the phone.
- b. Keep the pairing distance within 20m. If an error occurs with the paired device, delete it from the app and pair again.
- c. Make sure your Wi-Fi router is 2.4GHz (5GHz is not supported).
- d. Make sure the password is correct when setting the Wi-Fi network.