


RGB tube light function manual

Tube

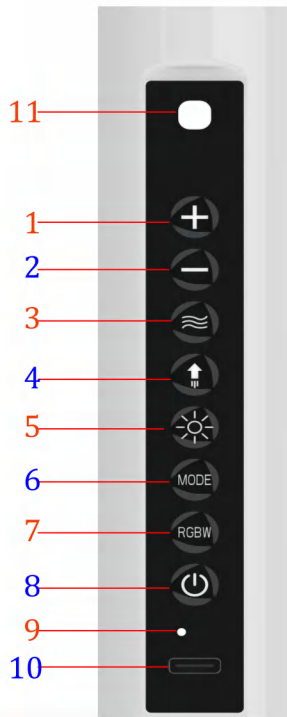

- 1: "+" increases the lighting effect/brightness/speed. Each short press increases one unit, while long press increases continuously.
- 2: "-" decreases the lighting effect/brightness/speed. Each short press decreases one unit, while long press decreases continuously.
- 3: The lighting effect button. Pressing shortly selects the current lighting effect (not brightness/speed). If in the music rhythm mode, pressing "+" or "-" can select about 48 different lighting effects available in the music rhythm mode. If in normal mode, pressing "+" or "-" can select about 500 different lighting effects.
- 4: The speed selection button. Pressing shortly (not for lighting effect/brightness) enables adjusting the running speed of the current mode's lighting with "+" or "-". The fixed color remains unchanged.
- 5: The brightness selection button. Pressing shortly (not for lighting effect/speed) enables adjusting the brightness of the current mode's lighting with "+" or "-".
- 6: The music rhythm mode and normal mode switching button. Pressing shortly cycles between the two modes.
- 7: The RGBW color switching button. Pressing shortly cycles the color of light.
- 8: The power on/off button. Short press to turn on/off the light, long press for 2 seconds to remember the current lighting effect and mode. If the memory function is used, the light will automatically return to the remembered lighting effect and mode when turned on.
- 9: Charging indicator light. The blue light flashes during charging, it stops flashing when fully charged, it will also flash quickly when the battery is low.
- 10: Type-c charging port, Input 5V/1A.
- 11: Remote infrared receiver.

Remote controller

500 kinds normal light effect
48 kinds music rhythm light effect
M+: light effect+
M-: light effect-

10 levels speed adjust
S+: speed+
S-: speed-

Monochrome display, press these buttons, light strip displays its corresponding colors.

Power on

Normal mode: short press AUTO into the automatic mode, 20s automatic to the next light effect. long press AUTO 3s exit the music rhythm mode back to normal mode.

Short press to shutdown the light source and automatic save function, the tube light enters the standby state (the blue indicator flashes once per second). If you don't use it for a long time, you need to turn off the power button which on the tube light to reduce power consumption.

15 levels brightness+
15 levels brightness-

Short press to music rhythm mode, music rhythm mode is 3 minutes automatic to the next light effect, long press 3s to exit music rhythm mode.

A white remote controller with a grid of buttons. The top row has 'On' (red), 'AUTO', and 'Off' (red) buttons. Below are 'S+' and 'S-' (speed), 'M+' and 'M-' (light effect), and a 4-way directional pad. The next section contains a 4x3 grid of 12 color buttons (red, green, blue, yellow, orange, purple, pink, light blue, dark blue, light green, light pink, white). Below the colors are '15 levels brightness+' and '15 levels brightness-' buttons. At the bottom is a 'Music Rhythm' button with a musical note icon.

FCC Warning

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.