

FRONT

MVMT

©2026 JME & Co, All Rights Reserved.
Distributed by JME & CO, NYC, LLC, New York, NY 10018
Designed in New York, Made in China
support: hello@jmeandco.com
MVMT and MVMT logo are registered trademarks of JME & Co.
The artwork and design of this package are protected by
United States Copyright law and may not be reproduced, distributed, displayed,
published, or used for any purpose without prior written permission.
You may not alter or remove any trademark or copyright notice from this
package. Because of continuous improvements,
images and product specifications may differ slightly from
the actual product.
The Bluetooth® word mark and logos are registered trademarks owned by
Bluetooth SIG, Inc. The microSD™ is a trademark of SD-3C, LLC. All other
trademarks or registered trademarks are the property of their respective owners.

⚠ WARNING: Cancer and Reproductive Harm –
www.P65Warnings.ca.gov.

FCC ID: 2A797-SP009-BKA

Fcc Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference
received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device
pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against
harmful interference in a residential installation. This equipment generates uses and can radiate radio
frequency energy and if not installed and used in accordance with the instructions may cause harmful
interference to radio communications. However, there is no guarantee that interference will not occur in a
particular installation. If this equipment does cause harmful interference to radio or television reception
which can be determined by turning the equipment off and on, the user is encouraged to try to correct
the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for
compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet General RF exposure requirement. The device can be used in
portable exposure condition without restriction.

WIRELESS

Karaoke

MICROPHONE & SPEAKER

WITH MINI USB DISCO BALL

MVMT





Because of continuous improvements, the images and the specs
on the packaging may differ slightly from the actual product.





BACK

CONTROL PANEL

PREV 3

SCAN 4

VOL + 5

NEXT 6

REC 7

VOL - 8

MIC VOL 1

REMIX 2

INPUT

10 SV

11 USB

12 TF

9

13 ON/OFF

1

2

3

4

5

6

7

8

9

10

11

12

13

1 Mic volume
Increase/Decrease slider

2 Reverb volume
Increase/Decrease slider

3 Previous song
*Under selfie mode, press it to enable
selfie function (only for ISO system
mobile phone)

4 Play/Pause
Long press: Automatic search

5 Volume increase

6 Next song

7 *With use of TF Mode
Replay/Record

8 Volume decrease

9 USB Slot

10 USB-C Charging Port

11 3.5 mm Audio Output

12 TF Power slot

13 Power button
Long press: ON/OFF

*Disco ball should turn on automatically when
Microphone is ON and is connected to USB Slot

WIRELESS KARAOKE

- Make sure the unit's battery is charged. Hold Power button to start the product.
- Wireless connection: Enable Bluetooth from your mobile device, locate the microphone's pairing name: **SP3583-BKA** and connect to the microphone. Prompt tone will notify you of a successful connection.
- Play your song selection from your device. Adjust sound: Using the Mic Volume / Reverb Volume slider to adjust the volumes to suitable level.
- Start singing Karaoke!

SELFIE FUNCTION

- Press the M/POWER button to switch from wireless mode to selfie mode.
- Turn on Bluetooth on your mobile device. Find "Shutter" in the list of available devices and select it to connect.
- Open the camera app on your mobile device. Press either the M/V+ or M/V- button to take a photo.

Note: This function requires Android 4.2.2 or later, or iOS 6.0 or later. Other versions are not currently supported. Mobile phones with a dedicated physical camera button are not supported.

TWS FUNCTION: PAIRING TWO SPEAKERS

- Turn on both speakers. Do not connect either speaker to a Bluetooth device.
- Press the power button twice on one of the speakers. The speakers will pair with each other.
- Once pairing is complete, turn on Bluetooth on your mobile device and connect to the paired speakers.

WIRED HEADPHONE OUTPUT

Insert a TF card or USB flash drive, or establish a Bluetooth connection. Then connect wired headphones to the 3.5 mm audio jack. Start audio playback from the selected source. The audio will play through the headphones.

TECHNICAL PARAMETERS

FREQUENCY RANGE	2402 - 2480MHz	POWER SUPPLY	BUILT-IN Li-Battery 858 800mAh
SPEAKER SENSITIVITY	50 dB	BATTERY CAPACITY	800 mAh
REVERBERATION MODE	SOUND EFFECT REVERBERATION	CHARGING TIME	2 Hours

M