

AIR PURIFIER

USER MANUAL



High Clean Air
Delivery Rate



Double Sided
Filtration



Air Quality Monitor



Low Noise Level



Child Lock




CUSTOMER SERVICE

Our customer service team is standing by to assist you if you have any questions or concerns.

 www.mookashops.com

 support@mookashops.com

 1-855-666-9955

DIRECTORY

IMPORTANT SAFEGUARDS

Warning	2
Attention	4

PRODUCT TECHNICAL FEATURES

Purification Technologies	6
Air Purification Process	6

PRODUCT OVERVIEW

Appearance Diagram	7
Control Panel Diagram	8

OPERATING INSTRUCTIONS

Power Connection	9
Placement	10
Filter Replacement	10
Filter Removal	11
Filter Installation	11
Aroma Function	12
Power Settings	13

DIRECTORY

INSTRUCTIONS FOR USE

Child Lock -----	14
Fan Speed -----	15
Timer -----	16
Auto Mode -----	17
Filter Replacement Indicator -----	18
Light Button -----	18

CLEANING & TROUBLESHOOTING

Cleaning The Filter -----	19
When Should I Replace The Filter -----	19
Troubleshooting -----	20

TECHNICAL SPECIFICATION

Purifier Specifications -----	21
Filter Specifications -----	21

IMPORTANT SAFEGUARDS 1

In order to prevent harm or damage to users or others, be sure to comply with the requirement as below:

READ AND SAVE THESE INSTRUCTIONS



WARNING

Improper use or mishandling may result in death.



ATTENTION

Improper use or mishandling may cause injury.



FORBID



FORCE

2 IMPORTANT SAFEGUARDS



WARNING



Always supervise children and prevent them from touching or operating the machine.



AVOID WET

Do not connect or disconnect the power with wet hands. It may cause electric shock.



DO NOT DISASSEMBLE

Do not disassemble, repair, or modify the machine. This may cause fire or damage. For repairs or replacements, contact our customer support.



FORBID

Do not use overloaded sockets or wiring connectors. Use only the rated voltage to prevent fire hazards.



KEEP DRY

Keep water away from the unit to prevent short circuits or electric shock.

IMPORTANT SAFEGUARDS 3



DISCONNECT

Before cleaning or maintenance, always unplug the device. Otherwise, accidental activation may cause electric shock or injury.



POWERFORBID

Do not insert metal objects into the unit. This may cause injury or electric shock.



 
FORBID

Do not attempt repairs if the cord or plug is damaged. This may cause a short circuit, electric shock, or fire. Contact our customer support for replacement.



Dust on the plug can weaken insulation and potentially cause a fire. Unplug the device and clean the plug with a dry cloth. If the device is not in use for a long time, remove the plug from the socket.

4 IMPORTANT SAFEGUARDS

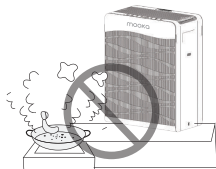


Do not use near gas stoves. This machine is not designed for ventilation and may cause injury.



Keep the unit away from open flames to prevent fire hazards.



 Avoid using in humid or high-temperature areas (e.g., bathrooms). Otherwise, it may cause electric leakage, electric shock, or fire.

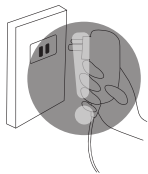


Always pull the plug (not the cord) when unplugging. Damaging the cord may cause short circuits, electric shock, or fire.

IMPORTANT SAFEGUARDS 5



 Keep away from alcohol or organic solvents. It may cause cracking, short circuits, electric shock, injury or fire.

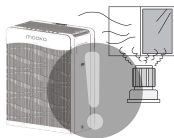

Ensure proper ventilation if used in a room with an open flame.

Unplug the device immediately if any of the following conditions occur:

- Switches not functioning
- Overheating of the power cord or plug
- Unusual smells, noises, or vibrations
- Any other signs of malfunction

If the power cord is damaged, contact customer support immediately. Never attempt self-repair.

Before servicing, ensure the appliance is unplugged or disconnected from the power supply.

WARNING: Do not use this air purifier with solid-state speed control devices to avoid fire or electric shock risks.

 
WARNING: Use only manufacturer-recommended replacement parts. Homemade parts, including 3D-printed components, are not safe and may cause fire, electric shock, or injury.

6 PRODUCT TECHNICAL FEATURES

Purification Technologies


The Double Sided filter is composed of pre-filter, HEPA layer and activated carbon layer.

Air Purification Process

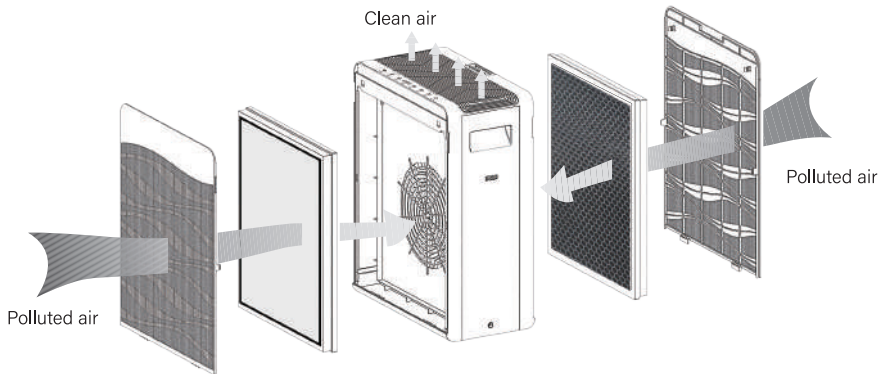

PRODUCT OVERVIEW 7

 Appearance Diagram

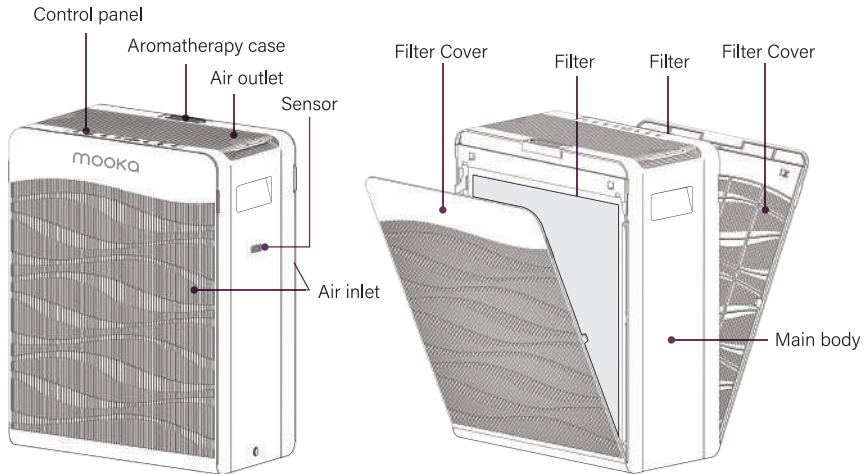


8 PARTS TO INTRODUCE

Control Panel Diagram

Fan Speed Indicator: Low, Mid, High, Sleep

 Timer Indicator: 2H, 4H, 6H, 8H

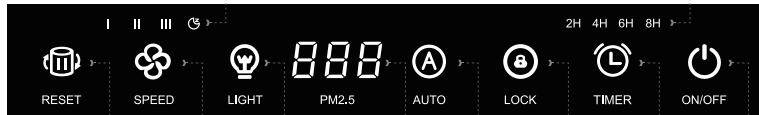

Filter Reset Button

Air Quality
Light ON/OFF

Auto Mode

Timer Button

Fan Speed Button

PM2,5 Index Display

Child Lock Button

 
Power ON/OFF

OPERATION INSTRUCTIONS 9


Power Connection

◆ AC Voltage: 100-240V 50/60Hz

Before connecting the appliance, ensure the voltage indicated on the device matches the local power supply. Do not connect to an incorrect voltage.

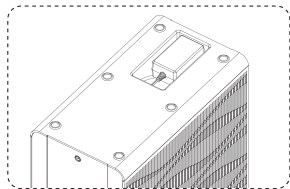

 The adapter is in a groove at the bottom of the device.

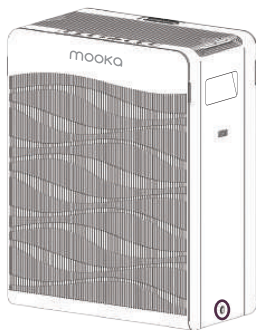

Machine socket

 


Adapter

10 OPERATION INSTRUCTIONS

Placement

- ◆ Ensure the appliance is placed at least 30 cm away from walls or furniture. Avoid placing it under objects that may block the airflow.
- ◆ Avoid placing the appliance near heat sources.

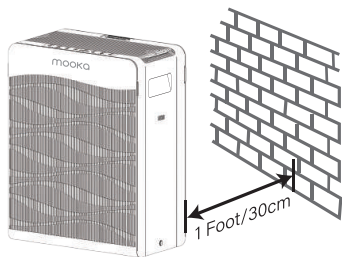

Filter Replacement

- ◆ Replace the filter and reset the indicator.

After 1440 hours of operation, the filter replacement indicator will light up. Replace the filter with a new one, then press and hold the reset button for 3 seconds to reset the filter's lifetime counter. The indicator will turn off.

OPERATION INSTRUCTIONS 11

 
Filter Removal

Power off and unplug the device. Open the cover and remove the used filters.

Filter Installation

Remove the protective film from the new filter before installation.



Insert the new filters and securely close the covers.

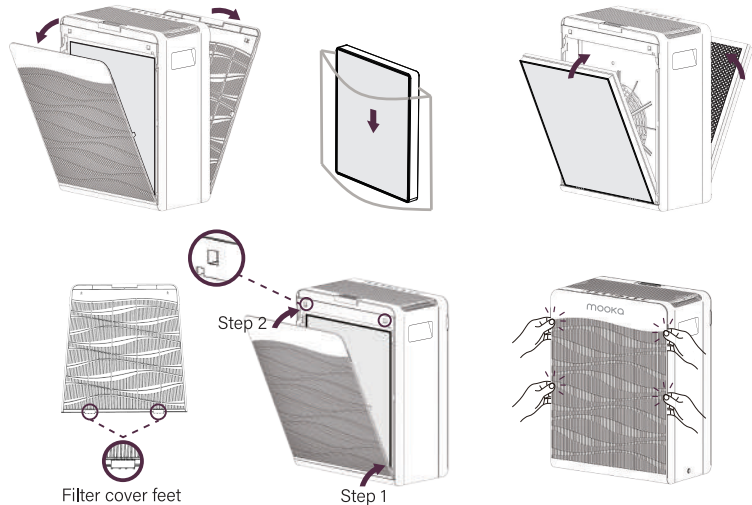

12 OPERATION INSTRUCTIONS

Aroma Function

  
- ◆ The aroma tray on the top air outlet includes a replaceable aroma pad. Add a few drops of essential oil (not included) to create a fresh and relaxing atmosphere.

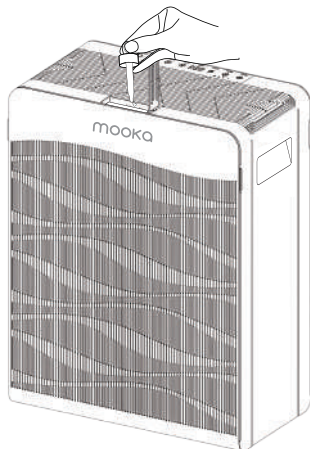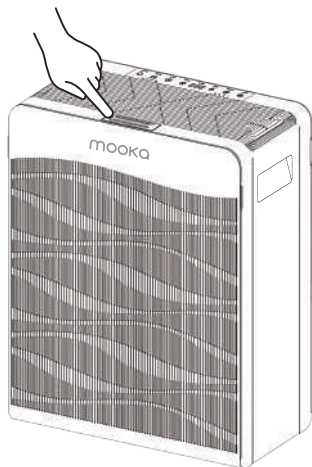


13 OPERATION INSTRUCTIONS

Power Settings

 - ◆ When the purifier is completely powered off (unplug the adapter) and then powered on, all buttons except the filter RESET button will activate for a self-check. After the self-check, the machine will enter standby mode (other lights are off and the power button is half lit).
- ◆ In standby mode, touch the Power button to turn on the device. The fan will start at low speed by default, and the air quality light will turn on. Touch the Power button again to turn off the device and return to standby mode.

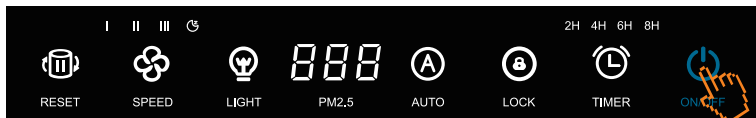

Standby Mode

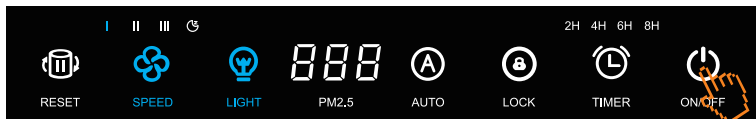 


Power-on Default State


14 INSTRUCTIONS FOR USE

Child Lock

 - ◆ Press and hold the LOCK button for 3 seconds to enable child lock. The child lock light will turn on, and all buttons will be locked. Hold the LOCK button again for 3 seconds to disable child lock and restore normal button functions.

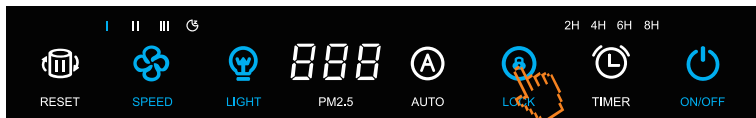

Child Lock On

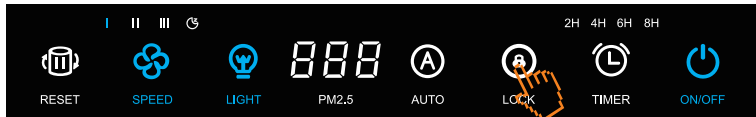 


Child Lock Off


INSTRUCTIONS FOR USE 15

Fan Speed

 
- ◆ In sleep mode, all lights (except the sleep indicator) turn off after 3 seconds. You can press any button to activate and use the light control button to control the air quality light.

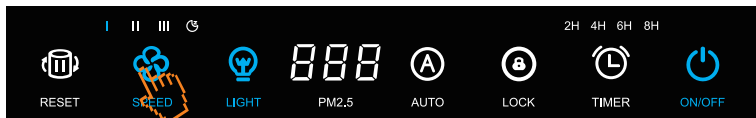


Low fan speed

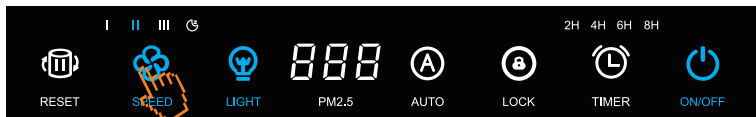 

Medium fan speed

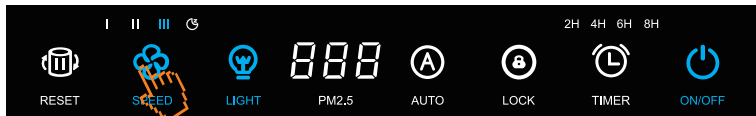 

High fan speed

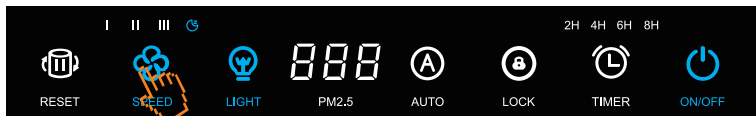 


Enter into sleep mode


16 INSTRUCTIONS FOR USE

Timer

 
- ◆ Touch the timer button to set the timer.

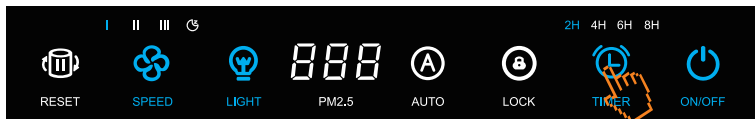


Time Setting for 2 Hours

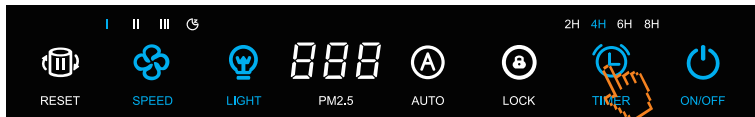 

Time Setting for 4 Hours

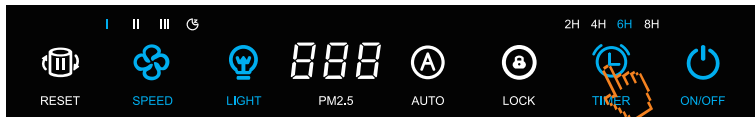 

Time Setting for 6 Hours

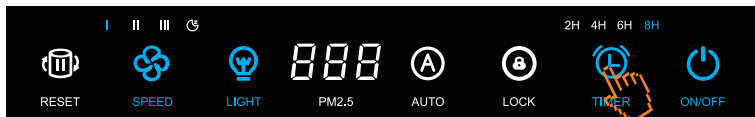 


Time Setting for 8 Hours

17 INSTRUCTIONS FOR USE

Auto Mode

 - ◆ Press the Auto button to enter the auto mode. In Auto mode, the fan speed will automatically adjust to protect your air quality.

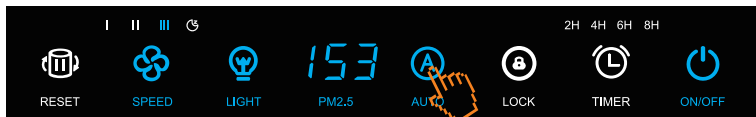

Air Quality Testing


Air Quality Indicator Chart

PM2.5 Range	Air Quality	Indicator Color	Fan Speed
0-75	Good	Green	Low
76-150	Moderate	Orange	Medium
>150	Poor	Red	High

18 INSTRUCTIONS FOR USE

Filter Replacement Indicator

 
- ◆ The filter reset button will light up after 1440 hours of filter use. Remove the plastic bag from new filters and install them properly. Hold the filter reset button for 3 seconds to reset it.

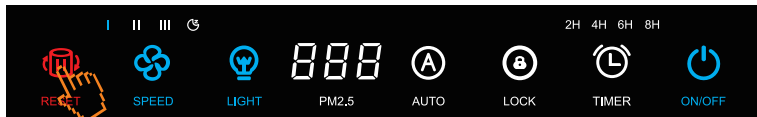


The indicator light is on

Light Button

 - ◆ The light will turn red, orange, or green accordingly depending on the detected air quality. You can press the Light button to turn on/off the light.

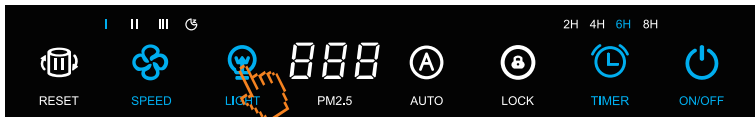

Turn on air quality light

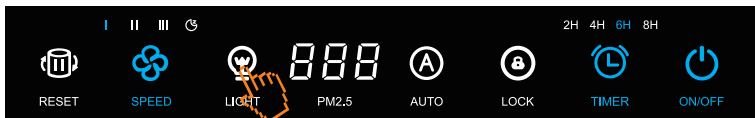 

Turn off air quality light

 
CLEANING & TROUBLESHOOTING 19

CLEANING THE FILTER



The Pre-Filter should be cleaned once a month to increase efficiency and extend the life of your filter.

- ◆ 1. Remove the filter from the housing and clean the Pre-Filter with a soft brush or vacuum hose to remove hair, dust, and large particles.
- ◆ 2. Carefully peel the Pre-Filter away from the True HEPA and Activated Carbon Filters.
- ◆ 3. Gently wash the Pre-Filter under running water. Dry completely before placing it back on the velcro tape.
- ◆ 4. Install the filter back into the housing.

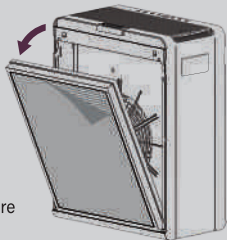

WHEN SHOULD I REPLACE THE FILTER?

The true HEPA / Activated Carbon Filter should be replaced every 3 to 6 months. Depending on how often you use your air purifier, you may need to replace the filter earlier or later. Using your air purifier in an environment with relatively high pollution may mean that you need to replace the filter more frequently, even if you check that the filter indicator is off.

You may need to replace the filter if you notice:

- The air purifiers cannot effectively filter out certain odors.
- Increases noise when the air purifier is on.
- Decreased airflow from the top of the air purifier.
- Unusual odors.
- The HEPA filter is obviously dusty or discolored after the pre-filter is removed.

Important Note:

To maintain the performance of the air purifier, please use only Mooka official filters. For more information, please contact Customer support.

CLEANING & TROUBLESHOOTING 20

TROUBLESHOOTING

No Power Adapter	Check the bottom groove of the device for the adapter.
Air purifier does not work	Please check if the plug is disconnected from the socket.
	Check to see if the power cord is damaged. If it is, stop using the air purifier and Contact customer support.
	The air purifier may be malfunctioning. Contact customer support.
Air Quality Indicator always stays red	If you're using an ultrasonic humidifier near the air purifier, the mist may affect the accuracy of the sensor. Avoid using an ultrasonic humidifier near the air purifier.
Air purifier makes an unusual noise	Make sure the filter is properly in place with plastic packaging removed.
	Make sure the air purifier is operating on a hard, flat, level surface.
	Replace the filter.
	The air purifier may be damaged, or a foreign object may be inside. Stop using the air purifier and contact Customer Support. Do not try to repair the air purifier.
Poor air purification quality	Tap speed button to increase the fan speed.
	Make sure no objects are blocking the front, sides, or top of the air purifier.
	Make sure the filter is removed from its packaging and properly in place.
	Close doors and windows while using the air purifier.
	If the room is too large, air purification will take longer.
	Replace the filter.

Note: If you problem is not listed, please contact customer support.

21 TECHNICAL SPECIFICATIONS

UNIT SPECIFICATIONS

Model No.:	C300
Power Supply:	AC 100V-240V 50/60Hz
Net Weight:	3,9KGS
Noise Level dB(A):	15-50dB
Power Consumption (W):	23W
Dimensions (W x D x H):	315 x 170 x 406 (mm)

FILTER SPECIFICATIONS


Size:	287 x 26 x 346 (mm)
Lifespan:	1440H

CUSTOMER SERVICE

Our customer service team is standing by to assist you if you have any questions or concerns.

 www.mookashops.com

 support@mookashops.com

 1-855-666-9955

mooka

Beyond Elegance



www.mookashops.com



support@mookashops.com



1-855-666-9955



Made in China