 


Visual Audio Digital Timer

MeesMeek

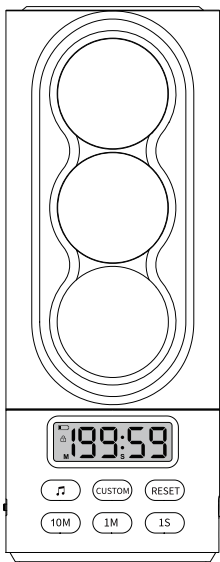

Model: 6236


Thanks you for purchasing this visual audio digital timer. Please read this user manual carefully and keep it for future reference. We hope you enjoy the convenience and features of this timer.



BEFORE USE

1. Please fully charge the timer.
2. Please use a 5V (output voltage) power plug to charge the timer. A power plug higher than 5V may lead to battery damage.

Email: support@msmkvip.com

Product Components

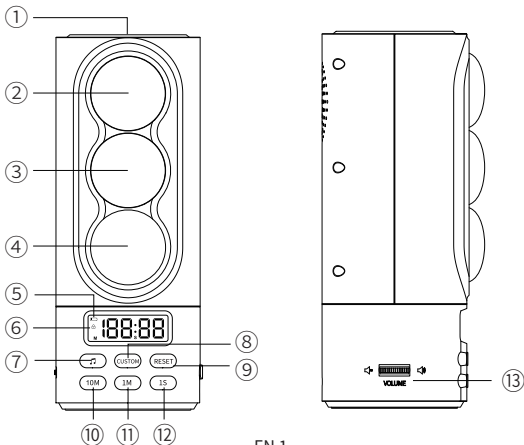

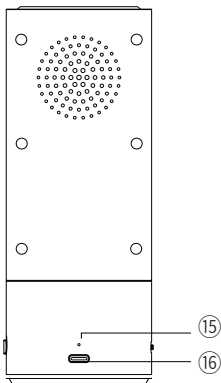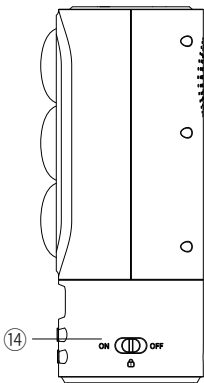

① STOP/START

② Red Light

③ Yellow Light

④ Green Light

⑤ Low battery icon

⑥ Child lock icon

⑦ Music button

⑧ Custom Button

⑨ Reset Button

⑩ 10 Minutes Increase

⑪ 1 Minute Increase

⑫ 1 Second Increase

⑬ Volume Settings:

volume off /

Maximum volume

⑭ ON / Lock / OFF

⑮ Charging light

⑯ USB-C input port

Main Function

- Child Lock
- Custom Mode
- 199 Minutes 59 Seconds Timer
- 3 Visual Color Lights: Green-Yellow-Red
- Infinite volume adjustment
- 4 Ringtones (Beeps & 3 Music Ringtones)

TURN ON/OFF

TURN ON: Push the switch on the right of the timer to ON position.

TURN OFF: Push the switch on the right of the timer to OFF position.

Child Lock Function

When the switch is in the [] position, all buttons are disabled.

COUNTDOWN TIMER SETTING

In countdown timer mode

1. Press [10M] button to set Minute with 10 minutes each press. Press and hold to increase quickly;

2. Press [**1M**] button to set Minute with 1 minute each press. Press and hold to increase quickly;
3. Press [**1S**] button to set Second with 1 second each press. Press and hold to increase quickly;
4. After the time is set, press [**STOP**
START] button on the top to start the timing and the green light will light up.

Tips:

- ① Maximum countdown time: 199 minutes and 59 seconds;
- ② When the countdown time is within 30 seconds, the yellow light will light up
- ③ When the countdown reaches 00:00, the red light will light up and the alarm will ring for 3 minutes. Or you could press any button to stop the alarm.
- ④ During counting, when you press [**STOP**
START] button to pause the timer, the yellow light will light up. If no operation is performed for 5 minutes, the yellow light goes out, and the time on the LCD screen remains unchanged.

COUNT-UP TIMER SETTING

1. In paused or stopped mode, press the [**RESET**] button to set the time to 00:00, then press the [**STOP**
START] button to start count up. And the green light will light up.

2. When press the [**STOP** / **START**] button to pause the count up. The yellow light will light up. If no operation is performed for 5 minutes, the yellow light is off, and the time on the LCD screen remains unchanged.

Tips:

- ① When the count up time reaches 199M29S, the yellow light will light up.
- ② When the count up time reaches 199M59S, the red light will come on and no alarm will sound. If nothing is done, the red light will remain on for 3 minutes. You can also press any button to turn off the red light.

RESET


When the timer is paused or stopped, press [**RESET**] button to clear the time and then press time set buttons to set a new countdown time.

CUSTOM

You could set a regular countdown time, then each time you just need to press the [**CUSTOM**] button, it will go directly to the set time.

1. Press the time buttons to set a time, then press [**CUSTOM**] the button and hold until you hear the "BIBI" sound. The CUSTOM time is set and memorized.
2. Press the [**CUSTOM**] button and quickly release, the timer could go directly to the set time and start to countdown.
3. If you want to change the [**CUSTOM**] time, it is similar as step one. Press the time buttons to set a time, then press and hold on the [**CUSTOM**] button for about 5 seconds until you hear the BIBI sound, a new time is set and memorized.

RINGTONE SELECTION

Press the [] button to select ringtone, there are 4 kinds of ringtones to choose from.


ALARM VOLUME SETTING

Slide the [**VOLUME**] knob on the left to select the volume, the volume ranges from mute to loudest.

Note:

When it is set to Mute, the timer would light up with no alarm sound.

CHARGING TIPS

1. When the power is low, the battery icon "" will appear and begin to flash to remind you to charge the timer.
2. The charging indicator red light which is on the back of the timer, is always on when charging, and it disappears when the timer is fully charged.

Attention

1. For first-time use, please connect to the charging cable and fully charge the device.
2. If not used for an extended period, it is recommended to fully charge the device every three months to maintain battery performance.
3. Avoid using or storing this product in extremely cold, hot, or high-humidity environments.
4. Do not attempt to disassemble, repair, or modify this product independently.
5. This product contains a battery; do not disassemble, strike, crush, or cut the battery.
6. This product is not waterproof; keep it away from water or humid environments during use.
7. When not in use, please switch the device to the OFF position.

Warranty

60-Day Money-Back for Any Reason

You may return your undamaged product and packaging within 60 days of purchase to receive a full refund for any reason.

24-Month Warranty for Quality-Related Issue

Please kindly contact our customer service if you have quality-related issues, we will take care of quality-related issues with a replacement or full refund.