



AP-S195

EN
CASIO

Quick Start Guide

After reading this document, keep it in a safe place along with the warranty certificate. Be sure to read the "Safety Precautions" in the separate "READ THIS!" sheet, and use the product correctly.

Included Accessories

- Piano Stand with 3 Pedals
- Music Stand
- AC adaptor (AD-E24250LW)
- Power cord
- Leaflets
 - READ THIS! Sheet
 - Assembly Procedure for Piano Stand with 3 Pedals Sheet
 - Other (Warranty, etc.)

Items included as accessories are subject to change without notice.

Separately Available Accessories

You can get information about accessories that are separately available for this product from your retailer or from the CASIO website.

Please refer to the website below for more detailed operating instructions and product information, including the **USER'S GUIDE, Dedicated App (CASIO MUSIC SPACE) download, Song Book, etc.**

AP-S195

 


<https://support.casio.com/global/en/emi/manual/AP-S195/>

Preparation


Ensure this Digital Piano is turned off before plugging in or unplugging any devices.

[Underside of instrument] The various input/output jacks are located as shown in the illustration of the underside of the instrument below.

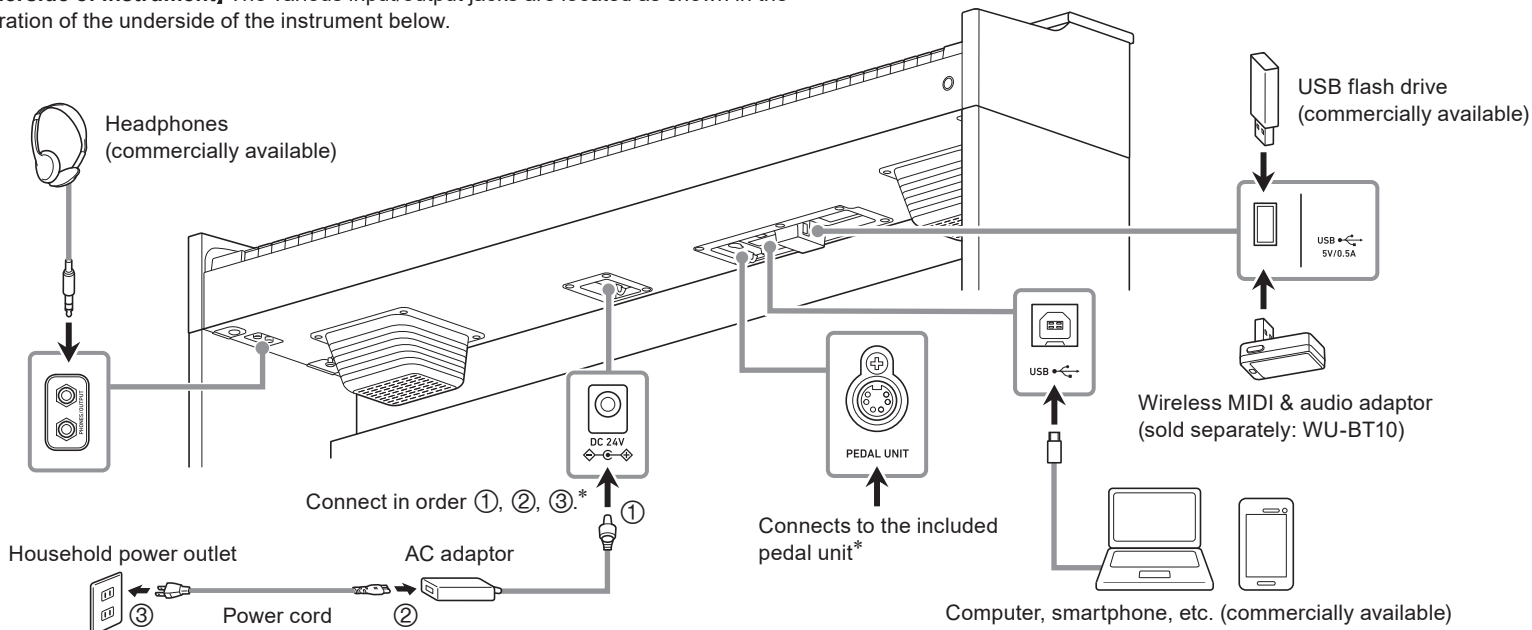


*Please refer to the separate leaflets for how to assemble the included stand and connect the pedal unit and AC adaptor to the instrument.

 Preparing the Music Stand

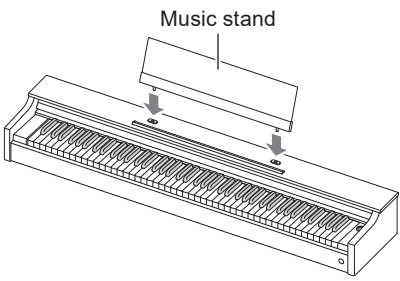

General Guide

 After 15 seconds of no operation, the left panel turn off. When the panel is touched, the buttons light up. You can change the number of seconds until the button lights switch off (or have them not turn off at all). For details, see "Panel Lights Off Setting" in the "Additional Functions" section on the right.

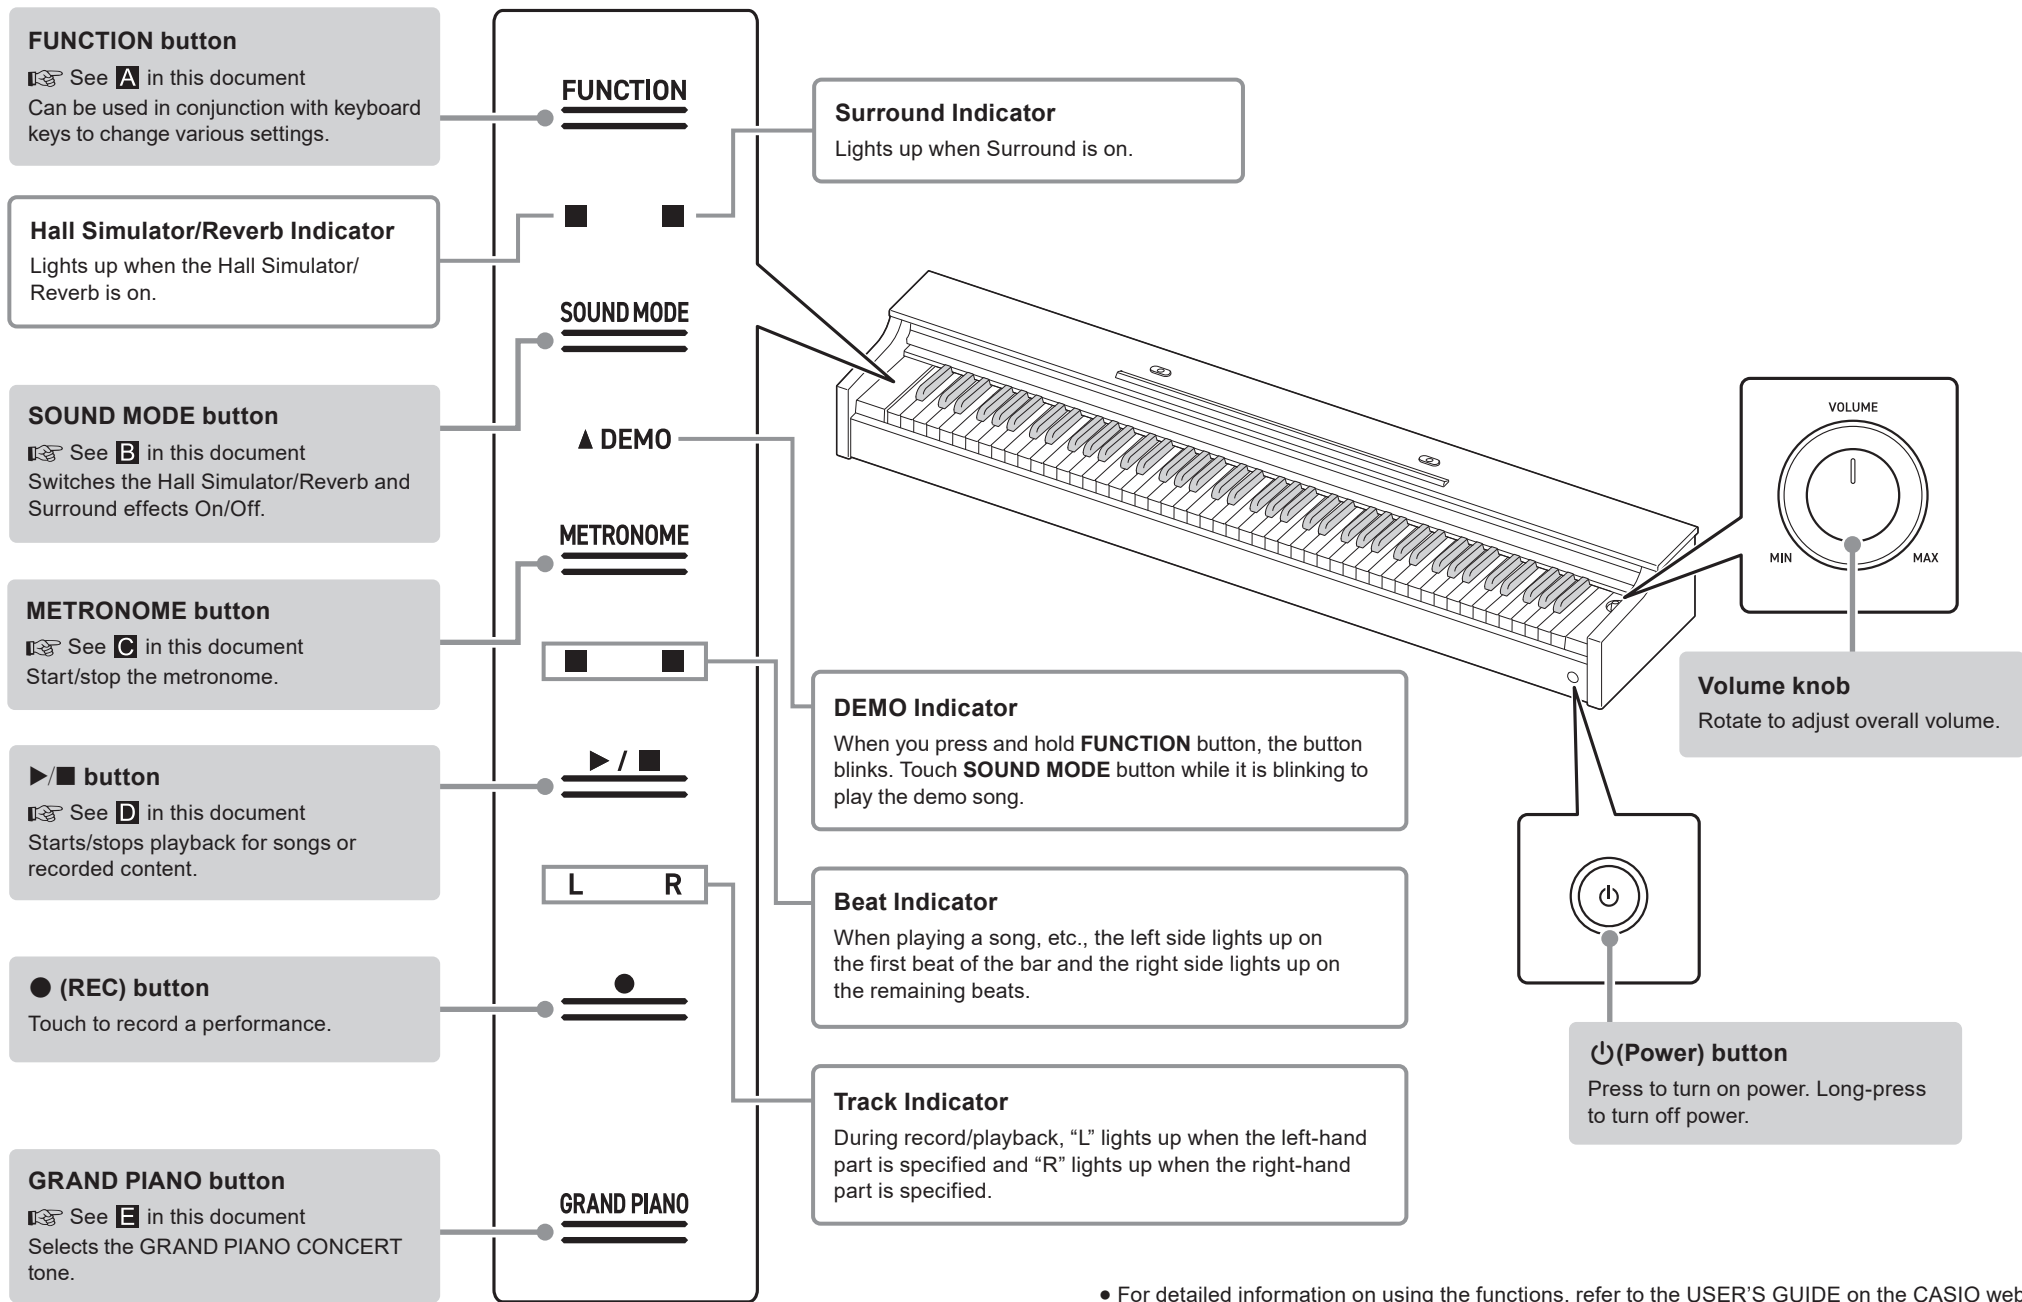

• For detailed information on using the functions, refer to the USER'S GUIDE on the CASIO website.

Basic Settings Such as Tuning

FUNCTION

Select a key while holding down the **FUNCTION** button.


- If you press a key while changing a setting, the number of times the notification tone sounds varies according to the value set and the sequence.
- When you disable a setting, a low tone sounds.

USB Flash Drive																(off//Weak/Normal/Strong)														(off//5s/15s/30s/60s/120s)																			
Wireless MIDI & audio adaptor								Duet				Mixer				Recorder				Tuning				MIDI settings								(off//5s/15s/30s/60s/120s)																	
A0	B0	C1	E1	F1	F#1	A#1	B#1	C2	E2	F2	A2	C3	E3	F3	A3	B3	C4	E4	F4	B4	A4	G4	F#4	A#4	B#4	C5	E5	F5	A5	B5	C6	E6	F6	A6	B6	C7	E7	F7	A7	B7	C8								
Auto Power Off (disable/enable)		Wireless Audio Pairing	Connection Notification Tone Volume (+)	Connection Notification Tone Volume (-)	Load SMF/MRF	Save MRF	Load SMF/MRF			Left-side Keyboard Octave Shift (-)	Right-side Keyboard Octave Shift (-)	Left-side Keyboard Octave Shift (+)	Right-side Keyboard Octave Shift (+)	Audio Song Volume (-)	Audio Song Volume (+)	Wireless Audio Center Cancel (disable/enable)	Wireless Audio Volume (-)	Wireless Audio Volume (+)	MIDI Song Volume (-)	MIDI Song Volume (+)	Keyboard Volume (-)	Keyboard Volume (+)	Audio Recorder	MIDI Recorder	Audio Rec with MIDI playback	Scale Tuning base note	A-tuning (442.0Hz)	A-tuning (440.0Hz)	A-tuning (438.0Hz)	A-tuning (+0.1Hz)	A-tuning (-0.1Hz)	Stretch tuning (off/on)	Scale Tuning Selection	Local Control (off/on)	Keyboard Channel (+)	Keyboard Channel (-)	Hi-res Velocity MIDI Off (disable/enable)	Touch Button Luminosity (1/2)	Speaker Out (disable/enable/Auto)	Volume Sync Equalizer	Headphone Mode (off/on)	Left Panel Touch Button Sensitivity (+)	Left Panel Touch Button Sensitivity (-)	Notification Tone Set selection (1/2/3)	Notification Tone Volume (+)	Notification Tone Volume (-)	Panel Light setting	Power On Alert (disable/enable)	Panel Lock (disable/enable/Auto)
*Factory Reset		Execution	Wireless Function off/on	Connection Notification Tone Volume (+)	*Delete SMF/MRF/Audio	*Save SMF	*Delete SMF/MRF/Audio	*Format		Duet Mode (off/on/pan)	Right-side Keyboard Octave Shift (+)	Left-side Keyboard Octave Shift (-)	Wireless Audio Volume (-)	Audio Song Volume (-)	Audio Song Volume (+)	Wireless Audio Volume (+)	Wireless Audio Volume (-)	Wireless Audio Volume (+)	MIDI Song Volume (-)	MIDI Song Volume (+)	Keyboard Volume (-)	Keyboard Volume (+)	Audio Recorder	MIDI Recorder	Audio Recorder	Scale Tuning Selection	A-tuning (442.0Hz)	A-tuning (440.0Hz)	A-tuning (438.0Hz)	A-tuning (+0.1Hz)	A-tuning (-0.1Hz)	Stretch tuning (off/on)	Scale Tuning Selection	Local Control (off/on)	Keyboard Channel (+)	Keyboard Channel (-)	Hi-res Velocity MIDI Off (disable/enable)	Touch Button Luminosity (1/2)	Speaker Out (disable/enable/Auto)	Volume Sync Equalizer	Headphone Mode (off/on)	Left Panel Touch Button Sensitivity (+)	Left Panel Touch Button Sensitivity (-)	Notification Tone Set selection (1/2/3)	Notification Tone Volume (+)	Notification Tone Volume (-)	Panel Light setting	Power On Alert (disable/enable)	Panel Lock (disable/enable/Auto)

If you select a function marked with an asterisk (*), pressing the C1 key executes that function.

Example: To restore the factory default settings (factory reset)

 Hold down the **FUNCTION** button and press the A0 key and then the C1 key.

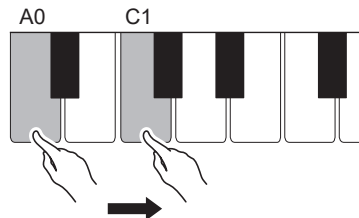

Additional Functions

Wireless Functions (using a Wireless MIDI & audio adaptor sold separately)

The operations described below are enabled while the Wireless MIDI & audio adaptor is plugged into the USB Type A port. For more information, refer to the "USER'S GUIDE".

- Sound playback of a Bluetooth®-connected smart device through the Digital Piano's speakers
- Use MIDI functions over a Bluetooth Low Energy connection
- Use the dedicated app (CASIO MUSIC SPACE)

Touch Response

Pressing a key harder produces louder sound, while a softer key press produces softer sound.

Demo Play

Hold down the **FUNCTION** button and touch the **SOUND MODE** button to start demo song playback. To stop playback, touch the **▶/■** button.

Auto Power Off

If the Digital Piano is not used for approximately 20 minutes, it will switch off automatically. When set to Off, the power will not automatically switch off. To turn On or Off, hold down **FUNCTION** button and press the B#0 key. Each press of the B#0 key toggles between On and Off. When you disable a setting, a low tone sounds.

Important Notice

If Auto Power Off is set to Off, the Digital Piano does not automatically turn off and continues to use power.

Panel Lights Off Setting

The number of seconds before the touch button on the left-side panel turns off can be changed, or it can be set not to turn off. When set to off, the left-side panel will not switch off. While holding down **FUNCTION** button, press the G7 key. Each press of the G7 key toggles the setting (off/5s/15s/30s/60s/120s). When the setting is toggled to off, a low tone will sound.

Performance Recording/Playback

After touching the **(REC)** button, recording starts as soon as a key is pressed on the keyboard. To end the recording, touch the **(REC)** button again. To play back the recorded content, touch the **▶/■** button.

About the Dedicated App (CASIO MUSIC SPACE)

Enjoy a range of fun functions using the Digital Piano together with the CASIO MUSIC SPACE app. Please visit the "Downloads" section of our website.
● The WU-BT10 (sold separately) or a commercially available USB cable is required to connect the Digital Piano to a smart device.

Reference

Product Specifications

Model: AP-S195
Keyboard: 88-key
Acoustics: Amp output: 16W + 16W (Maximum effective output power 20W + 20W)
Speakers: 12cm x 2

Power Supply: AC adaptor (AD-E24250LW)
Power consumption: 24V --- 20W
Dimensions: Piano and Stand: 139.3 (W) x 29.9 (D) x 80.2 (H) cm (54 13/16 x 11 3/4 x 31 9/16 inch)
Weight: Piano, Stand and Music Stand: Approximately 34.0 kg (75.0 lbs)

• Specifications and designs are subject to change without notice.

- Any reproduction of the contents of this manual, either in part or its entirety, is prohibited. Except for your own, personal use, any other use of the contents of this manual without the consent of CASIO is prohibited under copyright laws.
- IN NO EVENT SHALL CASIO BE LIABLE FOR ANY DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, LOSS OF INFORMATION) ARISING OUT OF THE USE OF OR INABILITY TO USE THIS MANUAL OR PRODUCT, EVEN IF CASIO HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
- The contents of this manual are subject to change without notice.
- Company and product names used in this manual may be registered trademarks of others.

Functions Not Covered in This Manual

These instructions provide general information about main functions. For more detailed information, refer to the "USER'S GUIDE".

The "USER'S GUIDE" includes information on the topics listed below.

- Adjustable Touch Response
- Hall Simulator/Reverb and Surround effects
- Built-in tune playback and practice
- Smart device linking for enhanced function
- Other

About Music Score data

You can download music score data as a PDF file from the CASIO website. You will then be able to view music scores on your smart device. You can jump from the PDF file table of contents directly to the music score you want, and you can print out scores as needed.

Declaration of Conformity

 
Model Number: AP-S195
Trade Name: CASIO COMPUTER CO., LTD.
Responsible party: CASIO AMERICA, INC.
Address: 570 MT. PLEASANT AVENUE, DOVER, NEW JERSEY 07801
Telephone number: 973-361-5400
CFR 47 §2.938 (b)(2) Attestation

As of the date of first importation or marketing of this device, the device is not produced by any entity identified on the Covered List, established pursuant to 47 CFR § 1.50002, as producing covered communications equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

E

- If you press a key while changing a setting, the number of times the notification tone sounds varies according to the value set and the sequence.
- When you disable a setting, a low tone sounds.
- When (Tone) is selected, a value appropriate for the selected tone is automatically set.

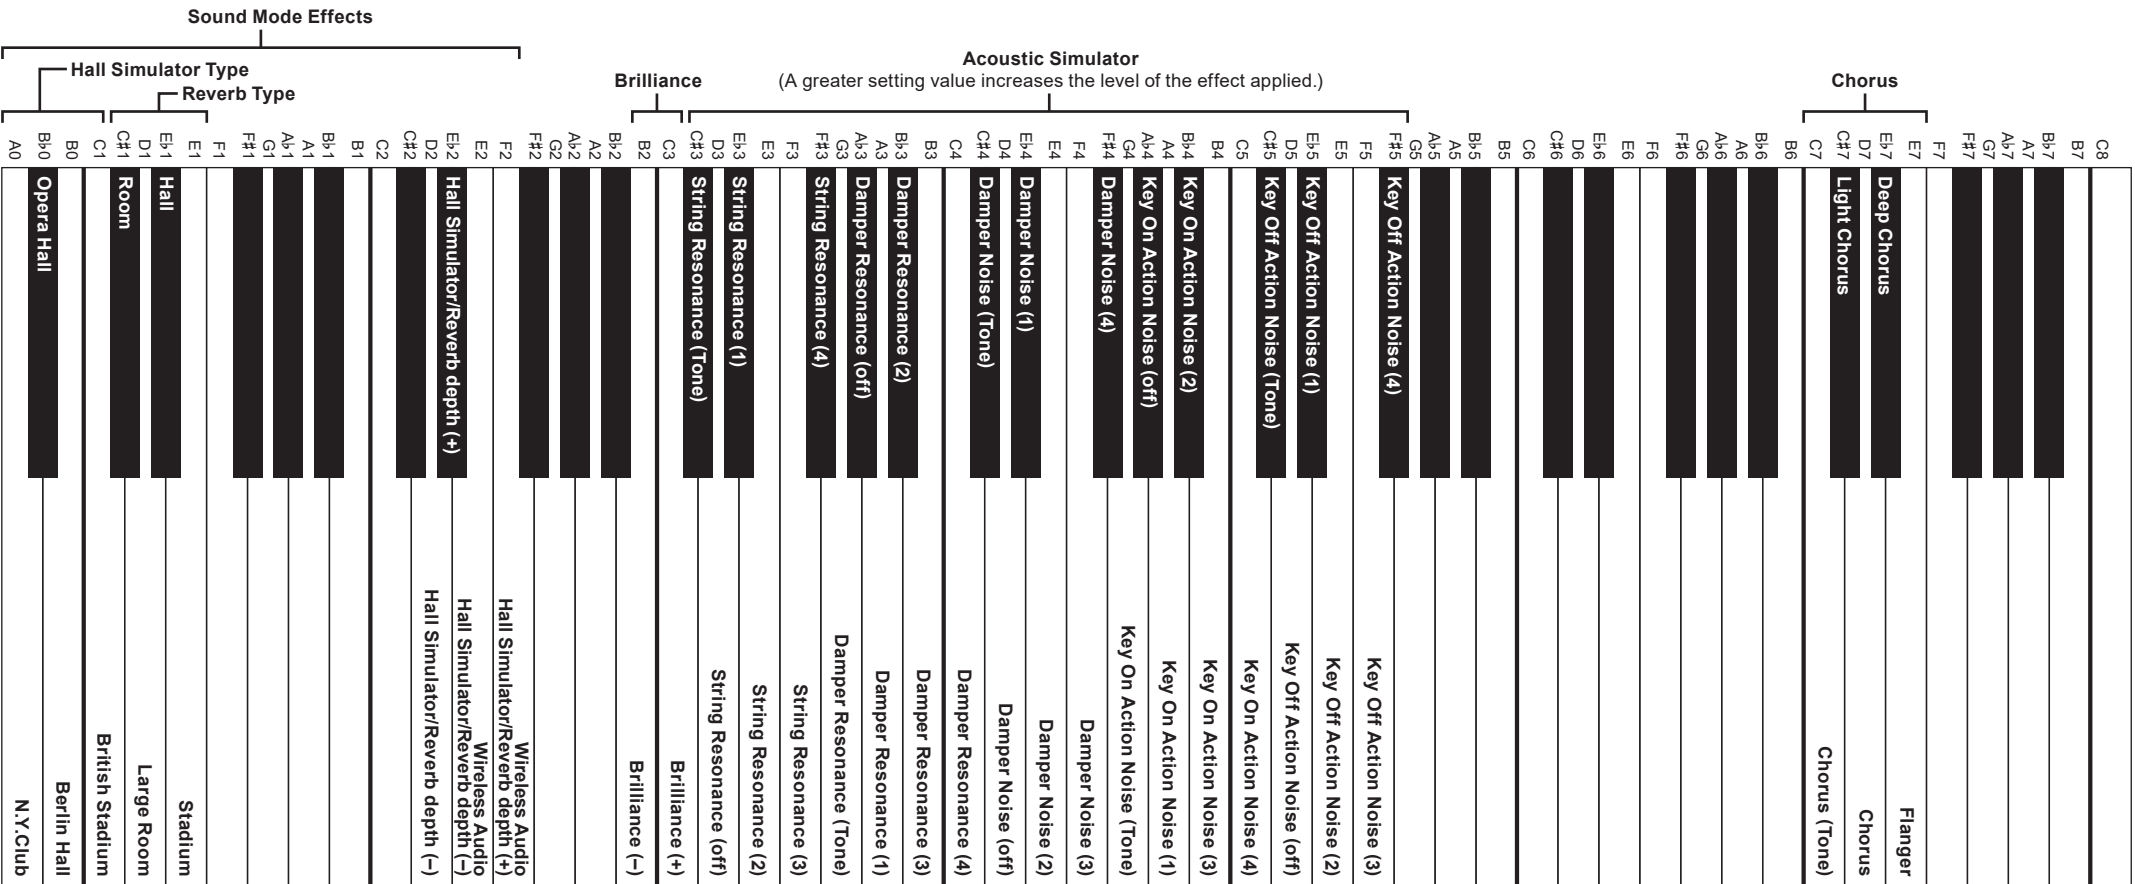


When Surround is On, the Surround sound effect is applied to the sound output from the build-in speakers.

- While holding down **SOUND MODE** button, press any one of the C#1 to E1 keys.

C

 - If you press a key while changing a setting, the number of times the notification tone sounds varies according to the value set and the sequence.
- When you disable a setting, a low tone sounds.

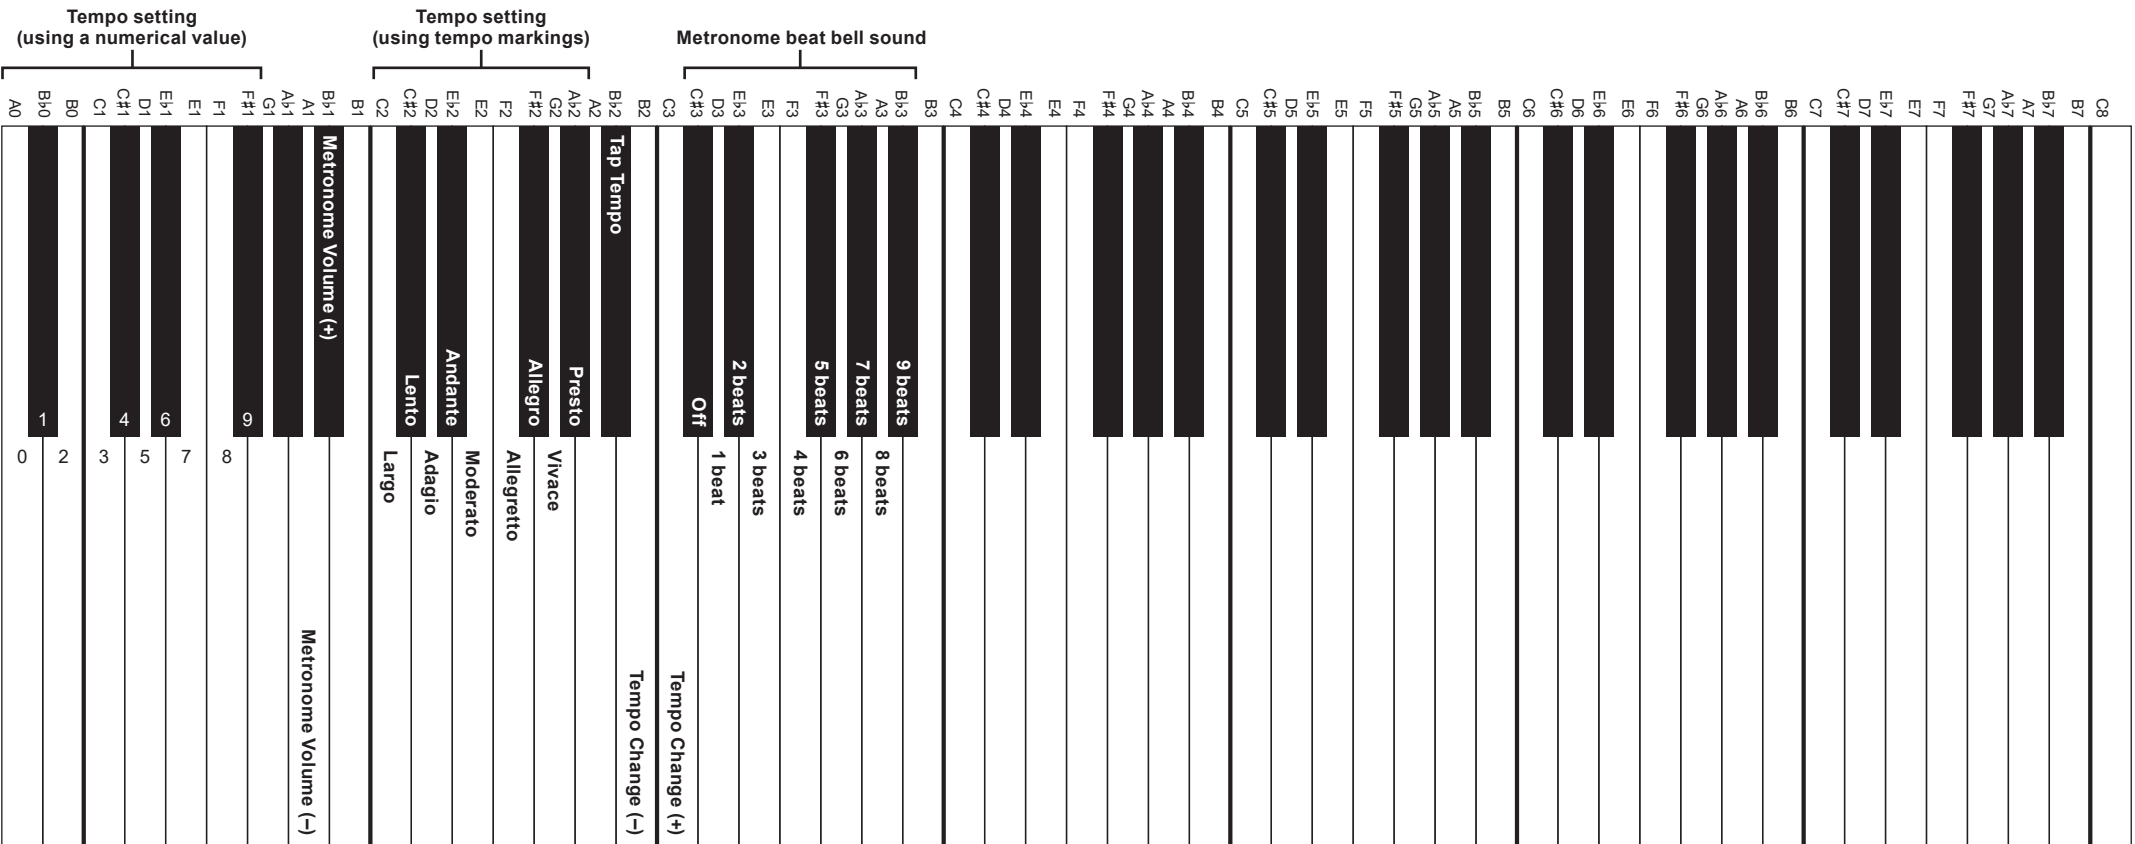


Touch the **METRONOME** button to start the metronome.
The beat indicator lights up in time with the metronome beat and tempo.
Touch the **METRONOME** button again to stop the metronome.

The tempo can be set between 20 and 255 (beats/minute). Press and hold **METRONOME** button then use the A0 to F#1 keys to set the tempo.

▶ / ■

 - If you press a key while changing a setting, the number of times the notification tone sounds varies according to the value set and the sequence.
- The functions assigned to the keyboard change during demo song playback. For more information, refer to the USER'S GUIDE on the CASIO website.

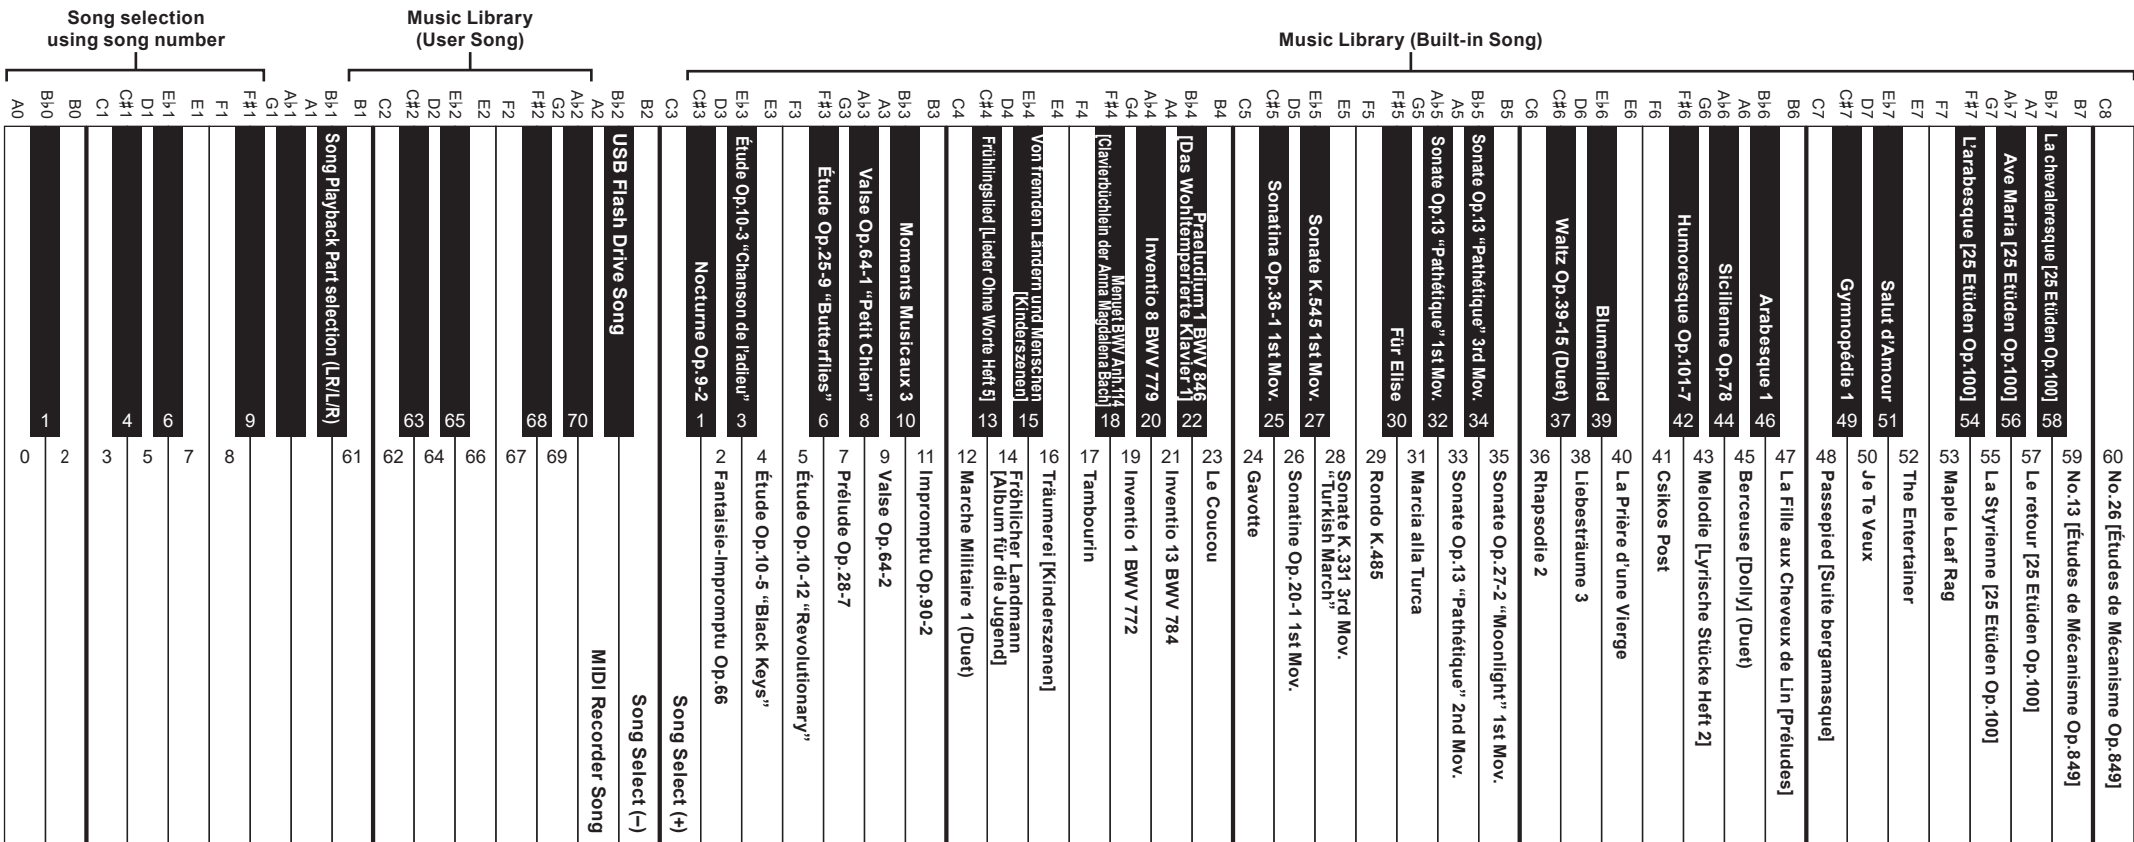

Song Number	Songs
1 to 60	Music Library (Built-in Song)
61 to 70	Music Library (User Song)

E

- If you press a key while changing a setting, the number of times the notification tone sounds varies according to the value set and the sequence.
- When you disable a setting, a low tone sounds.

