

Vacuum Cleaner

User's manual

EN



SENCOR®

SVC 610RD / SVC 611BL

Before first use, please read all instructions contained in this user's manual carefully, even if you are already familiar with using similar products. Only use this appliance in accordance with the instructions described in the user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.

We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor and warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. If you need to ship this appliance, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g. when moving or when you need to send this appliance for repair).

EN-1

TABLE OF CONTENTS

IMPORTANT SAFETY NOTICE	3
DESCRIPTION OF THE VACUUM CLEANER	6
ASSEMBLY	7
USING THE VACUUM CLEANER	8
STORING THE VACUUM CLEANER AND ACCESSORIES	9
CLEANING AND MAINTENANCE	9
TROUBLESHOOTING	11
TECHNICAL SPECIFICATIONS	12
PRODUCT INFORMATION SHEET	13
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS	14
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT	14

IMPORTANT SAFETY NOTICE

1. Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all the parts of the appliance.
2. This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the appliance in a safe manner and understand the potential dangers. Do not allow children to play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children. Keep this appliance and its accessories out of reach of children that are younger than 8 years of age.
3. Before connecting the appliance to a power socket, make sure the voltage stated on its rating label corresponds to the voltage in your power socket.
4. Never use accessories, which have not been supplied with this appliance or which are not designed for this appliance.
5. Do not place the power cord near hot surfaces or over sharp objects. Do not place heavy objects on the power cord. Position the power cord so that it will not be stepped on or tripped over. Make sure the power cord is not touching a hot surface.
6. If the power cord of the appliance is damaged, have it repaired by an authorised service technician to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord or plug.
7. Do not disconnect the power cord from the electric power socket by pulling the power cord.
8. In no case should you attempt to repair the appliance yourself, do not make any amendments to it – danger of electric shock! Entrust all repairs and adjustments to a specialised company/service. Failure to do so will expose you to a danger of voiding the warranty policy.

 
9. Never use the appliance if you have wet hands or feet.
10. Only store and use the appliance away from flammable or volatile materials and solutions.
11. The appliance is designed for use in households, offices and similar types of areas. Do not use it in industrial surroundings or outdoors!
12. Do not use the appliance for any other purposes than those for which it was designed.
13. Do not spray the appliance with water or any other liquid. Do not pour water or any other liquids into the appliance. Do not submerge the appliance in water or in any other liquid.
14. Make sure the appliance does not come in contact with water. Never use the appliance near a bathtub, wash basin or any other containers filled with water.
15. After finishing using the appliance, turn it off and disconnect the power cord from the power socket. Prior to cleaning, proceed in the same manner.
16. Never leave the appliance switched on without supervision.
17. In order to avoid deformation of the plastic components of the vacuum cleaner or to prevent it from catching on fire, do not expose the vacuum to direct sunlight, do not place it close to heaters, open fires or other sources of heat.
18. If the appliance is being used, do not block the air inflow and outflow vents. Blocked air vents can cause overheating and motor damage.
19. Vacuuming the below mentioned objects can damage the appliance or cause injuries to the operating person:
 - wet floors, water or other liquids;
 - any type of sharp objects such as broken glass or ceramics, needles, pins, etc.;
 - burning cigarettes, or smouldering compounds, matches or any other flammable or volatile liquids (e.g. gasoline, paint thinners, etc.);
 - flour, cement, plaster (i.e. dust from holes drilled in walls).

20. In order to avoid damaging furniture or injuries to persons, hold the power cord in your hands as it winds up.
21. Do not vacuum larger pieces of paper or plastic bags. They may easily clog the pipe or hose. In the event that the appliance becomes clogged for any reason, immediately turn it off by disconnecting it from the power socket. Then clean out the clogged pipe or hose.
22. In order to avoid damage to the hose, do not step on it or forcefully bend it. Do not use the vacuum if the hose is bent or damaged in any other way.
23. Do not ride over the power cord with the vacuum cleaner.
24. Never use the vacuum cleaner without having inserted the dust bag, the inflow micro-filter or the outflow H.E.P.A. filter or micro-filter.
25. Do not place the vacuuming hose, inlet nozzle or vacuuming accessories near to your eyes or ears.
26. Vacuuming of some types of floors or floor surfaces can create a static electricity charge, which is not dangerous for the user.
27. The manufacturer is not responsible for damages caused by the incorrect use of this appliance or its accessories. Such damages include food spoilage, injuries, burns, scalding, fire, etc.

Vacuum Cleaner

SVC 610RD / SVC 611BL

DESCRIPTION OF THE VACUUM CLEANER

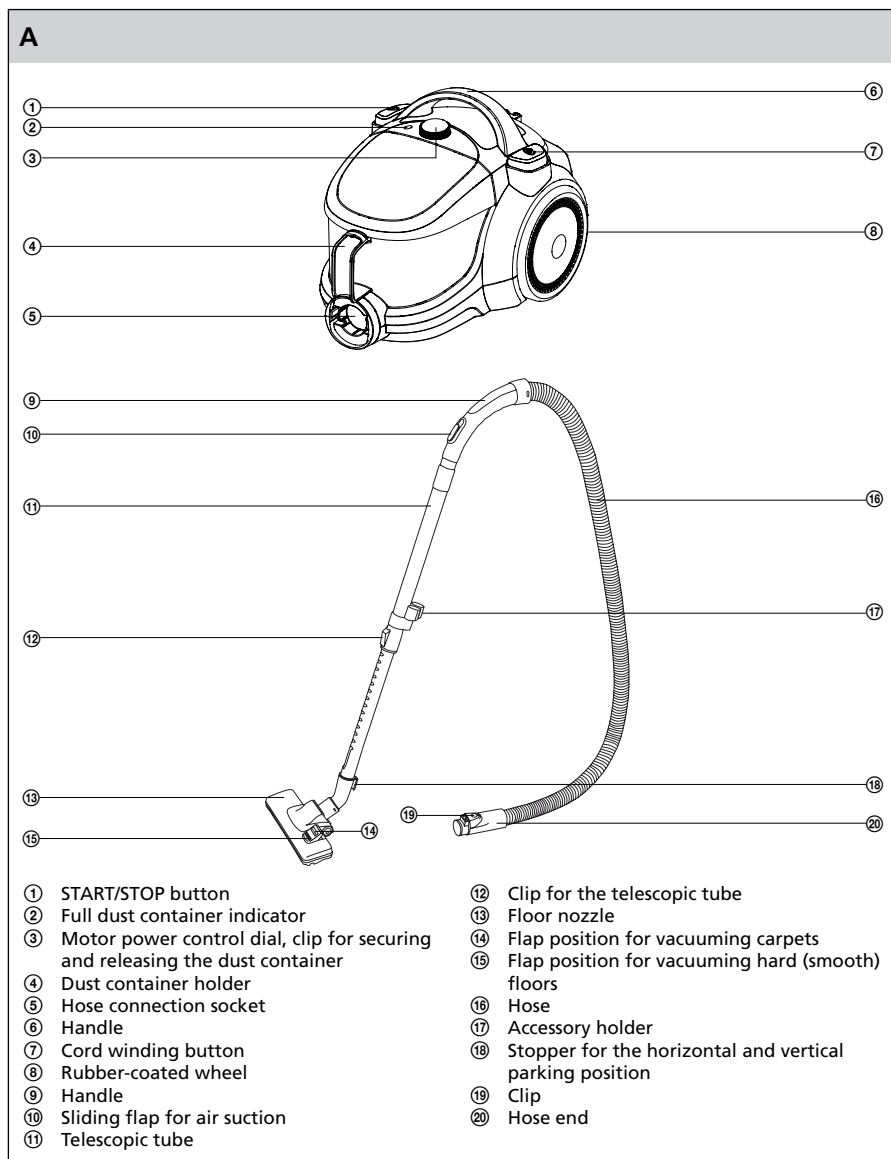


Vacuum Cleaner


SVC 610RD / SVC 611BL

EN

 B

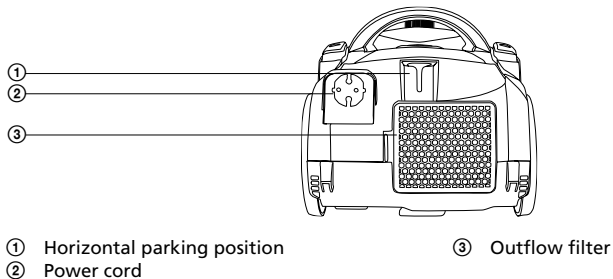

C

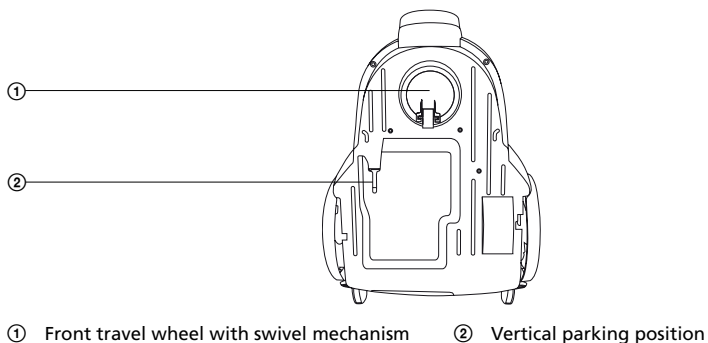 

ASSEMBLY

Insert the hose A¹⁶ into the hose socket on the vacuum cleaner:

Press the clip on the hose end and insert the hose end into the hose socket on the vacuum cleaner until you hear a "click". The hose is now secured in correct position.

Attach the holder A⁹ to the telescopic tube A¹¹

Make sure to install the holder on the wider part of the telescopic tube.

Attach the floor nozzle A¹³ to the telescopic tube A¹¹

Make sure the floor nozzle is attached the narrower part of the telescopic tube.

Adjust the length of the telescopic tube A¹¹

Adjust the length of the telescopic tube as required – Hold down the clip on the tube and slide it forward as shown by the arrows to set the length of the tube. Then release the clip and move the tube slightly forward until you hear a "click". The telescopic tube is now securely fixed in position.

EN-7

USING THE VACUUM CLEANER

Connecting the vacuum cleaner to the power grid

Wind out the required length of the power cord by pulling on the power plug. Insert the power plug into a power socket.



Caution:

The yellow marking on the power cord warns you that the power cord is close to its end. Do not pull the cord further than the red marking.

Adjusting the floor nozzle A^⑬ according to the floor surface.

You may set the floor nozzle according to the floor surface by adjusting the inlet flap:

- If you want to vacuum carpets, move the flap to retract the bristles.
- If you want to vacuum hard and smooth surfaces, move the flap to extend the bristles.

Turning the vacuum cleaner on and off

To switch the vacuum cleaner on, press the START/STOP button A^①. To turn off the vacuum cleaner, press the button again.

Suction power control dial A^③

Suction power may be adjusted by turning the dial on the body of the appliance or adjusted in a smaller range using the sliding flap on the hose handle A^⑩.



Tips

- Use the maximum suction strength when vacuuming carpets or floors with a hard surface. Use the reduced strength when vacuuming upholstery, window curtains, etc.
- If the holder A^⑨ of the hose A^⑥ becomes blocked when vacuuming, disconnect it from the telescopic tube A^⑪ and also disconnect the hose A^⑥ from the vacuum cleaner body. Then place the holder A^⑨ inside the hose socket on the vacuum cleaner body and vacuum the stuck dirt out.

Temporary interruption of the vacuuming process

 
If you want to temporarily stop the vacuuming process, place the telescopic tube A^⑪ using the notches on the floor nozzle A^⑬ into one of the parking positions - at the back or bottom of the vacuum cleaner.



Attention:

Do not move the vacuum cleaner from place to place if the hose is in the parked position! The stopper on the floor nozzle could brake off.

Using the accessories

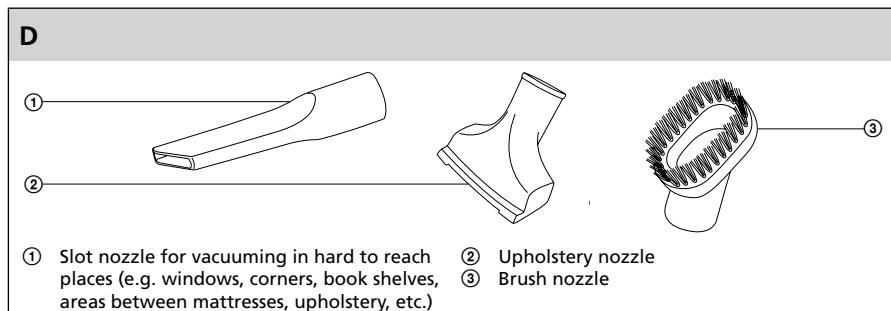

Vacuum Cleaner

SVC 610RD / SVC 611BL

EN



Tip

Use the brush slot nozzle to vacuum scratch-prone hard to reach places!

Ending the vacuuming process

When you finish vacuuming, switch the vacuum cleaner off by pressing the START / STOP button A① and then disconnect the power cord plug from the socket.

To wind the power cord back into the vacuum cleaner, press and hold the winding button A⑦ with one hand. Hold the power cord with your other hand to protect the vacuum cleaner input area from damage



Tip

If the winding process stops and part of the power cord is still outside, release the winding button A⑦ and pull the power cord out again by about 50 cm and press the winding button A⑦ again and repeat the winding process.

Carrying the vacuum cleaner

You can use the handle A⑨ to hold and carry the vacuum cleaner.



Caution:

Never attempt to carry the vacuum cleaner by holding the dust container handle A⑨!

STORING THE VACUUM CLEANER AND ACCESSORIES

Before storage, you may disassemble the vacuum cleaner into its individual parts or you may store it assembled with the telescopic tube A⑩ stored in one of the "parking" positions* (the rear or bottom position).

CLEANING AND MAINTENANCE

 
E

①

②

③

④

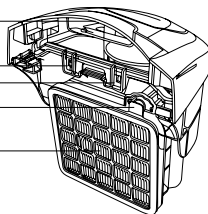

① Dust container handle

 
② Dust container clip

③ H.E.P.A. filter clip

④ H.E.P.A. filter

Vacuum Cleaner

SVC 610RD / SVC 611BL

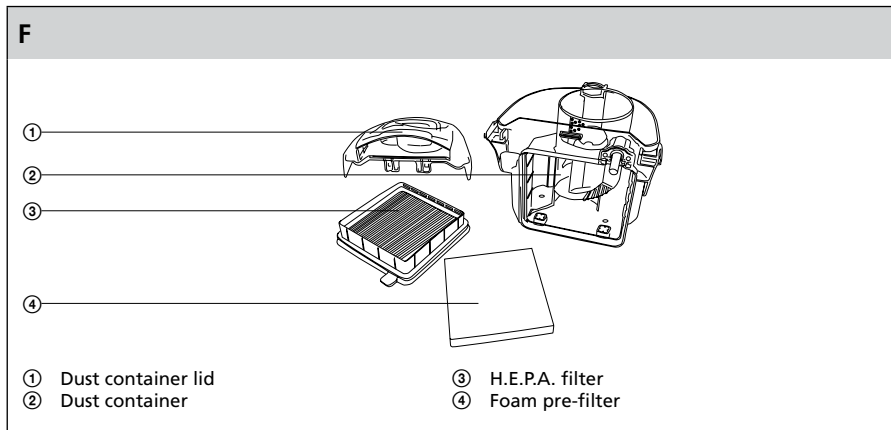

Emptying the dust container F②

- Disconnect the hose A⑩ from the vacuum cleaner.
- Press the dust container release button A③ (power control button) > then pull upwards to remove the dust container A② by its handle F④.
- Place the dust container F② over a waste bin.
- Press the safety clip under the hose socket on the container – its tilt out bottom will open.
- Release the lid clip above the filter – the removable lid will open. Tip the dust and dirt into standard household waste.
- Place the dust container F② back into the vacuum cleaner.



Caution:

Before reinserting the dust container F②, make sure that the container is completely dry.



Tip

We recommend to wash the dust container F② under lukewarm running water.

Replacing and cleaning filters

Replacing the outflow filter

Push down the clip on the filter grill to remove it by tilting it out. Remove the filter and reinsert a new filter. Then reinsert the grill with the filter back into the vacuum cleaner.



Caution:

Put the filter in the vacuum cleaner with the plastic grill facing outwards!

Cleaning the filters

All filters in the vacuum cleaner are washable. When soiled, wash them under lukewarm running water. When the filters are so heavily clogged that cleaning does not help, replace them for new ones. Before reinserting the filters into the vacuum cleaner, make sure that they are completely dry.



Caution:

The vacuum cleaner is equipped with a thermal fuse, which will automatically be engaged when the vacuum cleaner is overloaded (e.g. when filters are clogged). It is then only possible to start the vacuum cleaner again after it has cooled down. For this reason, carry out regular cleaning, i.e. replace the filters – this will extend the lifespan of the vacuum cleaner!

Vacuum Cleaner

SVC 610RD / SVC 611BL

EN

Cleaning the vacuum cleaner.

Only use a soft dry (or dampened) cloth for cleaning the vacuum cleaner. Do not use any aggressive cleaning agents or solvents!

TROUBLESHOOTING

Before you decide to contact an authorised service centre, please read these following tips in the troubleshooting chart:

Problem	Possible cause	Possible solution
The motor will not start	The power cord is not inserted correctly in the power socket	Insert the plug firmly into the power socket
	The power socket is damaged	Inspect the power socket
	The vacuum cleaner is not switched on	Turn on the appliance
Suction power is insufficient	The appliance is clogged	Remove the blockage or foreign object
	The dust filter needs cleaning	Clean the dust filter
	The dust container A④ is inserted in the wrong position	Close the dust container A④
	The filter is clogged	Clean the filter
The power cord is not wound in completely	The power cord may have slipped down from the winding pulley during winding.	Hold the power cord during the winding. Apply slight tension (by pulling the power cord back) to the power cord during the winding process
The power cord cannot be pulled out	The power cord is wound up incorrectly	Press the cord winding button A⑦ and try to rewind the power cord again
The speed control is not working.	The appliance is out of order	Arrange the appliance to be repaired (only by a professional)
The power cord starts to wind in when you do not want it to	The winding mechanism is out of order	Arrange the appliance to be repaired (only by a professional)
The dust container A④ cannot be closed	The dust filter is not in the correct position	Reinstall and secure the filter in position and try again

TECHNICAL SPECIFICATIONS

Rated voltage	220–240 V
Rated frequency	50 Hz
Rated power input	700 W
Safety class (with regard to electric shock protection)	II
Noise level.....	74 dB(A)
Length of the power cord	5 m
Operating range	8 m
Dust container capacity	0.7 l
Dimensions (length × width × height)	370 × 270 × 240 mm
Weight	5 kg

The declared noise emission level of the appliance is 74 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

Changes to text and technical parameters reserved.

Vacuum Cleaner

SVC 610RD / SVC 611BL

EN

PRODUCT INFORMATION SHEET

Name/trademark	SENCOR
Model identification number	SVC 610RD, 611BL
Energy efficiency class*	A
Annual power consumption (in kWh)**	27
Carpet cleaning efficiency class	D
Hard floor cleaning efficiency class	A
Vacuum cleaner dust emission class	D
Level of acoustic power (dB(A))	74
Rated power input (W)	700

* Class A (highest efficiency class, low power consumption) to Class G (lowest efficiency class, high power consumption).

** Approximate annual power consumption (in kWh per year) based on 50 cleaning cycles. Actual power consumption will depend on how the appliance is used.

The values are determined pursuant to (EU) No. 665/2013.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This appliance meets all the basic requirements of EU directives related to it.