 


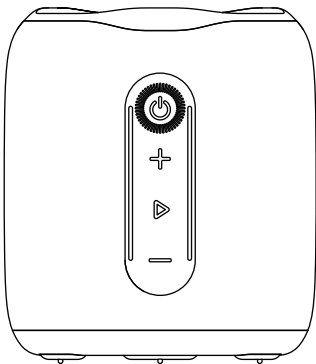


OZ-H60S

USER MANUAL

■ SPECIFICATION

- Model : OZ-H60S
- Bluetooth : V5.3
- Waterproof level : IPX7
- Battery : 3.7V/1800mAh
- Charging time : 3.5 hours
- Playing time : 8 hours
- Input : 5V / 0.8A
- Output : 10W
- Product Size : 84 x 84 x 96 mm
- Product Weight : 253g

 ■ WHAT IS IN THE BOX

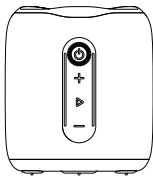

Wireless Speaker x1

 


User Manual x1



Type-C USB cable x1

■ BUTTONS AND FUNCTIONS

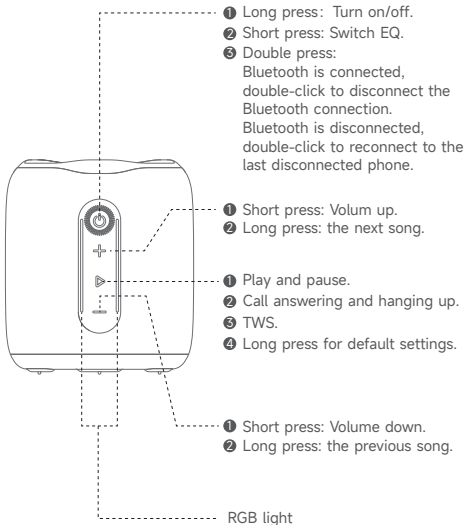

■ CONNECTION



-----TYPE-C charging port.

■ LED LIGHT DEFINITION

Bluetooth Indicator

Trun on

 light on

Bluetooth Connecting

 Flashing light

Playing music Audio

 Light off

Connection successfully

 Light stays on

Charging Indicator

Charging

 Red light on

 
Fully charged

 Red light off

■ BLUETOOTH


1 Bluetooth connection:

Turning on the speaker will automatically enter the Bluetooth mode.

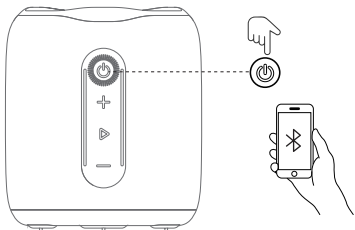


2 Disconnecting the speaker:

 When it's connected via bluetooth, double press the Power Button to disconnect.

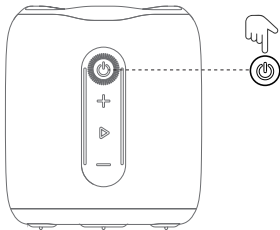


- ③ **Reconnect the speaker:**
Some Bluetooth devices support automatic reconnection. When it's not connected, double press the Power Button to connect to the last disconnected device.

 
- ④ **Hands Free Function:**

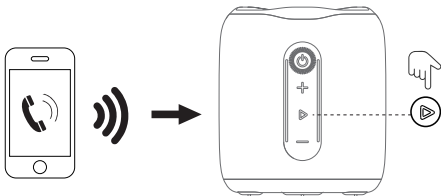

 - ① Short press to answer. ② Short press to hang up.
③ Long press to reject. ④ Double press to call back.

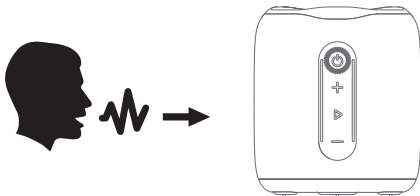


 - 5 **Music Control:**
Short press to play/pause the music.


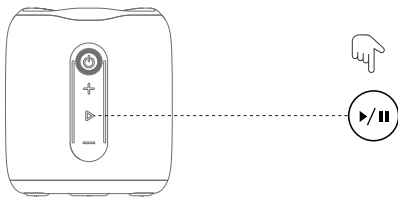


■ TWS CONNECT

 - ① Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a "beep" sound and let go.

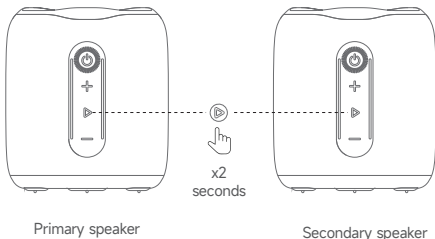

  - ② Find the Bluetooth name and connect. There will be only one bluetooth name on device after 2 speakers are paired.

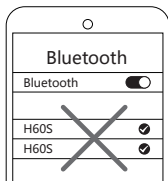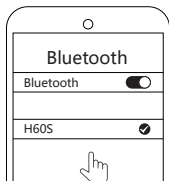

■ AUX PLAY MODE

Power on the speaker.

Use the 3.5mm audio cable to connect the speaker and your device.

The speaker is now connected after a prompt tone and ready to play.

■ TWS DISCONNECT

Press and hold the Play/Pause-button on one of the speakers for about 2 seconds until you hear a prompt sound.

■ Restore Default Settings

Long press Play/Pause button for 5 seconds to clear the pairing information and return to the default volume after a prompt tone, the speaker will automatically turn off.

■ RESET

If the speaker is crashed, press and hold the power button for 8 seconds to automatically reset the speaker and turn it off .

■ TROUBLESHOOTING

- **The speaker does not turn on ?**

Recharge the speaker.

- **The speaker does not turn off or does not respond ?**

Reset your speaker, press and hold Power Button for 10 seconds to shut down and reset.

- **There is no sound?**

Adjust the volume. make sure that your Bluetooth device is within range. ensure there is no obstacles in the way that can block/disturb the signal. check via the device's Bluetooth connection if the speaker is connected with the device.

- **There is poor sound quality?**

Move the device closer to the speaker or try removing obstacles between them.

 
- **Cannot connect the device with the speaker?**

Disconnect other connected devices and ignore the pairing from your devices and re-pair the speaker.

Or you can long press and hold Power Button for 10 seconds to reset the speaker to re-pair it.

Please make sure the speaker is within the Bluetooth covering range by 10 meters and powered on.

! WARNING

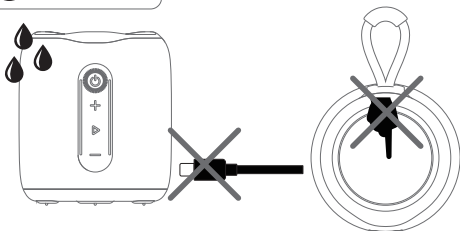

■ IMPORTANT NOTE

- 1 To ensure the waterproof performance of the Bluetooth speaker, remove all cable connections and close the USB plug.
- 2 Exposing a Bluetooth speaker to liquid without taking these steps can cause permanent damage to the speaker, Do not expose your Bluetooth speaker to water while it is charging, as doing so may cause permanent damage to the speaker or power supply.
- 3 The IPX7 waterproof rating is defined as the speaker can be submerged for up to 30 minutes at a depth of 1 meter If the speaker is not used for a long time, please charge it at least every three months.
- 4 Battery life varies depending on usage patterns and environmental conditions.

■ SAFETY PRECAUTIONS

- ❶ Do not place the speaker in a place where it is easy to fall.
- ❷ Do not disassemble, repair or modify this product by yourself.
- ❸ Keep the speaker away from extreme temperatures.
- ❹ Do not use the speaker in an outdoor thunderstorm environment.
- ❺ Do not use any corrosive cleaners to clean the speaker.

■ FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.