

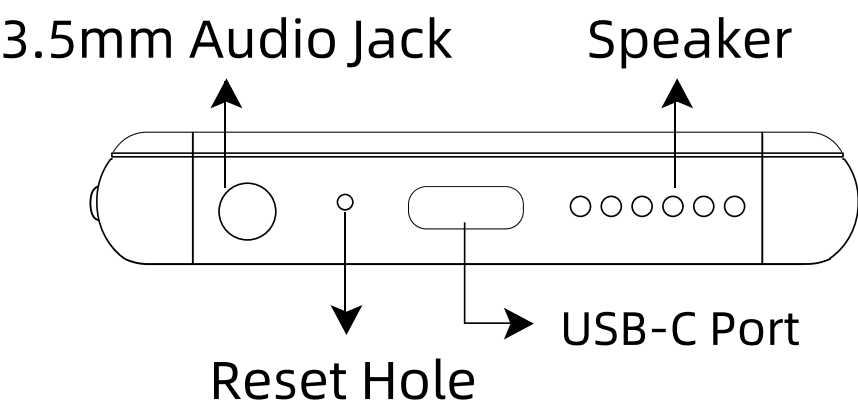 
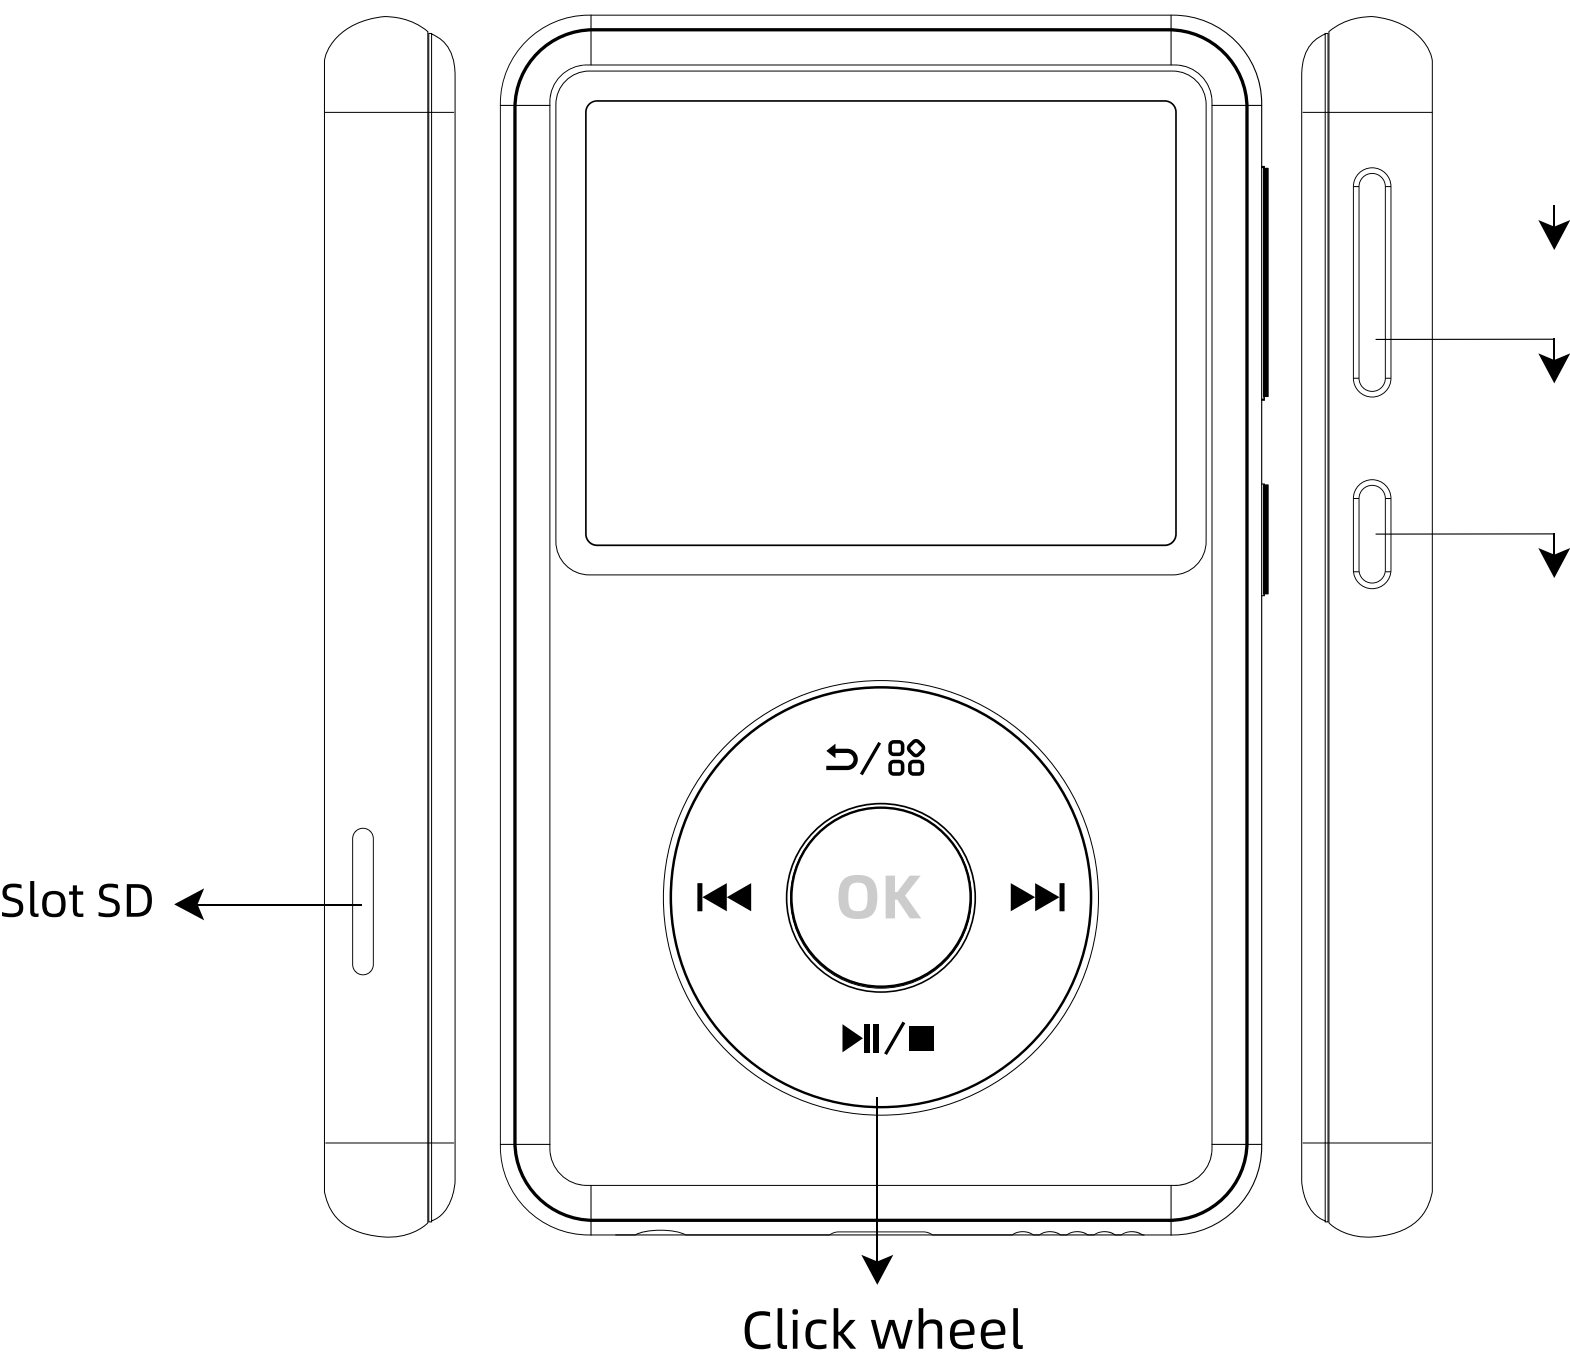 
Hello!

Y2_En_V1.0



INNIOASIS Y2

Digital Music Player



Power

- **Power On:** Press and hold the power button for 3 seconds, the screen will light up and display the brand logo, then enter the main interface to complete the power-on.
- **Power Off:** When the device is on, press and hold the power button for 3 seconds, the screen will display shutdown options, and you can select power off or Restart.
- **Standby:** When the device is on, press the power button briefly, the screen will turn off, and the device will enter standby mode; press the power button briefly again to wake up the device.

Volume+/-

Adjust the volume

Click wheel

-  /  **Return / MFB (Multi-Function Buttons)**
Short press to go back to the previous page, long press to activate certain specific functions or shortcut menus, such as A-B repeat, bookmarks, etc.
-  **Previous (Rewind)**
Short press to skip to the previous track, long press for fast rewind.
-  **Next (Fast Forward)**
Short press to skip to the next track, long press for fast forward.

- **▶||/■ Play(Pause) / Stop**

Short press to play or pause, long press to stop playing.

- **○ Scroll menu**

Slide your finger on the ring clockwise or anticlockwise to navigate between menus or options.

- **OK Confirm**

When browsing apps/files/menus, press briefly to confirm the current selection.

When used in settings, a short press can switch the value of the setting item.

3.5mm Audio Jack

Connect to wired headphones or speaks to output sound.

USB-C Port

Connect to a computer or adapter for charging or files transfer.

Speaker

Built-in speaker for audio output.

Reset Hole

Press with a pin to force shutdown. Typically used when the device freezes or crashes.

How to Transfer Music / Video / Audiobooks to The Player?

1. Connect Y2 player to your computer with the included USB-C cable
2. Short press the button **OK** on Y2 player to confirm "Turn on USB storage".
3. Click "This PC" on your computer`s desktop, you will find a USB drive added to the list of devices and drives.
4. Copy the music that has been downloaded on the computer and paste it into this newly added USB drive.
5. After completing the file transfer, click the button **OK** again to turn off USB storage, and press **↩/⏏** to return to homepage.

Tips: If you turn on USB storage, some apps you're running will stop and may be unavailable until you turn off USB storage.

How to Charge The Player

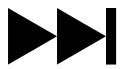
Simply connect the player to an adapter or computer using the included Type-C cable or another verified Type-C cable to charge it.

App Instructions

1. Now Playing

Tap Now Playing to quickly enter the playback interface and resume the most recently played track or audiobook.

1) Click-wheel Guide

Key	Action	Result
	Short press	Prev track/audiobook
	Long press	Fast rewind
	Short press	Next track/audiobook
	Long press	Fast forward
	Short press	Back to Prev-level
	Long press	Activate bookmark (for audiobook) Activate A-B repeat (for music)
	Short press	Play / Pause
	Long press	Stop playing
	Short press	Switch to the lyrics window (Tap again to return to Now Playing)

2) FAQ

① How to add a bookmark for audiobooks?

When playing audiobooks, long press the key  to pop up the dialog box, and then confirm to add to bookmark. All created bookmarks are preserved in Audiobook --- Bookmark lists.

② How to achieve A-B repeating?

When playing music, long press the key  to activate A-B repeat and set point A, long press the key  again to set point B.

****A-B repeat is only available for music playing. If you want to use A-B repeat while playing audiobook, please do not store the audiobook file in the Audiobooks folder. By default, only files stored in the "Audiobooks" folder are recognized as audiobook, while those stored in other folders are recognized as music.*

③ How to exit A-B repeat?

During A-B Repeat playback, long-press Button  to exit.

Music

1) Click-wheel Guide

Key	Action	Result
	Slide  clockwise	Scroll down / right menu or track
	Slide  Anticlockwise	Scroll up / left menu or track
	Short press	Confirm the selected menu or track
	Short press	Back to Prev-level
	Long press	Activate the functional menu

2) Quick Shuffle

At the top of the song list window in all folders (such as All Songs, Playlist, Artists, etc.), there is a "Shuffle" option. Selecting it will randomly play all the songs in the current folder or list by default.

3) Functional Menu

In any folder or file list within the "Music" app, long-pressing Button  brings up a function menu containing all or some of the following options:

- **Multi Select--** Activate multi-select, you can slide the click wheel  to navigate to the target files/songs, and confirming the selection with the Button  to select the files/songs that requiring batch processing one by one.
- **All Select--** One-click to select all current folders, files, songs.
- **Delete File--** Delete the current folder, file, songs. For batch deletion, after multi-select or select-all, re-open the function menu and choose the Delete option.
- **Add to Playlist 1,2,3···--** Add the current songs to the target playlist. For batch addition, complete multi-select or select-all first, then enter the function menu again and perform the Add to Playlist operation.
- **New Playlist--** Add a new playlist, the default name of the new playlist is Playlist 6, 7···
- **Delete Playlist--** Delete the current playlist. For batch deletion, after multi-select or select-all, re-open the function menu and choose the Delete playlist option.
- **Rename--** Rename the current playlist.

4) Music App Settings

Settings within the Music app apply only to Music playback.

- **Shuffle--** Enable/disable shuffle mode. Short press the button  to switch.

•**Repeat**-- Set Loop Mode, Options include: List loop, Single loop, Off. Short press the button  to switch.

•**Time off**-- Set stop playing time, The available options include: Off, 10min, 20min, 30min, 60min.

•**Equalizer**-- Offers 10 preset sound styles, including Normal, Classical, Dance, Flat, Folk, Heavy Metal, Hip Hop, Jazz, Pop, Rock. And supports custom EQ.

Tips: The currently running style is marked with green, and the style being located is marked with light blue.

•**Display Song By**-- Set song display mode in folders/lists: file name or song name.

****Song name refers to the title of the song in the metadata. Currently, the player can recognize metadata for MP3, M4A, FLAC, OGG, M4R, APE files, but it cannot recognize metadata for WMA, AAC, AMR, or MMF files. This means that when you select "Song name", songs lacking meta info will have their titles displayed as "Unknown".*

•**List Sort**-- Set the sorting order for files and songs, including: A-Z, Z-A, Creation time (ascending), and Creation time (descending).

•**Artist View**-- Set whether to group songs by album under the Artist category.

Song: Display all songs directly without album grouping (default)

Album: Group songs by album; tap an album to view its tracks

•**Album View**-- Set the display mode under the Album category.

Song: Display all tracks of the album directly (flat list)

Artist: Group tracks by artist after entering the album; tap an artist to view its songs.

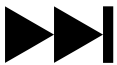
•**Import M3U**-- As the name suggests, this function imports M3U playlists.

•**Export M3U**-- As the name suggests, this function export M3U playlists.

5) Search

Y2 Player enables you to search for target tracks or albums by entering part or all of a track title. Tap the Search button, input part or all of the track title in the pop-up input box, and you will see a preview of the search results displayed above the input box. For additional operations, please refer to the table below.

Tecla	Ação	Resultado
	Short press	Backspace – deletes one character with each press
	Long press	Continuous backspace (hold to delete characters repeatedly)

Tecla	Ação	Resultado
	Short press	Space – inserts a space with each press
		Scroll right through letter options or move the cursor right
	Slide clockwise	Scroll right through letter options or move the cursor right
	Slide Anticlockwise	Scroll left through letter options or move the cursor left
	Short press	Confirm selection and input the chosen letters into the text box
	Short press	Close the input box and return to the search results page
	Short press	Activate the function menu (available on the search results page)

6) FAQ

① How to import M3U playlist?

② How to Customize EQ

Go to Settings >> Equalizer to select a preset style. Long-press Key  to open the custom EQ adjustment window. Use Keys  or  to navigate to the target frequency band, then adjust its value by sliding the Click Wheel clockwise or counterclockwise. After finishing adjustments, press the return Key  , a pop-up window will appear prompting: "Save equalizer parameter changes?" Select "Yes" to confirm.

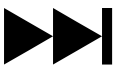
③ How to shuffle songs

④ How Shuffle and Repeat Modes Work Together to Determine Playback Behavior

Shuffle	Repeat	Result
On	Off	Shuffle tracks within the current playlist or folder; playback stops once all tracks are played.
On	List Loop	Shuffle tracks within the current playlist or folder and keep shuffling repeatedly after all tracks finish playing.
On	Single Loop	Repetir a faixa atual continuamente.
Off	Off	Repeat the current track continuously.
Off	List Loop	Play tracks sequentially in the current playlist or folder; playback stops once all tracks are played.
Off	Single Loop	Play tracks sequentially in the current playlist or folder and keep playing sequentially repeatedly after all tracks finish playing.
Off	Single Loop	Repeat the current track continuously.

Video

1) Click-wheel Guide

Key	Action	Result
	Short press	Prev video or menu item
	Long press	Fast rewind
	Short press	Next video or menu item
	Long press	Fast forward
	Short press	Back to Prev-level
	Long press	Activate the Function menu
	Short press	Play / Pause
	Long press	Stop playing
	Slide clockwise	Scroll down / right files, menus, videos
	Slide Anticlockwise	Scroll up / left files, menus, videos

Key	Action	Result
	Short press	· Confirm the selected files, menus, videos · Toggle the value of the setting item

2) Function Menu

In any folder or file list within the "Video" app, long-pressing Button  brings up a function menu containing all or some of the following options:

- **Multi Select--** Activate multi-select, you can slide the click wheel  to navigate to the target files/videos, and confirming the selection with the Button  to select the files/videos that requiring batch processing one by one.
- **All Select--** One-click to select all current folders, files, videos.
- **Delete File--** Delete the current folder, file, video. For batch deletion, after multi-select or select-all, re-open the function menu and choose the Delete option.
- **Add to Playlist 1,2,3···--** Add the current video to the target playlist. For batch addition, complete multi-select or select-all first, then enter the function menu again and perform the Add to Playlist operation.

- **Delete Playlist--** Delete the current playlist. For batch deletion, after multi-select or select-all, re-open the function menu and choose the Delete playlist option.

- **Rename--** Rename the current playlist.

3) Videos Settings

This setting is valid only for the Videos app.

- **Loop Mode--** Select the loop mode for video playback. Available options: Single Repeat, List Loop, Off. Press the button **OK** to toggle.

- **List Sort--** Select the sorting order for files and lists, including: A-Z, Z-A, Creation time (ascending), and Creation time (descending). Press the button **OK** to toggle.

- **Key Settings--** Specifically designed for the PREV and NEXT buttons, allowing for custom configuration of "short press" and "long press" behaviors.

- **New Playlist--** Add a new playlist, the default name of the new playlist is Playlist 6, 7...

① PREV/NEXT Short Press: seek±10s seek±30s, seek±60s, Prev/Next Track

② PREV/NEXT Long Press: seek±10s seek±30s, seek±60s, Continuous Seek, Prev/Next Track

Press the button **OK** to toggle.

- **Speed playback--** Set video playback speed. Available options are: 0.5x, 0.75x, 1.0x, 1.25x, 1.5x, 2.0x. Press the button **OK** to toggle.

- Decoding Mode**-- Hardware or software decoding methods can be selected. Press the button  to toggle.
- Load Subtitles**-- Enable or disable subtitle loading. Press the button  to toggle.
- Scan Path**-- Set which folder paths the device scans to recognize video files. The default scan path is the "movies" folder in internal storage. If you store videos in other folders or on the SD card and need to include them in the scan range, you can add new locations via Add Custom Path. Here are the operation steps:
Go to Settings >> Scan Path, select Add Custom Path, then navigate to the target folder where your videos are stored. Press the Return button  to switch to the Select option, then tap  to confirm and finish.

3) FAQ

① Why are the videos stored on the device not showing up?

This is because the device defaults to only scanning videos stored in the movies folder under internal storage.

Videos saved elsewhere will not be recognized until you add their storage path using Add Custom Path in Video app > Settings > Scan Path.

Audiobook

1) Click-wheel Guide

Note: Only books stored in the device's “Audiobooks” folder are recognized as audio books. Audiobooks stored elsewhere will be recognized as music.

Key	Action	Result
	Slide clockwise	Scroll down / right files, menus, audiobooks
	Slide Anticlockwise	Scroll up / left files, menus, books
	Short press	· Confirm the selected files, menus, audiobooks · Toggle the value of the setting item
	Short press	Back to Prev-level
	Long press	· Activate the Function menu · Add Bookmark During Playback

2) Function Menu

Long press the key  in all folders/files of

Audiobook to pop up a function menu for file management:

- **MultiSelect**-- Activate multi-select mode. slide the wheel  to navigate to target files/audiobooks, then press the confirm button  to select files/audiobooks for batch processing one by one.
- **All Select**-- One-click to select all current folders, files, audiobooks.
- **Delete File**-- Delete the current folder, file, audiobook. For batch deletion, after multi-select or select-all, re-open the function menu and choose the Delete option.

3) Bookmart

In the audiobook playback window, long press the button  to activate the bookmark function, which prompts "Add to bookmark?". Select "Yes " to create a new bookmark for the audiobook. All bookmarks are saved in the Bookmark List folder.

In the bookmark list, long press the button  to bring up the shortcut menu, where you can select all, multi-select or delete bookmarks.

4) Audiobook App Settings

This setting is valid only for the audiobook app.

- **Shuffle**-- enable/disable shuffle mode
- **Repeat**-- enable/disable loop playback, Options include: List loop, Single loop, Off.

- **Time off--** Set stop playing time, The available options include: Off, 10min, 20min, 30min, 60min.
- **Speed--** Adjust playback speed, The available options include: Slow, Normal, Fast, Fastest.
- **Display Book By--** Set audiobook display mode in folders/lists: file name or book name.
- **List Sort--** Set the sorting order for files and audiobooks, including: A-Z, Z-A, Creation time (ascending), and Creation time (descending).
- **Artist View--** Set whether to group audiobooks by album under the Artist category.

Book: Display all audiobooks directly without album grouping (default)

Album: Group audiobooks by album; tap an album to view its audiobooks

- **Album View--** Set the display mode under the Album category.

Book: Display all audiobook of the album directly (flat list)

Artist: Group audiobooks by artist after entering the album; tap an artist to view its audiobooks.

5) FAQ:

① Why didn't I find the audio books uploaded to the device?

To avoid confusion between music files and audiobooks, only books stored in

"Audiobooks" folder will be recognized as audiobooks by default. Books stored elsewhere will be recognized as music. Therefore, make sure you upload the audiobooks to the audiobooks folder.

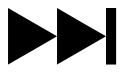
Tips: encrypted audiobooks cannot be recognized, such as .m4b, aax file.

② Why can't my audiobooks and podcasts remember the last playback position, and every time I choose to play it from the folder, it starts from the beginning?

The resume playback function only applies to audiobooks and podcasts stored in the "Audiobooks" folder on the device. Audio files stored in other locations are defaulted to music files and will not utilize this feature.

Ebook

1) Click-wheel Guide

Key	Action	Result
	Short press	Turn to prev page
	Short press	Turn to next page
	Short press	Back to Prev-level
	Slide clockwise	Scroll down files, menus, text
	Slide Anticlockwise	Scroll up files, menus, text
	Short press	· Confirm the selected files, menus, books · Bring up the reading toolbar.

2) Toolbar

Open a book, then press Key  in the reading window to bring up the toolbar. The reading toolbar provides the following options:

-  **Chapter:** Displays all chapters of the book for quick navigation to a specific chapter. Available for EPUB files only.

-  **Bookmark:** Adds a bookmark to the current reading position.
-  **Bookmark List:** Stores all your saved bookmarks. Select a bookmark to quickly navigate to the corresponding reading position.
- **A+ Larger:** Increases the font size.
- **A- Smaller:** Decreases the font size.
-  **Theme:** Provides additional theme options for the reading interface.

Photo

1) Click-wheel Guide

Key	Action	Result	
		In a folder / file window	In the image viewing Window
	Short press	Navigate to Prev files, menus, images	View Prev image
	Short press	Navigate to Next files, menus, images	View Next image
	Short press	Back to pre-level	Back to pre-level
	Long press	Activate Toolbar	Activate Toolbar
	Slide clockwise	Scroll down / right the files, menus, image	Jump to next image
	Slide Anticlockwise	Scroll up / left the files, menus, image	Jump to prev image
	Long press	Confirm the selection of the current files, menus, image	-

2) Toolbar

In the folder or file window and iamge viewing

window, long press the button  to pop up the toolbar with the following options:

-  **Delete** -- Delete the current folder, file, image, etc. For batch deletion, after multi-select or select-all, re-open the toolbar and choose the Delete option.
-  **MultiSelect** -- Activate multi-select mode. Click the button  /  or slide the wheel  to navigate to target files/images, then press the confirm button  to select files/images for batch processing one by one.
-  **All Select** -- One-click to select all current folders, files, images.
-  **Rename** -- Rename the current folder, file, image.
-  **As Wallpaper** -- Set the current image as desktop or global wallpaper.

3) FAQ

① Why do I get a very blurry desktop background when I set the image as wallpaper?

First make sure your image pixels are greater than 480 x 360, then go to "Settings>>Wallpaper", and switch the value of Ground glass to Off.

② What image formats are compatible with the player?

Both .PNG and .JPG are available.

③ Can I edit the image?

Only rename is available, no image editing option is provided.

④ How to enter words when renaming?

Please refer to "About Search" in the Music chapter.

Settings

- **Timed shutdown**-- Set the time of timed shutdown, options included: off, 10min, 20min, 30min, 60min, 90min, 120min. Short press the button  to switch.
- **File extensions**-- Show (On) / Hide (Off) the file extension of the currently playing song in the music playback window. Short press the button  to switch.
- **Screen-off key switch**-- Select the type of key lock for the screen-off state.

Media Mode: Allowed key: Play/stop, Prev/Next; Disabled Key: Menu, OK

Full Lock Mode: All keys are disabled except the power button.

- **Key tone**-- Enable or disable key tone. Short press  to switch.
- **Key vibration**-- Enable or disable key vibration. Short press  to switch.
- **Wallpaper**-- Set the device's desktop or global wallpaper.

Note: Setting "Ground glass" to "On" will blur the wallpaper.

- **Screen timeout**-- Adjust the screen timeout: 10s, 15s, 30s, 45s, 60s, 120m, 300s, Always. Short press  to switch. When the device is idle for more than the set time, the screen will turn off and enter power-saving mode.

- **Brightness**-- Adjust the screen brightness by slide the click wheel clockwise or anticlockwise.
- **Display battery**-- Enable/ disable the display of the battery percentage in the title bar.
- **Date & Time**-- Set the date, time, and time format of the device, etc.
- **Theme**-- Choose a preset theme or a custom theme. The device offers 4 preset themes.
- **Language**-- Set the language of the device.
- **Factory reset**-- Reset the device to factory settings.

*Warning: all saved files on the device will be deleted.
Please be careful.*

- **Clear cache**-- Clearing the system cache resolves common issues such as unexpected slow performance, response delays, or errors.
- **Bluetooth**-- Enable or disable Bluetooth functionality, and select a Bluetooth device to pair.

① **Connect**: After enabling Bluetooth, all available Bluetooth devices around will be listed under the menu "Other devices". Slide the click wheel clockwise or anticlockwise to navigate the target device, and then short press the button  to pair and connect with the device.

② **Disconnect**: Slide the click wheel clockwise or anticlockwise to navigate the connected device under the menu "My Device". Short

press the button  and confirm to disconnect the device

③ Remove: Slide the click wheel clockwise or anticlockwise to navigate the target device in "My Device". Long press the button  and confirm to ignore the device.

④ Refresh the device list: Disable Bluetooth, then enable it again.

- **About** -- View device information, including storage capacity, used space, available space, and firmware version.

Specification

Bluetooth version: 4.2

Product Size: 4.0 x 2.5 x 0.4 inch

Net Weight: 2.7 oz

Screen Size: 2.4 inch (480 x 360 pix)

Battery Capacity: 1300mAh

Charging Time: 90 Minutes

Internal Storage: 1G RAM+8GB ROM

Music Playtime: 25-35 hours

Music format: MP3, WAV, FLAC, APE, OGG,
M4A, AAC, WMA, MP2,
AMR, MID, M4R, MMF,
WV, AIF, AU, RA, MKA,
AC3, CAF, 3GPP, DFF

Video format: MP4, MKV, MOV, AVI, FLV, WMV

Ebook format: TXT, EPUB

Photos format: JPG, PNG

Warning:

>>Do not leave the device in an environment where the temperature is too low or too high (below -10°C or above 50°C) for a long time. Extreme temperature environments will cause the device to deform and shorten the service life of the device;

>>Do not use the equipment under thunderstorm weather;

>>Do not place the device in the water for a long time;

>> Do not expose the equipment to the sun for a long time.

Warranty

Thank you for purchasing our products. You will enjoy the following services when using this product.

Warranty period: Within one year from the date of sale.

Warranty scope: Limited to the product host.

Warranty terms:

- ① Within 1 year after purchase, failure or damage caused by product quality problems can be replaced for free or full refund.
- ② Accessories are not included in the warranty, such as USB cable, earphones, etc., but if quality problems occur within 7 days after purchase, they can be replaced for free.
- ③ The following conditions are not covered by the warranty
 - Out of the warranty period.
 - It has been disassembled or repaired privately by the customer.
 - Man-made damage, accidental damage or deformation.
 - Failure caused by installation and use in abnormal environments such as high temperature, high pressure, and humidity.
 - Damage caused by natural disasters such as lightning strikes, floods, and earthquakes.

FCC Warning

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Contact us:

Email: hksttark@hotmail.com

Online support:

<https://www.facebook.com/innioasis/>



We promise to reply you as soon as possible within 24 hours.