

SOUND TWIST

WIRELESS SPEAKER

Notice:


Please read user manual carefully and keep it for your records.

- 1- Wireless Speaker
- 1- Micro USB Cable
- 1- Instruction Manual

Warnings:


- Do not let small children play this product - Do not expose the speaker to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Do not use abrasive cleaning solvents to clean the speaker.
- Store the speaker out of direct sunlight and extreme temperatures (above 45°C/113°F or below -10°C/- 14°F), as this may shorten the battery life, affect the operation or degrade the performance of your speaker.
- Do not dispose of the speaker in a fire as it might result in an explosion. - Do not expose the speaker to sharp objects as this will cause scratches and damage.
- Do not drop the speaker. This may cause damage to the internal circuitry.
- Do not attempt to disassemble the speaker. This may cause damage to the internal circuitry.
- If the speaker is left for long period without use, charge once per month to avoid the overconsumption of the battery.
- This appliance is for indoor use only. Please do not use or store the unit in high temperature or hazardous locations. Please do not submerge the unit into water, as this will ruin the speaker.
- The unit comes with a rechargeable battery, so please do not throw or put it in a fire to avoid explosion.
- The warranty for this product is invalidated if the product has been tampered, repaired or modified in any way.

Top of speaker:

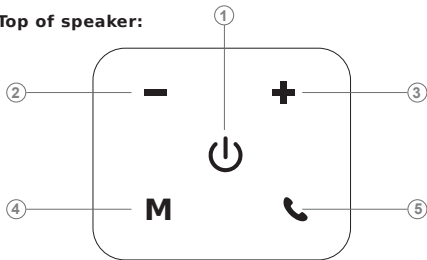

1. ON/OFF
2. Volume - / Previous
3. Volume + / Next
4. Mode
5. Play/Pause / Answer Call

Back of speaker:

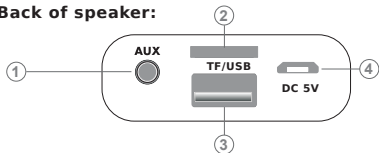

1. AUX in
2. Micro SD Card Reader
3. USB
4. DC 5V input

1. Power Switch: Switch power ON/OFF on top of the speaker by pressing  button .

2. Charging:

- Plug the micro USB cable into the micro USB port on the back of the speaker, and connect the other end of the cable with any compatible charger or wall outlet.
- When charging, the small LED indicator will glow solid red. When fully charged, the LED indicator will turn of.
- Charging time is approximately 2-3 hours.

3. Micro SD Function: Insert a Micro SD card. TF mode will start automatically.

4. USB Function: Insert a USB flash drive. USB mode will start automatically.

5. FM Radio: Press **M** on the product to switch to FM mode. Radio will start automatically.

To AUTO-SCAN the stations, short press  button once. It will take few minutes to search all the stations. Once all the stations are scanned, they get registered in memory automatically.

Short press   button to skip selected stations.

Long press   button to increase or decrease the volume.

6. Activate your device's Bluetooth and set your mobile phone to search for Bluetooth devices. After the search is completed, select **BC-BS-117** from the Bluetooth device list.

7. TWS Connection is only for two **BC-AU-BS-117-BK** speakers: When the two speakers are in Bluetooth mode at the same time (one of the speaker is connected to the phone), choose one of them to long press the **M** button, and the two speakers will be connected automatically. When the connection is successful, long press the **M** button again, and the connection will be disconnected (the speaker connected to the phone will continue to sound)

SPECIFICATIONS:

- With FM, AUX, Bluetooth®, USB/TF card & TWS function
- Bluetooth® : V4.2
- Input: 5V
- Battery Capacity: 1200 mAh
- Sound output: 10 W (5W x 2)
- Charge time: up to 3 hours
- Play time: up to 2-3 hours
- Standby time: up to 5 hours
- Operating range: 33 feet (10m)
- Battery: 3.7V Built-in Li-ion
- Compatible with most Bluetooth® enabled tablets and smartphones

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Bytech NY INC. warrants this product to be free from defects in materials and workmanship to the original purchaser for a period of 12 months from the original purchase date. Bytech's responsibility with regard to this limited warranty shall be limited solely to repair or replacement as its option, of any product which fails during normal consumer use. This warranty does not extend to damage or failure which results from misuse, neglect, accident, alteration, abuse, improper installation or maintenance. At any time during the 12 month period following the purchase, the product fails due to defects in material or workmanship, return the defective product (with freight prepaid) with proof of purchase. Please include \$5.00 for return shipping and handling.

WWW.BYTECHINTL.COM

Bytech NY Inc.

2585 West 13 street

Brooklyn NY 11223

(718) 449-3700

©2020 BYTECH NY INC.

*All trademarks and copyrights are the property of the respective com