

Kambrook - Australia

Building 2, Port Air Industrial Estate

1A Hale Street

Botany NSW 2019

Australia

Customer Service Line 1300 139 798

Customer Service Fax 1800 621 337

www.kambrook.com.au

Kambrook - New Zealand

Private Bag 94411

Botany, Manukau

Auckland 2163

New Zealand

Customer Service Line/

Spare Parts 0800 273 845

Customer Service Fax 0800 288 513

www.kambrook.co.nz

KAMBROOK
THE SMARTER CHOICE

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue A12

KAMBROOK

THE SMARTER CHOICE



Arctic HV
40cm
Pedestal Fan

KFA423

Instruction Booklet

Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 0800 273 845 (New Zealand). Alternatively, visit us on our website at www.kambrook.com.au or www.kambrook.co.nz

Contents

Kambrook Recommends Safety First	p4
Your Kambrook Arctic HV Pedestal Fan	p6
Using Your Kambrook Pedestal Fan	p7
Care and Maintenance	p9

IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

Important Safeguards For Your Kambrook Arctic HV Pedestal Fan

- Carefully read all instructions before operating the Kambrook Pedestal Fan for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the fan for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this fan.
- Ensure that the surface is level, clean and free of water and other substances.
- Always ensure the fan is properly assembled before use. Follow the instructions provided in this book.
- Keep the fan clean. Follow the cleaning instructions provided in this book.
- Do not leave the fan unattended when in use.
- Do not place anything, on top of the fan when assembled, when in use and when stored.
- This fan is not intended for commercial or industrial use.
- Avoid touching mobile parts of the fan.
- Never insert fingers, pencils or any other objects through the guards whenever the power plug is connected, in particular while the fan is switched on.
- Do not operate in the presence of explosives and/or flammable fumes or liquids.
- Do not unplug the fan by pulling on the cord.
- Never carry the fan by the cord or yank to disconnect from an outlet; instead grasp the cord at the plug and pull to disconnect. Do not pull the cord around sharp edges or corners.
- The fan must not be used if the grilles are not fastened correctly and the pedestal stand and base correctly fitted as per the instructions provided in this book.
- When unpacking the fan, check to see you have received all the items listed in the parts list before discarding the packaging.
- To avoid electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit as your fan when it is in use.
- Disconnect the power plug before dismantling, assembling or before cleaning and when the fan is not in use.

Important Safeguards For All Electrical Appliances

 
 
- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to inspect the appliance regularly. Do not use the appliance if the power supply cord, plug, connector or appliance becomes damaged in anyway. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorized Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

Your Kambrook Arctic HV Pedestal Fan

1. Fan head with metal front/back grilles, metal fan blades, and tilt adjustment knobs
2. Fan blade size: 40cm
3. Manually adjustable head moves up and down or left and right
4. Height adjustable pedestal extension with knob
5. Dial controller with 3 speed settings
6. Carry handle for portability (not shown)
7. Solid, anti-topple base for stability

Parts List

1. Fan head
7. Base
8. Tilt adjustment knobs (2)
9. Fan Head Screws
10. Height adjustment knob
11. Inner extension tube
12. Outer extension tube
13. Fixing Tube
14. Stability plate
15. Washer
16. Locking screw

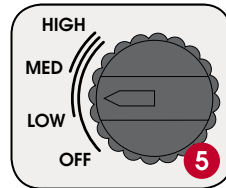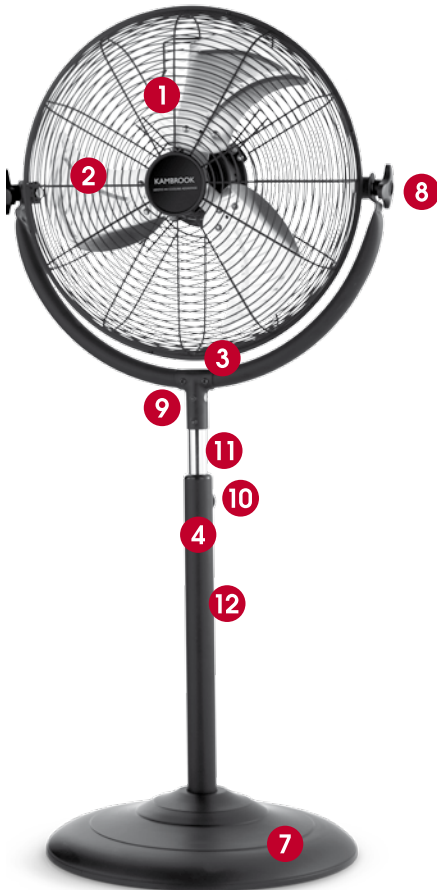

Using Your Kambrook Pedestal Fan

Before First Use

Remove any promotional material from the fan.



IMPORTANT:

When unpacking the fan, check to see you have received all the items listed in the Parts List before discarding the packaging.

Assembling Your Kambrook Arctic HV Pedestal Fan

Base and Extension Tube Assembly

1. Place the Fixing Tube into the hole of the Stability Plate (Fig. 1) then place both under the Base. Place the Washer on to the Locking Screw and fit through the hole at the bottom of the Stability Plate (Fig. 2).



Fig. 1

NOTE: The Washer fits into the groove on the bottom of the Stability Plate and is correctly fitted if the Locking Screw protrudes from the other side of the Base leaving enough thread to screw onto the Outer Extension Tube.



Fig. 2

2. Fit the Outer Extension Tube on to the Locking Screw and tighten the Locking Screw firmly. (Fig. 3).

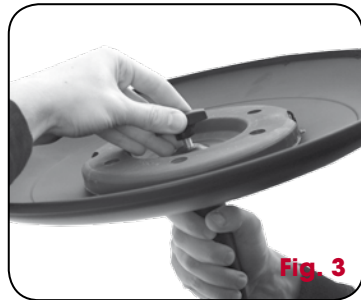 


Fig. 3

3. Unscrew the Height Adjustment Knob and pull up on the Inner Extension Tube to adjust the height, ensuring that the Height Adjustment Knob is fully tightened to hold in place before assembling the Fan Head. (Fig. 4).

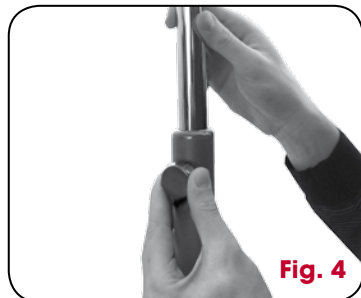 


Fig. 4

Using Your Kambrook Pedestal Fan continued-

NOTE: The Inner Extension Tube is inside the Outer Extension Tube.

4. Mount the pre-assembled Fan Head to the Inner Extension Tube and tighten the Fan Head Screw until it is tight (Fig. 5).



Fig. 5



IMPORTANT: The prongs on the pre-assembled fan head assembly may need to be pried apart slightly to more easily fit on to the top of the extension tube. Do not force the pre-assembled fan head onto the extension tube.

5. Press the two Tilt Adjustment Knobs firmly on to the bolts located on either side of the fan head. (Fig. 6)



Fig. 6

To Operate the Kambrook Arctic HV Pedestal Fan

Plug the cord into a 230V or 240V power point and switch on.

The fan has 3 speeds. To adjust the flow of air, turn the fan speed dial located at the back of the fan to the preferred speed - LOW, MED or HIGH. To turn Off, turn the fan speed dial to the OFF position.

NOTE: To avoid an electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit as your fan when it is in use.

Adjusting Air Flow Direction

To adjust the flow of air left or right, manually swivel the fan to the desired position.

To adjust the flow of air up or down, slightly loosen the two tilt adjustment knobs located on either side of the fan and tilt the fan either upwards or downwards to suit. Once the fan is in the desired position, re-tighten the two knobs to hold in place.

Adjustable Height

The fan height can be manually adjusted. Simply loosen the Height Adjustment Knob on the Extension Tube of the fan, then adjust to the required height. Re-tighten the Height Adjustment Knob when the desired height has been reached (Fig. 6).



Fig. 6

Care and Maintenance

Always turn the fan to the OFF position, switch off at the power outlet and unplug at the power outlet before cleaning.

To clean the fan, remove dust that may have accumulated with a soft cloth or a vacuum cleaner using the brush attachment. Wipe the exterior of the fan with a soft, damp cloth.

Never use an abrasive cleaner. When not in use, store the fan in a cool, clean and dry location.

