


HTC 无线蓝牙耳机

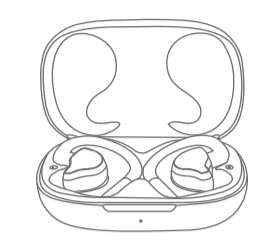

快速入门指南
使用前请阅读使用说明书
HTC NE81

产品规格

型号: HTC NE81


蓝牙
范围: ≈10m
版本: 6.0

喇叭
直径: 8mm
阻抗: 32Ω

耳机功率
输入: 5V=28mA
电池容量: 28mAh
使用时间: ≈4.5小时
充电时间: ≈1.5小时


充电仓功率
输入: 5V=300mA
输出: 5V=56mA
电池容量: 300mAh
充电时间: ≈1.5小时
充电仓充满电时, 能给耳机充电约3次

物品清单

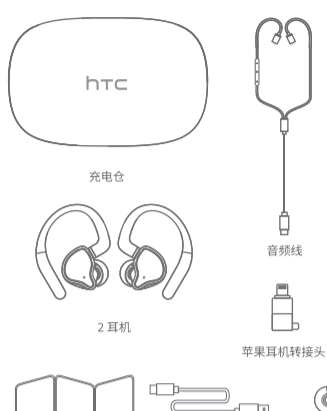


快速入门指南 USB-C 充电线 6耳帽

耳机部件

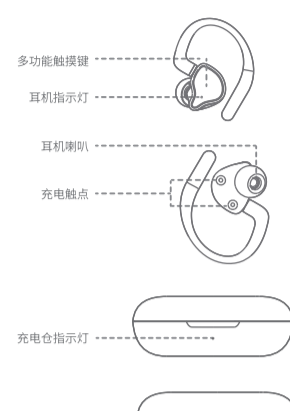

多功能触控键
耳机指示灯
耳机喇叭
充电触点
充电仓指示灯
Type-C 充电口

取出耳机并配对




蓝牙耳机:
如果您是第一次使用耳机, 请将两个耳机从充电仓中取出, 其中一个耳机的LED灯将会交替闪烁白灯和蓝灯, 表示它们处于配对模式。
注:
• 如果耳机未与任何设备配对, 打开后会自动进入配对模式。
• 配对成功后, 您会听到提示音。
• 如果耳机之前已配对, 打开后会自动重新连接。连接时您会听到提示音。


有线耳机:
如果您是第一次使用耳机, 将 Type-C 耳机插头插入设备底部的 Type-C 音频孔, 即可直接使用, 无需蓝牙连接。

如何切换蓝牙/有线耳机

蓝牙耳机:




有线耳机:




左右区分: 耳机本体和耳线上均标注 L (左) / R (右), 请按标识对应佩戴, 确保声音清晰。

如何佩戴耳机

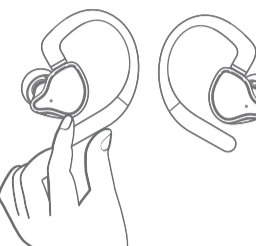


有线耳机基本操作



注意事项:
1. 耳机插手机时默认进入声音卡 (压感) 模式。
2. 可用另一台手机蓝牙连接 "HTC NE81 伴音" 播放伴奏。
3. 本品标配 Type-C 接口声音数据线, 仅支持带有 Type-C 接口的设备。
4. 触控状态下声音卡模式可以通话, 音乐模式不行。
5. 蓝牙、交互等透明模式下, 需断开蓝牙 (苹果以下不支持)

使用方式	功能描述	按键操作
声音卡功能	声音卡模式/耳机模式	长按 3s 切换
声音卡模式下	男音、KTV、原声、男变女、女变男、音乐厅模式	单击 ① 切换
	麦克风音量增加	单击 ② 切换
	麦克风音量减少	单击 ③ 切换
	降噪特效	长按 ③ 3s 切换
耳挂模式下	音乐暂停/播放	单击 ②
	上一曲	双击 ②
	下一曲	双击 ③
	耳机音量增加	单击 ④
	耳机音量减少	单击 ⑤

开机和关机

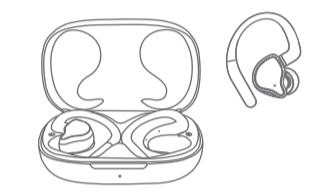


开机
自动开机: 将耳机从充电仓中取出, 耳机开机。
手动开机: 长按 3s, 耳机开机。

关机
自动关机: 耳机放入充电仓中, 耳机关机。
手动关机: 长按 5s, 耳机关机。


注: 当耳机开机后, 3分钟内未与蓝牙设备配对, 便会自动关机; 当配对的蓝牙设备超出有效连接距离, 且未重新连接时, 3分钟后, 耳机自动关机。

连接到蓝牙设备



在您的设备上, 打开蓝牙并选择连接到 "HTC NE81".

基本操作

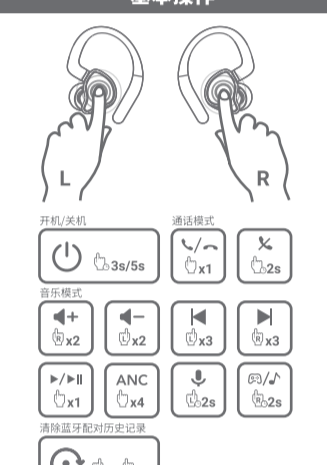

开机/关机: 3s/5s
通话模式: x1, x2
音乐模式: x2, x3, x4, x5
清除蓝牙配对历史记录: x5


功能操作

- 暂停/播放: 轻触任一耳机一次
- 音量加: 轻触右耳机二次
- 音量减: 轻触左耳机二次
- 上一曲: 轻触左耳机三次
- 下一曲: 轻触右耳机三次
- 接听/挂断电话: 轻触任一耳机一次
- 通话挂断: 按住任一耳机 2s
- 启动语音助手: 按住左耳机 2s
- 注: 单耳使用时, 按住已开机的耳机 2s, 均可激活语音助手
- 游戏模式与音乐模式切换: 按住右耳机 2s 切换
- 注: 单耳使用时, 无法切换游戏模式和音乐模式
- 注: 出厂设置默认为音乐模式
- 注: 通知声音较大的是游戏模式
- 切换 ANC 降噪模式: 轻触任一耳机四次, 可在模式间切换。(共有三种模式可供切换, 正常模式/ANC 降噪模式/透明模式)

指示灯显示

耳机指示灯	状态
白灯和蓝灯交替闪烁	两个耳机: 开机 单耳机: 未配对
蓝色常亮	充电中
灭灯	配对成功或充满电
充电仓指示灯	状态
蓝色常亮	耳机充电中
白灯闪烁	充电仓充电中
白灯常亮	充电仓充满电

如何清除蓝牙配对历史记录

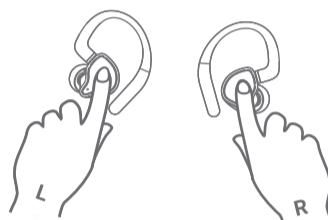

双耳从充电仓取出后会启动开机配对, 耳机未与蓝牙设备连接或耳机从蓝牙设备取消连接状态下, 分别对左耳机和右耳机连续五次多功能键, 提示音 "嘟" 四声后, 耳机自动关机后, 将双耳机放回充电仓, 再将双耳机取出, 双耳机会自动配对, 完成后即可连接蓝牙设备使用。

适用于以下情况:
A: 双耳无法配对时, 单边配对时, 双配对同时。
B: 使用单耳机分别连接不同蓝牙设备时。
C: 清除连接的所有蓝牙设备时。

特别提示:
当单边耳机出现无声, 或者无法配对时, 请按以上步骤重置操作。

产品中有毒物质的名称及含量

部件名称	产品中有毒物质的名称及含量					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多环芳烃(PAHs)	邻苯二甲酸酯(PHTHALATES)
印刷电路板组件	○	○	○	○	○	○
外壳等小结构件	○	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制。
○: 表示该有毒物质在该部件所有物质材料中的含量均在 GB/T 26572 规定的限量要求以下。
×: 表示该有毒物质至少在该部件的某一物质材料中的含量超出 GB/T 26572 规定的限量要求。
表中标记 "X" 的部件, 皆因全球技术发展水平限制而无法实现有毒物质的替代。

印刷电路板组件: 包括印刷电路板及其零部件。
电子元件等: 根据产品类型不同。
您所购买的产品可能不会含有以上所有部件。

重要安全说明

在使用本产品之前, 请仔细阅读本说明书中的所有安全说明。

常规安全说明

- 小心使用本产品, 并将其存放在没有极端温度、高压和潮湿的清洁环境中, 确保产品存放在不易弯曲或挤压的地方。
- 维修和更换只能由授权的售后服务人员进行。
- 请勿自行拆卸或更换产品的任何部件, 以免受损或损坏设备。
- 对产品的任何未经授权修改都将使保修无效。
- 仅在允许蓝牙传输的环境中使用本产品。

个人安全说明

- 如果产品有明显缺陷或出现膨胀或温度过高等异常, 请勿使用。
- 执行重要安全任务的高风险任务时, 请勿使用本产品。
- 为了保护您的听力, 请勿长时间高音量收听。
- 请将产品及包装放在儿童和宠物接触不到的地方, 以防发生吞咽和窒息等事故。

电池安全说明


该产品内置可充电电池, 请阅读以下说明, 确保安全使用和处置。

- 请勿将产品长时间暴露在热源中, 如明火或阳光直射。
- 仅将产品存放在环境温度在 0°C 至 35°C (32°F 至 95°F) 的环境中。
- 请勿在易产生灰尘、烟雾、高温、高压或高湿度的环境中使用或存放本产品。
- 保持产品干燥, 远离液体或蒸气。
- 只能使用 FCC 或 CCC 认证、输出电压为 DC 5V/1A 的充电器。
- 充电时不要使用本产品。
- 产品充电时间不要超过 8 小时。
- 按照当地的废物管理规定负责处理本产品。

售后服务电话: 4009933981

法律声明
商标和许可:
HTC 和 HTC 标志为 HTC 公司的商标。
授权给深圳市士兰沃德科技有限公司使用。
2026 版权归深圳市士兰沃德科技有限公司。
本文件仅供参考, 不构成任何形式的保证, 本公司保留所有权利。

HTC Wireless Earphones 81

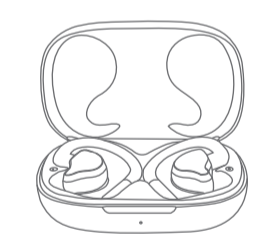

Quick Start Guide
HTC NE81

Product Specifications

Model: HTC NE81


Bluetooth
Range: ≈10 m
Version: 6.0

Speaker
Diameter: 8 mm
Impedance: 32 Ω

Earphone power
Input: 5 V=28 mA
Battery capacity: 28 mAh
Charging time: ≈1.5 hrs


Charging case power
Input: 5 V=300 mA
Output: 5 V=56 mA
Battery capacity: 300 mAh
Charging time: ≈1.5 hrs
Earphone recharges: 3 charges (when case is fully charged)

What's in the box

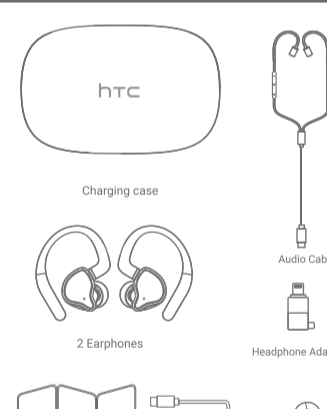


Quick Start Guide USB-C cable 6 Ear adapters

Components

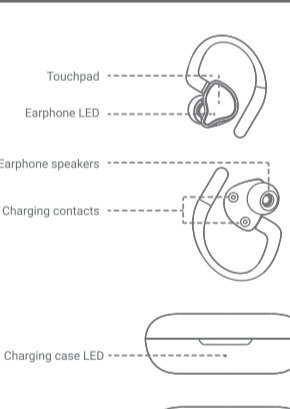

Touchpad
Earphone LED
Earphone speakers
Charging contacts
Charging case LED
USB-C port

Take out and pair the earphones




Bluetooth earphones
If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink white and blue alternately, indicating that they are in pairing mode.
Note:
• If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear two beeps when pairing is successful.
• If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect.


Wired earbuds
If you're using the earphones for the first time, insert the Type-C earphone plug into the Type-C audio port at the bottom of your device. You can use them directly—no Bluetooth connection required.

Switch to Bluetooth / Wired mode

Bluetooth earphones:

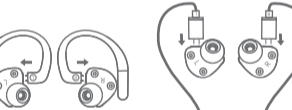


Wired earbuds:

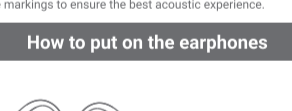

Left/Right Identification: Both the earphone body and ear hooks are marked L / R. Please wear them according to the markings to ensure the best acoustic experience.

How to put on the earphones

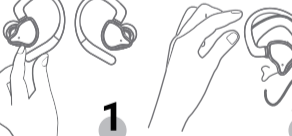


Wired Earphone Basic Operations

Notes:
1. Default to sound card mode on connection.
2. Use another phone to connect to "HTC NE81 Accompaniment" via Bluetooth.
3. Type-C audio cable included, only for Type-C devices.
4. Only calls can be made in sound card mode under the wire control state, not in music mode.
5. Disconnect Bluetooth for male/female voice change in calls (Not supported below iPhone 15)

Category	Function	Key Operation
Sound Card	Sound Card / Headphone Mode	Long press ① 3s
	Studio, KTV, Original, Male to Female, Female to Male, Hall Effects	Single tap ①
	Mic Volume Up	Single tap ③
Sound Card	Mic Volume Down	Single tap ①
	Applause Effect	Long press ③ 3s
	Music Play/Pause	Single tap ②
Headphone	Previous Track	Triple tap ②
	Next Track	Double tap ②
	Headphone Volume Up	Single tap ③
	Headphone Volume Down	Single tap ①

Power on and off

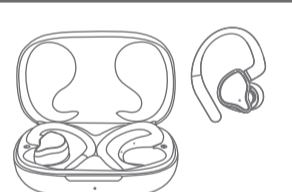


Power on
Taking the earphones out of the charging case will automatically turn them on.
To manually turn on each earphone, press and hold the touchpad for three seconds.

Power off
Placing the earphones in the charging case will automatically turn them off.
To manually turn off each earphone, press and hold the touchpad for five seconds.


Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.

Connect to Bluetooth device

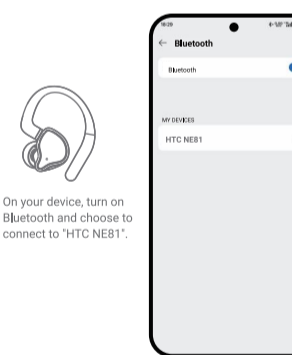

On your device, turn on Bluetooth and choose to connect to "HTC NE81".

Basic operations

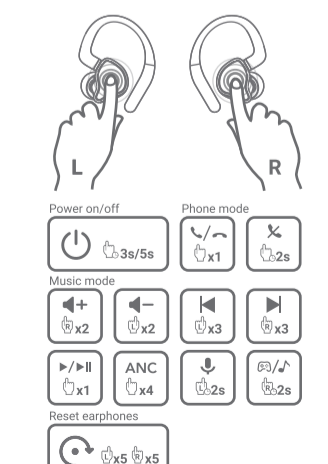

Power on/off: 3s/5s
Phone mode: x1, x2
Music mode: x2, x3, x4, x5
ANC: x4
Reset earphones: x5

Key functions

- Play/Pause: Tap either earphone once.
- Volume up: Tap the right earphone twice.
- Volume down: Tap the left earphone twice.
- Play previous track: Tap the left earphone three times.
- Play next track: Tap the right earphone three times.
- Answer/End call: Tap either earphone once.
- Reject call: Press and hold either earphone for two seconds.
- Activate voice assistant: Press and hold the left earphone for two seconds.

Note: When using a single earphone only, press and hold the active earphone for two seconds.

- Switch between Game and Music modes: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode.)
- Note: Mode switching is disabled when you're using a single earphone only.
- Switch ANC noise reduction mode: Tap either earphone four times to switch between modes. (There are three modes to switch: normal mode/ANC noise reduction mode/transparency mode)


Indicator LEDs

Earphone LED	Status
Blinking white and blue	Both earphones: Powered on Single earphone: Unpaired
Solid blue	Charging
Off	Paired or fully charged

Charging case LED	Status
Solid blue	Earphones charging
Blinking white	Case charging
Solid white	Case fully charged

How to reset the earphones

If the earphones fail to pair or reconnect to each other, reset them by tapping both earphones five times simultaneously.
Note: Resetting the earphones will clear the Bluetooth pairing history.

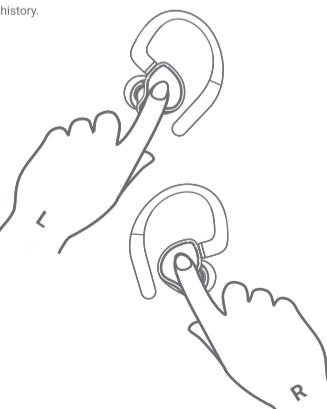

Important Safety Instructions

Carefully read all the safety instructions in this document before using the product.

General safety instructions

- Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed.
- Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty.
- Only use the product in environments where Bluetooth transmission is permitted.

Personal safety instructions

- Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating.
- Do not use the product when performing high-risk tasks that require your full attention.
- For your hearing protection, do not listen at high volume for long periods.
- Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking.

Battery safety instructions

The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal.

- Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight.
- Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F).
- Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments.
- Keep the product dry and away from liquids or moisture.
- Only use an FCC or CCC-certified charger with an output voltage of 5 V / 1 A DC.
- Do not use the product while charging.
- Do not leave the product charging for longer than eight hours.
- Dispose of the product responsibly according to your local waste management guidelines.

FCC ID: 2BHJR-NE81

FCC Caution:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

US REP

Company Name: LOBOS IOWA INC
FRN: 0036413961
Contact Name: Harley Li
Address: 4623 Bittercreek Dr Colorado Springs CO 80922 US
Phone: +1 8188180538
Email: info@lobos-iowa.com

Customer Service Email: service@yhem.net

Legal notice
Trademarks and permissions:
HTC and the HTC Logo are trademarks of HTC Corporation and used under license by Shenzhen Brands World Technology Co., Ltd. Copyright © 2026 Shenzhen Brands World Technology Co., Ltd. All rights reserved.
THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY AND DOES NOT CONSTITUTE ANY KIND OF WARRANTY.