

Use & Care Guide
Manual de Uso y Cuidado
English / Español

Model/Modèle: 790.4952*, .4953*

Kenmore®

Wall Oven

Horno de pared doble

* = color number, número de color

P/N A00538403 Rev A

Sears Brands Management Corporation
Hoffman Estates, IL 60179 U.S.A

www.kenmore.com

www.sears.com

Sears Canada Inc.
Toronto (Ontario) Canada M5B 2C3



Table of Contents

KENMORE LIMITED WARRANTY	2	Removing and Replacing the Oven Door	24
Before setting oven controls	8	Replacing the oven light	25
Oven vent location	8	Before You Call	26
Oven Controls	9	Oven Baking	26
Care and Cleaning	23	Solutions to Common Problems	27
Cleaning Various Parts of Your Oven	23		

Please carefully read and save these instructions

This Use & Care guide contains operating instructions for your appliance and feature information for several models. Your product may not have all the described features. The graphics shown are representative. The graphics on your appliance may not look exactly like those shown. Common sense and caution must be practiced with installing, operating and maintaining any appliance.

KENMORE LIMITED WARRANTY

FOR ONE YEAR from the date of sale this appliance is warranted against defects in material or workmanship when it is correctly installed, operated and maintained according to all supplied instructions.

WITH PROOF OF SALE, a defective appliance will receive free repair or replacement at option of seller.

For warranty coverage details to obtain free repair or replacement, visit the web page: www.kenmore.com/warranty

This warranty applies for only **90 DAYS** from the sale date in the United States, and is void in Canada, if this appliance is ever used for other than private household purposes.

This warranty covers ONLY defects in material and workmanship, and will NOT pay for:

1. Cracks in a ceramic glass cooktop that are not a result of thermal shock.
2. Stains and scratches on a ceramic glass cooktop resulting from accident or improper operation or maintenance.
3. Discoloration of cooktop surfaces resulting from normal use.
4. Expendable items that can wear out from normal use, including but not limited to filters, belts, bags or screw-in base light bulbs.
5. A service technician to clean or maintain this appliance, or to instruct the user in correct appliance installation, operation and maintenance.
6. Service calls to correct appliance installation not performed by Sears authorized service agents, or to repair problems with house fuses, circuit breakers, house wiring, and plumbing or gas supply systems resulting from such installation.
7. Damage to or failure of this appliance resulting from installation not performed by Sears authorized service agents, including installation that was not in accord with electrical, gas or plumbing codes.
8. Damage to or failure of this appliance, including discoloration or surface rust, if it is not correctly operated and maintained according to all supplied instructions.
9. Damage to or failure of this appliance, including discoloration or surface rust, resulting from accident, alteration, abuse, misuse or use for other than its intended purpose.
10. Damage to or failure of this appliance, including discoloration or surface rust, caused by the use of detergents, cleaners, chemicals or utensils other than those recommended in all instructions supplied with the product.
11. Damage to or failure of parts or systems resulting from unauthorized modifications made to this appliance.
12. Service to an appliance if the model and serial plate is missing, altered, or cannot easily be determined to have the appropriate certification logo.

Disclaimer of implied warranties; limitation of remedies

Customer's sole and exclusive remedy under this limited warranty shall be product repair or replacement as provided herein. Implied warranties, including warranties of merchantability or fitness for a particular purpose, are limited to one year or the shortest period allowed by law. Seller shall not be liable for incidental or consequential damages. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, or limitation on the duration of implied warranties of merchantability or fitness, so these exclusions or limitations may not apply to you.

This warranty applies only while this appliance is used in the United States or Canada*.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

* In-home repair service is not available in all Canadian geographical areas, nor will this warranty cover user or servicer travel and transportation expenses if this product is located in a remote area (as defined by Sears Canada Inc.) where an authorized servicer is not available.

Sears Brands Management Corporation, Hoffman Estates, IL 60179
Sears Canada Inc., Toronto, Ontario, Canada M5B 2C3



IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance.

Read all instructions before using this appliance.

This manual contains important safety symbols and instructions. Please pay attention to these symbols and follow all instructions given.

Do not attempt to install or operate your appliance until you have read the safety precautions in this manual. Safety items throughout this manual are labeled with a **WARNING** or **CAUTION** statement based on the risk type.

Warnings and important instructions appearing in this guide are not meant to cover all possible conditions and situations that may occur. Common sense, caution, and care must be exercised with installing, maintaining, or operating your appliance.

DEFINITIONS

⚠ This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.


⚠ WARNING Indicates a potentially hazardous situation which, if not avoided, may result in death or serious injury.

⚠ CAUTION Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

IMPORTANT - Indicates installation, operation, maintenance, or valuable information that is not hazard related.


NOTE - Indicates a short, informal reference – something written down to assist the memory or for future reference.

⚠ WARNING Tip Over Hazard

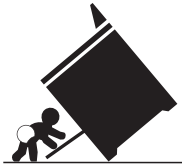

- A child or adult can tip the oven and be killed.
- Install the anti-tip device to oven and/or structure per installation instructions.

- Ensure the anti-tip device is re-engaged when the oven is moved.
- Do not operate the oven without the anti-tip device in place and engaged.
- Failure to follow these instructions can result in death or serious burns to children and adults.

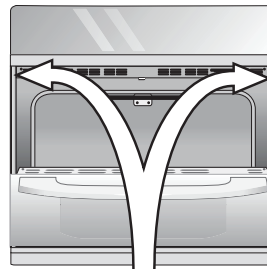

Anti-tip mounting holes

Refer to the installation instructions supplied with your appliance for proper installation.

Check for proper installation with a visual check that the anti-tip screws are present.

Test the installation with light downward pressure on the open oven door. The oven should not tip forward.

IMPORTANT INSTRUCTIONS FOR UNPACKING AND INSTALLATION

IMPORTANT - Read and follow the below instructions and precautions for unpacking, installing, and servicing your appliance:

Remove all tape and packaging before using the appliance. Destroy the carton and plastic bags after unpacking the appliance. Never allow children to play with packaging material. Do not remove the wiring label and other literature attached to the appliance. Do not remove model/serial number plate.

Save these instructions for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance.

Cold temperatures can damage the electronic control. When using this appliance for the first time, or when the appliance has not been used for an extended period of time, be sure the appliance has been in temperatures above 32°F (0°C) for at least 3 hours before turning on the power to the appliance.

Never modify or alter the construction of the appliance by removing the leveling legs, panels, wire covers, anti-tip brackets/screws, or any other part of the appliance.

Be sure to have an appropriate foam-type fire extinguisher available, visible, and easily accessible located near the appliance.

GROUNDING INSTRUCTIONS

⚠ WARNING Avoid fire hazard or electrical shock. Failure to follow this warning may cause serious injury, fire, or death.

⚠ WARNING Avoid fire hazard or electrical shock. Do not use an adapter plug, use an extension cord, or remove grounding prong from the power cord. Failure to follow this warning may cause serious injury, fire, or death.

Proper Installation—Be sure your appliance is properly installed and grounded by a qualified technician. In the United States, install in accordance with the National Fuel Gas Code ANSI Z223.1/NPFA No. 54, latest edition and National Electrical Code NFPA No. 70 latest edition, and local electrical code requirements. In Canada, install in accordance with CAN/CGA B149.1 and CAN/CGA B149.2 and CSA Standard C22.1, Canadian Electrical code, Part 1-latest editions and local electrical code requirements. Install only per installation instructions provided in the literature package for this appliance.

For personal safety, this appliance must be properly grounded. For maximum safety, the power cord must be securely connected to an electrical outlet or junction box that is the correct voltage, is correctly polarized and properly grounded, and protected by a circuit breaker in accordance with local codes.

It is the personal responsibility of the consumer to have the appropriate outlet or junction box with the correct, properly grounded wall receptacle installed by a qualified electrician. It is the responsibility and obligation of the consumer to contact a qualified installer to assure that the electrical installation is adequate and is in conformance with all local codes and ordinances.

See the installation instructions packaged with this appliance for complete installation and grounding instructions.

IMPORTANT INSTRUCTIONS FOR USING THE APPLIANCE

⚠ WARNING Storage In or On Appliance—Flammable materials should not be stored in an oven or microwave, near surface burners or elements, or in the storage or warmer drawer (if equipped). This includes paper, plastic, and cloth items, such as cookbooks, plastic ware, and towels, as well as flammable liquids. Do not store explosives, such as aerosol cans, on or near the appliance.

⚠ WARNING Do not leave children alone - Children should not be left alone or unattended in the area where appliance is in use. They should never be allowed to sit or stand on any part of the appliance, including the storage drawer, lower broiler drawer, warmer drawer, or lower double oven.

Save these instructions for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance.

⚠ WARNING Do not store items of interest to children in the cabinets above the appliance or on the backguards of ranges. Children climbing on or near the appliance to reach items could be seriously injured.

⚠ WARNING Do not allow children to climb or play around the appliance. The weight of a child on an open oven door may cause the appliance to tip, resulting in serious burns or other injury. An open drawer when hot may cause burns.

⚠ WARNING Stepping, leaning, or sitting on the door or drawers of this appliance can result in serious injuries and also cause damage to the appliance.

⚠ WARNING Never cover any slots, holes, or passages in the oven bottom or cover an entire oven rack with any materials, such as aluminum foil or aftermarket oven liners. Aluminum foil and other liners may trap heat, causing a fire hazard.

⚠ WARNING Do not use oven or warmer drawer (if equipped) for storage.

⚠ WARNING Never use your appliance as a space heater to heat or warm the room. Doing so may result in carbon monoxide poisoning and overheating of the appliance.

⚠ CAUTION When heating fat or grease, watch it closely. Grease may catch fire if it becomes too hot.

⚠ CAUTION Do not use water or flour on grease fires. Smother fire or flame or use dry chemical or foam-type extinguisher. Cover the fire with a pan lid or use baking soda.

⚠ CAUTION Use dry potholders. Moist or damp potholders on hot surfaces may result in burns from steam. Do not let potholders touch hot cooking areas. Do not use towels or other bulky cloths.

⚠ CAUTION Do not heat unopened food containers - Build-up of pressure may cause container to burst and result in injury.

⚠ CAUTION Wear proper apparel - Loose-fitting or hanging garments should never be worn while using the appliance. Do not let clothing or other flammable materials contact hot surfaces.

⚠ CAUTION Do not touch surface burners or elements, areas near these burners or elements, interior surfaces of the oven, or the warmer drawer (if equipped). Surface burners and elements may be hot even though they appear cool. Areas near surface burners and elements may become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials touch these areas until they are cool. These areas may include the cooktop, surfaces facing the cooktop, oven vent areas, oven door, and oven window.

⚠ CAUTION Do not attempt to operate the appliance during a power failure. If the power fails, always turn off the appliance. If the appliance is not turned off and the power resumes, electric surface elements may resume operation when power is restored. Once the power resumes, reset the clock and the oven function.

IMPORTANT INSTRUCTIONS FOR USING YOUR OVEN

Protective liners—Do not use aluminum foil, aftermarket oven liners, or any other materials or devices to line oven bottom, oven racks, or any other part of the appliance. Only use aluminum as recommended for baking, such as lining cookware or as a cover placed on food. Any other use of protective liners or aluminum foil may result in a risk of electric shock or fire or a short circuit.

Use care when opening oven door, lower oven door, or warmer drawer (some models). Stand to the side of the appliance when

Save these instructions for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance.

opening the door of a hot oven. Let hot air or steam escape before you remove or replace food in the oven.

Keep oven vent ducts unobstructed. Touching surfaces in this area when the oven is on may cause severe burns. Do not place plastic or heat-sensitive items on or near the oven vent. These items can melt or ignite.

Placement of oven racks - Always place oven racks in desired location while oven is cool. If rack must be moved while oven is hot, do not let potholder contact hot burner or element in oven. Use potholders and grasp the rack with both hands to reposition. Remove all cookware and utensils before moving the rack.

Do not use a broiler pan without its insert. Broiler pans and inserts allow dripping fat to drain away from the high heat of the broiler. Do not cover the broiler insert with aluminum foil; exposed fat and grease could ignite.

Do not cook food on the oven bottom. Always cook in proper cookware and always use the oven racks.

IMPORTANT INSTRUCTIONS FOR CLEANING YOUR APPLIANCE

⚠ CAUTION Before manually cleaning any part of the appliance, be sure all controls are turned off and the appliance is cool. Cleaning a hot appliance can cause burns.

Clean the appliance regularly to keep all parts free of grease that could catch fire. Do not allow grease to accumulate. Greasy deposits in the fan could catch fire.

Always follow the manufacturer's recommended directions for use of kitchen cleaners and aerosols. Be aware that excess residue from cleaners and aerosols may ignite, causing damage and injury.

Clean ventilating hoods frequently - Grease should not be allowed to accumulate on

hood or filter. Follow the manufacturer's instructions for cleaning vent hoods.

IMPORTANT INSTRUCTIONS FOR SELF-CLEANING OVENS

Do not clean the oven door gasket. The door gasket is essential for a good seal. Care should be taken not to rub, damage, or move the gasket.

Do not use oven cleaners. No commercial oven cleaner or oven liner protective coating of any kind should be used in or around any part of the appliance.

Use the self clean cycle to clean only the parts listed in this manual.

Before using self clean, remove the broiler pan, any food, utensils, and cookware from the oven, storage drawer or warming drawer (if equipped). Remove oven racks unless otherwise instructed.

Some birds are extremely sensitive to the fumes given off during the self clean cycle of any oven. Move birds to another well-ventilated room.

IMPORTANT INSTRUCTIONS FOR SERVICE AND MAINTENANCE

Do not repair or replace any part of the appliance unless specifically recommended in the manuals. All other servicing should be done only by a qualified technician. This reduces the risk of personal injury and damage to the appliance.

Always contact your dealer, distributor, service agent, or manufacturer about problems or conditions you do not understand.

Ask your dealer to recommend a qualified technician and an authorized repair service. Know how to disconnect the power to the appliance at the circuit breaker or fuse box in case of an emergency.

Save these instructions for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance.

Remove the oven door from any unused oven if it is to be stored or discarded.

Do not touch a hot oven light bulb with a damp cloth. Doing so could cause the bulb to break. Handle halogen lights (if equipped) with paper towels or soft gloves. Disconnect the appliance or shut off the power to the appliance before removing and replacing the bulb.

Important Safety Notice - The California Safe Drinking Water and Toxic Enforcement Act requires the governor of California to publish a list of substances known to cause cancer, birth defects, or other reproductive harms, and requires businesses to warn customers of potential exposures to such substances.

PRODUCT RECORD

In the space below, record the date of purchase, model and serial number of your product. You will find the model and serial number printed on an identification plate. See [Figure 1](#) for serial plate location.

Model No. _____

Serial No. _____

Date of Purchase _____

Save sales receipt for future reference.

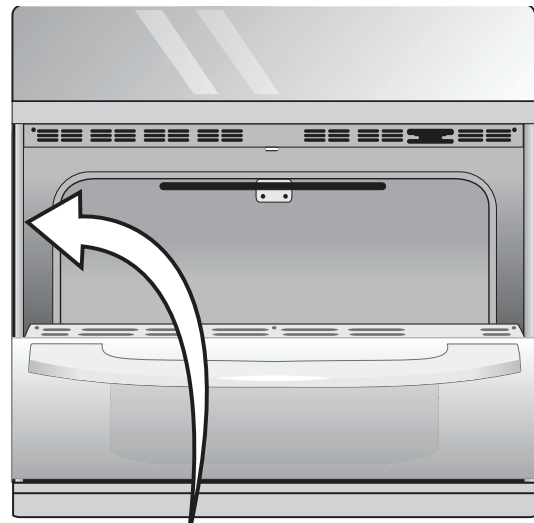


Figure 1: Serial plate location

To locate the serial plate, open the oven door. The serial plate is attached to the left side of the oven frame.

Save these instructions for future reference.

Before setting oven controls

Oven vent location

The oven vent is located under the left side of the control panel (Figure 2). When the oven is on, warm air passes through this vent. This venting is necessary for proper air circulation in the oven and good baking results. Steam or moisture may appear near the oven vent, this is normal. Do not block oven vent.

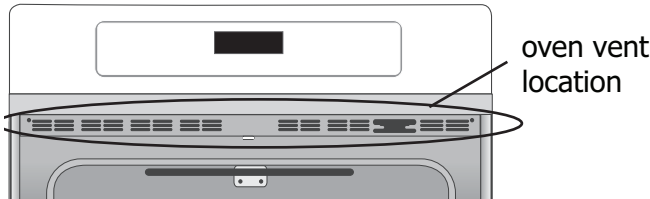


Figure 2:

CAUTION Always use pot holders or oven mitts when using the oven. When cooking, the oven interior and exterior and oven racks will become very hot which can cause burns.

WARNING Protective Liners — Do not use aluminum foil to line the oven bottom. Only use aluminum foil as recommended in this manual. Improper installation of these liners may result in risk of electric shock or fire. Do not line the oven walls, racks, bottom, or any other part of the oven with aluminum foil. Doing so will alter heat distribution, produce poor baking results, and may cause permanent damage to the oven interior. During self clean temperatures, the oven will be hot enough to melt foil.

Removing, arranging and replacing racks:

Arranging - always arrange the oven racks when the oven is cool (prior to operating the oven).

To remove - pull the rack forward until it stops. Lift up front of rack and slide out.

To replace - fit oven rack onto the rack guides on both sides of oven walls. Tilt the front of oven rack upward and slide the rack back into place. Be sure oven racks are level before using.

Type of oven racks

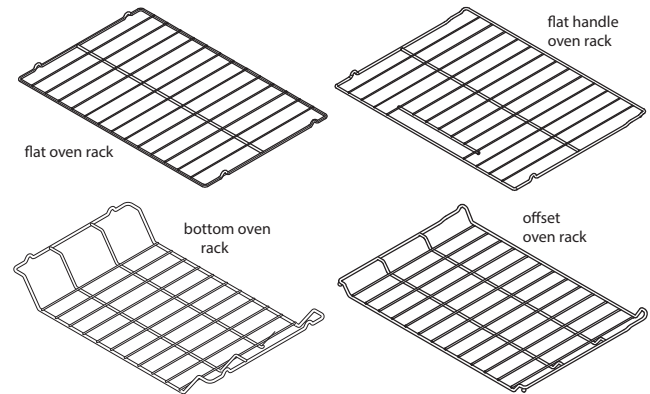


Figure 3:

The flat oven rack (some models) or flat handle oven rack (some models) may be used for most cooking needs.

The offset oven rack (on some models) is designed to place the base of the rack about 1/2 of a rack position lower than flat oven racks. This design allows several additional positions between the flat rack positions.

To maximize oven cooking space place the **bottom oven rack** (on some models) in the lowest rack position for roasting large cuts of meat.


This model comes with lubricated porcelain oven racks, which can remain in the oven during the self-clean cycle. Do not clean the vegetable oil lubrication off the racks. It is important that the sides of the oven racks always have a light coating of vegetable oil. To maintain optimal rack performance, re-apply a thin layer of vegetable oil to the sides of the rack after every self-clean cycle or when the rack becomes difficult to slide.

Air circulation in the oven

For best baking results allow 2-4" (5-10 cm) around the cookware for proper air circulation and be sure pans and cookware do not touch each other, the oven door, sides or back of the oven cavity. Hot air must be able to circulate around the cookware in the oven for even heat to reach around the food.

Oven Controls

READ THE INSTRUCTIONS CAREFULLY BEFORE USING THE OVEN. For satisfactory use of your oven, become familiar with the various features and functions of the oven as described below. Detailed instructions for each feature and function follow later in this Use & Care Guide.

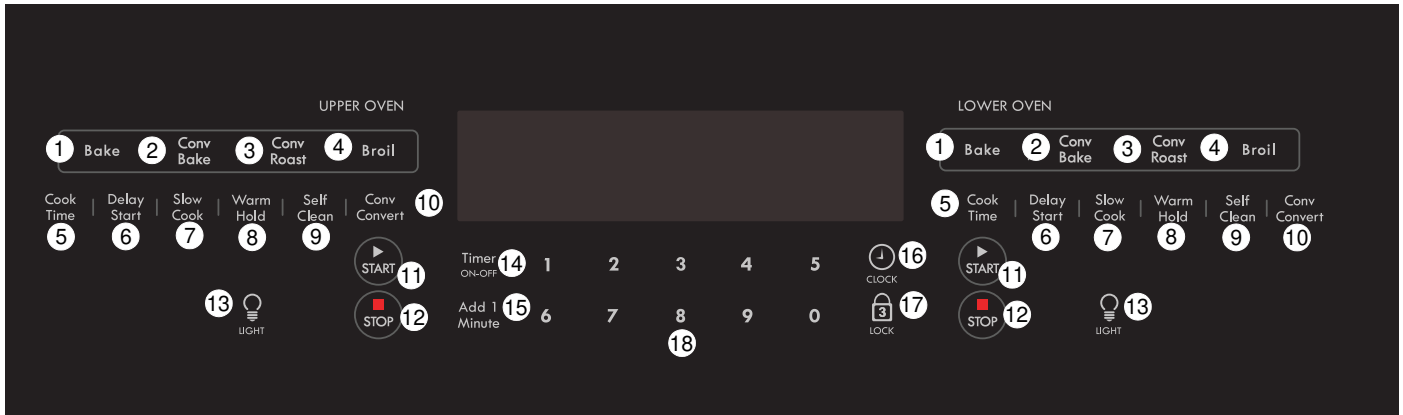

1. **Bake** - Used to enter the normal bake feature.
2. **Conv Bake** - Used to select the Convection Bake feature.
3. **Conv Roast** - Used to select the Convection Roast mode.
4. **Broil** - Used to select variable broil feature.
5. **Cook Time** - Used to enter the length of the cook time desired.
6. **Delay Start** - Used to set the desired start time for baking. May be used with Cook Time to program a delayed timed bake or clean cycle.
7. **Slow Cook** - Used to select the Slow Cook Feature cycle.
8. **Warm & Hold** - Used to set the Warm & Hold function.
9. **Self Clean** - Used to set a 2 to 4 hours Self-Clean cycle.
10. **Conv Convert** - Used to select the Convection Convert feature that works with Conv Bake..
11. **START** - Used to start all oven features (except Oven Light)
12. **STOP** - Used to cancel any oven function except Clock and Timer.
13. **Oven Light** - Used to turn oven light on and off.
14. **Timer on-off** - Used to set or cancel Timer. The minute timer does not start or stop cooking.
15. **Add 1 Minute** - Used to add additional minutes to Timer.
16. **Clock** - Used to set the time of day.
17. **Oven Lockout** - Used to lock the oven keys and oven door.
18. **Numeric Keypad** - Used to enter temperature and times.

Minimum & maximum control settings



All of the features listed below have minimum and maximum time or temperature settings that may be entered into the control. An entry acceptance beep will sound each time a control key is touched (the Oven Lockout is delayed 3 seconds).

An entry error tone (3 short beeps) will sound if the entry of the temperature or time is below the minimum or above the maximum settings for the feature.

Feature	Min temp. or time	Max temp or time
PreHeat	170°F/77°C	550°F/288°C
Bake	170°F/77°C	550°F/288°C
Broil	400°F/205°C	550°F/288°C
Timer	0:01 Min.	11:59 Hr./Min.
Self Clean	2 hours	4 hours
Conv Bake	170°F/77°C	550°F/288°C
Conv Convert	170°F/77°C	550°F/288°C
Conv Roast	170°F/77°C	550°F/288°C
Slow Cook	Lo (225°F/180°C)	Hi (225°F/180°C)
Cook Time	0:01 Min.	11:50 Hr./Min.
Delay Time 12 Hr.	1:00 Hr./Min.	12:59 Hr./Min.
Delay Time 24 Hr.	0:00 Hr./Min.	23:59 Hr./Min.

Oven Controls


Setting the Clock

The  key is used to set the clock. The clock may be set for 12 or 24 hour time of day operation. The clock has been preset at the factory for the 12 hour operation. When the range is first plugged in, or when the power supply to the range has been interrupted, the time in the display will flash. Press . The display will stop flashing.

Example: Setting the clock for 1:30:


1. Press . CLO will appear in the display.)





2. Press **1 3 0** keys to set time of day. Press .
3. Time of day will now appear in the display.



Changing between 12 or 24 hour time of day display

1. Press and hold  for 7 seconds until 12Hr or 24Hr appears in the display.
2. Press **Self-Clean** to switch between the 12 and 24 hour time of day displays. The display will show either 12Hr or 24Hr (figure)



3. Press  to accept the change or press  to reject.
4. Reset the correct time as prescribed in Setting the Clock above. Note: if the 24 hour time of day was selected, the clock will now display time from 0:00 through 23:59 hours.


Setting Continuous Bake or 12 Hour Energy Saving

The **Timer on-off** and **Self-Clean** keys control the Continuous Bake or 12 hour Energy Saving features. The oven control has a factory preset 12 Hour Energy Saving feature that shuts off the oven control if left on for more than 11 hours and 59 minutes. The oven can be programmed to override this feature for Continuous baking.

To set the Continuous Bake or 12 Hour Energy feature:

1. Press and hold **Timer on-off** for about 7 seconds. The dashes will change to show either **12Hr OFF** or **Stay On** in the display and the control will beep once.




2. Press **Self-Clean** to switch between the 12Hr Energy saving and Continuous Bake features. Note: **12 Hr OFF** indicates the control is set for the 12 hour energy saving mode. **Stay On** indicates the control is set for the Continuous Bake mode.
3. Press  to accept your selection and the display will return to show the time of day.

Setting Oven Timer

The **Timer on-off** controls the Timer and serves as an extra timer that will beep when the set time has run out. It does not start or stop cooking. The Timer feature can be used during any of the other oven control functions, except Self-Clean and Sabbath.



To set Timer (example 5 minutes)

1. Press **Timer on-off**. When dashes appear in the display press the number 5 key (for this example) and press . The time will begin to count down.
2. Note: If the start key is not pressed timer will return to time of day after 30 seconds.




3. When timer runs out, End and TIMER show in display. The clock will beep 3 times every 30 seconds until **Timer on-off** is pressed. Press **Timer on-off** to cancel the timer at any time. Once canceled the display show the time of day.


To Set Add 1 Minute Feature

The  key is used to set the Add 1 Minute feature. When the key is pressed, 1 minute is added to the Timer feature if this feature is already active. If the Minute Timer feature is not active and the  is pressed, the Timer feature will become active and will begin counting down from 1 minute. For further information on how to set the Minute Timer feature see To Set the Minute Timer instructions above.

Setting the Oven Lockout

The  controls the Oven Lockout feature. The Oven Lockout feature automatically locks the oven door and prevents the oven from being turned on. It does not disable the clock, Timer or the interior oven lights. The ovens can be locked individually.


To activate the Oven lockout feature:

1. Press and hold  for 3 seconds.
2. After 3 seconds, **DOOR, LOCKED** will flash and **Loc** will appear in the display



Once the oven door is locked the **DOOR** and **LOCKED** indicator will stop flashing and remain in the display. Allow 15 seconds for the oven door to lock.

To reactivate normal oven operation by unlocking door:

1. Press and hold  for 3 seconds. **Loc** will disappear from the display. **DOOR** and **LOCKED** will flash in the display until the door has completely unlocked and the oven will be operational.

Setting Silent Control Operation

The **Self-Clean** and **Delay Start** keys control the Silent Control operation feature. The Silent Control operation feature allows the oven control to be operated without sounds or beeps whenever necessary. If desired the control can be programmed for silent operation and later returned to operating with all the normal sounds and beeps.



To change from normal sound to silent operation:

1. Press and hold **Delay Start** for 7 seconds. The display will show dashes and then change to **bEEP ON** in the display.



2. Press **Self Clean** to switch between normal sound operation and silent mode (beep off).



Press  to accept the change or press  to reject the change.

Note: The control will always beep at the end of a timer and will beep when a set temperature has been reached, even if the control is set to silent operation.

Oven Controls



Setting Temperature display -- Fahrenheit or Celsius

The **Broil** and **Self-Clean** keys control the Fahrenheit or Celsius temperature display modes. The oven control can be programmed to display temperatures in Fahrenheit or Celsius. The oven has been preset at the factory to display in Fahrenheit. Note: both ovens will be changed at the same time.

To change display from Celsius to Fahrenheit or Fahrenheit to Celsius:


1. Press and hold **Broil** for about 6 seconds. A beep will sound, **550** will appear **BROIL** will flash in the display. Continue to hold key until it beeps and **F** or **C** appears in the display. The **F** means the oven is set for temperatures in Fahrenheit and the **C** showing means the oven is set for temperatures to display in Celsius.



2. Press **Self-Clean** and toggle to switch between Fahrenheit or Celsius modes.
3. Press  to accept the change or press  to reject the change.

Operating Oven Lights

The interior oven lights will turn ON when the oven door is opened.

Press  to turn oven light ON and OFF whenever the oven door is closed.

The interior oven lights are located on the rear wall of the oven interior and are covered with a glass shield. The glass shield protects the bulb from high temperatures and should always be in place whenever the oven is in use.


For best baking results, do not leave oven light on while cooking.

To replace the interior oven lights, see **Replacing oven lights** in the Care and Cleaning section.

Setting Cook Time

The **Bake** and **Cook Time** keys control the Cook Time feature. The automatic timer of the Cook Time feature will turn the oven off after cooking for the desired amount of time you selected.

To program the oven to begin baking immediately and to shut off automatically (example: Bake at 350°F for 30 minutes)

1. Be sure the clock is set for the correct time of day
2. Arrange oven racks and place food in oven.
3. Press **Bake**.
4. Press . The actual oven temperature will appear in the display..




5. Press **Cook Time**. Dashes will appear in the display.




6. Enter desired bake time by pressing **30**. **Note:** Baking time can be set for any time between 1 minute and 11 hours and 59 minutes.



7. Press . The display returns to the time of day (shown here as 1:30).



To check the bake time remaining, press **cook time once** and the time left in the baking process will appear for a few seconds in the display. A beep will sound once the oven has reached the set temperature. When the bake time finishes, **END** and the time of day will show in the display and the oven turns off automatically. The control will beep 3 times and continue to beep every 30 seconds until  is pressed.




Setting Delay Start

The **Bake**, **Cook Time**, and **Delay Start** keys control the **Delay Start** feature. The automatic timer of the Delay Start will turn the oven on and off at the time you select in advance.

Note: If the clock is set for normal 12 hour display mode the Delayed Time Bake or Delayed Timed Convection Bake cycle can not be set to start more than 12 hours in advance.

To program the oven for a delayed BAKE start time and to shut off automatically (example: baking at 350°F for 30 minutes and starting at 5:30)

1. Be sure that the clock is set with the correct time of day.
2. Arrange oven rack(s) and place the food in the oven.
3. Press **Bake**
4. Press . The actual oven temperature will be displayed.



5. Press **Cook Time**. Dashes will appear in the display.



6. Enter the desired baking time by using the numeric keypad and pressing **3 0**. Note: Baking time can be set from 1 minute to 11 hours and 59 minutes..




7. Press .

8. Press **Delay Start**. Dashes will appear in the display.




9. Enter the desired start time using the numeric keypad **5 3 0**.



10. Press . The current time of day will appear in the display. The set temperature will also show in the display.



11. When the desired start time is reached, the oven icon will appear in the display and the oven will start to bake at the previously selected temperature.
12. Press  when baking is finished or at any time to cancel the Delayed Time Bake feature.

When the bake time runs out:

1. **END** will appear in the display and the oven will turn off automatically.



2. The control will beep 3 times. The control will continue to beep 3 times every 30 seconds until **STOP** is pressed.

CAUTION FOOD POISONING HAZARD. Do not let food sit for more than one hour before or after cooking. Doing so can result in food poisoning or sickness. Foods that can easily spoil such as milk, eggs, fish, meat or poultry, should be chilled in the refrigerator first. Even when chilled, they should not stand in the oven for more than 1 hour before cooking begins, and should be removed promptly when finished cooking

Warm & Hold™

Warm & Hold will keep cooked foods warm and ready for serving for up to 3 hours after cooking has finished. After 3 hours the Warm & Hold will shut off automatically. Warm & Hold should only be used with foods that are already at serving temperatures. Warm & Hold will maintain the oven temperature at 170° F (77°C).

Example - To set Warm & Hold:

1. Press **Warm & Hold**. **HLD** will appear in the display.
2. Press **START**. Warm & Hold will automatically turn off after 3 hours.

To turn Warm & Hold off at any time press **STOP**.

To set Warm & Hold to turn on automatically once a bake time is set or while the oven is baking:

3. Press **Warm & Hold**.
4. Press **START**. The oven is now set to turn on automatically after the Timed Bake or Delay Start Bake has finished.



Oven Controls

Setting Bake


Use the bake feature whenever the recipe calls for baking using normal temperatures. A reminder tone will sound indicating when the set baking temperature is reached and to place the food in the oven. The convection fan will run while the oven preheats, but not during baking.

Bake may be set for any oven temperature between 170°F (77°C) to 550°F (288°C).

To set Bake with a default temperature of 350°F:

1. Press **Bake**.
2. Press  .
3. To cancel Bake at any time, press  .

To set Bake for an oven temperature of 425°F:

1. Press **Bake**.
2. Enter **4 2 5** using numeric keypad.
3. Press  .

To cancel Bake at any time, press  .

Important note:

When setting Bake or any cooking feature that preheats the oven (except Broil), the convection fan will turn on and stay on until the oven reaches set temperature.

The oven is factory set to run no longer than 12 hours. If you wish to cook continuously, see “Setting Continuous Bake setting or 12 Hour Energy Saving” on [page 10](#).

Baking Tips:

- Preheat your oven before using the bake mode.
- During preheat, the three elements and the convection fan are used in cycle to quickly heat the oven.
- Use only one rack and center the pans as much as possible on rack 2 or 3.
- If using two racks, place the oven racks in positions 2 and 4.
- Allow 2" to 4" (5,1 to 10,2cm) around the bakeware for proper air circulation.
- Be sure the pans do not touch each other, the door, sides or back of the oven.
- Do not open the oven door often. Opening the door will reduce the temperature and may increase cook time.

Table 1: Suggested Bake rack positions

Food	Position
Broiling meats, chicken, fish	3 or 4
Cookies, cakes, pies, biscuits, (single rack)	2 or 3
Using multiple racks for items above	2 and 4
Frozen pies, angel food cake, yeast bread, 1 or 2 casseroles, small cuts of meat and poultry	1 or 2
Turkey, roast beef, ham	1 or offset rack

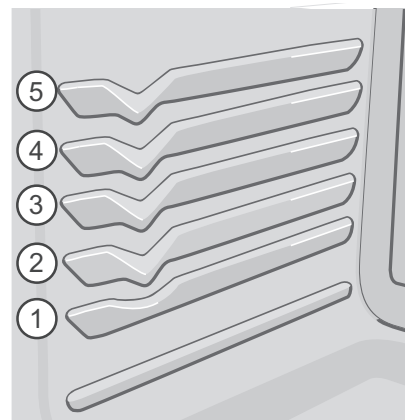


Figure 4: Wall oven rack positions

Baking layer cakes with 1 or 2 oven racks:

For best baking results when baking cakes or cookies using 2 oven racks, place bakeware in rack positions 3 and 5 (for rack 5 use the offset rack if provided).

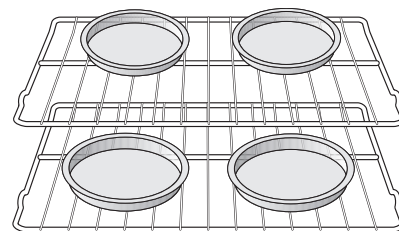


Figure 5: Pan spacing for best results when baking

Setting Broil

The **Broil** key controls the Broil feature. When broiling, heat radiates downward from the oven broiler for even coverage. The Broil temperature may be set between 400°F and 550°F. (Table 2)

The broil pan and broil pan insert used together allow dripping grease to drain and be kept away from the high heat of the oven broiler (Figure 6). Do not use the broil pan without the insert. Do not cover the broil pan insert with foil. The exposed grease could catch fire. To purchase them, call Sears at 1-800-4-MY-HOME (1-800-469-4663) and order broiler pan kit 5304442087.

CAUTION The broil burner may appear to have cooled after it has been turned off. The burners may still be hot and burns may occur if these burners are touched before they have cooled sufficiently.

CAUTION Always use pot holders or oven mitts when using the oven. When cooking, the oven interior, oven racks, and cooktop will become very hot which can cause burns..

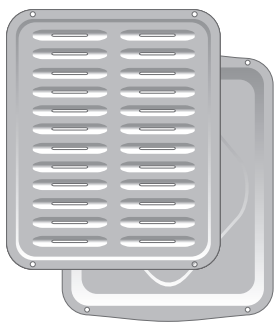


Figure 6: Broil pan and insert

Table 2: Suggested broil temperature settings

Food item	Rack Position	Temperature	Cook time		Doneness
			1st side	2nd side	
Steak 1" thick	3rd or 4th	550°F	6:00	4:00	Rare
	3rd or 4th	550°F	7:00	5:00	Medium
Pork Chops 3/4 "thick	3rd or 4th	550°F	8:00	6:00	Well
Chicken - Bone In	3rd	450°F	20:00	10:00	Well
Chicken Boneless	3rd or 4th	450°F	8:00	6:00	Well
Fish	3rd	500°F	13:00	-	Well
Shrimp	3rd	550°F	5:00	-	Well
Hamburger 1" thick	3rd or 4th	550°F	9:00	7:00	Medium
	3rd or 4th	550°F	10:00	8:00	Well

The U.S. Department of Agriculture states, "Rare fresh beef is popular, but you should know that cooking it to only 140°F (60°C) means some food poisoning organisms may survive." (Source: Safe Food Book, Your Kitchen Guide, USDA). The lowest temperature recommended by the USDA is 145°F (63°C) for medium rare fresh beef. For well done 170°F (77°C).

WARNING Should an oven fire occur, leave the oven door closed and turn off the oven. If the fire continues, throw baking soda on the fire or use a fire extinguisher. Do not put water or flour on the fire. Flour may be explosive and water can cause a grease fire to spread and cause personal injury

To set the oven to broil at 550°F.

1. Arrange the interior oven rack.
2. Press Broil. If a lower broil temperature is desired (minimum broil temperature setting is 400°F), press the desired temperature before continuing. Close the oven door.
3. Preheat the oven for 5 minutes.
4. Place the broiler pan insert on the broiler pan. Then place the food on the broiler pan insert. Be sure to center the broiler pan directly under the broiler element..



Important: When broiling foods, keep the oven door closed. Broiling is direct heat cooking and will produce some smoke. If smoke is excessive, place food further away from the broil element. Always watch food carefully to prevent burning

Oven Controls

Setting Convection Bake

The **Convect Bake** key controls the Convection Bake feature. Use the Convection Bake feature when cooking speed is desired. The oven can be programmed for Convection baking at any temperature between 170°F (77°C) to 550°F (288°C).

Convection baking uses a fan to circulate the oven's heat evenly and continuously within the oven (Figure 7). This improved heat distribution allows for fast, even cooking and browning results. It also gives better baking results when using 2 or 3 racks at the same time. Breads and pastries brown more evenly. Convection bake cooks most foods faster and more evenly than conventional baking.

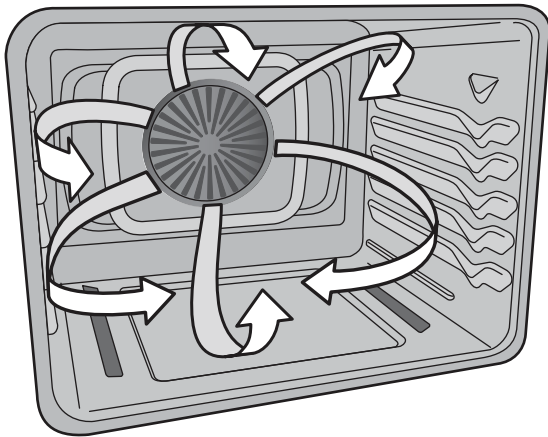


Figure 7: Air circulation in the convection function

Convection Baking Guidelines

1. When using Convection Bake, decrease your normal cooking times. Adjust the cook time for desired doneness as needed. Time reductions will vary depending on the amount and type of food to be cooked. Cookies and biscuits should be baked on pans with no sides or very low sides to allow heated air to circulate around the food. Food baked on pans with a dark finish will cook faster. Preheating is not necessary when cooking casseroles with Convection Bake.
2. When using Convection Bake with a single rack, place oven rack in position 2 or 3. (Figure 8) If cooking on multiple racks, place the oven racks in positions 1 and 3.
3. Do not open the oven door often. Opening the door will reduce the temperature and may increase cook time.

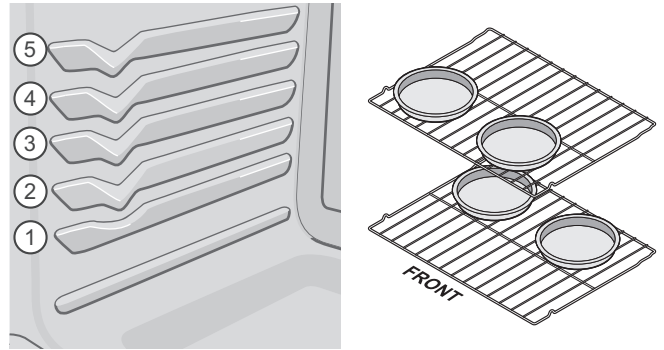



Figure 8: Convection rack positions and pan spacing

To set the oven for Convection Bake and temperature to 350°F

1. Arrange interior oven racks and place food in oven.
2. Press **Convect Bake**
3. Press . The actual oven temperature will be displayed. Note: The oven icon will appear and the rotating fan will start running in the display. The bake, broil and convection element icons will show intermittently in the display indicating which element is on to help the oven reach the desired temperature.



4. A beep will sound once the oven temperature reaches 350°F.

Note: The convection fan will start as soon as the oven is set for Convection Bake.

Press  to cancel Convection Bake at any time.

Setting Convection Roast

The **Conv Roast** key may be used when cooking certain food items. **Conv Roast** combines a cook cycle with the convection fan and element to roast meats and poultry. Preheating is not necessary for meats and poultry. Heated air circulates around the food from all sides, sealing in juices and flavors. Foods are crisp brown on the outside while staying moist on the inside. Do not cover food during convection roast.

Example - To Set the Convection Roast feature at 375°F

1. Arrange oven racks.
2. Press **Conv Roast**.
3. Enter the desired roasting temperature using the numeric keypad **3 7 5**.
4. Press **START**. The actual temperature and the fan icon will be displayed.



5. Press **STOP** to stop Convection Roast at any time.

Roasting Rack Instructions (if equipped)

When preparing meats for convection roasting, use broiler pan and insert along with the roasting rack. The broiler pan will catch grease spills and the insert will prevent grease splatters. The roasting rack will allow the heat to circulate around the meat.

1. Place oven rack on bottom or next to the bottom rack position. Hot air circulates under the food for even cooking increases browning on the underside. Make sure the roasting rack is securely seated on the insert in the broiler pan. Do not use the broiler pan without the insert. Do not cover the insert with aluminum foil.
2. Position food (fat side up) on the roasting rack.
3. Place the broiler pan on the oven rack.


⚠ WARNING To prevent food from contacting the broil element and to prevent grease splattering, Do not use the roasting rack when broiling.

Setting Convection Convert feature


Pressing the Conv Convert key automatically converts the cooking temperature entered for any standard baking recipe to the lower temperature required for convection baking.

Convection Convert **MUST** be used with the Convection Bake key. Cook Time or Delay Start function may be added.

Using Convection Convert (Bake) feature to automatically adjust oven temperature (example: setting oven for 350°F):

1. Arrange interior oven racks and place food in oven.
2. Press  **Conv Bake**.



3. If a **Cook Time** or **Delay Start** is desired enter times now.
4. Press  **Conv Convert**. **Conv Bake** and the oven temperature adjustment will appear briefly in the display as shown in the display below as set for 325°F. A beep will sound once the adjusted temperature is reached.



Note: When used with a Cook Time or a Delay Start setting, the Convection Convert feature will display a CF for check food when the bake time is 75% complete.



At this time the oven control will sound 3 long beeps at regular intervals until baking has finished. When the bake time has completely finished the control will display **End** and will sound 3 long beeps every 30 seconds until **STOP** is pressed.



The oven icon will show a rotating fan in the square. This fan icon indicates when the Convection Fan is operating.

Press  to cancel Convection feature at any time.

Note: The minimum amount of cook time using the Convection Convert feature with a Cook Time or Delay Start function is 20 minutes.

Setting the Slow Cook feature

⚠ WARNING Food poisoning hazard. Do not let food sit for more than one hour before or after cooking. Doing so can result in food poisoning or sickness. Foods that can easily spoil such as milk, eggs, fish, meat or poultry, should be chilled in the refrigerator first. Even when chilled, they should not stand in the oven for more than 1 hour before cooking begins, and should be removed promptly when finished cooking.

The **Slow Cook** key is used to activate this feature. The Slow Cook feature may be used to cook foods more slowly, at lower oven temperatures and provides cooking results much the same way as a Slow Cooker or Crock-Pot. The Slow Cook feature is ideal for roasting beef, pork & poultry. Slow Cooking meats may result in the exterior of meats becoming dark but not burnt. This is normal.

There are 2 settings available, high (Hi) or low (Lo). The low setting is best for cooking foods from 8 to 9 hour time period. The high setting is best for cooking foods from 4 to 5 hour time period. The maximum cook time for the Slow Cook feature is 12 hours unless the oven control has been changed to the Continuous Bake mode. This feature may be used with the additional settings of a Cook Time or a Delayed Start.

Cooking and Preparation tips for Slow Cook

- Completely thaw all frozen foods before cooking with the Slow Cook feature.
- When using a single rack, place in position 2 or 3.
- Position multiple racks to accommodate size of cooking utensils when cooking multiple food items.
- Do not open the oven door often or leave the door open when checking foods. If the oven heat escapes often, the Slow Cook time may need to be extended.
- Cover the foods to keep them moist or use a loose or vented type cover to allow foods to turn crisp or brown.
- Cook times will vary; depending on the weight, fat content, bone & the shape of the food.
- Use the recipe's recommended food temperature and a food thermometer to determine when the food is done.
- Preheating the oven will not be necessary when using the Slow Cook feature.
- Add any cream or cheese sauces during the last hour of cooking.

To Program the Oven to begin baking with the Slow Cook feature

1. Place food in oven.
2. Press **Slow Cook**. **SLO** and **HI** will appear in the display.



3. If **Lo** setting is preferred, press **Slow Cook** again. **Lo** will appear in the display.



4. Press **START** to activate the slow cook feature.
5. If desired, add **Cook Time** or **Delay Start** settings at this time.
6. To cancel the Slow Cook feature any time press **STOP**.

Restoring factory default settings

Your appliance is programmed with default control settings. Over time, users may make changes to these settings. The following options have settings that can be modified and may have been changed since the appliance was new:

- 12 or 24 hour display mode
- Continuous bake or 12-Hour Energy Savings mode
- Silent or audible control
- Oven temperature display (Fahrenheit or Celsius)
- Oven temperature adjustments (offsets)
- Stored recipes

If you choose to restore factory default settings, ALL of the above user preferences will be restored to their original settings (factory default). The oven temperature offset will reset and any stored recipes will be cleared.

To restore oven control to factory default settings:


1. When the oven is in idle and no cooking function is in operation, press and hold the **7** key until the acceptance tone sounds (about 6 seconds)
2. Press **START**. The control is now reset to default settings.

Adjusting Oven Temperature



Before adjusting, be sure to follow recipe times and temperatures. Test a recipe by using a temperature setting higher or lower than the recommended temperature. The baking results should help you to decide how much of an adjustment is needed. If you think the oven is cooking too hot or too cool for the temperature you select, you can adjust the actual oven temperature to be more or less than what is displayed.

The temperature in the oven is pre-set at the factory. When first using the oven.

To adjust the oven temperature higher

1. Press **Bake** for 6 seconds. **UPO 0** will appear in the display.
2. To increase the temperature use the number keys to enter the desired change (Example 30°F) 3 0. The temperature may be increased as much as 35°F (19°C).
3. Press  to accept the temperature change and the display will return to the time of day. Press **Off** to reject the change if necessary.

To adjust the oven temperature lower

1. Press **Bake** for 6 seconds. **UPO 0** will appear in the display.
2. To decrease the temperature use the number keys to enter the change (Example -30°F) 3 0 and then press . The temperature may be decreased as much as 35°F (19°C).
3. Press  to accept the temperature change and the display will return to the time of day.
4. Press **STOP** to reject the change if necessary.

Important: Do not use oven thermometers such as those found in grocery stores to check the temperature settings inside your oven. These oven thermometers may vary as much as 20°F to 40°F (11°C to 22°C) from actual temperatures.

Setting the Sabbath Feature (for use on Jewish Sabbath and Holidays)



The **Cook Time** and **Delay Start** keys are used to set the Sabbath feature.

For further assistance, guidelines for proper usage, and a complete list of models with the Sabbath feature, please visit the web at

www.star-k.org.

The Sabbath feature may only be used with the Bake function. Once the oven is properly set using Bake with the Sabbath feature active, the oven will remain ON until cancelled. The Sabbath feature overrides the factory preset 12-Hour Energy Saving feature.

If the oven light is needed during the Sabbath, press **Oven** light before activating the Sabbath feature. Once the oven light is turned ON and the Sabbath feature is active, the oven light will remain ON until the Sabbath feature is turned OFF. If the oven light needs to be OFF, be sure to turn the oven light OFF before activating the Sabbath feature.

To Program the Oven to Begin Baking Immediately & activate the Sabbath feature (example: baking at 350°F)

1. Be sure that the clock is set to correct time of day and place food in oven.
2. Press **Bake**.



3. Press **START**. The actual oven temperature will appear in the display.



4. If you desire to set the oven control for a Cook Time or Delay Start do so at this time. If not, skip to the next step. Refer to the Cook Time or Delay Start section for complete instructions. Remember the oven will shut down after using Cook Time or Delay Start and therefore may only be used once during the Sabbath and Jewish Holidays. The maximum Delay Start time is 11 hours & 59 minutes.
5. The oven will turn on and begin heating. If you need to set both ovens for the Sabbath, both should be set at this time.
6. Press and hold both the Cook Time and Delay Start keys for at least 3 seconds. **SAb** will appear in the display. Once **SAb** appears in the display the oven control will no longer beep or display any further changes. The oven is properly set for the Sabbath feature.

Oven Controls



Note: You may change the oven temperature once baking has started. Press **Bake**, enter the oven temperature change (170 to 550°F) and then press **START twice** (for Jewish Holidays only). Remember that the oven control will no longer beep or display any further changes once the oven is set for the Sabbath feature.

The oven may be turned OFF at any time by first pressing **STOP** (this will turn the oven OFF only). To turn OFF the Sabbath feature press and hold both the Cook Time and Delay Start keys for at least 3 seconds. This also turns off the oven. **SAb** will disappear from the display.

Power failure while using Sabbath feature:

Should you experience a power failure or interruption, the oven will shut off. When power is returned, SF (Sabbath Failure) will be displayed and the oven will not turn back on automatically. If your food was nearly fully cooked, you may allow the trapped heat in the oven to finish the cooking process. Otherwise, you should remove the food when the power failure occurs, because you may only start the oven once during the Sabbath and Jewish Holidays.

After the Sabbath observance turn OFF the Sabbath feature. Press and hold both the BAKE TIME and DELAY START keys for at least 3 seconds. **SAb** will disappear from the display and the oven may be used with all normal functions.

For further assistance, guidelines for proper usage, and a complete list of models with the Sabbath feature, please visit the web at www.star-k.org.

Self-Cleaning Operation

CAUTION During the self-cleaning cycle, the outside of the range can become very hot to the touch. Do not leave small children unattended near the appliance.

CAUTION The health of some birds is extremely sensitive to the fumes given off during the self-clean cycle of any range. Move birds to another well ventilated room.

CAUTION Do not line the oven walls, racks, bottom or any other part of the appliance with aluminum foil. Doing so will destroy heat distribution, produce poor baking results and cause permanent damage to the interior (aluminum foil will melt to the interior surface of the oven).

Do not force the oven door open. This can damage the automatic door locking system. Use caution when opening the door after the self-cleaning cycle is completed. The oven may still be very hot.

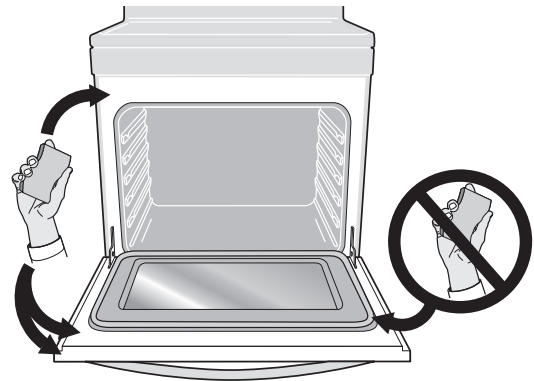


Figure 9: Care in cleaning oven by hand

Note: See additional cleaning information for the oven door in General Care & Cleaning on [page 23](#).

Self-Cleaning Oven

A self-cleaning oven cleans itself with high temperatures (well above cooking temperatures) which eliminate soils completely or reduces them to a fine powdered ash you can wipe away with a damp cloth.

Adhere to the following cleaning precautions

- Allow the oven to cool before cleaning.
- Wear rubber gloves when cleaning any exterior parts of the oven manually.
- Do not use oven cleaners or oven protective coatings in or around any part of the oven interior.
- Do not clean the oven door gasket. The woven material of the oven door gasket is essential for a good seal. Care should be taken not to rub, damage or remove the gasket.
- Do not use any cleaning materials on the oven door gasket. Doing so could cause damage.
- Remove all utensils and any aluminum foil. These items cannot withstand high cleaning temperatures.
- Porcelain Coated Racks: Some ovens come with lubricated porcelain oven racks, which can remain in the oven during the self-clean cycle. Do not clean this vegetable oil lubrication off the racks. It is important that the sides of the oven racks always have a light coating of vegetable oil. To maintain optimal rack performance, re-apply a thin layer of vegetable oil to the sides of the rack after every self-clean cycle or when the rack becomes difficult to slide.
- Chrome Oven Racks: Some models come with chrome oven racks, which have to be removed from the oven during the self-clean cycle or else their finish will turn dull and their color slightly blue. If left in, after the cycle is complete and the oven has cooled, rub the sides of the oven racks with wax paper or a cloth containing a small amount of salad oil (this will make the racks glide easier into the rack position). Clean chrome oven racks by using a mild cleaner following manufacturer's instructions. Rinse with clean water and dry.
- Before starting the self-cleaning cycle, hand clean any soil from the oven frame, the door liner outside the oven door gasket, and the small area at the front center of the oven. These surfaces are not in the self-cleaning area. Clean with soap and water. Burned-on residue can be cleaned off with a stiff nylon brush and water or nylon scrubber.
- Remove any excess soil and debris from oven bottom before starting self-clean. Large spillovers can cause heavy smoke or fire when subjected to high temperatures.
- Do not allow foods with a high sugar or acid content (milk, tomatoes, sauerkraut, fruit juices, pie fillings, etc.) to remain on surfaces. They may leave a dull spot even after cleaning.
- Do not hand clean the oven door gasket or it will be permanently damaged.

To Start the Self-Clean Cycle

The **Self-Clean** key controls the self Clean feature. If you are planning to use the oven directly after a self-clean cycle remember to allow time for the oven to cool down and the oven door to unlock. This normally takes about one hour. So a 3 hour self-clean cycle will actually take about 4 hours to complete. *It is recommend to use a 2 hour self-clean cycle for **light soils**, a 3 hour cycle for **average soils**.

⚠ CAUTION To avoid possible burns use care when opening the oven door after the self-cleaning cycle. Stand to the side of the oven when opening the door to allow hot air or steam to escape.

Do not force the oven door open. This can damage the automatic door locking system. Use caution and avoid possible burns when opening the door after the self-cleaning cycle has completed. The oven may still be very hot.

To start an immediate Self-Clean cycle or to set a Delay Start time of 4:30 and shut-off automatically (example is a default 3 hour Self-Clean Cycle)

1. Be sure clock is set for correct time of day and door is closed.
2. Press **Self -Clean**. **CLEAN** will flash and **3:00 HR** will show in the display. The oven will automatically clean for a 3 hour period (default clean cycle). Note: if a 2 or 4 hour clean time is desired, press **2 0 0** for 2 hour or **4 0 0** for a 4 hour clean time.



3. Press **START**. The **DOOR LOCKED** icon will flash; **CLEAN** icon and the letters **CLn** will remain in the display.




4. As soon as the control is set, the motor driven oven door lock will begin to close automatically. Once the door has been locked the **DOOR LOCKED** indicator light will stop flashing and remain on. Also, the oven icon will appear in the display.



Note: Allow 15 seconds for the oven door to lock.

Oven Controls

If a delay Self-Clean feature is desired, finish step 6-9.

5. Press **Self-Clean**. Dashes will appear in the display.
6. Enter the start time numbers **4 3 0** and press . **CLEAN**, **DELAY**, **LOCK**, and **DOOR** will be displayed.



7. The control will start the self-cleaning at the set start time, for the period of time previously selected. At that time, the icon **DELAY** will go out.




When the self-clean cycle is completed:

8. **HOT** will appear in the display. The time of day, the **DOOR LOCKED** and **CLEAN** icon will remain in the display.
9. Once the oven has cooled down for approximately 1 HOUR, and the **DOOR LOCKED** icon is no longer displayed, the oven door can then be opened.

Stopping or Interrupting a Self-Cleaning Cycle

If it becomes necessary to stop or interrupt a self-cleaning cycle due to excessive smoke or fire in the oven:

1. Press .
2. The oven door can only be opened after the oven has cooled down for approximately 1 HOUR and the **DOOR LOCKED** icon is no longer displayed.

Note: If your clock is set for normal 12 hour display mode the Delayed Self-Clean cycle can never be set to start more than 12 hours in advance. To set for Delayed Self-Clean Cycle 12-24 hours in advance set the control for the 24 hour time of day display mode.

Care and Cleaning

Cleaning Various Parts of Your Oven

Before cleaning any part of the oven, be sure all controls are turned off and the oven is cool. Remove spills and any heavy soiling as soon as possible. Regular cleaning will reduce the difficulty of major cleaning later.

Surface Type	Recommendation
Aluminum and Vinyl	Use hot, soapy water and a cloth. Dry with a clean cloth.
Painted body parts Painted decorative trims	Use a soft cloth and clean with mild dish detergent and water or a 50/50 solution of vinegar and water. Follow by rinsing the area with clean water; dry and polish with a soft cloth. Glass cleaners may be used if sprayed on a soft cloth first. Do not spray liquids directly on the oven control and display area. Do not use large amounts of water on the control panel. Excess water on the control area may cause damage to the appliance. Do not use other liquid cleaners, abrasive cleaners, scouring pads, or paper towels. They will damage the finish.
Control panel Control keypad membrane Decorative trim (some models)	Before cleaning the control panel, turn all controls off and activate oven lockout (on some models). Do not use abrasive cleaners on any of these materials; they can scratch. Clean using hot, soapy water and a cloth or sponge. Be sure to squeeze excess water from cloth or sponge before wiping control panel, especially when wiping around the controls area. Excess water in or around the controls may cause damage to the appliance.
Stainless Steel (some models)	Always rub in direction of metal grain to avoid damaging. Do not use cleaners with high concentrations of chlorides or chlorine. Do not use harsh scrubbing cleaners. Polish with a lint-free cloth. Always be sure to wipe excess cleaner/polish off from the metal surface as bluish stains may occur during future oven heating that cannot be removed. Clean heavier soils with hot, soapy water and a cloth or sponge. Rinse and dry using clean water and a cloth.
Black Stainless Steel (some models)	Clean stainless steel with warm soapy water using a clean sponge or cloth. Rinse with clean water and dry with a soft, clean cloth. Do not use any store bought cleaners like stainless steel cleaners or any other types of cleaners containing abrasives, chlorides, chlorine, or ammonia. It is recommended to use mild dish soap and water or a 50/50 solution of water and vinegar.
Porcelain enamel broiler pan and insert (available by mail order) Door liner and body parts	Gentle scouring with a soapy scouring pad will remove most spots. Rinse with a 1:1 solution of clear water and ammonia. If necessary, cover difficult spots with an ammonia-soaked paper towel for 30 to 40 minutes. Rinse with clean water and a damp cloth, and then scrub with a soap-filled scouring pad. Rinse and wipe dry with a clean cloth. Remove all cleaners or the porcelain may become damaged during future heating.
Porcelain coated oven racks	This model comes with lubricated porcelain oven racks, which can remain in the oven during the self-clean cycle. Do not clean this vegetable oil lubrication off the racks. It is important that the sides of the oven racks always have a light coating of vegetable oil. To maintain optimal rack performance, re-apply a thin layer of vegetable oil to the sides of the rack after every self-clean cycle or when the rack becomes difficult to slide.
Oven door	Use soap and water to thoroughly clean the top, sides, and front of the oven door. Rinse well. You may use a glass cleaner on the outside glass of the door. Do not immerse the door in water. Do not spray or allow water or the glass cleaner to enter the door vents. Do not use oven cleaners, cleaning powders, or any harsh abrasive cleaning materials on the outside of the oven door. Do not clean the oven door gasket. On self-clean models, the oven door gasket is made of a woven material which is essential for a good seal. Care should be taken not to rub, damage, or remove this gasket.

Removing and Replacing the Oven Door

⚠ CAUTION The door is heavy. For safe, temporary storage, lay the door flat with the inside of the door facing down.

To remove the oven door:

1. Open oven door completely, horizontal with floor (See [Figure 10](#)).
2. Pull the door hinge locks on both left and right door hinges down from the oven frame completely toward the oven door (See [Figure 11](#)). A tool such as a small flat-blade screwdriver may be required.
3. Firmly grasp both sides of oven door along the door sides. Do not use the oven door handle (See [Figure 12](#)).
4. Close the door to about 10 degrees from the door frame ([Figure 12](#)).
5. Lift the oven door hinge arms over the roller pins located on each side of the oven frame (See [Figure 12](#)).

To Replace Oven Door:

1. Firmly grasp both sides of oven door along the door sides. Do not use the oven door handle (See [Figure 12](#)).
2. Holding the oven door at the same angle as the removal position (See [Figure 12](#)), seat the hook of the hinge arm over the roller pins located on each side of the oven door frame (See [Figure 13](#)). The hook of the hinge arms must be fully seated onto the roller pins.
3. Fully open the oven door, horizontal with floor (See [Figure 10](#)).
4. Push the door hinge locks up toward and into the oven frame on both left and right oven door hinges to the locked position ([Figure 11](#)).
5. Close the oven door.

Important:

Special Door Care Instructions - Most oven doors contain glass that can break. Do not close the oven door until all the oven racks are fully in place. Do not hit the glass with pots, pans, or any other object. Scratching, hitting, jarring, or stressing the glass may weaken its structure causing an increased risk of breakage at a later time.

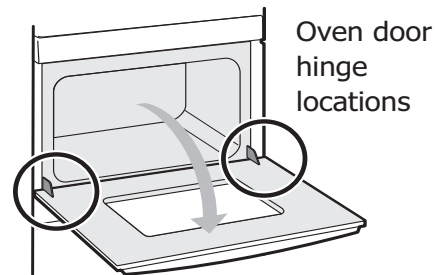


Figure 10: Door hinge location

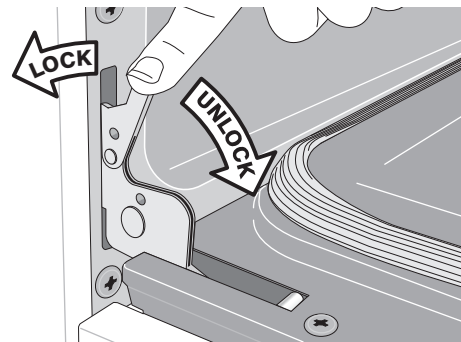


Figure 11: Door hinge locks

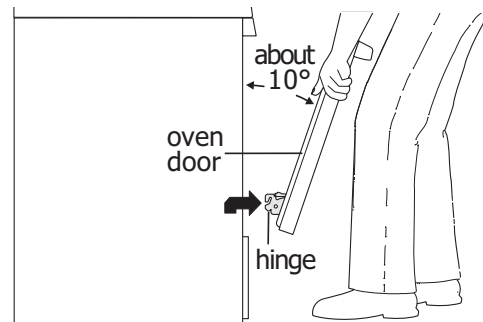


Figure 12: Holding door for removal

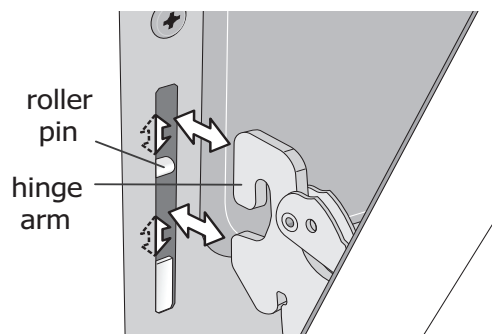


Figure 13: Location of hinge arm and roller pin

Replacing the oven light

⚠ CAUTION Be sure the oven is unplugged and all parts are cool before replacing oven light.

The interior oven lights are located at the rear of the oven cavity and are covered with a glass shield. The glass shield must be in place whenever the oven is in use (See [Figure 14](#)).

To replace the oven interior light bulb:

Important note:

Do not allow your fingers to touch the new bulb when replacing. This will shorten the life of the bulb. Use a paper towel or cotton glove while handling the new bulb when installing.

1. Turn electrical power off at the main source or unplug the appliance.
2. Remove interior oven light shield by turning a quarter turn counter-clockwise.
3. Replace bulb with a new T-4 type Halogen 25 watt appliance bulb.
4. Replace glass oven light shield by rotating clockwise.
5. Turn power back on again at the main source (or plug the appliance back in).
6. Be sure to reset the time of day on the clock.

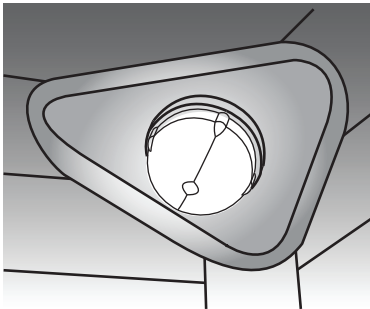


Figure 14: Wall oven Halogen light






Before You Call

Oven Baking

For best cooking results, heat the oven before baking cookies, breads, cakes, pies or pastries, etc. There is no need to preheat the oven for roasting meat or baking casseroles.

The cooking times and temperatures needed to bake a product may vary slightly from your previously owned appliance.

Baking Problems and Solutions

Baking Problems	Causes	Corrections
Cookies and biscuits burn on the bottom. 	<ul style="list-style-type: none"> • Cookies and biscuits put into oven before the preheating time is completed. • Oven rack is overcrowded. • Dark pans absorb heat too fast. 	<ul style="list-style-type: none"> • Allow oven to preheat to desired temperature before placing food in oven. • Choose pan sizes that will permit 2" to 4" of air space (5.1 cm to 10.2 cm) on all sides when placed in the oven. • Use a medium weight baking sheet.
Cakes too dark on top or bottom 	<ul style="list-style-type: none"> • Cakes put in oven before preheating time is completed. • Rack position too high or too low. • Oven too hot. 	<ul style="list-style-type: none"> • Allow oven to preheat to the selected temperature before placing food in the oven. • Use proper rack position for baking needs. • Set oven temperature 25°F/12°C lower than recommended.
Cakes not done in center 	<ul style="list-style-type: none"> • Oven too hot. • Incorrect pan size. • Pan not centered in oven. 	<ul style="list-style-type: none"> • Set oven temperature 25°F/12°C lower than recommended. • Use pan size suggested in recipe. • Use proper rack position and place pan so there is 5.1 cm to 10.2 cm (2" to 4") of space on all sides of pan.
Cakes not level. 	<ul style="list-style-type: none"> • Oven not level. • Pan too close to oven wall or rack overcrowded. • Pan warped. • Oven light left on during baking. 	<ul style="list-style-type: none"> • Place a marked glass measuring cup filled with water on the center of the oven rack. If the water level is uneven, refer to the installation instructions for leveling the oven. • Be sure to allow 5.1 cm to 10.2 cm (2" to 4") of clearance on all sides of each pan in the oven. • Do not use pans that are dented or warped. • Do not leave oven light on while baking.
Foods not done when cooking time is over. 	<ul style="list-style-type: none"> • Oven too cool. • Oven overcrowded. • Oven door opened too frequently. 	<ul style="list-style-type: none"> • Set oven temperature 25°F/12°C higher than suggested and bake for the recommended time. • Be sure to remove all pans from the oven except the ones to be used for baking. • Open oven door only after shortest recommended baking time.

Solutions to Common Problems

Before you call for service, review the following list. It may save you time and expense. Possible solutions are provided with the problem listed:

Problem	Solution
Poor baking results	Many factors effect baking results. Use proper oven rack position. Center food in the oven and space pans to allow air to circulate. Preheat oven to the set temperature before placing food in the oven. Try adjusting the recipe's recommended temperature or baking time. See "Adjusting Oven Temperature" on page 19 if you feel the oven is too hot or cold.
Oven does not operate.	The time of day is not set. The oven clock must first be set in order to operate the oven. Be sure oven controls are set properly. See "Setting the Clock" on page 10 and review instructions for the desired cooking function in this manual. Service wiring is not complete.
Oven light does not work.	Be sure the oven light is secure in the socket. See "Replacing the oven light" on page 25 .
Flames inside oven or smoking from oven vent.	Excessive spills in oven. Grease or food spilled onto oven bottom or oven cavity. Wipe up excessive spills before starting oven. If flames or excessive smoke are present when using broil, see "Setting Bake" on page 14 .
Self clean does not work.	Oven control not set properly. Review "Self-Cleaning Operation" on page 20 .
Oven racks do not slide easily.	This model comes with lubricated porcelain oven racks, which can remain in the oven during the self-clean cycle. Do not clean the vegetable oil lubrication off the racks. It is important that the sides of the oven racks always have a light coating of vegetable oil. To maintain optimal rack performance, re-apply a thin layer of vegetable oil to the sides of the rack after every self-clean cycle or when the rack becomes difficult to slide.
Oven smokes excessively when broiling.	Incorrect setting. Follow broiling instructions in "Setting Bake" on page 14 . Meat too close to the broil element. Reposition broil rack to provide proper clearance between the meat and broil element. Remove excess fat from meat. Cut remaining fatty edges to prevent curling. Grease build up on oven surfaces. Regular cleaning is necessary when broiling frequently. Grease or food splatters will cause excessive smoking.
Oven control panel beeps and displays any F or E code error.	Oven control has detected a fault or error condition. Press STOP to clear the error code. Try bake or broil function. If the F or E code error repeats, turn off power to appliance, wait 5 minutes and then repower appliance. Set clock with correct time of day. Try bake or broil function again. If fault recurs, press STOP to clear.
Soil not completely removed after self clean.	Self Clean was interrupted. Review instructions in "Self-Cleaning Oven" section on page 21 . Excessive spills on oven bottom. Clean before starting self clean. Failure to clean soil from the oven frame, the door liner outside the oven door gasket, and the small area at the front center of the oven bottom. These areas are not in the self-cleaning area, but they get hot enough to burn on residue. Clean these areas before starting the self-cleaning cycle. Burned-on residue can be cleaned with a stiff nylon brush and water or a nylon scrubber. Be careful not to damage the oven gasket.

Before You Call

Solutions to Common Problems

Before you call for service, review the following list. It may save you time and expense. Possible solutions are provided with the problem listed:

Problem	Solution
Appliance is not level.	Poor installation. Place oven rack in center of oven. Place a level on the oven rack. Kitchen cabinet alignment may make oven appear not level. Be sure cabinets are square and have sufficient room for appliance clearance. Cabinets not square or are built in too tightly. Contact builder or installer to make appliance accessible.
Fan noise occurring after the oven is turned off.	Some models are equipped with a cooling fan that cools internal components and controls humidity. It is normal for this fan to continue to run for an extended period of time, even when the oven is turned off. The fan will run until the appliance is cooled sufficiently.



Master Protection Agreements

Congratulations on making a smart purchase. Your new Kenmore Elite® product is designed and manufactured for years of dependable operation. But like all products, it may require preventive maintenance or repair from time to time. That's when having a Master Protection Agreement can save you money and aggravation.

The Master Protection Agreement also helps extend the life of your new product. Here's what the Agreement* includes:

- ☑ Parts and labor not just for repairing defects, but to help keep products operating properly under normal use. Our coverage goes well beyond the product warranty. No deductibles, no functional failure excluded from coverage— real protection.
- ☑ Expert service by experienced service technicians trusted in millions of homes every year.
- ☑ Unlimited service calls and nationwide service, as often as you want us, whenever you want us.
- ☑ “No-lemon” guarantee – replacement of your covered product after three separate product failures occur within twelve months and a fourth repair is required. Includes free delivery and installation, if necessary, of replacement product.
- ☑ Product replacement if your covered product can't be fixed.
- ☑ Annual Preventive Maintenance Check at your request – no extra charge.
- ☑ Fast help by phone – phone support from a service agent on all products to help troubleshoot problems. Think of us as a “talking owner's manual.”
- ☑ Power surge protection against electrical damage due to power fluctuations.
- ☑ \$300 Food Loss Protection for any food spoilage that is the result of mechanical failure of any covered refrigerator or freezer.
- ☑ Service Promise: \$50 if first attempt repair of your covered product can't be accomplished and product is not usable while awaiting further repair service.
- ☑ 25% discount off the regular price of any non-covered repair service and related installed parts.

Once you purchase the Agreement, a simple phone call is all that it takes for you to schedule service. You can call anytime day or night.

The Master Protection Agreement is a risk free purchase. If you cancel for any reason during the product warranty period, we will provide a full refund. Or, a prorated refund anytime after the product warranty period expires. Purchase your Master Protection Agreement today!

Some limitations and exclusions apply. For prices and additional information call 1-800-827-6655.

Sears Installation Service

For Sears professional installation of home appliances, garage door openers, water heaters, and other major home items, call **1-844-553-6667**.

Acuerdos principales de protección

Enhorabuena por hacer una compra inteligente. Su nuevo producto Kenmore Elite® está diseñado y fabricado para disfrutar de años de funcionamiento confiable. Pero como todos los productos, puede requerir de mantenimiento preventivo o reparación de vez en cuando. Por ello, disponer de un Acuerdo de protección principal puede ahorrarle dinero y molestias.

El Acuerdo de protección principal también ayuda a prolongar la vida útil de su nuevo producto. Esto es lo que incluye el Acuerdo*:

- ☑ No sólo las piezas y la mano de obra para la reparación de defectos, sino también para ayudar a mantener los productos funcionando correctamente en condiciones normales de uso. Nuestra cobertura va mucho más allá de la garantía del producto. Sin deductibles y sin insuficiencia funcional excluida de la cobertura. Protección real.
- ☑ Mantenimiento realizado por técnicos expertos con la confianza de millones de hogares cada año.
- ☑ Servicio de llamadas ilimitado y servicio a nivel nacional, tan a menudo como desee y siempre que quiera.
- ☑ Garantía sin sorpresas: sustitución del producto después de tres fallos independientes dentro de un plazo de doce meses y cuando se requiera una cuarta reparación. Incluye entrega gratuita y, si es necesario, la instalación del producto de reemplazo.
- ☑ Sustitución del producto si el producto cubierto no puede arreglarse.
- ☑ Mantenimiento preventivo anual a petición: sin cargo extra.
- ☑ Ayuda rápida por teléfono: asistencia telefónica de un técnico para ayudarle a resolver los problemas con todos los productos. Piense en nosotros como un manual del propietario "hablado".
- ☑ Protección contra los daños eléctricos por sobretensión debido a las fluctuaciones del suministro.
- ☑ Protección contra la pérdida de alimentos de 300 \$ por cualquier deterioro de los alimentos como resultado de una avería mecánica de cualquier refrigerador o congelador cubierto por la garantía.
- ☑ Promesa de servicio: 50 \$ si el primer intento de reparación de su producto cubierto por la garantía no tiene éxito y el producto no puede utilizarse mientras espera al servicio de reparación.
- ☑ 25% de descuento sobre el precio habitual de cualquier servicio de reparación no cubierto y en las piezas instaladas.

Una vez adquirido el Acuerdo, una simple llamada telefónica es todo lo que necesita para programar el servicio. Puede llamar a cualquier hora del día o de la noche.

El Acuerdo de protección principal es una compra libre de riesgo. Si lo cancela por cualquier motivo durante el período de garantía del producto, le proporcionaremos un reembolso completo. O bien, un reembolso prorrateado en cualquier momento después de la expiración del período de garantía del producto. Compre hoy su Acuerdo de protección principal.

Se aplican algunas limitaciones y exclusiones. Para consultar los precios e información adicional llame al 1-800-827-6655.

Servicio de instalación de Sears

Para ponerse en contacto con el servicio profesional de Sears para la Instalación de electrodomésticos, abridores de puertas de garaje, calentadores de agua y otros importantes objetos para el hogar, llame al 1-844-553-6667.

Kenmore®

For Sears Home Services in-home repair
of all Kenmore major appliances.

For the replacement parts, accessories and
Use & Care Guides that you need to do-it-yourself.

For professional installation of major home appliances
and items like air conditioners and water heaters.

1-844-553-6667

www.kenmore.com

In Canada 1-800-469-4663

www.sears.ca

Call anytime for the location of your nearest
Sears Parts & Repair Service Center

1-800-488-1222 (U.S.A.)

1-800-469-4663 (Canada)

To purchase a protection agreement on a serviceable product :

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación
a domicilio, y ordenar piezas:

1-888-SU-HOGAR®

(1-888-784-6427)

www.kenmore.com

Au Canada pour service en français:

1-800-LE-FOYER^{MC}

(1-800-533-6937)

www.sears.ca

