

SENCOR®

SHS 8700RS



5IN1 CURLER & STRAIGHTENER

Translation of the original manual

 
 
 
 
 
 


SENCOR®

SHS 8700RS



A

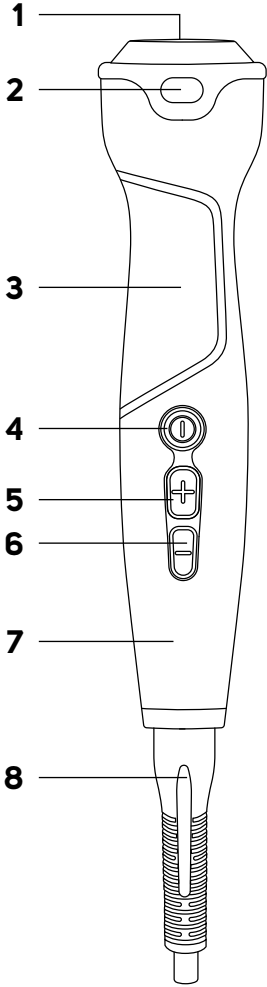

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be only used by children aged 8 years and older and by persons with physical, sensory or mental impairments or lack of experience and knowledge, if they are supervised or have been instructed on the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and maintenance must not be performed by children without supervision.
- If the mains cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. Never use the appliance if the power cable is damaged.

**Warning:**

Do not use this appliance near water.

**Warning:**

Do not use this appliance near baths, showers, washbasins or other containers containing water.

- If the appliance is used in the bathroom, unplug it from the socket after use by removing the plug from the socket, as the presence of water poses danger, even when the appliance is turned off.

- To insure additional safety, it is recommended to install an Residual Current Device (RCD) into the electric circuit to the bathroom with a maximum current rating of 30 mA. Ask the electrician for advice.



Caution:
Hot surface!

- The temperature of accessible surfaces may be higher if the appliance is in operation. Such surfaces can become hot during use. Do not touch the hot surface. This could cause skin burns.

Additional Important Safety Instructions for Use of the Appliance

- Carefully unpack the product and take care not to throw away any part of the packaging until all the product parts have been identified.
- Before connecting this appliance to a power socket, make sure the voltage stated on the label of the appliance corresponds to the voltage in your power socket.
- Never use accessories which have not been supplied with this appliance or which are not designed for this appliance.
- Make sure that the power cord and plug cannot come into contact with water or dampness.
- Do not spray the product with water or any other liquid. Do not submerge this appliance and any of its components in water or any other liquids.
- This product is designed for household use. Do not use it in industrial environment or outdoors!
- Do not use sprays in the vicinity of the appliance.
- If you will not be using the appliance, disconnect it from the electrical grid. Before cleaning or moving the appliance, proceed in the same manner.
- Make sure the appliance is fully cold before storing.
- Do not expose sensitive people or animals to hot air.
- Do not place the appliance on or near an electrical or gas stove. Do not place the device within near heat producing devices such as fireplaces etc.
- Do not use attachments other than those supplied or specified by the manufacturer.
- Do not use the appliance if it has a damaged power cord or power plug.
- In no case should you attempt to repair the appliance yourself; do not make any modifications to it – danger of electric shock! Entrust all repairs and adjustments of this device to a specialised company/service. Failure to do so will expose you to the risk of voiding the warranty policy.
- Do not place the power cord of the appliance near hot surfaces or over sharp objects. Do not place heavy objects on the power cord, position the cord so that it is not stepped on or tripped over. Make sure the power cord does not hang over the edge of a table and that it is not touching a hot surface.
- Do not disconnect the appliance from the power socket by pulling the power cord – it may damage the power cord / power socket. Disconnect the cable from the power socket by gently pulling the plug of the power cord.
- Do not use the product for any other purposes than those intended.
- Ensure that when turning on the product, that the air inflow or outflow grill is not covered.
- Ensure that no hair or threads remain in any of the openings of the curling iron.
- The manufacturer is not responsible for damages caused by the incorrect use of this product or its accessories (food spoilage, injuries, burns, scalding, fire, etc.).

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



This product meets all the basic requirements of the applicable EU directives.




 
This symbol on products or accompanying documents means that used electric or electronic products must not be added to ordinary municipal waste.



Product with protection class II
Electric shock protection is provided by double or heavy-duty insulation.

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have removed all its components. It is recommended that you keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file a defect claim or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.

USING THE CURLING IRON


- Comb your hair thoroughly and assemble the curling iron with the desired attachment.
- Insert the mains cable plug into the mains socket.
- Press the  button to turn on the curling iron.
- Press the +/- button repeatedly to adjust the desired temperature.
- Style your hair strand by strand.
- After use, press the button  to turn off the curling iron. Allow appliance to cool down on a heat-resistant mat before cleaning and storing.



Note:

The curling iron automatically turns off after being idle for 60 minutes. This is normal.

CURLING IRON DESCRIPTION

A1 Attachment connection ending	A6 – button to decrease temperature
A2 Attachment release lock	A7 Handle
A3 Display	A8 Power cable
A4  button to switch the curling iron on/off	A9 Flat iron
A5 + button to increase temperature	A10 Conical attachment
	A11 Wide curling attachment
	A12 Narrow curling attachment
	A13 Mermaid-style wave attachment

ATTACHMENTS AND THEIR USE

Flat Iron

- The flat iron is used for straightening hair and basic styling.
- Carefully comb your hair and divide it into equally thick strands. Place the flat iron as close to the roots as possible. Be careful not to burn yourself.
- Insert the hair strand in between the arms of the flat iron and close it. Slowly and gently pull the curling iron through the entire length of the hair from roots to ends. Repeat the procedure if needed.
- Open the flat iron and release the hair strand.
- Repeat with the other strands that you wish to straighten.

BEFORE FIRST USE

- Before first use, remove the curling iron and its accessories from the packaging and detach all promotional labels and stickers. Make sure that it is not damaged.
- Make sure to remove all accessories from the package material.

INTENDED USE

- The Sencor SHS 8700RS Automatic Rotating Curling Iron is designed for styling and curling dry hair.

ASSEMBLING/REPLACING ATTACHMENTS



Warning:

Before assembling or replacing the attachments, always make sure that the curling iron is switched off and the power plug is disconnected from the mains socket.

- Attach the attachment you want to use to the connection ending of the curling iron and insert it into the connection ending until you hear a click. The protrusions inside the ending must fit into the grooves in the bottom part of the attachment.
- If you need to remove the attachment, press the release button down and pull the attachment upwards.



Warning:

Before removing the attachment, please make sure that it's cool. There is a risk of serious burns.

Conical Attachment

- Carefully comb your hair and divide it into equally thick strands.
- Place the end of the strand against the conical attachment and begin winding it. Slowly pull the curling iron towards the head, but not in close proximity. There is no need to turn the curling iron.
- Hold the curling iron in this position for 10 to 15 seconds.
- Carefully release the strand from the conical attachment. When releasing, you can use your finger to wrap the curl around it, and then apply hair spray to firmly fix the curl.

Crimping attachments

- The curling iron comes with two curling attachments – wide and narrow.
- Carefully comb your hair and divide it into equally thick strands.
- Put the end of the strand to the crimping attachment and start winding it. Slowly pull the curling iron towards the head, but not in close proximity. There is no need to turn the curling iron.
- Hold the curling iron in this position for 10 to 15 seconds.
- Carefully release the strand from the curling attachment. When releasing, you can use your finger to wrap the curl around it, and then apply hair spray to firmly fix the curl.

Mermaid-style Wave Attachment

- Carefully comb your hair and divide it into equally thick strands.
- Place the end of the strand on the attachment and begin winding it so that the strand passes through each fold.
- Hold the curling iron with the strand wound around it for 10 to 15 seconds.
- Carefully release the strand from the attachment. When releasing, you can use your finger to wrap the curl around it and then apply hairspray to hold the curl in place.

CLEANING AND MAINTENANCE

- Before cleaning, turn off the curling iron and allow it to cool down completely.



Warning:

To avoid the risk of electric shock, do not immerse the curling iron, attachments or power cord in water or any other liquid.



Caution:

Do not use abrasive cleaning agents, solvents, etc. to clean any parts of the appliance, as these could damage the surface.

Cleaning the curling iron and attachments

- Wipe the curling iron and attachments with a clean, dry cloth.

Storage

- Store the curling iron in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

TECHNICAL SPECIFICATIONS

Rated voltage.....100–240 V~
Rated frequency.....50/60 Hz
Rated input power.....67 W

Values Provided according to Commission Regulation EU 2023/826

Off Mode	
Power consumption in off mode	0.4 W
Time needed for the equipment to automatically reach off mode	0 min
Standby Mode	
Power consumption in Standby mode	–
Time needed for the equipment to automatically reach standby mode	–
Networked Standby Mode (Wi-Fi)	
Power consumption in networked standby	–
Time needed for the equipment to automatically reach networked standby mode	–

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the designated municipal waste disposal site.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal, renewal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By disposing of this product correctly, you help to conserve valuable natural resources and prevent any potential adverse impact on the environment and human health that could result from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for the improper disposal of this type of waste as per national regulations.

For business entities in European Union States

If you wish to dispose of electrical and electronic equipment, please request the necessary information from your retailer or supplier.

Disposal in other countries outside the European Union

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

Changes to text and technical parameters are reserved.