

Children's Video Walkie-Talkie Camera




User Manual

Before using this product, please read the instructions carefully
The manual is for reference only; actual operation shall be based on the physical product



1、Product Structure

Product Description

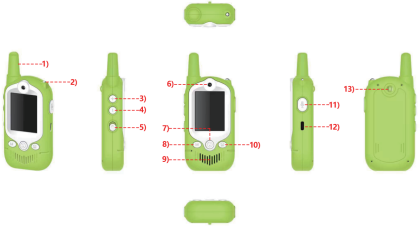

- 1) Antenna 2) fill light 3)+key 4) - Key
- 5) Power switch 6) Lens 7) OK key 8) Magic tone key
- 9) Speaker 10) Return button 11) Intercom button
- 12) Charging interface 13) Hanging rope hole

2、Introduction to basic operation of buttons and functions

1. Power on and off

Turn on the 'power switch': turn it up to turn on, turn it down to turn off. (Not available during charging)

2. Main interface



Main interface button operation:

- 1) Press the 'volume+/-' key' to move left and right;
- 2) First, long press the 'volume key' to switch to AP mode (a green dot icon will appear in the upper left corner)/STA Mode (red dot icon appears in the upper left corner), press and hold the 'volume+key' to switch devices Pair up;
- 3) Press the 'OK' button to enter the function;
- 4) Long press the 'Magic Sound Key' to turn on the fill light, and long press again to turn it off; Long press the 'intercom button' to quickly dial out video chat requests

3. WeChat

Click the 'Volume+/-' button to select 'Move to '. Click the 'OK' button to enter WeChat mode;



- 1) Video chat
- 2) Voice/Music
- 3) Facial expressions
- 4) Picture
- 5) Take photos

Button operation:

- 1) Click the 'Volume+/-' button to move left and right to select the bottom function, and click the 'OK' button to enter;
- 2) Long press the 'Magic Sound Key' to turn on the fill light, and long press again to turn it off;
- 3) Click the 'back' button to exit WeChat

Video chat operation:

- 1) Click the 'OK' button to select video chat, then dial in and wait for the other party to connect. Click Press the 'OK' button to connect or press the 'Return' button to disconnect.
- 2) Click the 'Magic Sound Key' to switch between magic sounds, long press to turn on the fill light, long press again to turn off;
- 3) Press and hold the 'Volume+/-' button to increase or decrease the volume, and long press the 'Volume+' button to switch views Frequency window display, press the 'OK' button to switch stickers/filters;
- 4) Long press the 'intercom button' for voice communication;
- 5) Click the 'back' button to end the video chat.

Voice intercom/music operation:

- 1) After selection, long press the 'intercom button' for voice intercom, long press to speak, release to end and send out;
- 2) Click the 'OK' button to enter music selection, click the 'Volume+/-' button to select, click Confirm key to send music.

Emoji operation:

Click the 'Volume+/-' button to move left and right to select the emoji, and click the 'OK' button to send.

Image manipulation:

- 1) Click the 'Volume+/-' button to move left and right to select the image, click the 'OK' button to zoom in and view;
- 2) Select the image interface, click the 'Magic Sound Key' to bring up the delete menu, click the 'Intercom Key' send out; Click the 'back' button to return to the WeChat interface.

Photography operation:

- 1) Click the 'OK' button to take a photo and send it;
- 2) When taking photos on the interface, click the 'intercom button' to switch between stickers/filters; Press the 'back' button to return Go to the WeChat interface.

4. Take photos

- Click the 'Volume+/-' button to move to and click the 'OK' button to enter the photo mode;
- 1) Click the 'OK' button to take a photo and save it;
- 2) Click the 'intercom button' to switch stickers/filters;
- 3) Long press the 'Magic Sound Key' to turn on the fill light, and long press again to turn it off;
- 4) Click the 'back' button to return to the main interface;

5. Album

- Click the 'Volume+/-' button to select move to and click the 'OK' button to enter album mode;
- 1) Click the 'Volume+/-' button to move left and right to select the image, click the 'OK' button to zoom in and view, Click again to return to the preview interface;
- 2) Select the image interface and press the 'Magic Sound Key' to bring up the delete menu;
- 3) Click the 'back' button to return to the main interface.

6. Settings

- Click the 'Volume+/-' button to move to and click the 'OK' button to enter the setting mode;
- 1) Click the 'Volume+/-' button to move up and down to select settings, click the 'OK' button to confirm Change and save;
- 2) Click the 'back' button to return to the main interface.

3、Product specifications

1. Product parameters

language	English, Simplified Chinese, French, German, Spanish、 Portuguese, Dutch, Italian, Polish, Greek、 Hungarian, Swedish, Norwegian, Danish, Finnish、 Romanian, Russian, Japanese, Hebrew, Korean、 Arabic, Indonesian
Brightness	1-5
Screen saver mode	1 minute, 3 minutes, 5 minutes, 10 minutes, off
Sound	Silent, low, medium, high
Restore factory settings	Yes, No
version	DJ-09-2026-03-16 Demo-STA (AP)

2. Product specifications

PCB silkscreen	DJ-09_TXW818_V2
Master control model	TXW818-C04F
Image sensor	20A6
LED display	2.0 inches (240 * 320)
button	7 keys
Operating Temperature	High temperature 65 ° , low temperature -10 °
Operating Humidity	85%
power supply	USB:5V , Battery: 3.7V
standby current	Battery standby 11.3uA
Low battery alert	3.71V
Power consumption	USB 5V: power consumption 4W/battery power consumption 2W

Attention: This product reserves the right to make design and specification changes without prior notice.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.