



OWNER'S MANUAL

NOTEBOOK

For the safe and convenient use of the product, please read this owner's manual before use.



MFL05836402

www.lg.com

Copyright © 2026 LG Electronics Inc. All Rights Reserved

Contents

Important Safety Precautions	1
Precautions before Product Use	3
Checking the Components	3
Connecting and Turning On the PC	4
System Shutdown / Power Off	4
Using Stylus Pen	4
Pre-Tech Support Checklist.....	6
Appendix	6
Open Source Software Notice Information.....	6

Important Safety Precautions

Check the following 'Important Safety Precautions' to prevent unexpected danger or damage in advance.

'Important Safety Precautions' is divided into 'WARNING' and 'CAUTION.'

⚠ WARNING: Noncompliance with the instruction may cause serious physical damage or fatal injuries.

⚠ CAUTION: Noncompliance with the instruction may cause minor damage to the body or the machine.

✔ NOTE

- For more information on safety precautions, refer to LG Easy Guide / LG Troubleshooting.

PC Cleaning Guide

Use a dedicated cleaning agent when cleaning the PC.








 
Use a small amount of the dedicated cleaning agent on a clean microfiber cloth to clean the exterior surface of the product, and make sure it is completely dry before using it again.


⚠ WARNING

- If the PC is wet while used, an electric shock or fire may occur.





While Using the Product

 ⚠ WARNING

 <p>Good! LG</p>	<p>Use batteries certified and acknowledged by LG Electronics Inc.</p> <ul style="list-style-type: none"> • Otherwise, an explosion or fire may occur. 		<p>Keep the battery away from heat.</p> <ul style="list-style-type: none"> • Otherwise, an explosion or fire may occur.
 <p>60 °C (140 °F)</p>	<p>Do not store in places with temperatures above 60 °C (140 °F) and high humidity (in cars or saunas).</p> <ul style="list-style-type: none"> • Otherwise, an explosion or fire may occur. 		<p>If you find leakage or smell bad odor from the battery, contact the local call center.</p> <ul style="list-style-type: none"> • Otherwise, an explosion or fire may occur.
	<p>Do not use the product on top of carpet, blanket or bed. Also, do not put the adapter under the blanket.</p> <ul style="list-style-type: none"> • The product and the adapter may malfunction or cause a fire or burn to the user due to internal temperature increase. 		<p>Prevent the battery from coming in contact with any metallic object like a car ignition key or a paper clip.</p> <ul style="list-style-type: none"> • Otherwise, this may cause damage to the battery, a fire or burn due to overheat in the battery.
	<p>Do not leave the powered-on product in a space without enough ventilation (i.e. bags) for an extended time or repeatedly.</p> <ul style="list-style-type: none"> • The battery may overheat and cause a fire. 		<p>Charge the battery only with the provided instrument.</p> <ul style="list-style-type: none"> • Otherwise, the battery may be damaged, or fire may occur.

	<p>Do not bend the power cable connected to the adapter too much.</p> <ul style="list-style-type: none"> • Otherwise, the wires inside the cable may break and cause an electric shock or fire.
--	--

 Guide on Battery Usage

 <p>50 %</p>	<p>When the PC is not used for an extended period of time, keep the battery level at 50 % to increase the battery lifespan.</p>	 <p>Use the Extend Battery Life function in the My gram. You can limit the battery charge to 80 % of the maximum charging capacity to increase the battery lifespan.</p>
 <p>Good!</p>	<p>To increase battery lifespan, use the battery for a while before charging it rather than keeping the battery completely charged.</p>	 <p>If you don't use the product for a long time with the battery completely discharged, the battery lifespan may decrease.</p>

NOTE

- This product has a built-in battery pack. After purchasing your PC, be sure to charge the battery pack completely before using it for the first time.
 - The battery is a wearable good and thus the battery may not last as long as before after the battery has been used for a long time.
 - The internal battery cannot arbitrarily be removed or replaced. Removing it may void the warranty.
 - If you need to disassemble or replace the battery, please contact the designated Call Center.
 - We charge a fee for removing or replacing the battery.
 - For the safe use of the product, the charge level may be adjusted or blocked from the product when the excessive reduction in battery capacity is detected. Since the battery is a consumable item, if the runtime has been significantly reduced, please replace the battery.

Precautions before Product Use

Any malfunction in the built-in solid state drive (SSD) may result in loss of stored data. You must back up all critical user data to an external storage device (USB HDD, memory card, etc.).

If you shut the system down before it is completely loaded, the product may not shut down properly. Shut down the system after it is completely loaded. (It takes about one or two minutes to completely load the system and may vary depending on the conditions.)

Some details may differ depending on the PC model and software version.

For the convenience of users, LG Easy Guide / LG Troubleshooting are provided in an electronic format.

For more information on how to use the PC, refer to LG Easy Guide / LG Troubleshooting.

In the search window of the Windows taskbar, search LG Easy Guide / LG Troubleshooting and run it.

NOTE

- It is recommended to use the PC by connecting to the Internet in order to keep the LG Easy Guide / LG Troubleshooting latest.

Checking the Components

- PC Main Body
- Owner's Manual
- Adapter
- Power Cable¹
- Stylus Pen

- 1 For the power cable, the normal power cable or USB-C® power cable is provided. The USB-C® power cable only supports power supply and USB 2.0 specifications.

CAUTION

- Do not use the power cable for other purposes than power supply.

NOTE

- Depending on the model, additional components (LAN adapter, etc.) may be provided.

Connecting and Turning On the PC


Connect the adapter to the USB-C® port of the PC and press the Power button to turn on the power.



CAUTION

- Do not use any other adapter than the one that was provided with the PC.

 
System Shutdown / Power Off

Press the [] key or [Ctrl] + [Esc] to display the Start menu.

- Press the Start button [] > Power button [] and select [Shut down].

Using Stylus Pen


If you use the Stylus Pen for the 16T95TP/16TB95TP/16TS95TP models, you can do fine touch operations that are difficult with fingers.

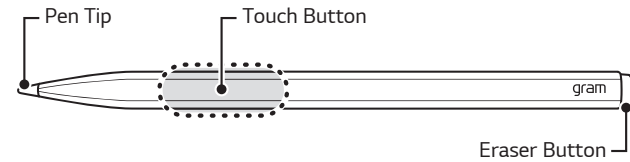


Basic Usage

If you are using the Stylus Pen for the first time, make sure that you activate the pen first.



Attach the gram logo side of the Stylus Pen to the magnetic connector on the right side of the keyboard to activate the Stylus Pen.

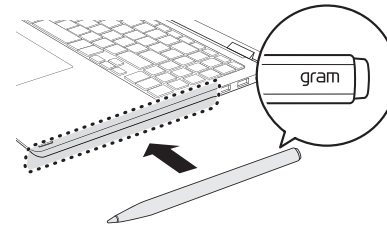 

Touching Once

 

Touching Twice

  Drag
(moving while
pressing down)

 
NOTE

- Do not apply excessive force on the Stylus Pen. Doing so may cause the pen tip or the pen to fail.
- If the Stylus Pen is not used for more than 1 minutes, it switches to power saving mode to reduce battery consumption.
- To disable the power saving mode, shake and wake up the Stylus Pen.
- When charging Stylus Pen is complete, it is no longer charged.
- For more information on Stylus Pen, refer to LG Easy Guide.

Using Touch Button

You can quickly run the Stylus Pen function by performing the double-tap & hold gesture on the Touch Button where the gram logo displayed in the hovering status.

After searching and running [My gram] in the search window on the Windows taskbar, you can set the function in [PC Maintenance] > [Keyboard & Pen] > [Pen Settings] > [Touch Button Settings].

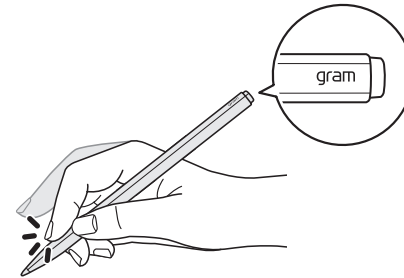


NOTE

- Double-tap & Hold: Maintain the status of tapping twice with your finger.

Pre-Tech Support Checklist

Troubleshooting

If the following symptoms appear while using the product, check again. It may not be a malfunction.

Symptom	Cause and Solution
The power does not turn on.	<ul style="list-style-type: none"> • Check if the power cord is connected. • After disconnecting the power cord and reconnecting it, press the power button of the product. • If the power is not on after reconnecting the power cord, remove the adapter and hold the power button for at least 20 seconds to reset the system. (Do not release the button even if the error inspection screen appears or the power turns off.)
The system stops during use or does not properly turn off.	<ul style="list-style-type: none"> • Remove the adapter and press the power button for approximately 20 seconds to reset the system. (Do not release the button even if the error inspection screen appears or the power turns off.) - Caution: Unsaved data may be lost. Pressing the power button while the PC is in use may cause damage to the storage device or a system error.
The wireless network is not connected.	<ul style="list-style-type: none"> • If the Airplane Mode is turned on, set to [Off]. Click the Wi-Fi [] icon on the right side of the taskbar and check if AP displays properly. • You may not be able to access a secure wireless network. Contact the wireless network administrator. • Reinstall the wireless network driver.

Symptom	Cause and Solution
I want to reinstall the driver.	<ul style="list-style-type: none"> • After searching and running [App and Function] or [Installed apps] in the search window of the Windows taskbar, remove the driver you want to reinstall. • After searching and running [LG Update & Renew] in the search window of the Windows taskbar, reinstall the driver through the [Update] menu.

Appendix

Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

USA

Battery take-back information

In case rechargeable battery is included in this product, the entire device should be recycled in compliance with rechargeable battery recycling standards because of the internal battery.

To dispose of properly, call (800) 822-8837 or visit www.call2recycle.org.

Battery replacement

The internal battery cannot arbitrarily be removed or replaced. Removing it may void the warranty.

- Either in warranty or not, if you need to disassemble or replace the battery please contact the designated Call Center.
- We can charge a fee for removing or replacing the battery.
- Battery is only available for 4 years after the end of product production. It may differ by model.

Supplier's Declaration of Conformity

Trade Name	LG
Responsible Party	LG Electronics USA, Inc.
Address	111 Sylvan Avenue, North Building Englewood Cliffs, New Jersey 07632
Email	lg.environmental@lge.com

ENERGY STAR®



ENERGY STAR® Specifications

- LG Electronics Inc. participates in ENERGY STAR® and the energy efficiency of this product complies with the specifications of ENERGY STAR®.
- ENERGY STAR® is a set of regulations that encourages manufacturers of electronic devices to create more energy efficient products.
- The energy consumption of this product was decreased along with the cost. Also, it helps preserve natural resources.
- The PC is set to switch to Modern Standby after 5 minutes of inactivity.
- To exit from the sleep mode, press the power button. (If an external mouse is connected, clicking the mouse will clear the sleep mode.)

Stylus Pen Regulatory Information

Stylus Pen Product Specifications

Item	Content	
Dimension	6.37 in ± 0.019 in / Φ 0.409 in (162 mm ± 0.5 mm / Φ 10.4 mm)	Length / Diameter
Weight	0.028 lbs (13 g ± 0.5 g)	Including battery
Protocol	MPP 2.0	18 ~ 210 kHz
Operation Temperature	41.00 °F ~ 104.00 °F (+5 °C ~ +40 °C)	-
Battery	80 mAh (Built-in battery)	Li-Ion (3.85 V)
Model Name	PEW8	
Brand	LGE	

USA

FCC compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

FCC RF Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC ID: BEJSP-PEW8

Stylus Pen Service Information

Repairs and product servicing arising out of the following circumstances are subject to service fees. Refer to the Service section on the Limited Warranty Statement of your LG 16T95TP/16TB95TP/16TS95TP Laptop for service and support instructions.

- Improper use of the product
- User's negligence (breaking or submerging the product in water, dismantling or remodeling of the product by someone other than a technician at a designated service center)
- Failure to heed the precautions in the user manual
- Natural disaster (fire, salt air, gas, earthquake, storm and flood, etc.)
- Using incorrect voltage or defect in the connecting device
- Replacing expendable parts
- Damage from external causes (not product defect)

Singapore

Complies with
IMDA Standards
DB102260

