

# Your new dryer

**Congratulations** - You have chosen a modern, high-quality Neff domestic appliance. The condensation dryer is distinguished by its economical energy consumption. Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition. Should you have any questions, our after-sales service will be pleased to help.

**Disposal in an environmentally-responsible manner**  
Dispose of packaging in an environmentally-responsible manner. This appliance is labelled in accordance with the European guideline 2002/96/EG on waste electrical and electronic equipment - WEEE. The guideline provides an EU-wide framework for the return and recycling of old appliances.

For further information about our products, accessories, spare parts and services, please visit: [www.neff.de](http://www.neff.de)

## Contents

■ Preparation	Page 2
■ Setting the programmes	Page 2
■ Drying	Page 3/4
■ Information on laundry	Page 5
■ Care and cleaning	Page 6
■ Programme overview	Page 7
■ Installation	Page 8
■ Frost protection / Transport	Page 8
■ Technical data	Page 9
■ Optional accessories	Page 9
■ What to do if... / After-sales service	Page 10
■ Safety instructions	Page 11

## Intended use

- for domestic use only,
- only to be used for drying fabrics that have been washed with water.

**Do not leave children unsupervised near the dryer. Keep pets away from the dryer.**

## Preparing for installation, see Page 8

**Never start the dryer if it is damaged! Inform your after-sales service.**

**Make sure your hands are dry. Hold the plug only.**

## Sorting and loading laundry

**Remove all items from pockets. Check for cigarette lighters. The drum must be empty prior to loading.**  
See programme overview on page 7. See also separate instructions for "Woollens basket" (depending on model)

## Selecting and adjusting the programme

Select the drying programme ...

... and adapt to individual requirements

The diagram shows the programme selector panel with the following elements:

- Additional functions:** Buzzer, Low Heat, Reduced Ironing.
- Display panel:** Shows time remaining (h:min) and a progress bar.
- Programme selector:** A circular dial with icons for Synthetics, Cottons+Linens, Super 40, Outdoor Dessous, finish, Wool, and Timed programme. It also shows a Start/Stop button and a 7 kg Class B rating.

All buttons are sensitive and only need to be touched lightly.

**Press the Start/Stop button**

**Only operate the dryer with the fluff filter inserted!**

- Select On/Off for an acoustic signal at end of programme. **(Buzzer)**
- Reduced temperature for delicate fabrics that require a longer drying time; e.g. for polyacrylics, polyamide, elastane or acetate. **(Low Heat)**
- Reduces creasing and extends the anti-creasing phase once the program has ended. **(Reduced Ironing)**

**h:min** End of programme in 1\*-24 hours (Press button several times if required) (\*depending on the selected programme, e.g. duration 1:54h → 2h. Can always be selected to the next full hour.)

**(Buzzer)** drying, iron dry, cupboard dry, fluff/finished

**(Low Heat)** Empty the condensation container.

**(Container)** Clean the fluff filter and/or air cooler → page 4/6.

**(Filter)**

## Inspecting the dryer


## Connecting the mains plug

## Sorting and loading laundry

## Selecting and adjusting the programme

## Drying

Condensation container  
Drum interior light (depending on model)  
Control panel

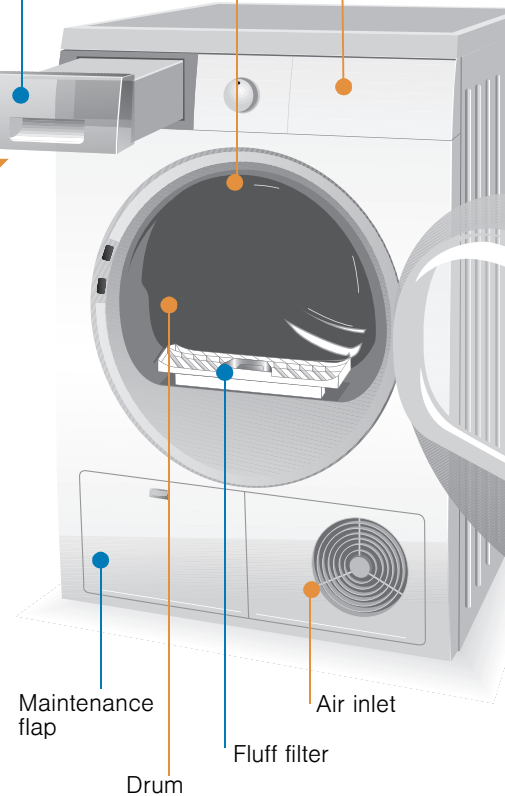

## Drying

## Emptying condensation

Empty container **after** each drying operation!  
1. Pull out condensation container keeping it horizontal.  
2. Pour out condensation.  
3. Always push container in fully until it clicks into place.  
If **(Container)** flashes in the display panel → *What to do if...*, Page 10.

## Cleaning the fluff filter

Clean the fluff filter **after** each drying operation.  
1. Open the door, remove fluff from door/door area.  
2. Pull out and fold open the fluff filter.  
3. Remove the fluff (by wiping the filter with your hand). If the fluff filter is very dirty or blocked, rinse with warm water and dry thoroughly.  
4. Close and reinsert the fluff filter.

## Switching off the dryer

Turn the programme selector to **(Off)**. Do not leave laundry in the dryer.

## Removing the laundry

The automatic anti-crease function causes the drum to move at specific intervals, the washing remains loose and fluffy for an hour (two hours if the additional **(Reduced Ironing)** function is also selected - depending on model).

## Programme end

once lights up in the display.

## Interrupt programme

removing or adding laundry.

The drying cycle can be interrupted for a brief period so that laundry may be added or removed. The programme selected must then be resumed and completed.

**Never switch the dryer off before the drying process has ended. Drum and door may be hot!**

1. Open door, the drying process is interrupted.
2. Load or remove laundry and close door.
3. If required, select a new programme and additional functions.
4. Press the **Start/Stop** button. The remaining time is updated after a few minutes.

## Information on laundry ...

### Labelling of fabrics

**Follow the manufacturer's care information.**  
 Drying at normal temperature.  
 Drying at low temperature → also select **(Low Heat)**  
 Do not machine dry.

Observe safety instructions without fail → Page 11!

Do not tumble-dry the following fabrics for example:

- Impermeable fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk or curtains made from synthetic material) → they may crease
- Laundry contaminated with oil.

### Drying tips

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Always dry very small items (e.g. baby socks) together with large items of laundry (e.g. hand towel).
- Close zips, hooks and eyelets, and button up covers. Tie fabric belts, apron strings, etc. together
- Do not over-dry easy-care laundry → risk of creasing! Allow laundry to finish drying in the air.
- Do not dry woollens in the dryer, only use to freshen them up → Page 7, **Wool finish Programme** (depending on model).
- Do not iron laundry immediately after drying, fold items up and leave for a while → the remaining moisture will then be distributed evenly.
- Machine-knitted fabrics (e.g. T-shirts or jerseys) often shrink the first time they are dried → do not use the **(Cupboard Dry Plus)** programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that adversely affects the drying operation.
- Use the correct dosage of fabric softener as per the manufacturer's instructions when washing the laundry to be dried.
- Use the timer programme for small loads → this improves the drying result.

### Environmental protection/energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Put in, but do not exceed, the maximum recommended quantity of laundry → programme overview → Page 7.
- Make sure the room is well ventilated during drying.
- Do not obstruct or seal up the air inlet.
- Keep the air cooler clean → page 6 "Care and cleaning".

## Care and cleaning

**Only when switched off!**

### Dryer housing, control panel, air cooler, moisture sensors

- Wipe with a soft, damp cloth.
- Do not use harsh cleaning agents and solvents.
- Remove detergent and cleaning agent residue immediately.
- During drying, water may collect between the door and seal. This does not affect your dryer's functions in any way.

Clean the protective filter 5 - 6 times a year or if **(Filter)** flashes after cleaning the fluff filter.

### Air cooler / protective filter

- When cleaning, only remove the protective filter. Clean the air cooler behind the protective filter once a year.
- Allow the dryer to cool.
- Residual water may leak out, so place an absorbent towel underneath the maintenance door.

1. Unlock the maintenance door.
2. Open the maintenance door fully.

3. Turn both locking levers towards each another.
4. Pull out the protective filter/air cooler.

**Do not damage the protective filter or air cooler. Clean with warm water only. Do not use any hard or sharp-edged objects.**

5. Clean the protective filter/ air cooler thoroughly, Allow to drip dry.
6. Clean the seals.
7. Re-insert the protective filter/air cooler, with the handle facing down.
8. Turn back both locking levers.
9. Close the maintenance door until the lock clicks into place.

### Moisture sensors

The dryer is fitted with stainless steel moisture sensors. The sensors measure the level of moisture in the laundry. After a long period of operation, a fine layer of limescale may form on the sensors.

1. Open the door and clean the moisture sensors with a damp sponge which has a rough surface.

**Do not use steel wool or abrasive materials.**





Programme	max. 7 kg	max. 3.5 kg	max. 1.5 kg	max. 1 kg	max. 3 kg	max. 2 kg	max. 3 kg
Ironed	✓	✓	✓	✓	✓	✓	✓
Slightly ironed dry	✓	✓	✓	✓	✓	✓	✓
Not ironed	✓	✓	✓	✓	✓	✓	✓
Passed through a mangle	✓	✓	✓	✓	✓	✓	✓
<b>Cottons+Linsens</b>	✓	✓	✓	✓	✓	✓	✓
(Iron Dry)	✓	✓	✓	✓	✓	✓	✓
(Cupboard Dry)	✓	✓	✓	✓	✓	✓	✓
(Cupboard Dry Plus)	✓	✓	✓	✓	✓	✓	✓
<b>Synthetics</b>	✓	✓	✓	✓	✓	✓	✓
(Iron Dry)	✓	✓	✓	✓	✓	✓	✓
(Cupboard Dry)	✓	✓	✓	✓	✓	✓	✓
(Cupboard Dry Plus)	✓	✓	✓	✓	✓	✓	✓
<b>Outdoor</b>	✓	✓	✓	✓	✓	✓	✓
<b>Dessous</b>	✓	✓	✓	✓	✓	✓	✓
<b>Wool finish</b>	✓	✓	✓	✓	✓	✓	✓
<b>Super 40</b>	✓	✓	✓	✓	✓	✓	✓
<b>Timed programme 20 min</b>	✓	✓	✓	✓	✓	✓	✓

ig: laundry is to be ...

For whites and colours/cotton or linen.

For non-iron laundry made of synthetic fibres and blended fabric, cotton.

For fabrics with membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers) with removable internal lining (separately).

For lingerie made of synthetic fibres, cotton or blended fabric.

For woollen fabrics suitable for machine-washing. Fabrics become fluffier but not dry. Remove fabrics once the programme has ended and allow to dry.

For laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from the those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.

For pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry. Also for subsequent drying.

R7380X1EU



1110 / 9000577708


## Installation

- Delivery specification: dryer, instructions for installation and use, woollens basket (depending on model).
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not lift the dryer by any of the protruding parts (e.g. the door) as they may break off.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by an expert.

### 1. Setting up the dryer

- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and solid surface.
- Keep the cooling grille at the front of the dryer unobstructed.
- Keep the area around the dryer clean.
- Make the dryer level using the threaded feet and a spirit level.
- Do not remove the threaded feet under any circumstances.

Take all accessory parts out of the drum. The drum must be empty.

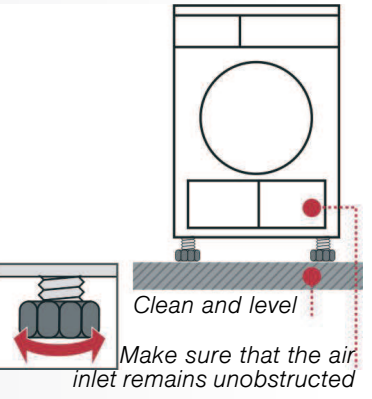


Do not set up the dryer behind a door or sliding door as this may obstruct or prevent the dryer door from opening. This will prevent a potentially fatal danger to children from locking themselves in.

### 2. Mains connection

 - Connect to an AC earthed socket. If in doubt have the socket checked by an expert.
- The mains voltage and the voltage shown on the rating plate (→ Page 9) must correspond.
- The connected load and necessary fuse protection are specified on the rating plate.

### 3. Converting the installed load



Feedback:	10 A	Lo	off
	16 A	hi	flashes

## Frost protection / Transport

### Preparation

1. Empty the condensation container → page 4.
2. Select any programme using the programme selector.
3. Press the Start/Stop button → condensation is pumped into the container.
4. Wait 5 min., and then empty the condensation container again.
5. Turn the programme selector to (Off).

## Technical data

● <b>Dimensions (DxWxH)</b>	60 x 60 x 85 cm (height adjustable)
<b>Weight</b>	approximately 45 kg
<b>Max. capacity</b>	7 kg
<b>Condensation container</b>	4.2 l
<b>Connection voltage</b>	
<b>Connected load</b>	
<b>Fuse protection</b>	see appliance rating plate
<b>Ambient temperature</b>	
<b>Product number/ Production number</b>	

You can find the rating plate on the back of the dryer.

### Consumption rates

These are guide values determined under standard conditions. Fluctuations up to 10% are possible. The value on the label is achieved at the maximum heat setting.

	Spin speed in rpm (residual moisture)	Drying time in min.**		Energy consumption in kWh**	
		10 A	16 A	10 A	16 A
<b>Cottons+Linsens 7 kg</b>					
(Cupboard Dry) *	1400 (approx. 50 %)	112	89	3.36	3.36
	1000 (approx. 60 %)	131	104	3.92	3.92
	800 (approx. 70 %)	150	120	4.48	4.48
(Iron Dry) *	1400 (approx. 50 %)	93	69	2.42	2.42
	1000 (approx. 60 %)	111	82	3.06	3.06
	800 (approx. 70 %)	130	94	3.70	3.70
<b>Synthetics 3.5 kg</b>					
(Cupboard Dry) *	800 (approx. 40 %)	48	42	1.35	1.35
	600 (approx. 50 %)	60	51	1.65	1.65

- \*Test program according to DIN EN 61121.
- \*\*The values may differ from the those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.
- **Drum interior light (depending on model) (bulb E14, 25 W)**  
The drum is illuminated after the door is opened or closed, and also after the programme is started. It goes out automatically. Replacing the bulb → Page 10.

## Optional accessories

- WZ 20160 **Connection fittings for condensation outlet**  
The condensation is conveyed directly via a hose.
- WZ 20310 **Washer-dryer stack connection set**  
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. This connection set **must** always be used to secure the dryer to the washing machine. With pull-out worktop: WZ 20300.
- WZ 20290 **Installation underneath the worktop**  
**Risk of electric shock!**  
Instead of the appliance covering plate, you must have a metal cover fitted by an expert.


## What to do if ...

- ! If you cannot rectify a fault yourself, please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed **after-sales service** directory, or by calling one of these numbers:  
– **GB** 0844 8928989 Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.  
– **IE** 01450 2655  
When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see the inside of the door). Set the programme selector to **(Off)** and remove the appliance plug from the socket.
- The Start/Stop indicator lamp does not light up. Mains plug plugged in? Programme selected?
- The (Container) and Start/Stop indicator lights are flashing. Empty the condensation container. If featured, check hose for condensation outlet.
- The (Filter) and Start/Stop indicator lights are flashing. Clean the fluff filter and/or air cooler → Page 4/6.
- Dryer does not start. Start/Stop button selected? Door closed? Programme set? Ambient temperature greater than 5 °C?
- Water is running out. Align dryer horizontally. Clean air cooler seal.
- The door opens by itself. Push the door closed until you hear it engage.
- The required degree of dryness was not achieved or the drying time was too long. Clean the fluff filter and/or air cooler → Page 4/6. Empty condensation container → Page 4. Check water outlet (if featured). Ambient temperature higher than 35 °C → airing. Air inlet may be blocked → keep unobstructed. Was an unsuitable programme selected? → Page 7. Has the dryer been installed with sufficient space on all sides? Ensure that air can circulate. Fine layer of scale on the moisture sensors → Clean the moisture sensors → page 6.
- Laundry damp. Use the next drying programme up or use the timer programme as a supplement → Page 7. Warm laundry feels damper than it really is!
- The moisture content of the room has increased significantly. Make sure the room is sufficiently ventilated. Air inlet blocked? → keep unobstructed. Ensure that the air cooler has been inserted.
- Mains failure. Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate.
- One or more indicator lights for programme status are flashing. Clean filter and air cooler → Page 4/6. Check installation conditions → Page 8. Switch off, leave to cool down, switch on again, restart programme.
- The interior light is not working (depending on model). Pull out the appliance plug, remove the cover cap in the interior above the door (use Torx 20 screw driver) and replace the bulb. Close the cover cap. Never operate the dryer without a cover cap.

## Safety instructions

- ! **Emergency ONLY use the dryer...**  
– Pull the appliance plug out of the socket immediately or disconnect the fuse.  
– In rooms inside the house.  
– To dry fabrics.
- ! **The dryer must NEVER...**  
– Be used for other purposes than those described above.  
– Be modified in terms of its technology or attributes.
- ! **Dangers**  
– The dryer must not be used by children or persons who have not been instructed in its use.  
– Do not leave children unsupervised near the dryer.  
– Keep pets away from the dryer.  
– Remove all objects from pockets.  
– Make especially sure that cigarette lighters are removed as they constitute an **explosion hazard**.  
– Do not lean or sit on the door → **risk of tipping**.
- ! **Installation**  
– Secure loose cables → **tripping hazard**.  
– Do not operate the dryer if there is a risk of frost.  
– Connect the dryer according to specifications to an AC earthed socket, as otherwise it cannot be guaranteed that the appliance is completely safe.  
– The cable cross-section must be sufficient.  
– Only use earth-leakage circuit breakers with the following symbol: .  
– The appliance plug and socket must be compatible.  
– Do not use multiple plugs/couplings and/or extension cables.  
– Do not hold the appliance plug with wet hands → **risk of electric shock**.  
– Never pull the appliance plug out of the socket by its cable.  
– Do not damage the mains lead → **risk of electric shock**.
- ! **Operation**  
– Only load the drum with laundry.  
– Check the contents before you switch the dryer on.  
– Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair setting spray, nail polish remover, stain remover, cleaning solvent, etc.) → **fire/explosion hazard**.  
– Dust (e.g. coal dust, flour) poses a danger: do not use the dryer → **explosion hazard**.  
– Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material.  
– Switch off the dryer once the programme has ended.  
– Condensation is not drinking water and may be contaminated with fluff.
- ! **Defect**  
– Do not use the dryer if it is defective or if you suspect it is. Repairs must only be carried out by the after-sales service.  
– Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.  
– Always pull the mains plug out of the socket before changing the bulb for the interior light → **risk of electric shock**.
- ! **Spare parts**  
– Only use genuine spare parts and accessories for safety reasons.
- ! **Disposal**  
– Dryer: pull out the appliance plug, **then** cut off the mains cable from the appliance.  
– Dispose of at municipal waste disposal facility.  
– Packaging: do not leave children alone with packing parts → **risk of suffocation**.  
– All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner.

## INSTRUCTIONS FOR INSTALLATION AND USE

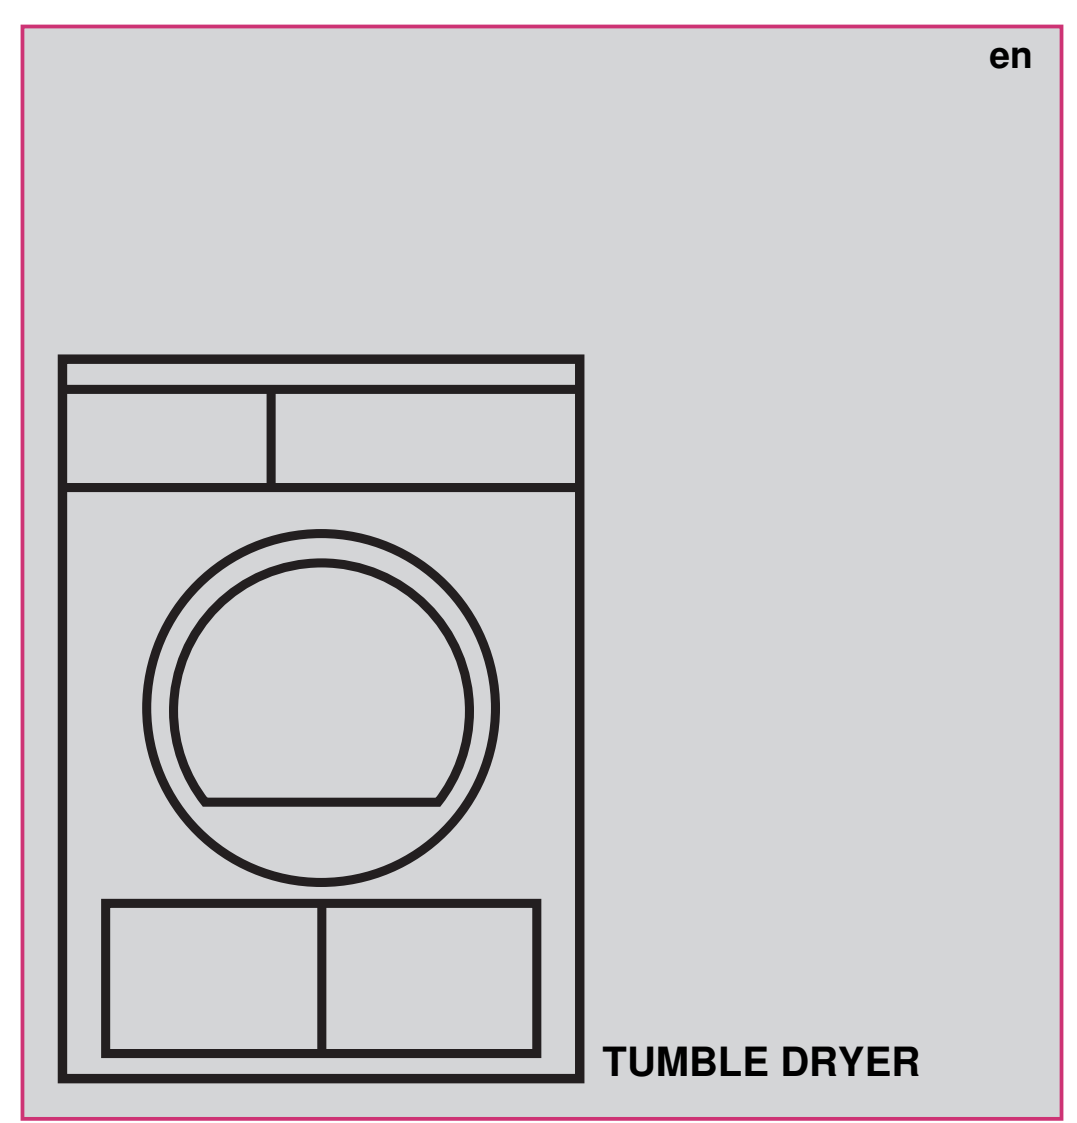

Read these instructions before operating the dryer.

Observe the safety instructions on page 11.



# Your new dryer

**Congratulations** - You have chosen a modern, high-quality Neff domestic appliance.  
 The condensation dryer is distinguished by its economical energy consumption.  
 Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.  
 Should you have any questions, our after-sales service will be pleased to help.

**Disposal in an environmentally-responsible manner**  
 Dispose of packaging in an environmentally-responsible manner. This appliance is labelled in accordance with the European guideline 2002/96/EG on waste electrical and electronic equipment - WEEE.  
 The guideline provides an EU-wide framework for the return and recycling of old appliances.


For further information about our products, accessories, spare parts and services, please visit: [www.neff.de](http://www.neff.de)

## Contents


	Page
Preparation	2
Setting the programmes	2
Drying	3/4
Information on laundry	5
Care and cleaning	6
Programme overview	7
Installation	8
Frost protection / Transport	8
Technical data	9
Optional accessories	9
What to do if... / After-sales service	10
Safety instructions	11


## Intended use


- for domestic use only,
- only to be used for drying fabrics that have been washed with water.

 Do not leave children unsupervised near the dryer.  
 Keep pets away from the dryer.

## Preparing for installation, see Page 8

 Never start the dryer if it is damaged!  
 Inform your after-sales service.

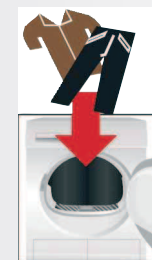


 



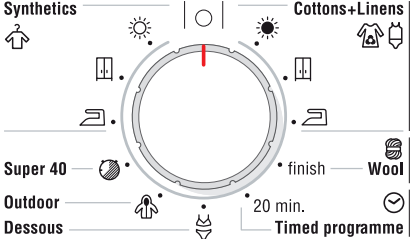
 Make sure your hands are dry.  
 Hold the plug only.




**Sorting and loading**  
 Remove all items from pockets.  
 Check for cigarette lighters.  
 The drum must be empty prior to loading.  
 See programme overview on page 7.  
 See also separate instructions for "Woollens" (depending on model)


## Selecting and adjusting the programme

 



 

 

 

 
... and adapt to individual requirements

Additional functions	Display panel	Time remaining	Programme selector
  	  		

 All buttons are... need to be tou...

Press

 Only operate the fluff filter i...

Select On/Off for a acoustic signal at end of programme.	 <b>(Buzzer)</b>	 <b>h:min</b>	End of programme in 1*-24 hours (Press button several times if required) (*depending on the selected programme, e.g. duration 1:54h → 2h. Can always be selected to the next full hour.)
Reduced temperature for delicate fabrics  that require a longer drying time; e.g. for polyacrylics, polyamide, elastane or acetate.	 <b>(Low Heat)</b>	   	drying, iron dry, cupboard dry, fluff/finished
Reduces creasing and extends the anti-creasing phase once the program has ended.	 <b>(Reduced Ironing)</b>	 <b>(Container)</b>  <b>(Filter)</b>	Empty the condensation container. Clean the fluff filter and/or air cooler → page 4/6.

Inspecting the dryer

Connecting the mains plug

Loading laundry

Basket

Programme

Drying programme ...

Individual requirements

Sensitive and only touched lightly.

Start/Stop button

the dryer with inserted!

# Drying



1  
2

3

# Drying




## Emptying condensation

Empty container **after** each drying operation!

1. Pull out condensation container keeping it horizontal.
2. Pour out condensation.
3. Always push container in fully until it clicks into place.


If (Container) flashes in the display panel → *What to do if...*, Page 10.

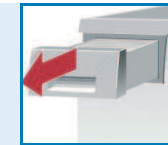

## Cleaning the fluff filter


Clean the fluff filter **after** each drying operation.

1. Open the door, remove fluff from door/door area.
2. Pull out and fold open the fluff filter.
3. Remove the fluff (by wiping the filter with your hand).  
If the fluff filter is very dirty or blocked, rinse with warm water and dry thoroughly.
4. Close and reinsert the fluff filter.

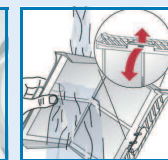

## Switching off the dryer

Turn the programme selector to (Off).  
Do not leave laundry in the dryer.

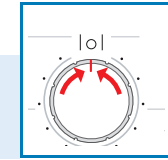

## Removing the laundry

The automatic anti-crease function causes the drum to move at specific intervals, the washing remains loose and fluffy for an hour (two hours if the additional (**Reduced Ironing**) function is also selected-*depending on model*).

**Programme end** once lights up in the display.



**Interrupt programme** removing or adding laundry.

The drying cycle can be interrupted for a brief period so that laundry may be added or removed. The programme selected must then be resumed and completed.

**Never switch the dryer off before the drying process has ended. Drum and door may be hot!**


1. Open door, the drying process is interrupted.
2. Load or remove laundry and close door.
3. If required, select a new programme and additional functions.
4. Press the **Start/Stop** button. The remaining time is updated after a few minutes.

# Information on laundry ...



## Labelling of fabrics

Follow the manufacturer's care information.

- ☑ Drying at normal temperature.
- ☑ Drying at low temperature → also select  (Low Heat)
- ☑ Do not machine dry.




 
Observe safety instructions without fail → Page 11!

Do not tumble-dry the following fabrics for example:

- Impermeable fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk or curtains made from synthetic material) → they may crease
- Laundry contaminated with oil.



## Drying tips

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Always dry very small items (e.g. baby socks) together with large items of laundry (e.g. hand towel).
- Close zips, hooks and eyelets, and button up covers. Tie fabric belts, apron strings, etc. together
- Do not over-dry easy-care laundry → risk of creasing! Allow laundry to finish drying in the air.
- Do not dry woolens in the dryer, only use to freshen them up → Page 7,  **Wool finish Programme** (depending on model).
- Do not iron laundry immediately after drying, fold items up and leave for a while → the remaining moisture will then be distributed evenly.
- Machine-knitted fabrics (e.g. T-shirts or jerseys) often shrink the first time they are dried → do not use the  (**Cupboard Dry Plus**) programme.
- Starched laundry is not always suitable for dryers → starch leaves behind a coating that adversely affects the drying operation.
- Use the correct dosage of fabric softener as per the manufacturer's instructions when washing the laundry to be dried.
- Use the timer programme for small loads → this improves the drying result.

## Environmental protection/energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine → the higher the spin speed the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Put in, but do not exceed, the maximum recommended quantity of laundry → programme overview → Page 7.
- Make sure the room is well ventilated during drying.
- Do not obstruct or seal up the air inlet.
- Keep the air cooler clean → page 6 "Care and cleaning".

# Care and cleaning

 


Only when switched off!



## Dryer housing, control panel, air cooler, moisture sensors

- Wipe with a soft, damp cloth.
- Do not use harsh cleaning agents and solvents.
- Remove detergent and cleaning agent residue immediately.
- During drying, water may collect between the door and seal. This does not affect your dryer's functions in any way.

Clean the protective filter 5 - 6 times a year or if  (**Filter**) flashes after cleaning the fluff filter.



## Air cooler / protective filter


When cleaning, only remove the protective filter. Clean the air cooler behind the protective filter once a year.

- Allow the dryer to cool.
- Residual water may leak out, so place an absorbent towel underneath the maintenance door.

1. Unlock the maintenance door.
2. Open the maintenance door fully.




3. Turn both locking levers towards each other.
4. Pull out the protective filter/air cooler.

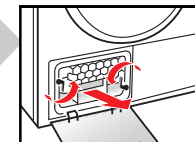

Do not damage the protective filter or air cooler. Clean with warm water only. Do not use any hard or sharp-edged objects.

5. Clean the protective filter/ air cooler thoroughly, Allow to drip dry.
6. Clean the seals.
7. Re-insert the protective filter/air cooler, with the handle facing down.
8. Turn back both locking levers.
9. Close the maintenance door until the lock clicks into place.

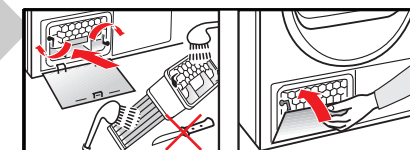

## Moisture sensors

The dryer is fitted with stainless steel moisture sensors. The sensors measure the level of moisture in the laundry. After a long period of operation, a fine layer of limescale may form on the sensors.

1. Open the door and clean the moisture sensors with a damp sponge which has a rough surface.



Do not use steel wool or abrasive materials.



After drying: laundry is to be ...		T-shirt	Shirts	Trousers	Skirts/dresses	Sportswear	Work clothing	Anoraks	Toweling gowns	Underwear	Socks	Bed linen	Table linen	Terry towels	Tea towels/ Towels
☐ ironed		☑													
☐ lightly ironed dry															
☐ not ironed															
☐ passed through a mangle															
<b>Coitons+Linens</b>	<b>max. 7 kg</b>	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑
(Iron Dry)		☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑
(Cupboard Dry)		☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑
(Cupboard Dry Plus)		☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑
<b>Synthetics</b>	<b>max. 3.5 kg</b>	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑
(Iron Dry)		☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑
(Cupboard Dry)		☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑
(Cupboard Dry Plus)		☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑
<b>Outdoor</b>	<b>max. 1.5 kg</b>	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑
		☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑
<b>Dessous</b>	<b>max. 1 kg</b>	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑
<b>Wool finish</b>	<b>max. 3 kg</b>	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑
<b>Super 40</b>	<b>max. 2 kg</b>	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑
<b>Timed programme 20 min</b>	<b>max. 3 kg</b>	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑	☑

*For whites and coloureds/cotton or linen.*

*For non-iron laundry made of synthetic fibres and blended fabric, cotton.*

*For fabrics with membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers) with removable internal lining separately.*

 
*For lingerie made of synthetic fibres, cotton or blended fabric.*

*For woollen fabrics suitable for machine-washing. Fabrics become fluffier but not dry. Remove fabrics once the programme has ended and allow to dry.*

*For laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.*

*For pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry. Also for subsequent drying.*

1110 / 9000577708



R7380X1EU

## Installation

- Delivery specification: dryer, instructions for installation and use, woollens basket (depending on model).
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not lift the dryer by any of the protruding parts (e.g. the door) as they may break off.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by an expert.


### 1. Setting up the dryer

- The appliance plug must always be accessible.
  - Ensure that the appliance is installed on a clean, level and solid surface.
  - Keep the cooling grille at the front of the dryer unobstructed.
  - Keep the area around the dryer clean.
  - Make the dryer level using the threaded feet and a spirit level.
- Do not remove the threaded feet under any circumstances.

**!** Take all accessory parts out of the drum. The drum must be empty.



Do not set up the dryer behind a door or sliding door as this may obstruct or prevent the dryer door from opening. This will prevent a potentially fatal danger to children from locking themselves in.

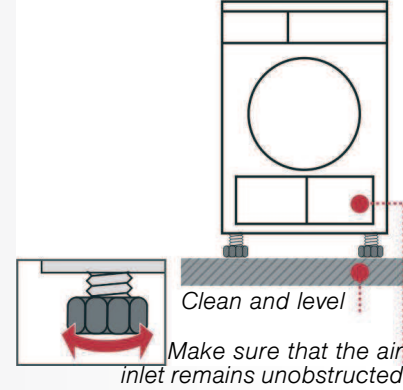


### 2. Mains connection see safety instructions → Page 11.

- Connect to an AC earthed socket. If in doubt have the socket checked by an expert.
- The mains voltage and the voltage shown on the rating plate (→ Page 9) must correspond.
- The connected load and necessary fuse protection are specified on the rating plate.

### 3. Converting the installed load

Note the fuse protection of the socket.  
10/16 Amps

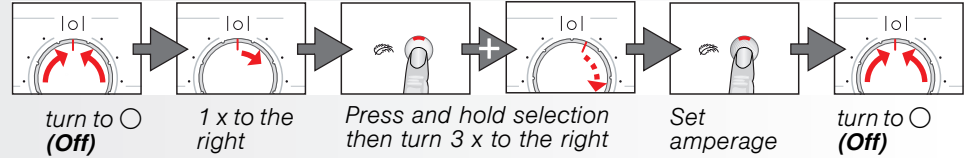

Feedback:

10 A			
16 A			

## Frost protection / Transport



Do not operate the dryer if there is a danger of frost.



### Preparation

1. Empty the condensation container → page 4.
2. Select any programme using the programme selector.
3. Press the **Start/Stop** button → condensation is pumped into the container.
4. Wait 5 min., and then empty the condensation container again.
5. Turn the programme selector to **Off**.

## Technical data

● <b>Dimensions (DxWxH)</b>	60 x 60 x 85 cm (height adjustable)
<b>Weight</b>	approximately 45 kg
<b>Max. capacity</b>	7 kg
<b>Condensation container</b>	4.2 l
<b>Connection voltage</b>	
<b>Connected load</b>	
<b>Fuse protection</b>	see appliance rating plate
<b>Ambient temperature</b>	
<b>Product number/ Production number</b>	

You can find the rating plate on the back of the dryer.

- **Consumption rates** These are guide values determined under standard conditions. Fluctuations up to 10% are possible. The value on the label is achieved at the maximum heat setting.

	Spin speed in rpm (residual moisture)	Drying time in min.**		Energy consumption in kWh**		
		10 A	16 A	10 A	16 A	
<b>Cottons+Linens 7 kg</b>						
(Cupboard Dry) *	1400 (approx. 50 %)	112	89	3.36	3.36	
	1000 (approx. 60 %)	131	104	3.92	3.92	
	800 (approx. 70 %)	150	120	4.48	4.48	
(Iron Dry) *	1400 (approx. 50 %)	93	69	2.42	2.42	
	1000 (approx. 60 %)	111	82	3.06	3.06	
	800 (approx. 70 %)	130	94	3.70	3.70	
<b>Synthetics 3.5 kg</b>						
	(Cupboard Dry) *	800 (approx. 40 %)	48	42	1.35	1.35
		600 (approx. 50 %)	60	51	1.65	1.65

\*Test program according to DIN EN 61121.

\*\*The values may differ from the those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.

- **Drum interior light** (depending on model) (bulb E14, 25 W)  
The drum is illuminated after the door is opened or closed, and also after the programme is started. It goes out automatically. Replacing the bulb → Page 10.

## Optional accessories (order from the after-sales service using the order number)

WZ  
20160

### Connection fittings for condensation outlet

The condensation is conveyed directly via a hose.

WZ  
20310

### Washer-dryer stack connection set

The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. This connection set **must** always be used to secure the dryer to the washing machine. With pull-out worktop: WZ 20300.

WZ  
20290

### Installation underneath the worktop

#### Risk of electric shock!

Instead of the appliance covering plate, you must have a metal cover fitted by an expert.

## What to do if ...



If you cannot rectify a fault yourself, please contact our after-sales service. We will always find an appropriate solution and will avoid unnecessary visits by engineers. Trust the expertise of the manufacturer and rest assured that the repair will be carried out by trained service technicians using original spare parts. The contact details of your local after-sales service can be found in the enclosed **after-sales service** directory, or by calling one of these numbers:

- **GB** 0844 8928989 Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.
- **IE** 01450 2655

When contacting the after-sales service, please quote the appliance's product number (E no.) and production number (FD) (see the inside of the door).


Set the programme selector to (**Off**) and remove the appliance plug from the socket.

- The **Start/Stop** indicator lamp does not light up. Mains plug plugged in? Programme selected?
- The (**Container**) and **Start/Stop** indicator lights are flashing. Empty the condensation container. If featured, check hose for condensation outlet.
- The (**Filter**) and **Start/Stop** indicator lights are flashing. Clean the fluff filter and/or air cooler → Page 4/6.
- Dryer does not start. **Start/Stop** button selected? Door closed? Programme set? Ambient temperature greater than 5 °C?
- Water is running out. Align dryer horizontally. Clean air cooler seal.
- The door opens by itself. Push the door closed until you hear it engage.
- The required degree of dryness was not achieved or the drying time was too long. Clean the fluff filter and/or air cooler → Page 4/6. Empty condensation container → Page 4. Check water outlet (if featured). Ambient temperature higher than 35 °C → airing. Air inlet may be blocked → keep unobstructed. Was an unsuitable programme selected? → Page 7. Has the dryer been installed with sufficient space on all sides? Ensure that air can circulate. Fine layer of scale on the moisture sensors → Clean the moisture sensors → page 6.
- Laundry damp. Use the next drying programme up or use the timer programme as a supplement → Page 7. Warm laundry feels damper than it really is!
- The moisture content of the room has increased significantly. Make sure the room is sufficiently ventilated. Air inlet blocked? → keep unobstructed. Ensure that the air cooler has been inserted.
- Mains failure. Remove laundry from the dryer immediately and spread out. This allows the heat to dissipate.
- One or more indicator lights for programme status are flashing. Clean filter and air cooler → Page 4/6. Check installation conditions → Page 8. Switch off, leave to cool down, switch on again, restart programme.
- The interior light is not working (depending on model). Pull out the appliance plug, remove the cover cap in the interior above the door (use Torx 20 screw driver) and replace the bulb. Close the cover cap. Never operate the dryer without a cover cap.



- Emergency** ONLY use the dryer...
- Pull the appliance plug out of the socket immediately or disconnect the fuse.
  - In rooms inside the house.
  - To dry fabrics.
- The dryer must NEVER...**
- Be used for other purposes than those described above.
  - Be modified in terms of its technology or attributes.
- Dangers**
- The dryer must not be used by children or persons who have not been instructed in its use.
  - Do not leave children unsupervised near the dryer.
  - Keep pets away from the dryer.
  - Remove all objects from pockets.  
Make especially sure that cigarette lighters are removed as they constitute an → **explosion hazard.**
  - Do not lean or sit on the door → **risk of tipping.**
- Installation**
- Secure loose cables → **tripping hazard.**
  - Do not operate the dryer if there is a risk of frost.
- Mains connection**
- Connect the dryer according to specifications to an AC earthed socket, as otherwise it cannot be guaranteed that the appliance is completely safe.
  - The cable cross-section must be sufficient.
  - Only use earth-leakage circuit breakers with the following symbol:
  - The appliance plug and socket must be compatible.
  - Do not use multiple plugs/couplings and/or extension cables.
  - Do not hold the appliance plug with wet hands → **risk of electric shock.**
  - Never pull the appliance plug out of the socket by its cable.
  - Do not damage the mains lead → **risk of electric shock.**
- Operation**
- Only load the drum with laundry.  
Check the contents before you switch the dryer on.
  - Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair setting spray, nail polish remover, stain remover, cleaning solvent, etc.) → **fire/explosion hazard.**
  - Dust (e.g. coal dust, flour) poses a danger: do not use the dryer → **explosion hazard.**
  - Do not put laundry containing foamed material/rubber in the dryer → elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material.
  - Switch off the dryer once the programme has ended.
  - Condensation is not drinking water and may be contaminated with fluff.
- Defect**
- Do not use the dryer if it is defective or if you suspect it is.  
Repairs must only be carried out by the after-sales service.
  - Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.
  - Always pull the mains plug out of the socket before changing the bulb for the interior light → **risk of electric shock.**
- Spare parts**
- Only use genuine spare parts and accessories for safety reasons.
- Disposal**
- Dryer: pull out the appliance plug, **then** cut off the mains cable from the appliance.  
Dispose of at municipal waste disposal facility.
  - Packaging: do not leave children alone with packing parts  
→ **risk of suffocation.**
  - All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner.

en

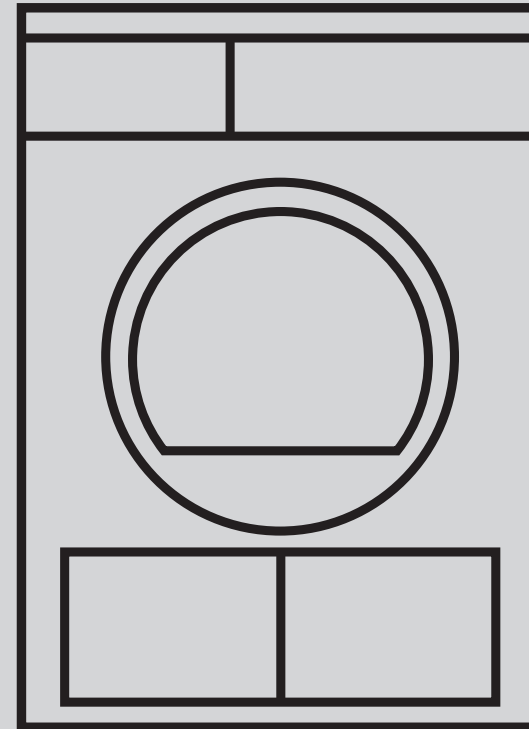

**TUMBLE DRYER**



Read these instructions before operating the dryer.



Observe the safety instructions on page 11.

