 


BOGASING

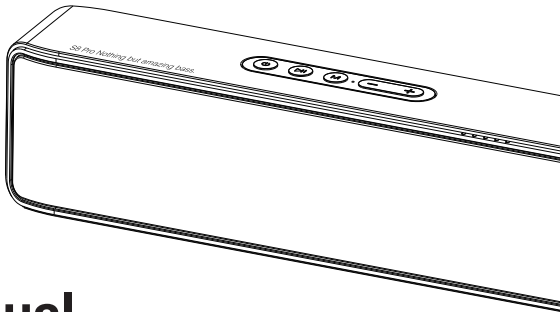

S8 Pro

Wireless bluetooth speaker

User Manual

Made in China

CONTENTS

English ----- 01-06

中文 ----- 07-12

Italiano ----- 13-18

Spain ----- 19-24

German ----- 25-30

French ----- 31-36

Russian ----- 37-42

 
日本語 ----- 43-48

English

Thank you for purchasing the **BOGASING S8 Pro** Bluetooth speaker. Please read the User Manual before use and keep it properly for future reference. If you have any questions or comments, please contact us by email:

bogasing@hotmail.com


Specifications



Model:	S8 Pro
Bluetooth Range:	Up to 18m/60ft (Unobstructed)
Output Power:	60W
Battery Capacity:	6000 mAh
Bluetooth Version:	5.0

Frequency Response:	48Hz-20KHz
Playtime:	≥15 hours (Varies by volume level)
Charging Time:	3 - 4 hours (5V/2A adapter)
Dimension:	10.67*2.09*2.87 inches
Weight:	990g

 Accessories




3.5 mm AUX cable



USB-C cable

 Button Configuration

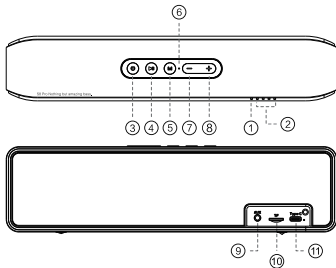


- ① Status indicator light
- ② Battery indicator light
- ③ Power ON/OFF/Sound effect mode
- ④ Play/Pause/Answer/End a call
- ⑤ Mode switch/Reset
- ⑥ Microphone
- ⑦ Volume down/ Previous track
- ⑧ Volume up/Next track
- ⑨ Aux-in port
- ⑩ TF-card slot
- ⑪ USB-C charging port

BUTTON OPERATION		
	Press and hold	Turn ON/OFF.
	Press twice quickly	Enter into True Wireless Stereo (TWS) mode
	Press	Switch sound effect modes in turn (3D, Vocal, and Super Bass).
M	Press	Switch the playing modes (Bluetooth, USB-C, Aux-in or TF-card)
	Press and hold	Clear all paired devices or restore to factory settings.
	Press	1. Play/Pause. 2. Answer the incoming calls. 3. End the current call.
	Press twice quickly	Call back the last call.
	Press and hold	1. Disconnect the bluetooth device. 2. Decline an incoming call. 3. Activate the phone voice assistant

—	Press	Volume down, total 16 levels
	Press and hold	Previous track
+	Press	Volume up, total 16 levels
	Press and hold	Next track

 
Bluetooth Connection

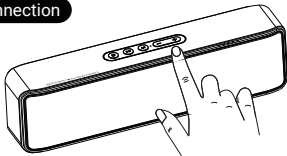

After the speaker is turned on and the status indicator light alternates between red and blue, turn on the Bluetooth on your smartphone, and search for BOGASING S8 Pro, and tap Pair to complete the connection.
 (* If there is no audio input for 40 minutes, the speaker will automatically shut down.)

Wired connection

 Mobile phones, computers, or TVs all have AUX interfaces. Please insert the provided 3.5mm audio cable into the audio output device and the speaker respectively.

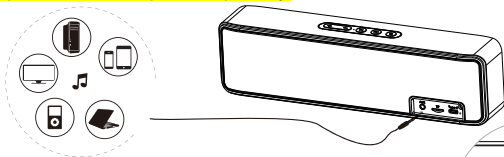


LED Indicator

① Status Indicator

- a. Blue light: 3D
- b. Red light: Vocal
- c. Green light: Super Bass

② Battery Indicator

 - a. Each bar represents 25% of the battery power;
- b. Single bar flashes when charging;
- c. When the power is turned off during charging, the 4 bars are always on when fully charged.

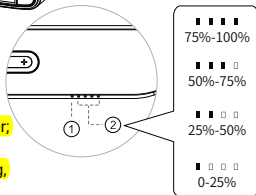

- * The power indicator is always flashing when the device is turned on during charging.
- * If the panel is not operated for 60 seconds, the backlight will turn off.

Multiple Play Modes

1. This speaker supports up to 64GB TF-card; Supports music format: APE/FLAC/WAV/MP3.
2. Insert the TF card into the slot and automatically play the audio file in order after recognition.
3. When AUX or USB-C cable is plugged, play mode will automatically switch to AUDIO IN or USB-C mode. If the bluetooth is connected, press "M" button to switch the play mode.

TWS Pairing

1. Make sure both speakers are powered on and they are disconnect with other devices;
2. Press the "⏻" button twice quickly on one of the speakers to enter TWS pairing mode;
3. After two speakers are paired, you will hear a beep. At this time, the indicator light of first speaker is blinking, the other one is solid;
4. Enable the Bluetooth feature of your cell phone or other devices, find and connect the speaker named of "BOGASING S8 Pro";
5. After the two speakers are successfully paired, it will automatically enter the TWS mode next time turning ON, no need to re-pair;
6. If the speaker ever paired with other speaker, Please press and hold the "M" button to reset it. Restart the speaker after reset, and then refer to steps 1-4 to enter the TWS pairing.
7. In TWS mode, only one speaker can be use for hands-free calling when incoming calls, the other speaker no sound.

Problem	Solution
The speaker cannot be charged	1. Check whether the charger voltage is 5V2A, or replace the charging cable and charger. 2. If it is not used for a long time, charge 20 minutes to activate the speaker battery.
Bluetooth connection is unsuccessful	Please refer to the manual to confirm whether the operation steps are correct.
The mobile phone can't find the Bluetooth speaker	1. Turn off the Bluetooth function of the mobile phone and turn it on again. 2. After the phone is restarted, clear all pairing records stored in the phone and re-pair. 3. If there is an error in the speaker program, hold the " M " button for 5 seconds to reset the speaker.
Abnormal volume of the device	Check the volume setting of the mobile phone, and adjust the speaker to the minimum volume and then to the maximum.
Playback in Bluetooth mode is stuck	1. Check whether it exceeds the effective connection distance of the Bluetooth. 2. Check whether there are obstacles between the speaker and the device, or interfered by other wireless signals.

Problem	Solution
TF card can't be played	1. Refer to the manual to confirm whether it is in TF card playback mode. 2. Check whether the audio files in the memory card are supported by the speaker.
The speaker can't be operated	Press and hold the power button for 10 seconds to force shutdown.

Warranty Card

Date	Malfunctions and causes
Maintenance records	
Product	Your name
Model	Your phone
Purchase date	Your address

((BOGASING))

SHENZHEN BOGASING TECHNOLOGY CO.,LTD.

Enterprise Life Artificial Intelligence Yousong Industrial Park,
Yousong Community, Longhua District, Shenzhen, China

Email: bogasing@hotmail.com



219 - 229048



RoHS



Made in China

– Nothing but amazing bass –