



ONNAIS EDC Stand with Gun Lock



Model: TES2

For any assistance, please contact us at:

 support@onnaisafe.com



QUICK START GUIDE VIDEO




OR

<https://onnaisafe.com/pages/installation-guide>

Follow Onnais on Instagram & Facebook for faster help.




 @Onnaisofficial

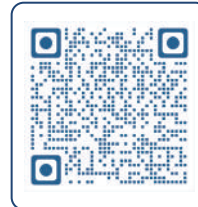

 @Onnais

Product Overview & Package Contents

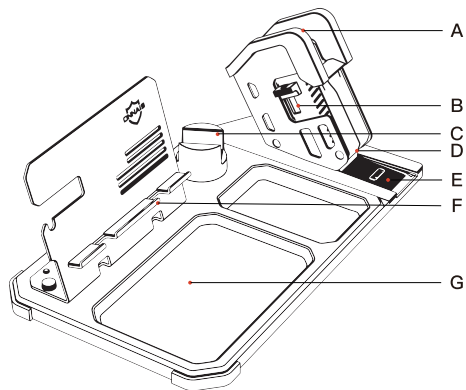

A. Gun Lock

B. Locking Switch


C. Knife Rack

D. Keyhole

E. Gun Lock Slot


F. EDC Rack

G. EDC Tray

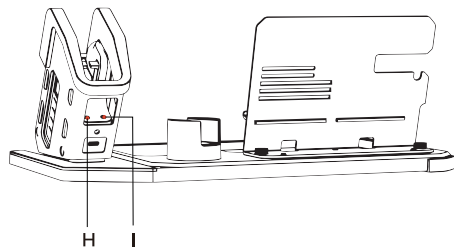

H. ADD Button

I. RESET Button

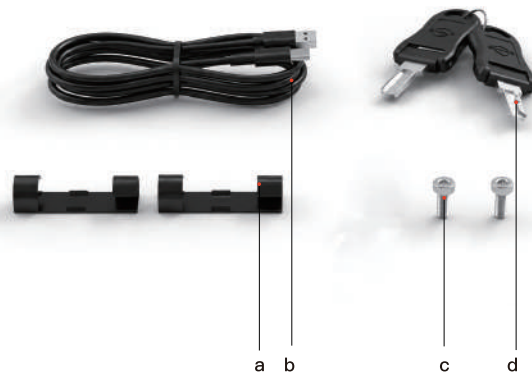

a. Cable Stoppers

c. Screws


b. Type-C cable

d Backup Keys

Assembly & Setup Guide


Step 1: Install the EDC Rack & Place the Knife Holder

Secure the EDC rack to the tray using the included screws. Then place the knife holder into its designated slot.

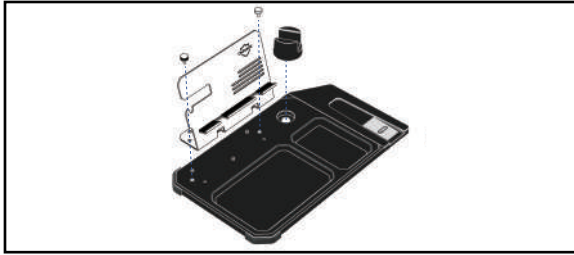

Step 2: Insert Gun Lock


Push the gun lock into the slot in the direction indicated by the arrow until it clicks into place.

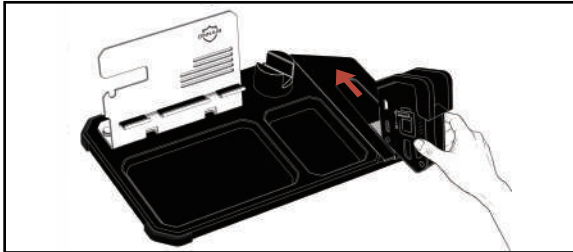

Step 3: Charge the Gun Lock


Charge the gun lock using the included Type-C cable.

Note: Charge the gun lock for at least 4 hours before first use.

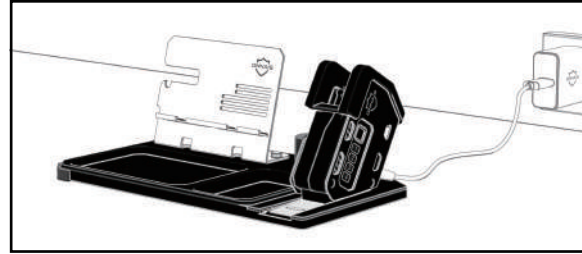


Step 4: Setup & Ready to Use

Please refer to page 4 to set up your master password and register your fingerprints. Once completed, your EDC rack is ready to use. Start organizing your everyday carry gear right away!

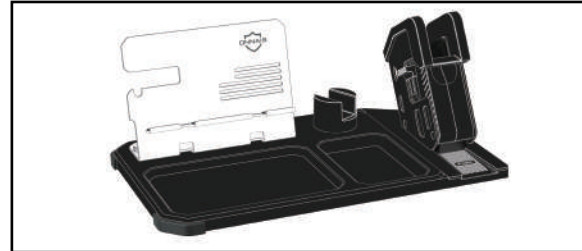

Gun Lock Overview

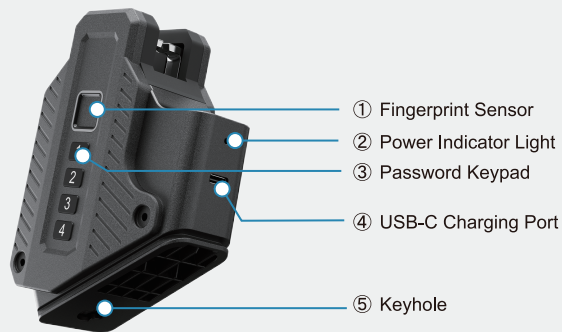


Charging & Battery Guide :

1. Charge with the included Type-C cable. Charge for at least 4 hours before first use. The power indicator light turns **green** when fully charged.
2. Battery life: A full charge lasts for at least 2 months (based on 1 use per day). A certified charger with a 3A output is recommended.
3. Low battery warning: Beeps 6 times and the indicator light flashes red 6 times. Please recharge promptly.

Gun Lock Quick Setup

Password Setting

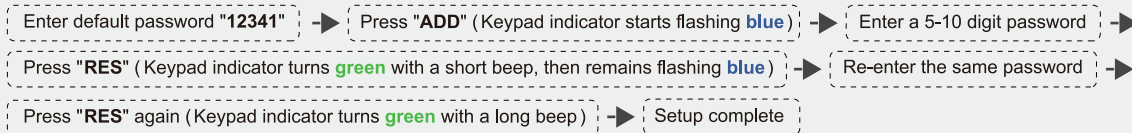

Note: If the indicator turns red, setup has failed. Please restart the setup process from the beginning.

⚠ To change the password, the gun lock must first be reset. See page 5 for instructions.

 
Fingerprint Setting



Note: If the indicator turns red, setup has failed. Please restart the fingerprint entry process.

⚠ To add more fingerprints, repeat the steps above. Up to 80 fingerprints can be enrolled.

Toggle Silent Mode



Locking & Unlocking the Gun Lock

To Unlock: Enter your password, scan a registered fingerprint, or use the mechanical key.

✓ Success: Indicator turns **green** with a short beep → Locking switch release

✗ Failure: Indicator turns **red** with two short beeps → Check and try again

To Lock:

Push the switch downward following the arrow direction → Switch locks and stays down



Reset the Gun Lock

Ensure device is unlocked → Quickly press the "RES" button 3 times (Indicator turns **green** with a long beep) → Factory reset complete →

To set up a new password or fingerprint, please refer to the instructions on page 4

Delete Fingerprint

Ensure device is unlocked → Press and hold "ADD" for 3 seconds (Fingerprint indicator turns **red** with a short beep) →

Place the finger to be deleted on the sensor (Fingerprint indicator turns **green** with a short beep) → Fingerprint deletion complete

Note: A flashing red power indicator light means deletion failed. Please try again.

Q & A

Q: Can the gun lock and tray be used separately?

A: Yes, the gun lock has a built-in rechargeable battery and can be used independently once fully charged.

Q: Why can't I unlock the gun lock with the password or fingerprint?

A: The battery may be depleted. Charge the gun lock for several hours and try again. Regular charging is recommended to ensure reliable operation.

Q: What should I do if I lose my key?

A: For security reasons, replacement keys are not available. Please store your keys in a safe and secure location.

Disclaimer

To the maximum extent permitted by law, Dongguan Huaxun Plastic Technology Co., Ltd is not responsible for indirect or consequential damages resulting from misuse, unauthorized modification, failure to follow instructions, or use with incompatible adapters, cables, or devices.