

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Statement

To maintain compliance with FCC'S RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm between the radiator and your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

The manual is general instructions, the pictures and functions in the manual should subject to the actual product.

The copyright of this manual belongs to the manufacture.

The trademarks and trade names mentioned in the specification belong to their respective right owners.If the contents of the manual are inconsistent with the actual product, the actual product shall prevail.

SMART PROJECTOR



Contents

Safety Information	2
Introductions	3
First Use	6
Focus	7
Keystone	8
Bluetooth Speaker	10

Safety Information

Before using this product, please read the following safety instructions and follow all general safety precautions. Any operation inconsistent with this manual may cause damage to the product.

! Attention

1. Only authorized technicians are allowed to disassemble this product, users are not advised to disassemble it by themselves.
2. Please be careful not to look directly at the lens, as doing so may cause damage to eyesight.
3. This product can only use the power adapter provided by the factory; using other adapters may cause damage to the product.
4. Do not place this product near cigarette butts, lighters or other open flames.
5. This product is for indoor household use, do not use it outdoors.
6. Do not use this product in humid environments (such as bathrooms).
7. The operating temperature range for this product is 0 to 35 (degree Celsius).
8. Do not use this product in high-temperature environments.
9. When using this product, please keep a safety distance of more than 10cm from the wall for the machine's ventilation and heat dissipation.

! Warning

 
1. It is prohibited to use the product in an environment with open flames or fragile items.
2. Do not touch wires, sockets or power adapters with wet hands.
3. It is prohibited to use the product in clean areas where flammable items are present.
4. Do not excessively bend the wires, or place heavy objects or sharp items on the machine.

Introductions

Package Include




Projector



Remote Controller





Power Cable

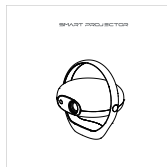

User Manual


Introductions

I/O Interface

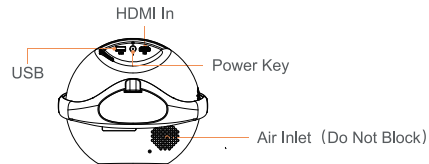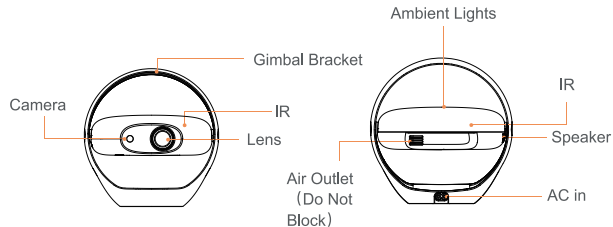

Introductions


Remote Control

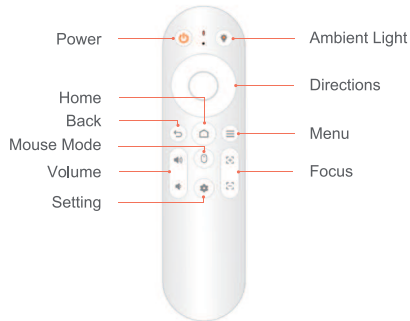

First Use

Step1

Take the projector out of the packing box, remove the packaging bag, place the projector on an ordinary horizontal table, plug in the power cord provided with the machine, and then turn on the AC power. At this point, the indicator light on the projector panel will turn white.

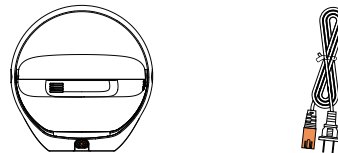

Step2

Press the power button on the projector or the power-on key on the remote control to start the projector. At this point, the lens lights up, the indicator light on the panel goes off, and the projector starts up and enters the startup wizard interface.

Step3

According to the startup guide, set the projection mode, language, connect to the Wi-Fi network, and enter the HOME page of the projector.


Focus

The machine is equipped with an auto-focus function. You need to turn on either "Auto Focus On Motion" or "Auto Focus On Startup" in the settings. Of course, you can also perform manual focusing using the 「Focus」 button on the remote control.




Keystone

The machine is equipped with functions such as automatic keystone correction, automatic screen alignment, and automatic obstacle avoidance. You need to turn on the corresponding options in the settings. Meanwhile, you can also manually correct the four points and four sides by remote control.

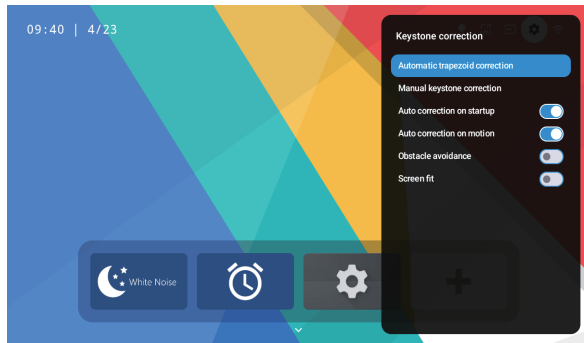


Ambient Light

1. Press the 「Ambient Light」 button on the remote control to open the ambient light menu and turn on the ambient light.
2. In the 「Light Mode」 menu, you can choose different lighting effects, including multiple themes that follow the sound changes.
3. You can also change the color, saturation, and brightness of the ambient light.
4. In BT speaker mode and white noise mode, press the 「Ambient Light」 button to switch the lighting theme, and long press to turn on and off the light.

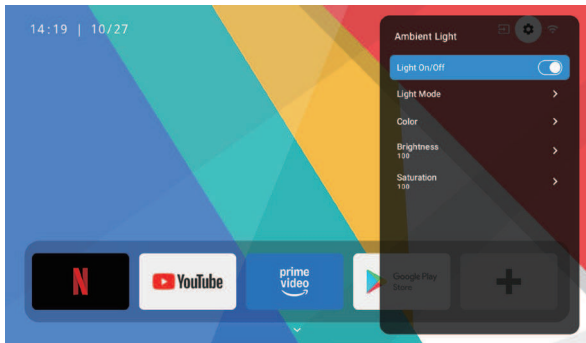


White Noise

1. Go to "My Apps" and open the "White Noise" app.
2. Select one of the 4 preset white noise themes. The device will play the corresponding audio and video, and the ambient light will turn on.
3. You can turn the ambient light on/off, turn off the projector screen, adjust brightness, and set a timer for automatic shutdown.
4. After turning off the projector screen, press the 「Ambient Light」 button on the remote control to switch white noise themes, and press the 「Power」 button to turn the screen back on.

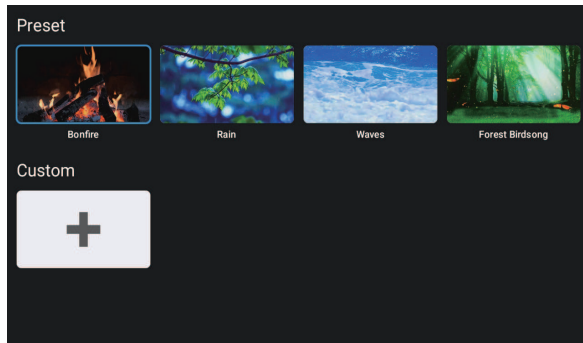

Wake-up

- 1.Go to "My Apps" and open the "Wake-up" app. (You can also press the 「Power」 button on the remote control to access it directly.)
- 2.On the app interface, add an alarm time, and set the alarm sound and lighting effects.
- 3.Do not unplug the power supply once the wake-up function is activated. When the alarm sounds, press any button on the remote control to stop it.

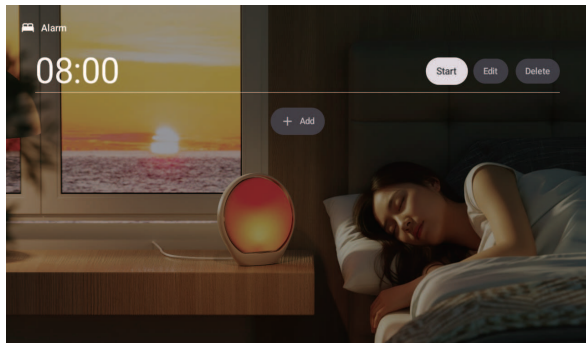

Bluetooth Speaker

- 1.Press the 「Power Button」 on the remote control to select 「Bluetooth Speaker」.
- 2.Find the device named 「Model No.」 in the Bluetooth settings of your mobile phone and click to connect.
- 3.After the Bluetooth connection is successful, the projector can play music from the mobile phone.
- 4.At this point, you can choose whether to turn off the projector's light source.

