


INSTRUCTION MANUAL

---BMR-GM-009 Blower Motor Resistor

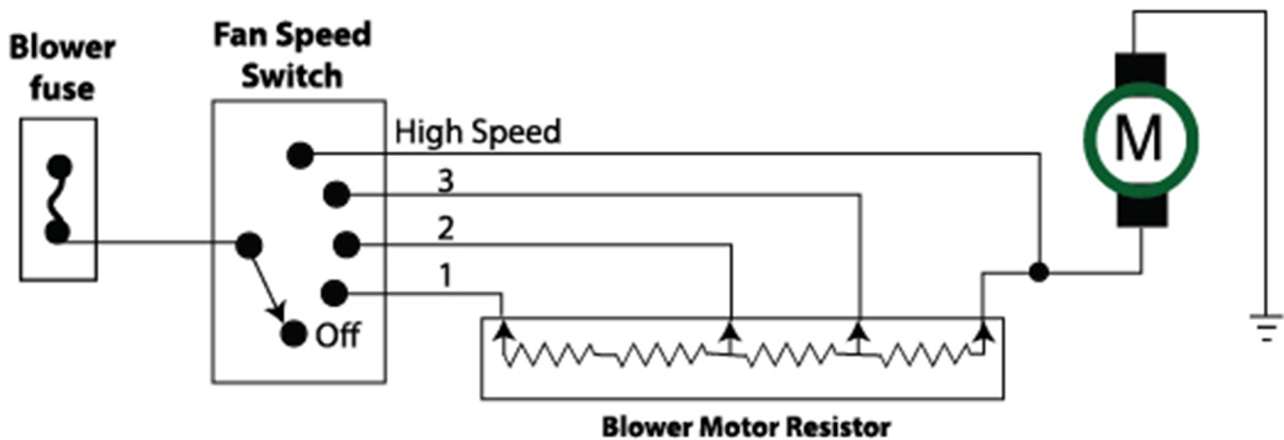

Blower Motor Wiring Diagram

WARNING

Electrical Shock Hazard

Disconnect electrical power before servicing.

Failure to do so can result in electrical shock.

Tools You May Need

- Ratchet
- New blower motor resistor
- Wire stripper
- Electrical tape
- Dielectric grease
- Connectors
- Screwdriver
- Wire cutter

Installation Guide

1. Locate the Blower Motor Resistor

The blower motor resistor is located right next to the blower motor. They are commonly found underneath the dashboard on the passenger side or in the engine compartment.

2. Take out the Blower Motor Resistor

Remove the components around the blower motor resistor, include the pigtail connected to the AC and the blower motor cooling duct.

Unscrew the bolts that secure the blower motor resistor in place. Use a ratchet with a short extension. Once the bolts are out, pull the blower motor resistor out.

3. Disconnect the Wires

Cut off the wires that are connected to the component with stripper or scissors that are made specifically to cut through wires.

4. Install New Blower Resistor

Apply dielectric grease to the housing of the blower motor resistor to prevent water from getting inside. Apply coating around the plastic to provide a sort of sealing to protect the component.

Place the blower motor resistor on the exact same place where it has been earlier removed. Use new screws to have it secured in its position.

Connect the pigtail.