



VEHICLE

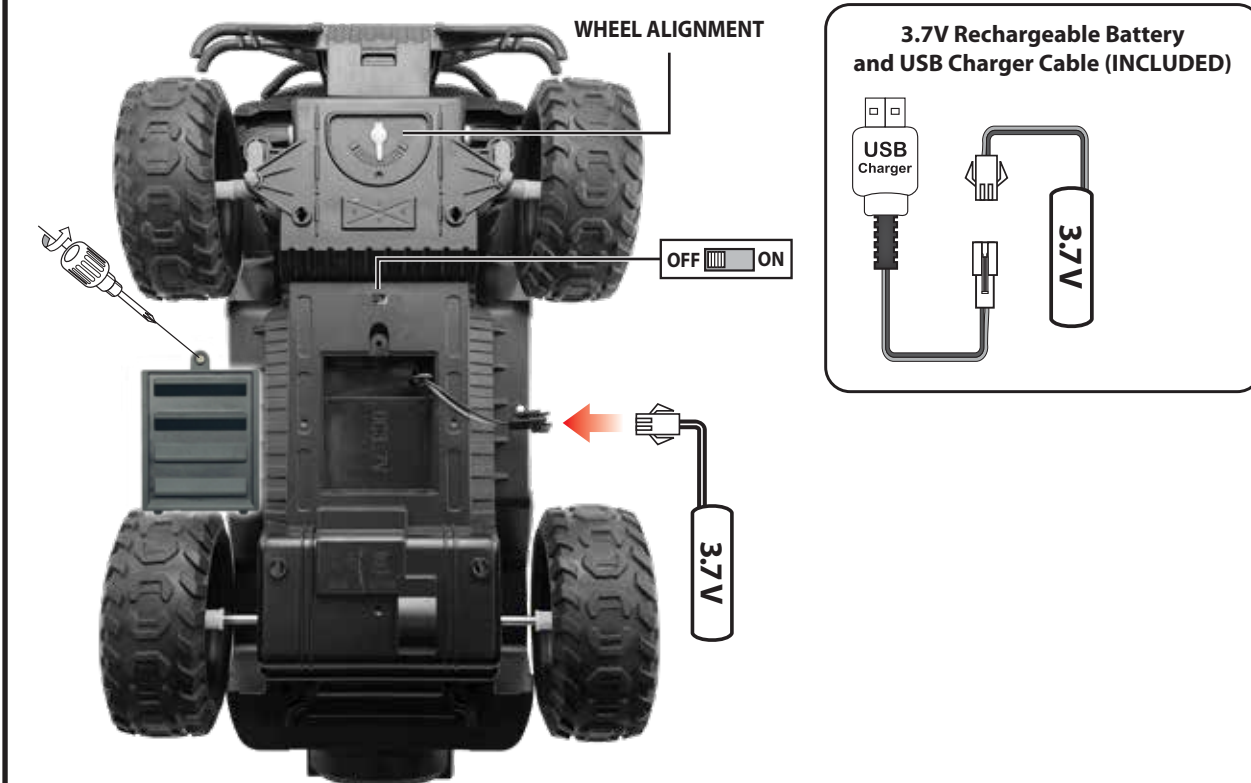

TRANSMITTER

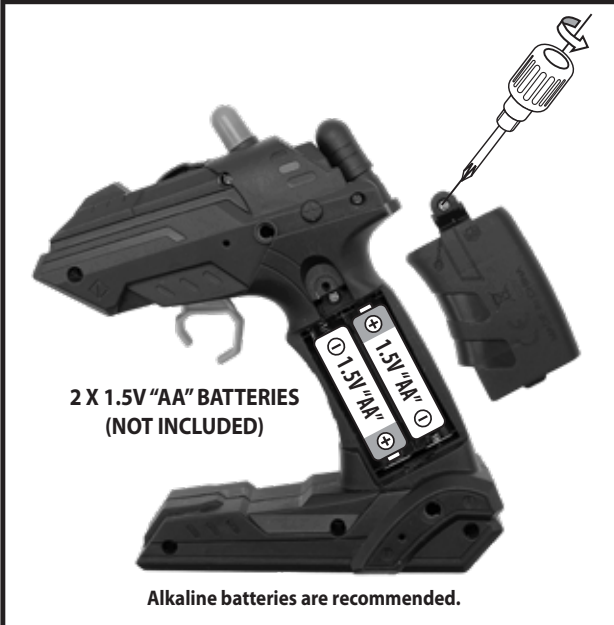

HOW TO OPERATE



BATTERY INFORMATION:

1. Charge the 3.7V battery using the USB chord (included)
2. Please charge for at least 3.5 hours on your first charge. A red light on the chord will be lit while charging.
3. When the light turns off, the battery will be fully charged.
4. Open the battery compartment under the vehicle. Insert and plug charged 3.7V battery into vehicle.
5. Once battery is plugged in, close the battery compartment.
6. Open the battery compartment on the bottom of the transmitter. Insert 2 x "AA" batteries (not included).
7. Close the battery compartment. Once the vehicle and the transmitter have working batteries, turn the "ON/OFF" buttons on both the vehicle and the transmitter to "ON" and you are all set to drive.

BATTERY CAUTION:

VEHICLE

1. The car contains rechargeable batteries that are replaceable.
2. There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
3. Do not dismantle, crush, incinerate or short-circuit battery.
4. Never expose battery to extreme temperatures or moisture.
5. Keep away from flammable materials and direct sunlight.
6. Only charge using the provided charger, cable, and/or adapters.
7. Rechargeable battery is only to be charged by an adult.
8. Adult Supervision of the battery while it is charging is required.
9. Allow battery to cool to room temperature before charging.
10. Charge on a non-flammable surface and keep away from flammable products.
11. Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
12. Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts, and in the event of such damage, they must not be used until the damage has been repaired.

TRANSMITTER

1. Rechargeable batteries are not recommended.
2. Alkaline batteries are recommended.
3. Non-rechargeable batteries are not to be recharged.
4. Rechargeable batteries are to be removed from the toy before being charged.
5. Rechargeable batteries are only to be charged under adult supervision.
6. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
7. Do not mix old and new batteries.
8. Only batteries of the same or equivalent types as recommended are to be used.
9. Batteries are to be inserted with the correct polarity.
10. The supply terminals are not to be short-circuited.
11. If batteries are loose, bend out the contacts for a tight fit.
12. Exhausted batteries are to be removed from the toy and be disposed of immediately; never dispose of batteries in fire.
13. If storing product for long periods of time, make sure to remove batteries.
14. Check the product periodically for signs of damage to electrical parts; do not play with product until damage has been properly assessed.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.



Don't put in trash.
Recycle or dispose as hazardous waste.

Batteries should be installed by adults only.

Please keep this packaging for future reference.
Colors, designs & contents may vary.
All rubber bands, plastic and wire ties, as well as tags, are not part of this toy and should be discarded for your child's safety.
Remove wire ties before giving this toy to your child.



Grandex Int'l Development Ltd.
East Ocean Ctr., Granville Rd.,
TST, Hong Kong.

GDX02010626S

NO. 61439

MADE IN CHINA



8 8378861439 9