

Quick Start Guide

 
G100Pro



English

1. Product Introduction

1.1 Packing List



Printer
×1



Quick Start Guide
×1




Type-C Cable
×1



Single-sided
Thermal Paper×1

1.2 Printer Parts Instruction



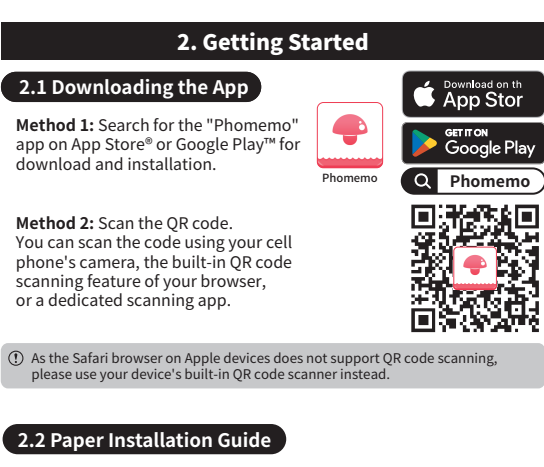


- ❗ To ensure better printing results, make sure to close the top cover tightly.
- If paper jam occurs, you can open the top cover by pushing up the "△" symbols on both sides and remove the jammed paper.

2. Getting Started

2.1 Downloading the App

 Method 1: Search for the "Phomemo" app on App Store® or Google Play™ for download and installation.

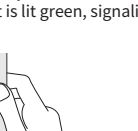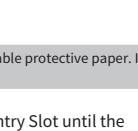


Method 2: Scan the QR code. You can scan the code using your cell phone's camera, the built-in QR code scanning feature of your browser, or a dedicated scanning app.


- ❗ As the Safari browser on Apple devices does not support QR code scanning, please use your device's built-in QR code scanner instead.

2.2 Paper Installation Guide

- 01** Long press the Power Button for 3 seconds until the Indicator Light is green to power up the printer.

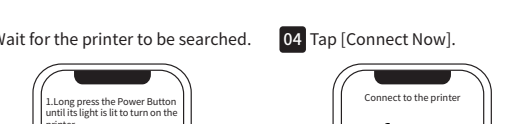


- 02** Double-click the power button to remove the printer protective paper.

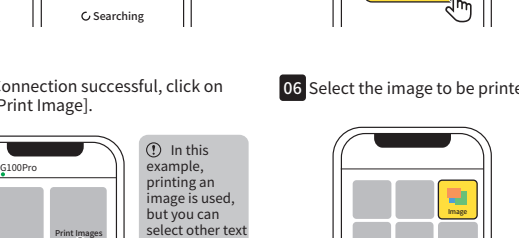

- ❗ Due to different models, your printer may not contain the disposable protective paper. If so, please skip this step.

- 03** Insert the paper with the text side up into the Paper Entry Slot until the printer automatically pulls it in and the Indicator Light is lit green, signaling paper insertion is complete.

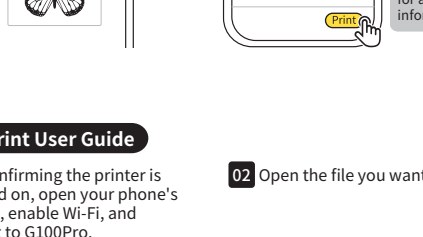


- ❗ The printed content will not appear on the side that reads "non-printing side".

2.3 App Usage Guide


- 01** Open the "Phomemo" app.




- 02** Grant permissions.

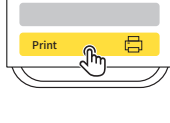


- 03** Wait for the printer to be searched.

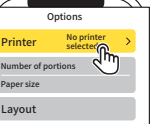


- 04** Tap [Connect Now].

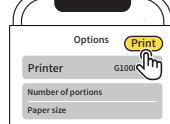

- 05** Connection successful, click on [Print Image].

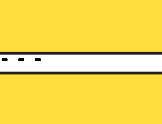


- 06** Select the image to be printed.

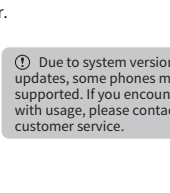


- ❗ In this example, printing an image is used, but you can select other text for printing based on your actual needs.

- 07** Edit your first image, and tap [Print] after you finish editing.

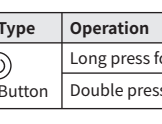


- 08** Confirm the preview of the image, and tap [Print].

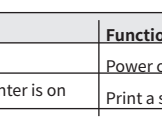


- ❗ The software interface is for reference only. Please refer to the actual operating page for accurate information.

2.4 AirPrint User Guide


- 01** After confirming the printer is powered on, open your phone's settings, enable Wi-Fi, and connect to G100Pro.

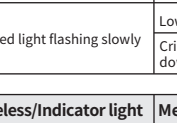


- 02** Open the file you want to print.

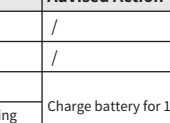


- 03** Click the [] in the lower-left corner.

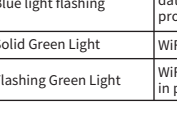


- 04** Click [Print]

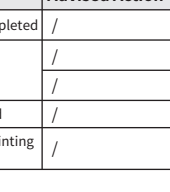


- 05** Select your printer.

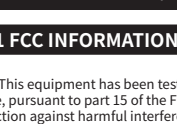

- 06** Click [Print]

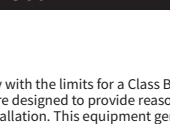

- 07** Printing complete. Remove the printed paper.

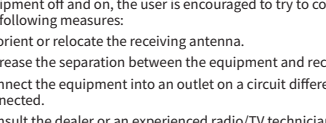

- ❗ Due to system version updates, some phones may not be supported. If you encounter issues with usage, please contact customer service.

3. Additional Instructions

3.1 Button Instructions

Button Type	Operation	Function
	Long press for 3s	Power on/off
	Double press when printer is on	Print a self-test page

3.2 Indicator Light Instructions

Status/Indicator light	Meaning	Advised Action
	Functioning	/
	Top Cover open	Close Top Cover
	Printer overheated	Pause printing for 5-10 min
	Critical battery level, shutting down soon	Charge battery for 1h (or at least 20 min for quick usage)
	Battery depleted	Charge for 4h

Charge/Indicator light	Meaning	Advised Action
	Charging	/
	Fully charged	/
	Low battery	Charge battery for 1h
	Critical battery level, shutting down soon	

Wireless/Indicator light	Meaning	Advised Action
	Bluetooth connection completed	/
	Bluetooth receiving data/Bluetooth printing in progress	/
		/
	WiFi connection completed	/
	WiFi receiving data/WiFi printing in progress	/

4. Information to User

4.1 FCC INFORMATION (U.S.A.)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important: Change or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

4.2 ISED NOTICE (Canada)

- English:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

IC RF exposure statement:
The device has been evaluated to meet general IC RF exposure requirement.
The device can be used in portable exposure condition without restriction.

- French:

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

IC Déclaration d'exposition aux RF:
L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF d'IC.
L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.

WARNING

Please pay attention to electrical safety. Do not disassemble, crush or puncture the battery. This product is not a toy.

Bitte achten Sie auf elektrische Sicherheit. Zerlegen, zerquetschen oder durchstechen Sie die Batterie nicht. Dieses Produkt ist kein Spielzeug.

Veuillez noter la sécurité électrique. Ne pas démonter, écraser ou piquer la batterie. Ce produit n'est pas un jouet.

Si prega di prestare attenzione alla sicurezza elettrica. Non smontare, schiacciare o perforare la batteria. Questo prodotto non è un giocattolo.

Preste atención a la seguridad del consumo de electricidad. No retire, triture o pinche la batería. Este producto no es un juguete.

Lütfen elektrik güvenliğine dikkat edin. Bateriyi dağıtma, yıkma veya yumruklama. Bu ürün oyuncak değil.

Var uppmärksam på elsäkerheten. Ta inte isär, krossa eller punktera batteriet. Den här produkten är ingen leksak.

Let op elektrische veiligheid. Demonteer, verpletter of prik de batterij niet. Dit product is geen speelgoed.

Proszę zwrócić uwagę na bezpieczeństwo elektryczne. Nie demontuj, nie miażdż ani nie przebijaj akumulatora. Ten produkt nie jest zabawką.

Special Notes

The company assumes full responsibility for the revision and explanation of this manual, exercising utmost diligence to guarantee its accuracy. Nevertheless, please note that any technical improvements to the product may not be separately notified, and that the images of the product, accessories, software interfaces, etc. in this manual serve solely as illustrations and references. Due to product updates and upgrades, the actual product may vary slightly from the images. Please refer to the physical product for accurate representations.