


DW002

Tabletop Dishwasher

User Manual

SKU: DW002-5WH-USZX
DW002-5AWH-USZX

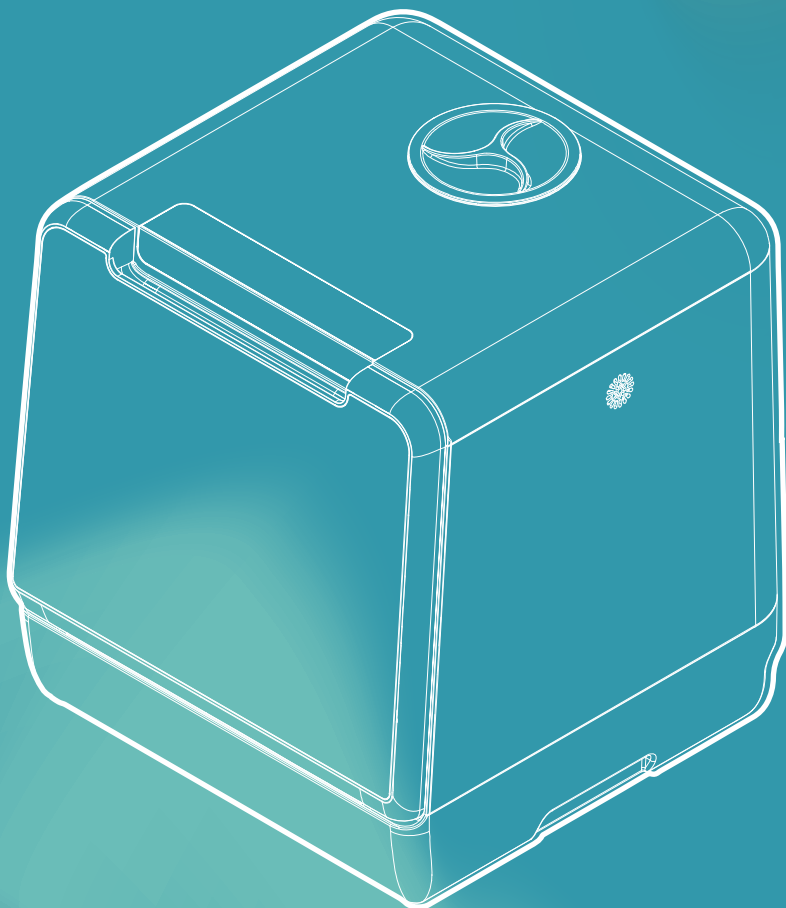

support@homyd.com



1-833-632-0897

CONGRATULATIONS

Dear Customer:

Welcome to the our family. Thank you for purchasing one of our products.

Our goal is to provide you with superior service. If there is anything missing from or wrong with your order, or if you have any questions about using our product, PLEASE contact us.

Email: support@homyd.com

Our team is available 24/7 to address your questions, comments, and concerns. Your satisfaction is our ultimate goal. We want to make everything right so you'll share your positive experience with other shoppers .

If you experience any problems, please send an email to support@homyd.com.

Our mission:

To be the most trusted appliance brand.

To create practical, compact appliances that better your life.

Contents

1. How To Use



Product Introduction	01
Control Panel	02
Installation	03
Tableware Loading	05
Operation	07
Maintenance & Clearance	10

2. Maintenance And Repair

Function	11
Faults & Problems	13
Specification	17
Rohs Requirement	18
Safety & Warning	19
Important Safety Instructions	21
	23

PRODUCT INTRODUCTION


Machine

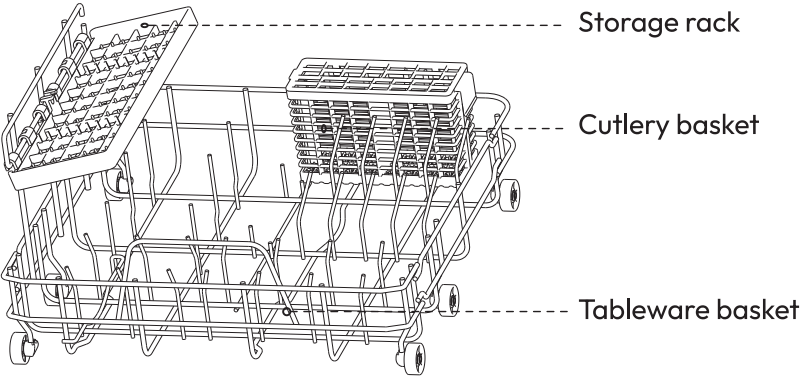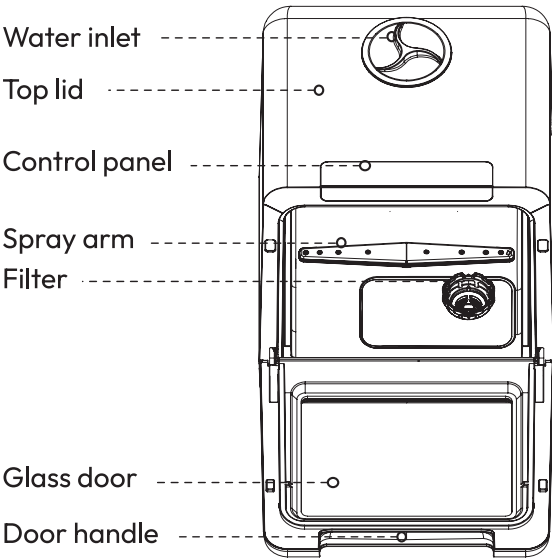

Parts list



CONTROL PANEL

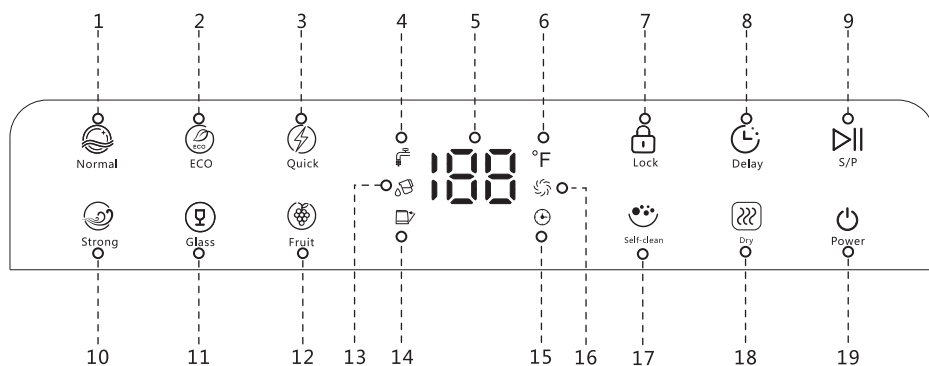

1. Normal
2. ECO
3. Quick
4. Tap mode
5. Display screen
6. Temperature
7. Child lock
8. Delay
9. Start/Pause
10. Strong
11. Glass
12. Fruit
13. Tank mode
14. Door open
15. Timer
16. Dry indicator
17. Self cleaning
18. Dry
19. Power on/off

INSTALLATION

1. Inlet Hose Installation


01. Connect the machine

Insert inlet hose elbow into the water inlet behind machine and tighten the screw.


02. Connect the tap

A, B, C three options for tap connection, but Options B and C require a hole to be made on or behind cabinet in order the hose can go through cabinet.

NOTE: We offer 59 inch standard 3/4" GHT-11 hose connectors.

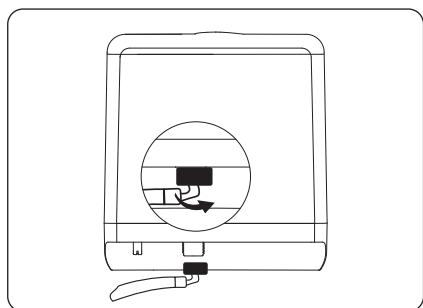

connect machine

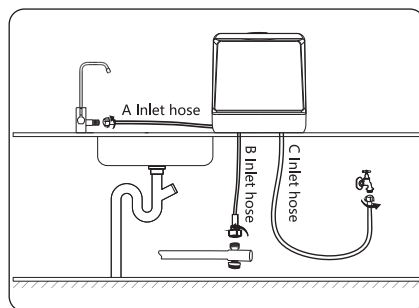

connect tap


2. Drain hose installation

01. Connect the machine


You need to insert drain hose elbow to the water outlet behind machine and tighten the collar.

02. Connect the sewer

A, B, C three options for sewer connection. B and C options need you to make a hole on or under cabinet so that the hose can pass through the cabinet.

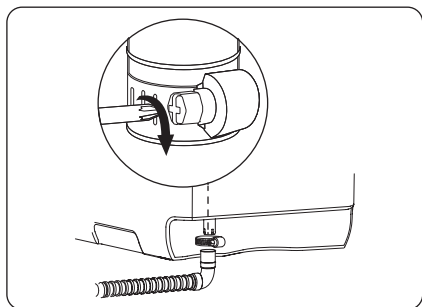

connect machine

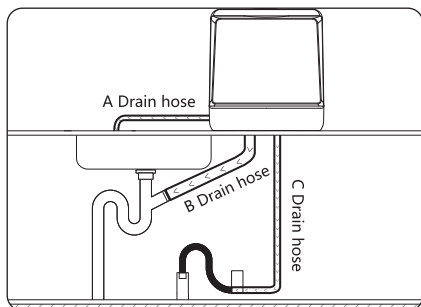

connect sewer

TABLEWARE LOADING


1. Please remove large food residues on tableware to prevent the water hose from becoming blocked.



2. Please place the tableware according to the picture on the right.

Note:

- In order to fully clean tableware, please tilt tableware internally or put place the soiled side facing down.
- A place setting shall consist of one cup, one saucer, one dinner plate, one bread and butter plate, one fruit bowl, one iced tea glass, one dinner fork, one salad fork, one knife, and two teaspoons.

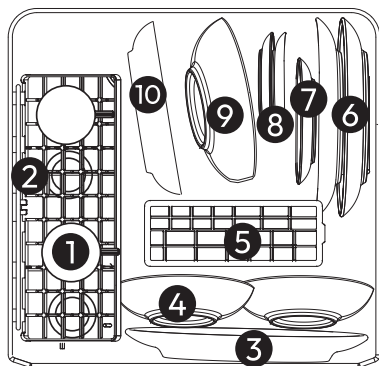


-  ① cup
-  ② glass
-  ③ serving platter (oval)
-  ④ bread and butter plate
-  ⑤ cutlery
-  ⑥ dinner plate
-  ⑦ fruit bowl
-  ⑧ saucer
-  ⑨ serving bowls
-  ⑩ serving platter (round)

Cleaning Program: ECO

In the ECO washing program, add 8 grams of detergent and then start the

washing cycle. When there are 18 minutes left before the washing finishes, pause the washing, open the door, and add 2 milliliters of rinse aid. Then close the door and continue the washing until it finishes.

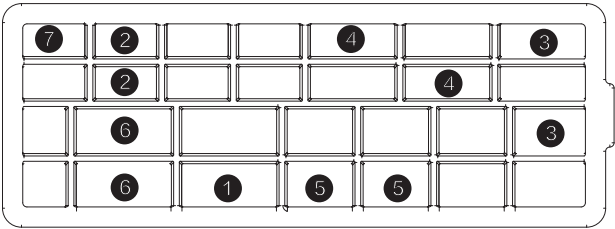

1. serving fork



6. Dessert spoon



2. Soup spoon



7. Gravy ladle



3. Fork



4. Knife




5. Tea spoon

OPERATION

1. Power on

Plug in and press “  ” for 1 second to turn on the machine.


Note: During washing program running, touch “  ” for 3 seconds to force the machine to turn off.

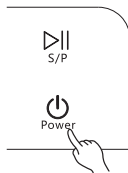

2. Add detergent

Open the door, add moderate detergent powder, or 1 pc detergent block into the machine, close the door.

Note: No detergent when fruit washing. The dosage: 8-10g for each washing circle.

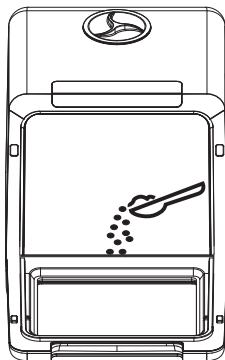

3. Run program

Select the program required by the control panel, tap the “  ” button on the control panel to run the program. The dishwasher will automatically detects whether tap water is connected after startup.



Note:

- Check tap or tank model automatically after running program. If the indicators “ ” “ ” become red, you need open tap or fill tank with water.
- After 5 times checking, there is still no water supply, the machine will enter standby.
- Touch “ ” to force to pause machine to add tableware during washing.
- Touch “ ” for 3 seconds to quit program, the machine will drain, then turn off.
- Select the wash program, touch “ ” button to add 73 hours circular wind to keep air fresh inside of the machine.
- Press “ ” + “ ” button for 3 seconds to start the forced drainage function.
- Fill the water tank before each use of fruit washing program.


4. Wash

The machine has two water supply modes, tap mode and tank mode.


Fill water by hand (for tank mode) or connect tap (for tap mode).

Note:

- If the indicator “ ” is white, means tank mode.
- If the indicator “ ” is white, means tap mode.
- If tank is full, the machine will switch into tank mode automatically.
- Fill 3 cups of water into tank. DiDiDi will be sound if tank is full, the indicator “ ”k will become white.
- If tap mode, please open water tap.

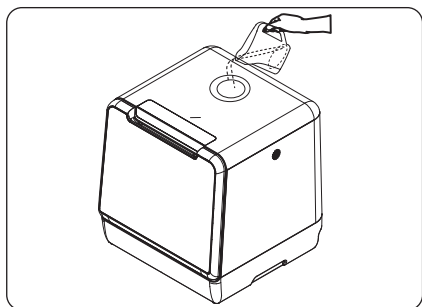

Fill water by hand
(For tank model)

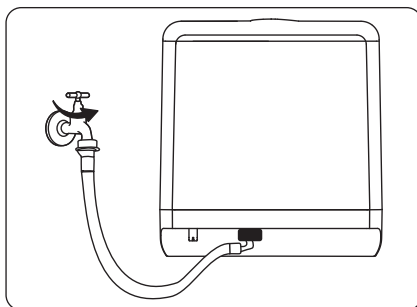

Connet tap
(For tap model)

5. Child lock

1. The child lock function can avoid the danger caused by children's misoperation.
2. In the standby and running state, long press the “  ” button to lock or unlock the child.
3. When the child lock icon on the display is steady on, the child lock is on. The child lock icon on the display is extinguished, and the child lock is removed.
4. In the child lock state, other keys are invalid except the child lock button.



6. Delay

1. After selecting the washing program, touch the “  ” button to display 1H, then touch the “  ” button. Time will rolling from 1H to 18H.
2. Hold down the “  ” button for 3 seconds to cancel the reservation function and switch the display to standby state.
3. After confirming the reservation time, press “  ” to start the reservation process.

7. Dry Mode


Turn on power button, touch “dry” and hold 3 seconds to start separate dry function.

MAINTENANCE & CLEARANCE

1. Clean Filter


01. Disassemble

Rotate anticlockwise to disassemble the filter set, which have 3 parts, filter mesh, main filter and fine filter.

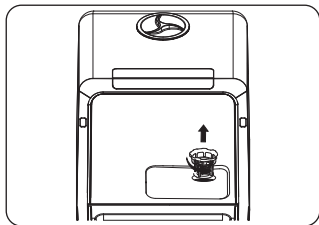


02.Clean

Use water to flush and brush each of filter parts.

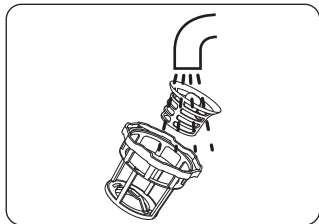

03.Assemble


After cleaning, rotate clockwise to close the filter set.

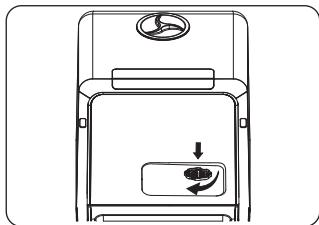

2. Clean spray arms


01. Disassemble

Open the door, take out the basket, then pull out up and down spray arm.

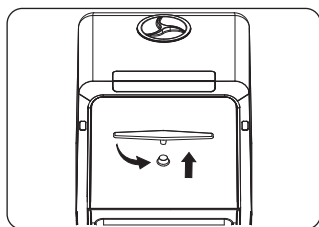


02. Clean

Use water to flush and brush each spray arm, use tools with sharp point, like needle to clean holes if needed.

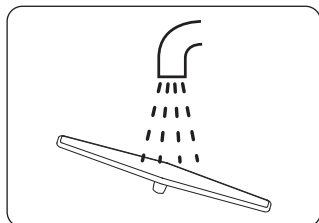

03. Assemble

After cleaning, please press each arms into positions, make sure the arms can move smoothly.

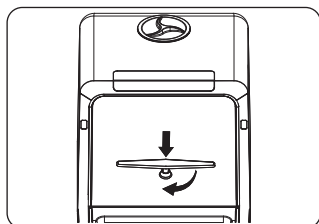

FUNCTION

Program	Program execution	Time	Detergent	Temperature	Drying time	Storage (if selected)
Normal	Hot water washing Cold water rinsing Cold water rinsing Hot water rinsing	69Min	8g	Washing 55°C (131°F) Rinsing 68°C (154°F)	60Min	Circulating fresh air 73 hours
Quick	Hot water washing Cold water rinsing Hot water rinsing	29Min	8g	Washing 50°C (122°F) Rinsing 62°C (144°F)	60Min	Circulating fresh air 73 hours
Strong	Hot water washing Hot water rinsing Cold water rinsing Hot water rinsing	89Min	12g	Washing 55°C (131°F) Rinsing 55°C (131°F) Rinsing 75°C (167°F)	60Min	Circulating fresh air 73 hours
ECO	Hot water washing Cold water rinsing Hot water rinsing	59Min	8g	Washing 55°C (131°F) Rinsing 68°C (154°F)	60Min	Circulating fresh air 73 hours
Fruit	Cold water rinsing Cold water rinsing	19Min	/	/	/	/
Self-clean	Hot water washing Cold water rinsing Cold water rinsing Hot water rinsing	79Min	8g	Washing 55°C (131°F) Rinsing 68°C (154°F)	60Min	Circulating fresh air 73 hours
Glass	Hot water washing Cold water rinsing Hot water rinsing	50Min	8g	Washing 55°C (131°F) Rinsing 68°C (154°F)	60Min	Circulating fresh air 73 hours
Dry	/	/	/	/	60Min	Circulating fresh air 73 hours

1. In addition to fruit washing, other washing procedures can be superimposed by storage function, without superimposed “ ” half bright, superimposed “ ” full bright. Before entering this function, you can cancel or overlay it at any time. After entering “ ”, “ 5ㄷ ” is displayed.
2. In the startup state, long press the “ ” key to access the function separately.

FAULT & PROBLEM

1. Fault codes

Code	Fault	Solution
E2	Draining	1. Check drain pipe, be sure the pipe is straight, no bending. 2. Power off, check if anything block filter or drain pipe. 3. Be sure all pipes are not blocked by something.
E3	Overflowing	Tilt the machine to 30-45 degree, let water flow out from base of machine, then restart machine. If still fault, contact our serviceman.
E4	Temperature	Restart machine, if still fault, please contact our serviceman.
E5	Message	
E6	Heating	
E7	Pressure	

2.Problem (1)

Problem	Reason	How to deal with
Tableware is not clean	Incorrect tableware loading	Be sure enough gap between tableware.
	Spray arm trapped	Be sure nothing trap the spray arm.
	Blocked spray arm	Clean spray arm.
	Blocked filter	Clean filter set.
	Incorrect filter installation	Correctly assemble filter set.
	Incorrect program selection	Select appropriate washing program.
	No detergent	Add detergent (block/powder/liquid).
Machine did not work	Water shortage	Add water till the indicator light off.
	Door do not close fully	Check the door.
Can not select program	Be washing	Re-select program after stop in-progress program or wait in-progress program finishing.

2.Problem (2)

Problem	Reason	How to deal with
Tableware is not dry	Inappropriate program	Select appropriate program.
	Poor dry effect for plastic tableware	Wipe to dry these plastic tableware by hand.
	Incorrect tableware loading	Correct tableware setting in accordance.
	Drying program no finishing	Wait the dry program finishing.
	Wooden tableware	Wipe to dry these wooden tableware by hand.
Discoloration of plastic tableware	Over high washing temperature	Select program with lower temperature.
Detergent left	Trapped spray arm, no water flush detergent	Be sure spray arm move smoothly.
	Detergent with poor quality	Use qualified detergent.

2.Problem (3)


Problem	Reason	How to deal with
A large amount of foam	Use incorrect detergent	1. Use special detergent for dishwasher; 2. Open machine, wipe out foam by hand; 3. Fill 2-3L water into machine, select any program, after 1-2 min, the foam will be drained, can repeat the process if needed.
Abnormal sound in the machine	Spray arm knock tableware	Load the tableware correctly
	Tableware moves slightly	Fix tableware before washing.
Egg custard left on the tableware	Protein solidification	Wash the tableware with egg custard by hand.
Water drops left inside of machine	Drying time is not enough	Select “Dry” program.

SPECIFICATION

Machine

Item	Specification
MODEL NO.	DW002-5WH/DW002-5AWH
VOLTAGE	120V~
HZ	60Hz
POWER	950W
INLET PRESSURE	0.03~1MPa
WATER CONSUMPTION	5L
PLACE SETTING	2 sets
NET WEIGHT	29.76 lb
MACHINE SIZE (WXDXH)	16.85 x 16.73 x 18.03 in
DRY	Fan-Assisted Dry / Heated Dry

Electrical Drawing

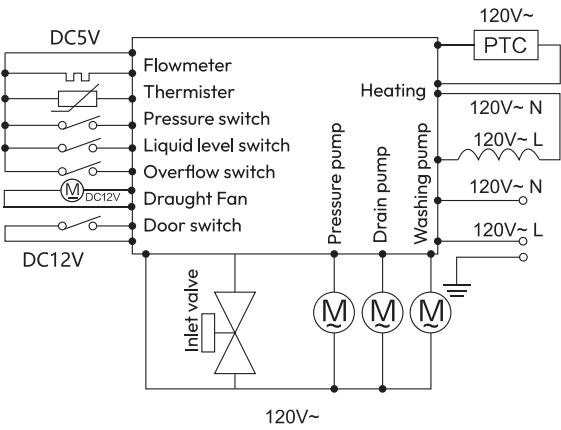

ROHS REQUIREMENT

Components	Pb	Hg	Cd	Cr6+	PBB	PBDE
Plastic parts	O	O	O	O	O	O
Metal parts	O	O	O	O	O	O
Rubber parts	O	O	O	O	O	O
Screws	O	O	O	O	O	O
Stickers	O	O	O	O	O	O
Heat plate	O	O	O	O	O	O
Wire	O	O	O	O	O	O
Water pumps	O	O	O	O	O	O
PCB, Fan	X	O	O	O	O	O
Water valve	O	O	O	O	O	O
Parts of others	O	O	O	O	O	X

The table is made according to EU RoHS Directive (EU)2015/863 amending Annex II to Directive 2011/65/EU-Lead.

O: indicates the hazardous substance contain is below the limitation of standards.

X: indicates the hazardous substance contain is over the limitation of standards, but fit for the RoHS order.

The information of the table is offered by suppliers. Under the present skills, we will keep the lowest level of hazardous substance in all of machine parts. We promise that we will try our best to lower the level of hazardous substance in the machine through improving the technologies constantly.

SAFETY AND WARNING

Warning

1. Power socket must be grounded, avoiding possible electric leakage or shock.
2. Don't share one socket with other appliance avoiding to avoid fire.
3. Any of new parts or power line will be changed by serviceman after damages.
4. Dispose of the machine in a environmentally friendly manner under local regulations.
5. Do not place the machine in the environment under 32°F, like outside door in cold weather.
6. Please use the salt and detergent which is special for dishwasher.
7. Don't place and use the machine in the platform which is not stable, wet, smooth, inflammable avoiding to any damage.
8. Don't place and use the machine within 150mm far from gas stove or heater.
9. Don't place any heavy object on the door when door open avoiding to the machine turn over.
10. Don't splash water into the machine to electric shock or fire.
11. Don't drink the water in the machine.
12. Don't let children operate the machine independently avoiding to any dangerousness.

Precaution

1. Don't open the door when washing avoiding hot water flying out causing any hurts.
2. Don't touch or block the side air outlet.
3. Don't lift or move the machine when washing.

4. Don't face person avoiding to any hurts when open door.
5. Please stop washing, power off, and close tap when any fault occur.
6. Please check and clean the machine time by time in order to do the best washing effect.
7. Please fix the drain hose avoiding to the stained water outflow.
8. Don't forcibly pull power cord, drain hose, press cutlery tray avoiding any damage.
9. Don't use wet hand to operate the machine avoiding electric shock.
10. Children should be far away from the chemical material such as salt, detergent avoiding to any hurt.

IMPORTANT SAFETY INSTRUCTIONS

Use only detergents or wetting agents recommended for use in a dishwasher and keep them out of the reach of children.

When loading items to be washed: locate sharp items so that they are not likely to damage the door seal; load sharp knives with the handles up to reduce the risk of cut-type injuries.

Do not wash plastic items unless they are marked “dishwasher safe” or the equivalent. For plastic items not so marked, check the manufacturer's recommendations.

Do not touch the heating element during or immediately after use.

Do not operate your dishwasher unless all enclosure panels are properly in place.

Do not tamper with controls.

Do not abuse, sit on, or stand on the door or dish rack of the dishwasher.

To reduce the risk of injury, **Do not** allow children to play in or on a dishwasher.

Under certain conditions, hydrogen gas may be produced in a hot-water system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot-water system has not been used for such a period, before using the dishwasher turn on all hot-water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.

Remove the door to the washing compartment when removing an old dishwasher from service or discarding it.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is installed and grounded in accordance with all local codes and ordinances.

WARNING - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt whether the appliance is properly grounded.

Do not modify the plug provided with the appliance; if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

WARRANTY AND SERVICE

This product is covered by a 12-month product and warranty from the date of initial purchase. In case of any problems, please contact the Customer Service Center via the contact information listed in this User Guide.

Our warranty covers replacement products by repairing or replacing any defective parts and labor necessary to bring it up to its original specifications, and we can provide a replacement product instead of repairing the defective product. Our sole obligation under this warranty is limited to such repair or replacement.

Any claim will require a receipt showing the date of purchase, so please keep all receipts in a safe place.

While greatly appreciated, product registration is not required to activate any warranty and product registration does not eliminate the need for proof of original purchase. The warranty will be void if repairs are performed by a non-authorized third party and/or if spare parts other than those provided by us are used. These are the general terms of our warranty service, but we always urge our customers to contact us (support@homyd.com) with any questions they may have, regardless of the terms of the warranty.



support@homyd.com



1-833-632-0897