

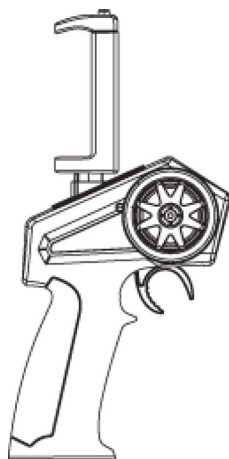


1. Package Contents

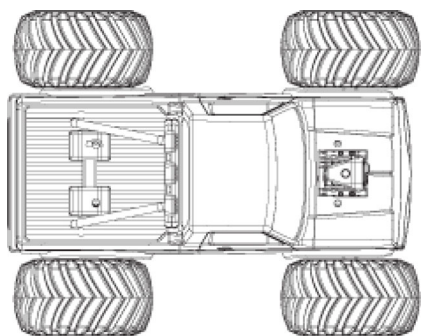

Remote Control

666-886WA

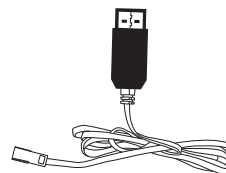


Charging Cable



7.4V

Rechargeable
Battery

2. A Quick Look at Your Remote Control

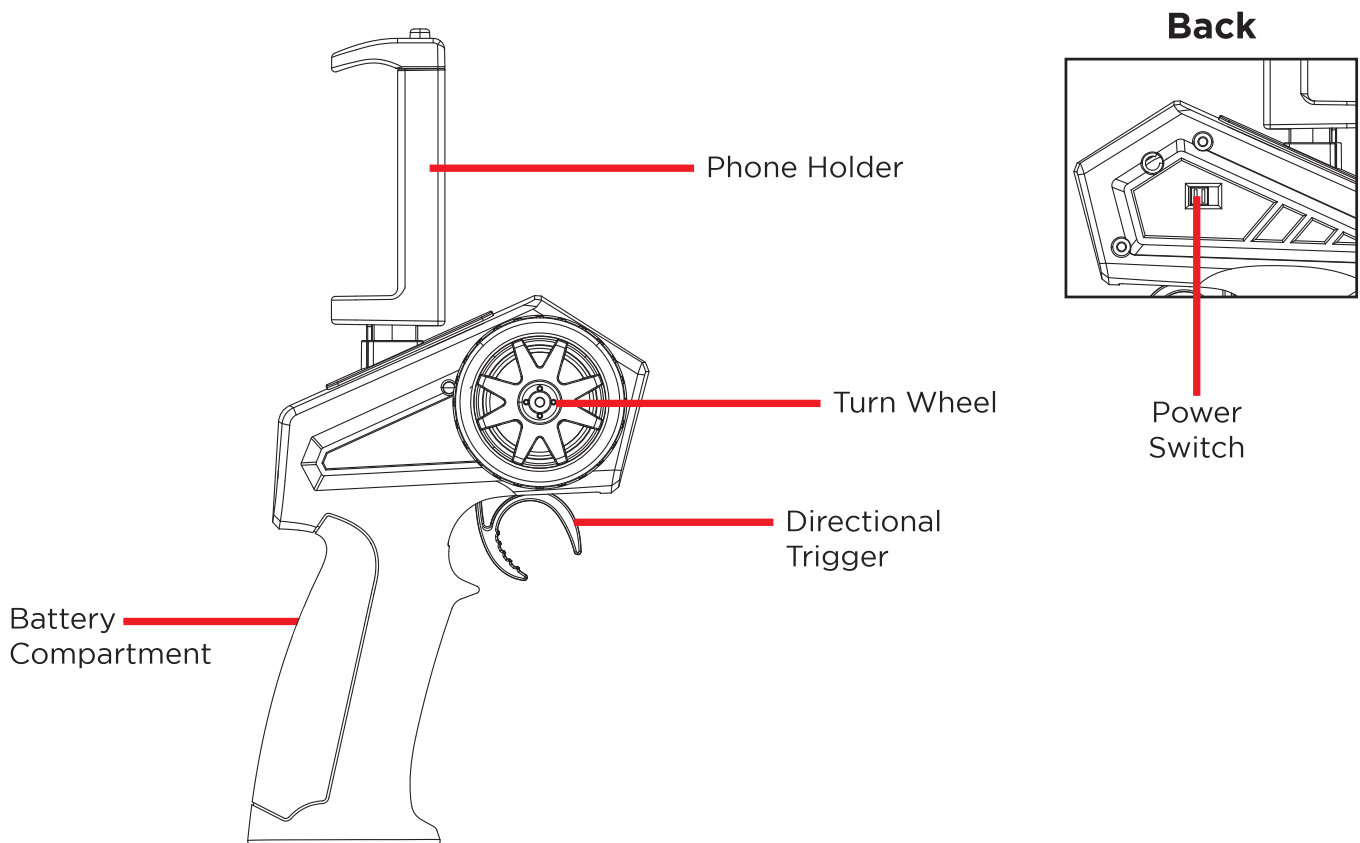


3. Inserting Batteries Into Your Remote Control

Open up the battery compartment located on the rear of your remote control.

Insert 2 AA 1.5V batteries, ensuring they are inserted with the correct polarity (+, -) as shown in the battery compartment.

Once the batteries are inserted, put the battery compartment cover back on, making sure it closes securely.

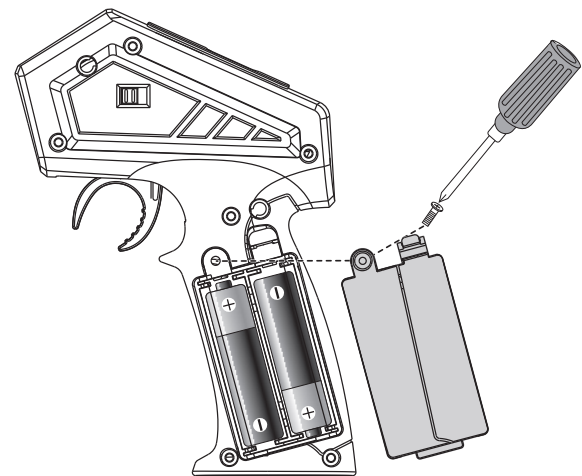


-Do not mix rechargeable and non-rechargeable batteries.

-Do not mix old and new batteries or different types of batteries.

-Remove exhausted batteries and dispose of them based on the rules of your local municipality.


-Remove the batteries from your remote control if it will not be in use for an extended period of time.

4. A Quick Look at Your Vehicle

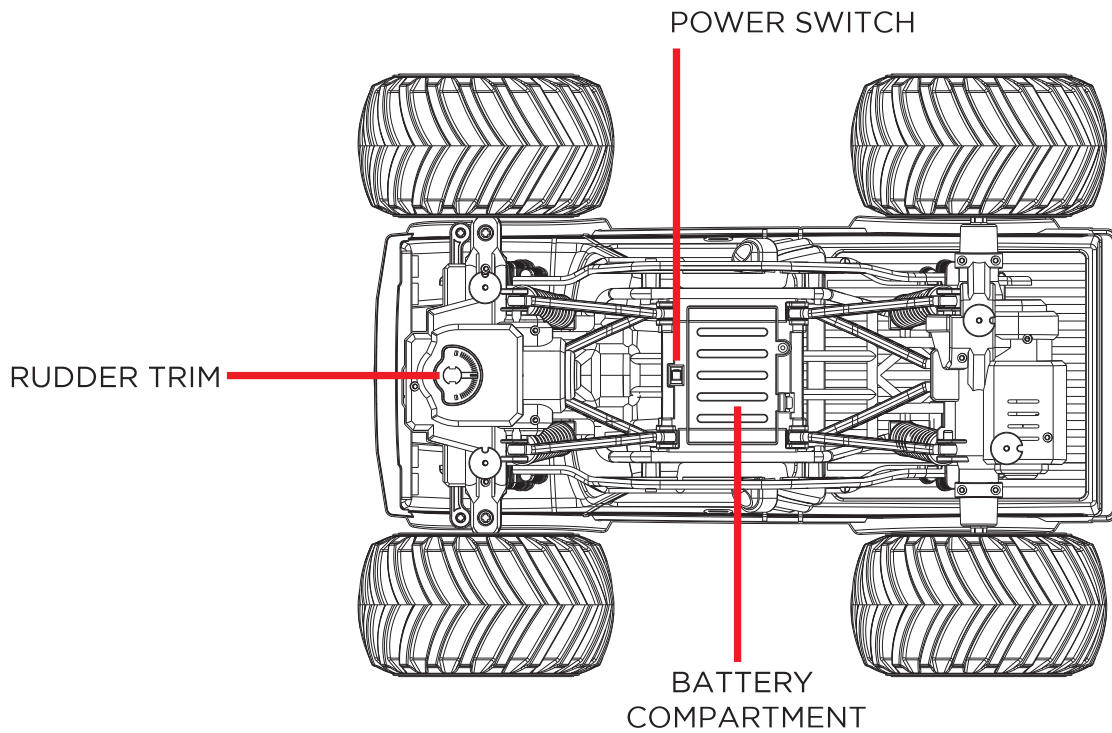


BOTTOM VIEW

5. Charging Your Vehicle's Battery

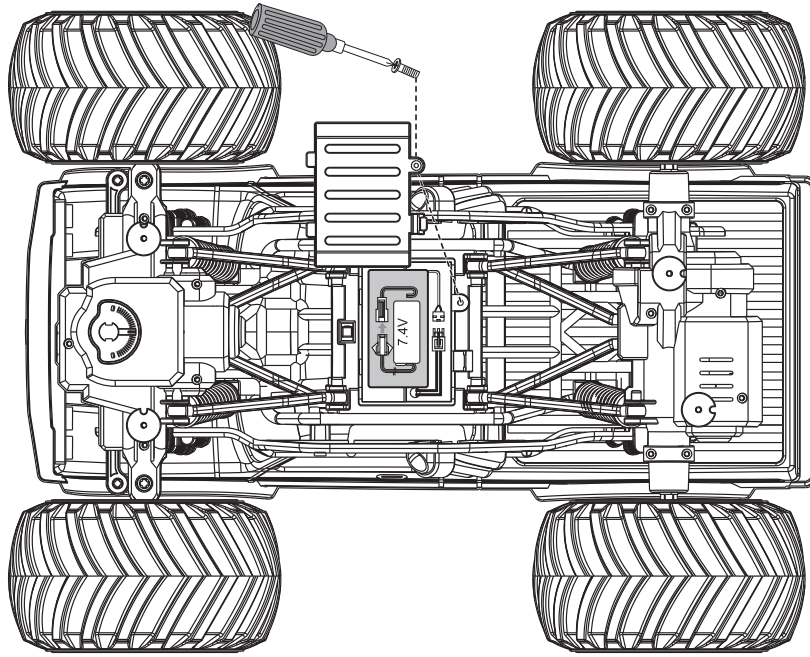

BOTTOM VIEW

Open the vehicle's battery compartment using a screwdriver (not included).

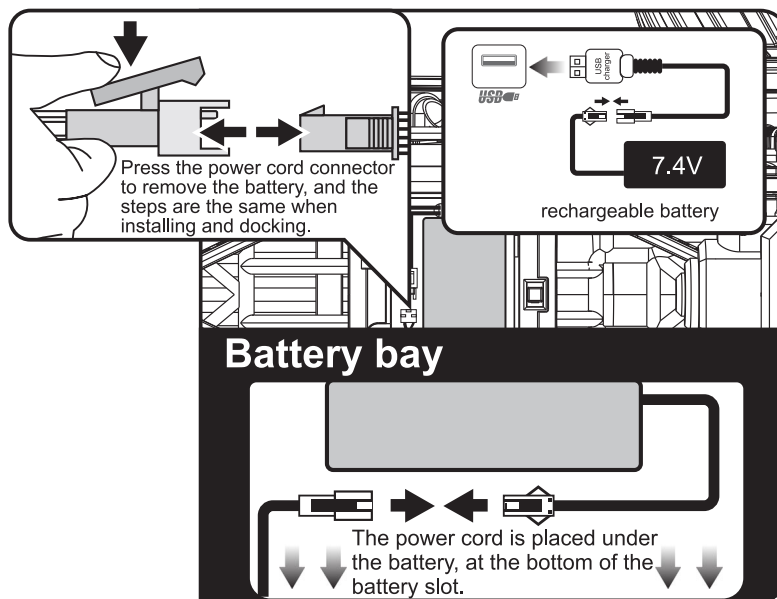


Press the power cord connector as shown in the image above to remove the battery. To reconnect the battery, press the power cord again and reinsert it. Connect the battery to the included charging cable. Connect the charging cable to a compatible USB charging adapter (not included).

Once fully charged, connect the battery cable to the vehicle's battery compartment cable. Then put the battery back in the compartment, ensure the power cord is placed under the battery at the bottom of the battery slot, and close the cover.

6. Setup and Calibration


Powering On Your Vehicle

Slide the Power Switch on the bottom of your vehicle to the ON position to power it on.

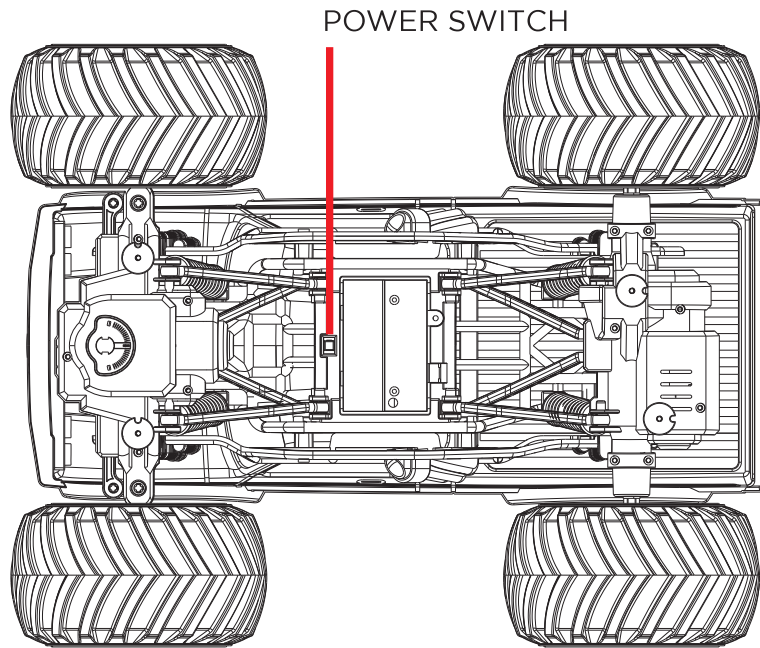

Powering On Your Remote Control

Slide the Power Switch on the side of your remote control to the ON position to power it on.

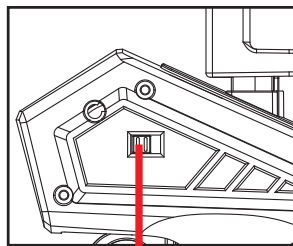

Power
Switch


Synchronizing Your Vehicle with Your Remote Control

Once you power on both your vehicle and your remote control, wait a few moments while they synchronize on the same frequency.

7. Operating Your Vehicle


Using the Control Stick to Pilot Your Vehicle

Once your remote control and vehicle are powered on and synchronized, you can use the remote to pilot your vehicle. Use the Turn Wheel to turn your truck left and right. Set the Directional Trigger to move your truck forward and backward.

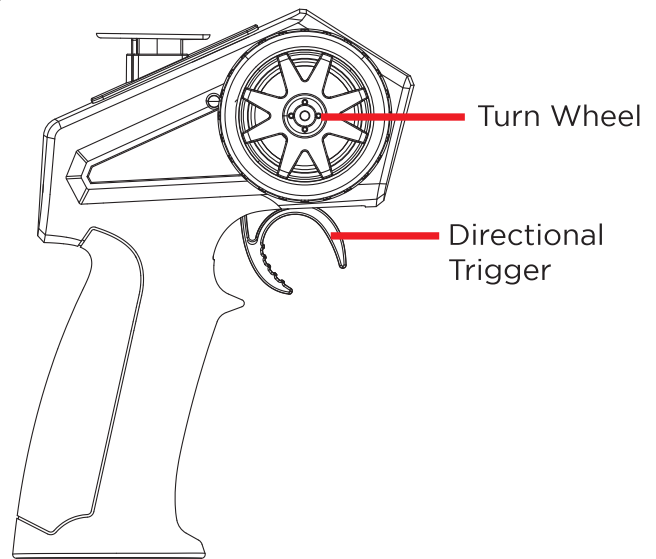

Adjusting the Rudder Trim

If your vehicle is pulling to the left or right, it usually means that the alignment is off. This can be fixed by adjusting the rudder trim. On the bottom of your vehicle is a Rudder Trim lever. Slide it left or right so that your vehicle runs in a straight line.

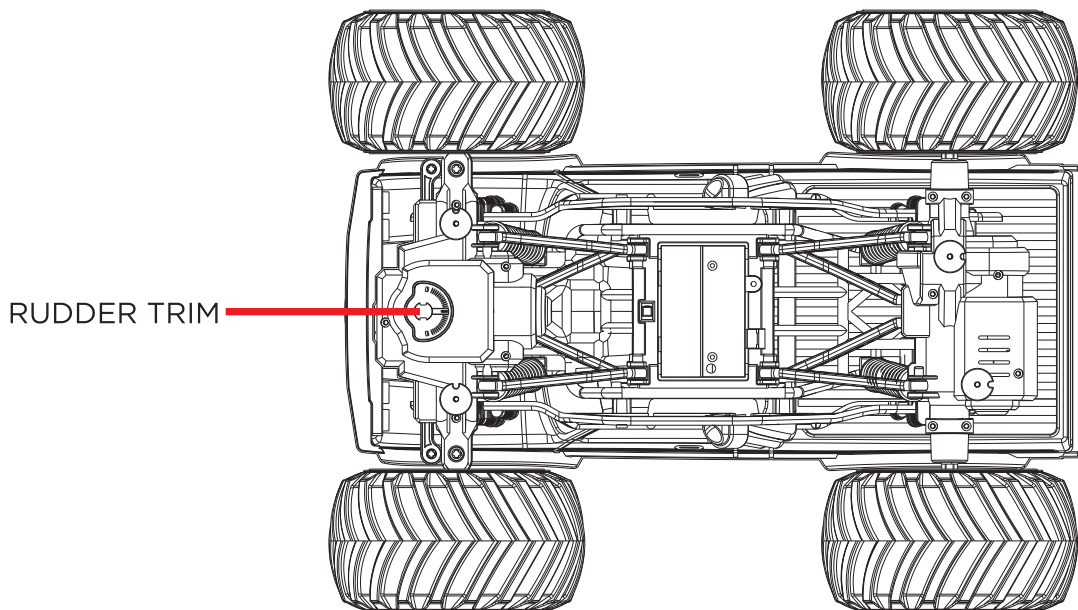

FCC Compliance Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

