


# INSTRUCTION MANUAL

TOWER FAN: SF-1522

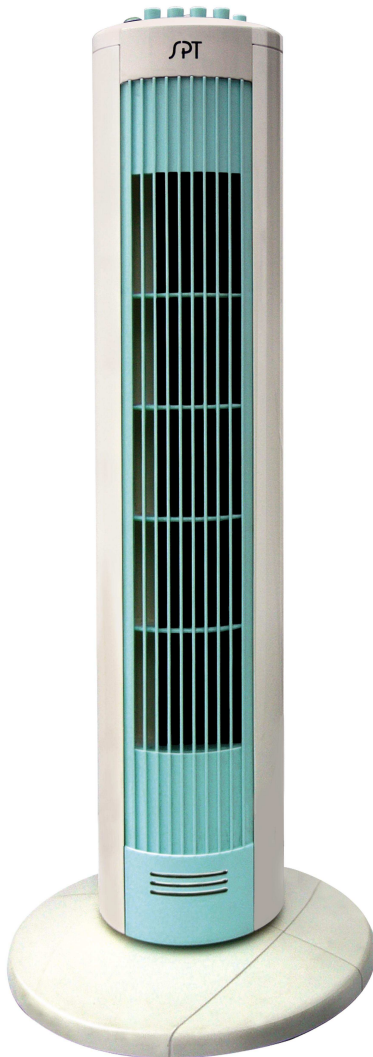

PLEASE READ BEFORE USE AND SAVE THIS MANUAL

## IMPORTANT SAFETY INSTRUCTIONS

### READ AND SAVE THESE SAFETY INSTRUCTIONS BEFORE USE


**When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:**

- 1、 Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury to persons.
- 2、 This product is intended for household use ONLY and not for commercial, industrial or outdoor use.
- 3、 To protect against electric shock: do not place fan on windowsills, immerse unit, plug or cord in water or spray with liquids.
- 4、 This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit only one way in a polarized outlet. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature.
- 5、 Close supervision is necessary when any appliance is used by or near children.
- 6、 Turn the fan OFF and unplug the fan from the outlet when not in use, when moving the fan from one location to another and before cleaning.
- 7、 To disconnect the fan, first turn the unit OFF, grip the plug and pull it from the wall outlet. Never pull the plug by the cord.
- 8、 Do not operate the fan in the presence of explosive and/or flammable fumes.
- 9、 Do not place the fan or any parts near an open flame, cooking or other heating appliance.
- 10、 Do not operate fan with a damaged cord or plug, or if the product malfunctions, or dropped and damaged in any manner (see warranty).
- 11、 Avoid contact with moving fan parts.
- 12、 The use of attachments not recommended by the manufacturer may be hazardous.
- 13、 Place the fan on a dry level surface.
- 14、 Do not hang or mount fan on a wall or ceiling.
- 15、 Do not operate if the fan housing is damaged.
- 16、 A loose fit between the AC outlet (receptacle) and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace loose or worn outlet.

**WARNING: To reduce the risk of fire and electric shock, do not use this fan with any solid-state speed control device.**

## ASSEMBLY INSTRUCTIONS

Do not use this fan before assembling the base.

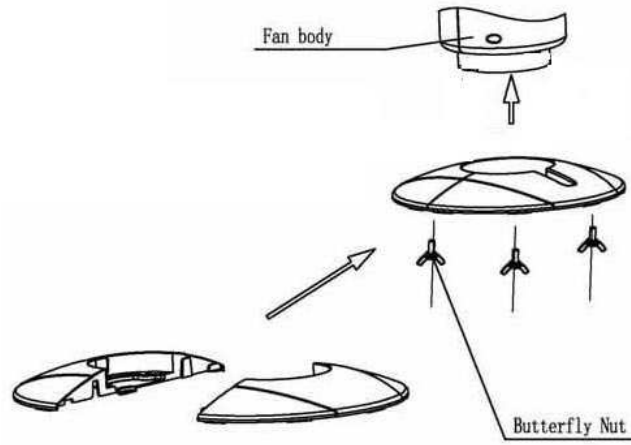

## PARTS IDENTIFICATION

Fig.1 Control panel



## FAN OPERATION

Plug into any AC 120V, 60Hz source, insure that the plug fits securely into the socket.

Your fan is equipped with 4-fan speed buttons, a timer dial, an OSC switch and a night light switch.

### 1) Speed control buttons:

BUTTON	FUNCTION
OFF	OFF
L	low speed
M	medium speed
H	high speed

### 2) Timer Switch:

- Turn dial clock-wise to set desired time of operation (maximum 2 hours).
- To run fan continuously, point dial position to **ON**.
- Pressing the OFF (0) button will turn fan and timer off.

### 3) OSC (oscillation) switch:

- To activate, press the OSC switch once while fan is operating.
- Press again to turn the oscillation feature off.

### 4) Night light switch:

- **ON** position: turn on
- **OFF** position: turn off

## CLEANING AND STORAGE

- Turn off power and unplug the fan before cleaning.
- Use only a soft, damp cloth to gently wipe the outer surfaces.
- To clean between the grilles, we recommend using a pipe cleaner, flexible dust wand, vacuum cleaner or compressed air to gently remove the dust.
- DO NOT immerse fan in water and never allow water to drip into the motor housing.
- DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
- For storage, you may leave the fan assembled. Cover the fan to protect from dust and store in a cool, dry, place.

**WARNING!**

If the fan has any problems, please contact Sunpentown Customer Service at 909-468-5288.  
**DO NOT ATTEMPT TO OPEN OR REPAIR THE FAN YOURSELF. DOING SO COULD VOID THE WARRANTY AND CAUSE DAMAGE OR PERSONAL INJURY**

**SPECIFICATIONS**

Noise level (High)	60 dB
Speed, RPM (High/Medium/Low)	1400 / 1200 / 900 ( $\pm 100$ )
Oscillation	70 degrees ( $\pm 5^\circ$ )
Power input	120V / 60Hz / 0.4A
Wattage	45 W
Automatic shut-off timer	Maximum 2 hours
Fan speeds	3
Power cord length	5.9 ft
Unit dimension	12" diameter x 30" high
Package dimension (L x W x H)	8.6 x 7.5 x 30.9 in.
Net weight	11.5 lbs
Gross weight	12.5 lbs
Safety approval	ETL



## Your Guarantee

**If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.**

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

### **What is NOT COVERED:**

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

**SUNPENTOWN INTERNATIONAL INC.**

**21415 Baker Parkway, City of Industry, CA 91789-5236**

**Tel: 909-468-5288 · Fax: 909-468-5279**

**service@sunpentown.com**

**[www.sunpentown.com](http://www.sunpentown.com)**