

htc 无线蓝牙耳机45 快速入门指南 使用前请阅读使用说明书 HTC NE45	产品规格 型号: HTC NE45 蓝牙 范围: ≈10m 版本: 6.0 喇叭 直径: 13mm 阻抗: 2Ω 耳机功率 输入: 3VDC-30mA 额定容量: 30mAh 使用时间: ≈4小时 充电时间: ≈1.5小时 充电仓功率 输入: 5V=500mA 输出: 5V=60mA 电池容量: 500mAh 充电时间: ≈2小时 充电仓充满电时,能给耳机充电3次	物品清单 快速入门指南 USB-C充电线 挂绳	部件	取出耳机并配对 如果您是第一次使用耳机,请将两个耳机从充电仓中取出,其中一个耳机的LED灯将会交替闪烁白灯和红灯,表示它们处于配对模式。 注: -如果耳机未与任何设备配对,打开后会自动进入配对模式。配对成功后,您会听到提示音。 -如果耳机之前已配对,打开后会自动重新连接,连接时您会听到提示音。	如何佩戴耳机 1	2																			
3	4	开机和关机 开机 自动开机:将耳机从充电仓中取出,耳机开机。 手动开机:长按3秒,耳机开机。 关机 自动关机:耳机放入充电仓中,耳机关机。 手动关机:长按5秒,耳机关机。 注:当耳机开机后,30分钟内未与蓝牙设备配对,便会自动关机;当配对的蓝牙设备超出信号有效连接距离,且未重新连接时,3分钟后,耳机自动关机。	连接到蓝牙设备 在您的设备上,打开蓝牙并选择连接到“HTC NE45”。	基本操作 开机/关机 通话模式 音乐播放 语音助手	功能操作 • 暂停/播放:短触任一耳机一次 • 音量加:轻触右耳机二次 • 音量减:轻触左耳机二次 • 上一曲:轻触左耳机三次 • 下一曲:轻触右耳机三次 • 接听/挂断电话:轻触任一耳机一次 • 通话拒接:按住任一耳机约2秒 • 启动语音助手:按住左耳机2秒 - 注:单耳使用时,按住已开机的耳机2秒,即可激活语音助手 - 游戏模式与音乐模式切换:按住右耳机2秒切换 - 注:单耳使用时,无法切换游戏模式和音乐模式 - 注:出厂设置默认为音乐模式 - 注:通知声音较大的游戏模式 指示灯显示 <table border="1"> <thead> <tr> <th>耳机指示灯</th> <th>状态</th> </tr> </thead> <tbody> <tr> <td>白灯和青灯交替闪烁</td> <td>两个耳机:开机 像耳机:未配对</td> </tr> <tr> <td>灭灯</td> <td>配对成功或充满电</td> </tr> </tbody> </table>	耳机指示灯	状态	白灯和青灯交替闪烁	两个耳机:开机 像耳机:未配对	灭灯	配对成功或充满电	如何清除蓝牙配对历史记录 双耳从充电仓取出后会启动自动开机;耳机未与蓝牙设备连接或耳机从蓝牙设备取消连接状态下,分别对左耳机和右耳机连续五次多触控,提示音“噔”即响起,耳机自动关机后将双耳机放回充电仓,再双击耳机取出,双耳机会自动配对,完成后即可连接蓝牙设备使用。 适用于以下情况: - 双耳无反应时:单点任意,双击时,双击时,双击时。 - 即使佩戴耳机时分别连续不同位置多触控。 - 清除连接的所有蓝牙设备时。 特别提示: 当单边耳机出现无响,或者无法配对时,请按以上恢复重置操作。													
耳机指示灯	状态																								
白灯和青灯交替闪烁	两个耳机:开机 像耳机:未配对																								
灭灯	配对成功或充满电																								
充电仓基本操作 打开显示屏 触摸亮屏:触摸亮屏时,轻触触控区域二次 按锁亮屏:单击多功能按钮 关闭显示屏 自由点亮:屏幕点亮,3秒无操作后,显示屏将自动熄灭。 手动息屏:点击充电仓多功能按钮一次,充电仓显示屏熄灭。 注:首次使用需初始化数据。 执行以下任一操作: -通过USB Type-C接口给充电仓及耳机充电。 -按住充电仓多功能按钮五秒钟。	多功能按键功能 单击:打开灯光唤醒。 三击:充电仓与耳机进行配对。 按住4秒(进入长按状态):“关机”和“重启”,“恢复出厂”。 长按时:耳机状态下,开机。 长按时:开机状态下,恢复出厂设置。 图标介绍 <table border="1"> <thead> <tr> <th>颜色</th> <th>状态</th> </tr> </thead> <tbody> <tr> <td>红色</td> <td>耳机在充电仓中,未连接到耳机</td> </tr> <tr> <td>白色</td> <td>充电仓已连接到耳机,但耳机未连接到手机</td> </tr> <tr> <td>蓝色</td> <td>充电仓已连接到耳机,且耳机已连接到手机</td> </tr> <tr> <td>绿色</td> <td>耳机充电中</td> </tr> <tr> <td>白色</td> <td>耳机使用中</td> </tr> </tbody> </table>	颜色	状态	红色	耳机在充电仓中,未连接到耳机	白色	充电仓已连接到耳机,但耳机未连接到手机	蓝色	充电仓已连接到耳机,且耳机已连接到手机	绿色	耳机充电中	白色	耳机使用中	充电仓显示屏功能介绍 锁屏界面 解锁屏幕后,向左向右滑动可浏览这些功能 菜单 点击进入对应功能界面	音乐播放 音量减 上一曲 播放/暂停 下一曲 音量加 抖音翻页和点赞功能 确定您的耳机已连接智能手机软件已打开。 对于iOS设备,必须在“设置”>“打开AssistiveTouch辅助功能”>“快捷”>“辅助触控”。 切回到 上一个短视频 当前短视频的短视频 下一个短视频 此功能仅适用于抖音软件使用,可能不兼容所有手机型号。	均衡器 单击切换对应均衡器预设 寻找耳机 根据您的查找的耳机,点击L或R。 找到耳机后,再次点击以停止蜂鸣声。	相机功能 需要连接到蓝牙设备使用,如手机 白灯和青灯交替闪烁 两个耳机:开机 像耳机:未配对 单击拍照 打开相机软件,单击相机,设备开始拍照 此功能仅适用于手机自带相机使用,可能不兼容所有手机型号。 语音助手 单击启动语音助手	游戏 小鸟:点击屏幕,让鸟穿过障碍物 亮度调节 调整亮度:上下滑动调节亮度 亮屏时间:弯曲左右侧切换夜间模式,可选择亮屏的时间 翻译 同步显示APP翻译内容							
颜色	状态																								
红色	耳机在充电仓中,未连接到耳机																								
白色	充电仓已连接到耳机,但耳机未连接到手机																								
蓝色	充电仓已连接到耳机,且耳机已连接到手机																								
绿色	耳机充电中																								
白色	耳机使用中																								
设置 单击进入对应功能设置 锁屏壁纸 可在主屏幕上长按3秒切换其他表盘壁纸	背景壁纸 可切换其他表盘 时间设定 可设置当前的时间和日期、时间格式	语言设置 语言 English 简体中文 简体中文 可切换不同国家/地区的语言。 做出出厂语言后系统语言选择 触摸屏唤醒 打开时可以触屏点亮屏幕 关闭时无法触屏点亮屏幕 默认为打开	产品中有害物质名称及含量 在产品中有有害物质的名称及含量 <table border="1"> <thead> <tr> <th>部件名称</th> <th>Pb(Pb)</th> <th>Cd(Cd)</th> <th>Hg(Hg)</th> <th>六价铬(Cr(VI))</th> <th>多溴联苯(PBDE)</th> <th>多溴二苯醚(PBB)</th> </tr> </thead> <tbody> <tr> <td>印刷电路板组件</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>外壳等小结构件</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> </tbody> </table> 本表格依据SJ/T11364的规定编制。 X:表示该有害物质在该部件所有均质材料中的含量均在GB/T26572规定的限量要求以下。 ○:表示该有害物质在该部件所有均质材料中的含量超过GB/T26572规定的限量要求。 表中标记“X”的部件,因受技术成本水平限制而无法实现有害物质的替代。 印刷电路板组件:包括印刷电路板及其零部件,电子元件等等,指相关产品型号不同。 您所购买的产品可能不会含有以上所有部件。	部件名称	Pb(Pb)	Cd(Cd)	Hg(Hg)	六价铬(Cr(VI))	多溴联苯(PBDE)	多溴二苯醚(PBB)	印刷电路板组件	○	○	○	○	○	○	外壳等小结构件	○	○	○	○	○	○	重要安全说明 在使用本产品之前,请仔细阅读本说明书中的所有安全说明。 常规安全说明 -小心使用本产品,并将其存放在没有极端温度、高电压和潮湿的环境环境中,确保产品存放在干燥通风的地方。 -维修和更换只能由授权的售后服务人员进行。 -请勿自行拆卸或更换产品的任何部件,以防受伤或损坏设备。 -对产品任何未经授权的操作都可能使保修无效。 -请将本产品放置在儿童和宠物接触不到的地方,以防止发生窒息和伤害等事故。 个人安全说明 -如果产品有明显缺陷或造成高温或高压等异常,请勿使用。 -执行需要安全关注的任务或任务时,请勿使用本产品。 -为了保护环境,请勿长时间随意丢弃。 -请将本产品放置在干燥和通风良好的地方,以防止发生窒息和火灾等事故。 电池安全说明 该产品内置可充电电池,请参阅以下说明,确保安全使用和处置。 -请勿将产品长时间暴露在热源中,如阳光
部件名称	Pb(Pb)	Cd(Cd)	Hg(Hg)	六价铬(Cr(VI))	多溴联苯(PBDE)	多溴二苯醚(PBB)																			
印刷电路板组件	○	○	○	○	○	○																			
外壳等小结构件	○	○	○	○	○	○																			

HTC Wireless Earphones 4S Quick Start Guide HTC NE4S	Product Specifications Model: HTC NE4S Bluetooth Range: ~10 m Version: 6.0 Speaker Diameter: 13 mm Impedance: 20 Ω Earphone power Input: 5 V = 30 mA Battery capacity: 30 mAh Battery life: ~4 hrs Charging time: ~1.5 hrs Charging case power Input: 5 V = 500 mA Output: 5 V = 50 mA Battery capacity: 500 mAh Charging time: ~2 hrs Earphone recharges: 3 charges (when case is fully charged)	What's in the box Charging case 2 Earphones Quick Start Guide USB-C cable Lanyard	Components Earphone LED Touchpad Earphone speaker Charging contacts USB Type-C port Multifunction button	Take out and pair the earphones If you're using the earphones for the first time, remove both from the charging case. The LED on one earphone will blink white and cyan alternately, indicating that they are in pairing mode. Note: • If the earphones have not been paired with each other, they will automatically enter pairing mode when turned on. You'll hear two beeps when pairing is successful. • If the earphones have been paired before, they will automatically reconnect to each other when turned on. You'll hear a beep when they connect.	How to put on the earphones 1 2	3 4																				
Power on and off Power on Taking the earphones out of the charging case will automatically turn them on. To manually turn on each earphone, press and hold the touchpad for three seconds. Power off Placing the earphones in the charging case will automatically turn them off. To manually turn off each earphone, press and hold the touchpad for five seconds. Note: If the earphones are not paired with a Bluetooth device within three minutes after powering on, they will automatically power off. They will also power off after three minutes if the paired Bluetooth device moves out of the effective connection range and has not reconnected.	Connect to Bluetooth device On your device, turn on Bluetooth and choose to connect to 'HTC NE4S'.	Basic operations Power on/off Phone mode Music mode Reset earphones	Key functions • Play/Pause: Tap either earphone once. • Volume up: Tap the right earphone twice. • Volume down: Tap the left earphone twice. • Play previous track: Tap the left earphone three times. • Play next track: Tap the right earphone three times. • Answer/End call: Tap either earphone once. • Reject call: Press and hold either earphone for two seconds. • Activate voice assistant: Press and hold the left earphone for two seconds. Note: When using a single earphone only, press and hold the active earphone for two seconds. • Switch between Game and Music modes: Music mode is the default mode. Press and hold the right earphone for two seconds to switch between modes. (The louder notification sound indicates Game mode.) Note: Mode switching is disabled when you're using a single earphone only. Indicator LEDs <table border="1"> <thead> <tr> <th>Earphone LED</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Blinking white and cyan</td> <td>Both earphones: Powered on Single earphone: Unpaired</td> </tr> <tr> <td>Off</td> <td>Paired or fully charged</td> </tr> </tbody> </table>	Earphone LED	Status	Blinking white and cyan	Both earphones: Powered on Single earphone: Unpaired	Off	Paired or fully charged	How to reset the earphones If the earphones fail to pair or reconnect to each other, rest them by tapping both earphones five times simultaneously. Note: Resetting the earphones will clear the Bluetooth pairing history.	Case display: Basic operations Turn on display Tap the display twice or press the multifunction button once. Turn off display Press the multifunction button once to turn off the display. The display automatically turns off after 30 seconds of inactivity. Note: Initial activation required for first-time use. Do any of the following: • Change the charging case via the USB Type-C port. • Press and hold the multifunction button for five seconds.	Multifunction button operations Multifunction button Press once: Turn the screen on/off. Press three times: Link earphones to charging case. Press and hold for four seconds: Open the system menu (Restart, Power off, and Factory reset). Press and hold for five seconds: Power on the screen (when off). Press and hold for eight seconds: Restore to factory settings. Status Icons Guide <table border="1"> <thead> <tr> <th>Icon</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>Solid red</td> <td>Earphones in case, not connected to phone</td> </tr> <tr> <td>Solid white</td> <td>Case connected to earphones, but earphones offline</td> </tr> <tr> <td>Solid blue</td> <td>Case connected to earphones, earphones paired to phone</td> </tr> <tr> <td>Blue circle with dot</td> <td>Status</td> </tr> <tr> <td>Solid green</td> <td>Earphones charging</td> </tr> <tr> <td>Solid white</td> <td>Earphones in use</td> </tr> </tbody> </table>	Icon	Status	Solid red	Earphones in case, not connected to phone	Solid white	Case connected to earphones, but earphones offline	Solid blue	Case connected to earphones, earphones paired to phone	Blue circle with dot	Status	Solid green	Earphones charging	Solid white	Earphones in use
Earphone LED	Status																									
Blinking white and cyan	Both earphones: Powered on Single earphone: Unpaired																									
Off	Paired or fully charged																									
Icon	Status																									
Solid red	Earphones in case, not connected to phone																									
Solid white	Case connected to earphones, but earphones offline																									
Solid blue	Case connected to earphones, earphones paired to phone																									
Blue circle with dot	Status																									
Solid green	Earphones charging																									
Solid white	Earphones in use																									
Case display: Feature overview Lock screen Swipe to unlock the screen. Menu (Gear style) Tap an item to access its options.	Music Volume down Previous Track Play/Pause Next Track Volume up TikTok Make sure your earphones are connected to your phone and the TikTok app is open. For iOS devices, AssistiveTouch must be turned on in Settings > Accessibility > Touch > AssistiveTouch. Switch to the current video Like the current video Switch to the next video This feature only works with the TikTok app and may not be compatible with all phone models.	Equalizer Switch between the preset equalizer settings. Find my earphones Tap L or R depending on which earbuds you want to find. Tap again when you find the earbuds to stop the beep.	Camera Make sure your earphones are connected to your phone. Tap Take picture to open the phone's camera app and then press the multifunction button to take photos. This feature only works with the pre-installed camera app and may not be supported on all phone models. Voice assistant Tap Voice assistant to activate your phone's voice assistant.	Game Birds: Tap the screen to navigate the bird through the obstacles. Brightness Brightness Control: Swipe up or down. Screen timeout: Swipe left to select a time for the screen to turn off when left idle. Translation Displays translated content synchronized with the connected app.	Settings Tap an item to access its options. Lock screen wallpaper On the Home screen, press and hold the screen for three second to change the wallpaper. You can also change it in Settings.	Background wallpaper Toggle between background options. Time settings Set current time/date and format preferences.																				
Language Switch between different country/region languages. Requires re-selection after factory reset. Tap to wake Turn on or off to allow tapping the display to turn it on. Turn off to prevent display from accidentally turning on.	Important Safety Instructions Carefully read all the safety instructions in this document before using the product. General safety instructions • Use the product with care and store it in a clean environment that is free from extreme temperature, pressure, and humidity. Make sure that the product is stored in a location where it cannot be bent or squeezed. • Repairs and replacements should only be performed by authorized after-sales service staff. Do not attempt to disassemble or replace any part of the product yourself to prevent injuries or damage to the device. Any unauthorized modification to the product voids the warranty. • Only use the product in environments where Bluetooth transmission is permitted. Personal safety instructions • Do not use the product if it is obviously defective or exhibits abnormalities such as bulging or excessive heating. • Do not use the product when performing high-risk tasks that require your full attention. • For your hearing protection, do not listen at high volume for long periods. • Keep the product and its packaging out of reach of children and pets to prevent accidents such as swallowing and choking.	Battery safety instructions The product has a built-in rechargeable battery. Read the following instructions to ensure safe use and disposal. • Keep the product away from prolonged exposure to heat sources such as open fires or direct sunlight. • Only store the product in environments with ambient temperatures of 0°C to 35°C (32°F to 95°F). • Do not use or store the product in dust-prone, smoke-prone, high-temperature, high-pressure, or highly humid environments. • Keep the product dry and away from liquids or moisture. • Only use an FCC or CCC-certified charger with an output voltage of 5 V/1 A DC. • Do not use the product while charging. • Do not leave the product charging for longer than eight hours. • Dispose of the product responsibly according to your local waste management guidelines.	FCC ID: 2BHR-NE45 FCC Caution: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the																							