

# SENCOR®

SMF 2030WH  
SMF 2031BK



## MILK FROTHER AND WARMER

Translation of the original manual

 
 
 


**SENCOR®**

 
**SMF 2030WH  
SMF 2031BK**



**A**

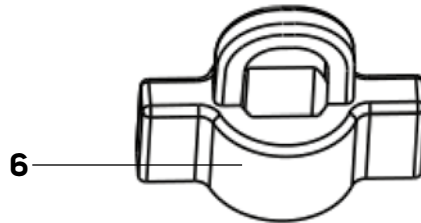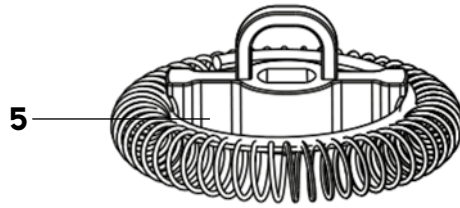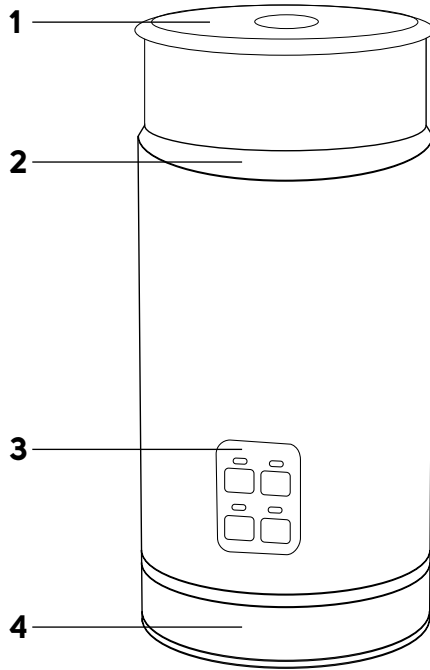

**B**

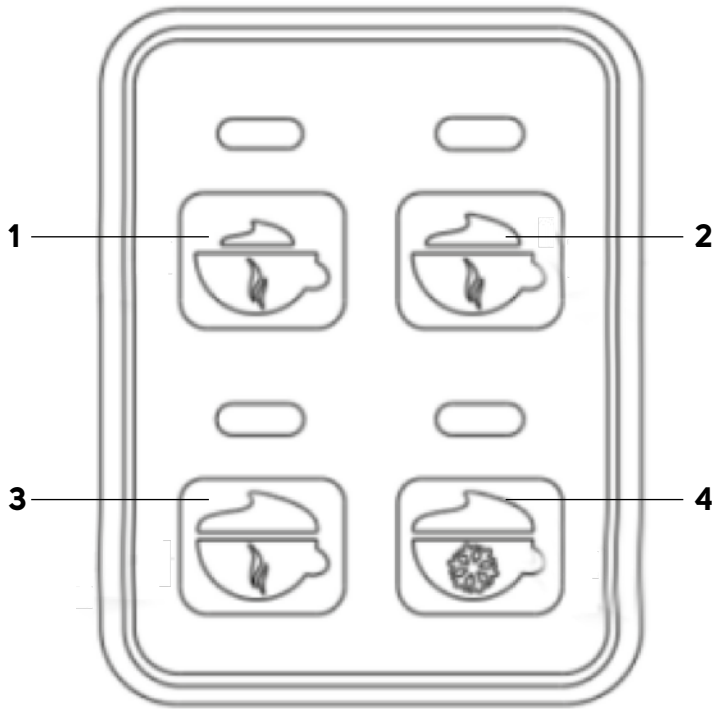

1

2

3

4

# EN Milk frother and warmer

## Important Safety Instructions

### READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance is not to be used by children. Keep this appliance and its power cord out of the reach of children.
- Appliances may be used by persons with reduced physical, sensory or mental abilities or lack of experience and knowledge, provided they are supervised or have been instructed in the safe use of the appliance and understand the potential hazards.
- Children must not play with the appliance.
- Cleaning and maintenance by the user must not be carried out by children.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.



**WARNING:** Incorrect use may lead to injury. Pay attention when handling the whisking attachments, especially when removing them from the container, emptying the container and during cleaning.

- Clean the milk jug and whisking attachment according to the instructions in the “Cleaning and Maintenance” chapter.
- Before replacing the accessories or accessible movable parts, please turn the appliance off and disconnect it from the power supply.
- Always disconnect the appliance from the power supply when leaving it unattended and before assembly, disassembly or cleaning.
- This appliance is designed for household use only. The appliance is also designed for personal non-commercial use in areas that include, but are not limited to the following:
  - staff kitchens in stores, offices and other workplaces;
  - agricultural farms;
  - hotel or motel rooms and other living areas;
  - bed and breakfast establishments.
- The appliance must not be immersed in water during cleaning.



**WARNING:** Incorrect use may lead to injury.

The surface of the heating element contains residual heat after use. Before replacing the accessories or getting closer to the moving parts, please turn the appliance off and disconnect it from the power supply.

- This appliance is designed for milk whipping and heating. Do not use it for purposes other than those for which it was designed. Do not use it in an industrial environment or outdoors.
- Before connecting the appliance to power, make sure that its power ratings match those of the wall socket.
- Always connect the appliance to a properly grounded socket.
- The power cord length is adjusted to avoid being tripped over or get tangled.
- Do not leave the power cord hanging over the edge of a table or a work bench. Make sure that the power cord is routed so that it cannot be pulled or get tangled.
- Prevent the power cord from touching hot surfaces or being placed on or near gas burners, electric hotplates or ovens.

- Do not put the appliance on or the vicinity of any devices and equipment that generate heat or near naked flame.
- Always turn off the appliance and disconnect it from the power socket if you leave it unattended, before folding or unfolding, if you plan not to use it or before moving or cleaning.
- To prevent the risk of electric shock, do not submerge or expose the motor base, plug or power cord to water or any other liquid.
- Do not touch hot surface. There is a risk of burns.
- Do not use the appliance if it has been dropped or is damaged in any way. If the appliance is damaged, please contact an authorised service centre.
- To unplug the appliance from the power socket, pull the plug, not the power cord. Otherwise, damage to the power cord or the socket could occur.
- Use only accessories supplied with the appliance or recommended by the manufacturer. Using accessories other than those supplied or recommended results in the risk of injury, fire or electric shock.
- When filling the jug with milk, always observe minimum and maximum level marks. Be careful when handling hot content of the jug. Never operate the appliance without the liquid in the jug.
- Do not move or handle the appliance by gripping the power cord.
- Always put the appliance on a stable, flat and dry surface. Do not place the appliance on hot surfaces.
- After each use, make sure to turn the appliance off with the On / Off button.
- To avoid the danger of injury by electrical shock, do not repair or modify the appliance yourself. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance, you expose yourself to the risk of losing your legal rights regarding faulty performance or warranty for quality.

# EN Milk frother and warmer





## User's Manual

- Thank you for purchasing our SENCOR product; we hope you will be satisfied with it.
- Before using this appliance, please familiarise yourself with the user's manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user's manual. Keep the manual for future reference.
- We recommend to keep the original packaging, packaging materials, receipt, and proof of the seller's liability or warranty certificate for a minimum of the duration of statutory right of faulty performance or warranty of quality. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

### DESCRIPTION OF THE APPLIANCE

- A1** Transparent cover with silicone seal      **A3** Control panel  
**A2** Stainless steel jug with marked minimum and maximum volume lines and practical sink      **A4** Frother base  
**A5** Milk frothing attachment      **A6** Milk mixing attachment

### DESCRIPTION OF THE CONTROL PANEL

- B1** Button  - milk heating with a small amount of froth      **B3** Button  - milk heating with a large amount of froth  
**B2** Button  - milk heating with medium amount of froth      **B4** Button  - stirring cold

### BEFORE FIRST USE

- Before first use, remove the appliance and its accessories from the packaging and remove all promotional labels and tags. Check that neither the appliance nor any of its components is damaged.
- Clean the jug, lid and attachments in warm water with a small amount of washing-up liquid. Rinse in clean water and wipe dry thoroughly.
- Wipe the base with a clean sponge slightly moistened in warm water. Then wipe dry with a clean cloth.
- Before storing the frother, make sure that all parts are clean and dry.



 


 


 


 
#### Warning:

When cleaning, do not submerge the base in water or any other liquid.



### Operating modes

- The milk frother has four basic operating modes. In each mode, you can prepare milk heated and whipped in different ways using various attachments. Choose the operating mode that best suits your preferences.

Button	Operating mode	Used attachment	Note
	Heating milk with a small amount of froth		Maximum volume is 150ml. Making warm creamy gently foaming milk froth with a higher content of heated milk.
			Maximum volume is 150ml. Making warm creamy milk froth.
	Milk heating with medium amount of froth		Maximum volume is 150ml. Making warm creamy gently foaming milk froth in the same proportion as warmed milk.
			Maximum volume is 150ml. Making warm creamy milk froth.
	Heating milk with a large amount of froth		Maximum volume is 150ml. Making warm creamy gently foaming milk foam with a lower content of heated milk.
			Maximum volume is 300ml. Heating and stirring the milk.
	Blending chilled		Maximum volume is 150ml. Making cold creamy milk froth.
			Maximum volume is 150ml. Stirring milk without heating.

#### Warning:

Do not use the milk frother without the attachment in place. Otherwise, a risk of milk damage and deterioration might occur.



### Using the frother

- Place the milk frother on a flat, firm and stable surface well away from the mains socket.
- Remove the lid from the jug.
- Fit the selected attachment onto the centre connector in the jug.
- Pour the milk in the jug. Always observe the maximum and minimum level line according to the attachment in use.
- Attach the lid. Check that the lid is properly attached on the jug.
- Put the jug on the base and insert the mains cord plug in a wall socket.
- Press the selected mode button to start the frother.
- When the milk has been heated, the frother will stop automatically.

- Unplug the power cord from the wall socket, remove the jug from the base and prepare your favourite drink.



**Note:**

If you want richly whipped milk with creamy froth, we recommend using cooled whole milk. You can also rinse the jug with cold water and wipe properly or put in the refrigerator before use.

**Auto Shut-Off**

- The milk frother will automatically turn off after about 2 minutes of inactivity.

**Overheating protection**

- The milk frother is equipped with a safety thermal fuse to protect from damage if the frother should overheat. In such situation, the fuse blows out and the operation of the frother stops. In such case, unplug the power cord from the mains socket and allow the frother to cool down. Then insert the plug of the power cord back into the socket and you will be able to use the frother again.

**CLEANING AND MAINTENANCE**

- Before cleaning, unplug the power cord from the mains socket and allow the appliance to cool down.
- Do not use abrasive cleaning agents, solvents, or any substances to clean any parts of the appliance that could damage the surface of the appliance. None of the components of this appliance are dishwasher safe.



**Warning:**

To prevent the risk of electric shock, do not submerge the appliance, plug or power cord in water or any other liquid.

- It is recommended to rinse the jug, lid and used attachment immediately after use. Then, wash the all the parts in warm water with a small amount of washing-up liquid. Rinse in clean water and wipe dry thoroughly.
- Wipe the base with a clean sponge slightly moistened in warm water. Then wipe dry with a clean cloth.

**Storage**

- If the appliance will not be used for an extended period, unplug it from the power socket, let it cool down, and clean it following the instructions provided above.
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

**TECHNICAL SPECIFICATIONS**

Rated voltage range ..... 220–240 V~  
 Rated frequency..... 50/60 Hz  
 Rated power input..... 500 W

We reserve the right to change the text and technical specifications.

**INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL**

Dispose of used packaging material at a site designated for waste in your municipality.

**DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste. For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

**For Business Entities in European Union States**

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

**Disposal in Other Countries Outside the European Union**

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product complies with all the essential requirements of the EU directives that apply to it.



FAST ČR, a.s.  
U Sanitasu 1621  
CZ-251 01 Říčany  
[www.sencor.eu](http://www.sencor.eu)