



INSTRUCTION MANUAL

DEAD HUNTER FULL FUNCTION RADIO CONTROL

DHTRC10664



Contents

- RC Vehicle x 1
- RC Transmitter x 1
- Instruction Manual x 1
- 7.4V Rechargeable Battery Pack x 1
- AA Battery x 2
- USB Charging Cable x 1



RC Transmitter x 1



BATTERY REQUIREMENTS:



2 X 1.5V AA Battery
For Transmitter
(Included)

7.4V

1 x 7.4V
1200mAh Lithium Ion
Rechargeable battery
Pack For Vehicle
(Included)



USB Charging Cable (Included)

Battery Precaution

1. The 7.4V rechargeable battery pack must be charged before use by utilizing the USB charging cable which included.
2. Do not overcharge the battery pack. Do not charge for more than 6 hours.
3. Do not charge the battery pack if it shows leakage, corrosion, or has loose or exposed wires or other damage.
4. Do not cover the battery pack with any sort of materials while charging.
5. Do not touch the battery pack when it is hot. Wait until the battery pack cools before installing it in the Vehicle and before recharging.
6. Do not dispose of the battery in fire.
7. Do not dismantle the battery or charger, and do not cut the battery or charger cables.
8. The battery pack will be warm after charging, and hot after use in vehicle.
9. The supply terminals are not to be short-circuited.
10. Rechargeable batteries are to be removed from the toy before being charged.
11. Rechargeable batteries are only to be charged by adult.
12. Battery replacement must be only made by adults.
13. The USB charging cable is not a toy.

14. Charge only type (1200Ah Max.) rechargeable battery packs. Other types of batteries may burst causing injury to persons and damage. This power unit is intended to be correctly orientated in a vertical or floor mount position. This charger is intended to be used for charging 7.4V rechargeable battery pack with maximum capacity of 1200mAh. It cannot be used for charging non-rechargeable batteries. Regular examination of USB charging cable for any damage to their cord, plug, enclosure and other parts, and that, in the event of such damage, it must not be used with the USB charging cable or battery pack charge until such damage has been repaired. Note that the AA batteries are non-rechargeable and is not to be recharged. Only batteries of the same or equivalent type as recommended are to be used. It will need replacement when transmission is poor.
15. Exhausted batteries are to be removed from the product.
16. Do not mix old and new batteries or different type of batteries.

Battery Installation

For Vehicle (Fig. 1 and Fig. 2)

1. Switch OFF the power.
2. Unscrew the screw on the battery cover.
3. Open the battery cover.
4. Install 7.4V battery pack with correct polarities (+/-) as shown inside the battery compartment.
5. Close the battery cover.
6. Tighten the screw on the battery cover.

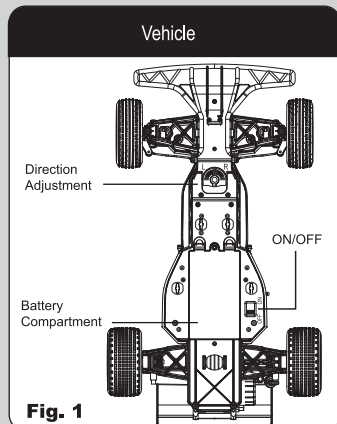 


Fig. 1

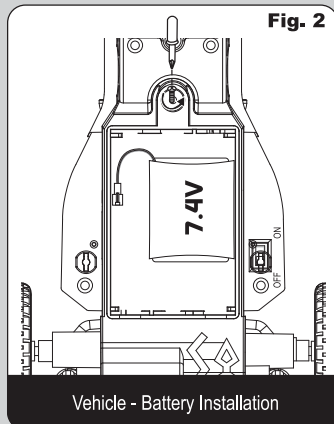 


Fig. 2

This toy is only to be connected to equipment bearing either of the following symbols: or

1. Connect the 7.4V rechargeable battery pack to the USB charging cable.
2. It is recommended to connect USB charging cable (included) to computer to charge the rechargeable battery pack. If the USB charging cable (included) is to connect to a charger adaptor, the output limit cannot exceed 7.4V.
3. The charging time for a full charge is about 2 hours. Full charge battery usage is 15 minutes maximum.
4. When charging is completed, unplug the USB charging cable.
5. Disconnect the rechargeable battery pack from the USB charging cable.

For Transmitter (Fig. 3 and Fig. 4)

1. Switch OFF the power.
2. Unscrew the screw on the battery cover.
3. Open the battery cover.
4. Install 2 AA battery with correct polarity (+/-) as shown inside the battery compartment.
5. Close the battery cover.
6. Tighten the screw on the battery cover.

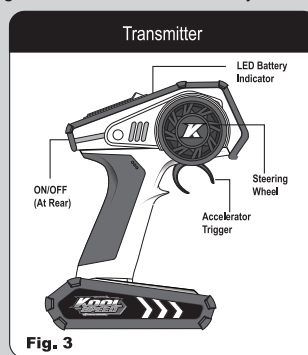 


Fig. 3

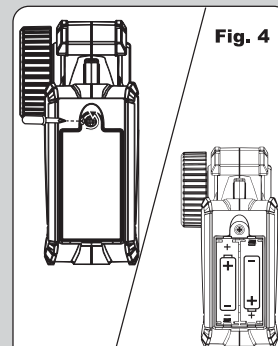 


Fig. 4

 
 
Transmitter - Battery Installation

How To Bind



1. Turn on the Vehicle and Transmitter.
2. Do not press the trigger while the car and remote control are pairing; the pairing process will occur automatically. If you press the trigger, pairing will fail.
3. The LED light of the Transmitter will keep flashing for the binding process, which is within 8 seconds. Do not turn off any buttons while in progress; otherwise, the process will be terminated.
4. Once pairing is successful, the remote control's indicator light will remain solid red, indicating that pairing is complete and the remote is ready for use.
5. If it cannot complete within 8 seconds, please turn off both Vehicle and Transmitter and re-start the binding process.
6. When the binding process is done, whenever switching the Vehicle and Transmitter on and off, it searches for the code that it memorized, and will only lock on to the Transmitter signal containing that code.
7. Please turn off both Vehicle and Transmitter and re-start all binding process if changing to another 2.4GHz Transmitter for playing.

How To Play




1. Switch ON the Vehicle and Transmitter.

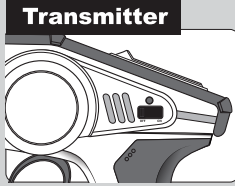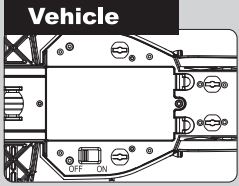

  2. Use the Steering Wheel to control the Vehicle turning left or right.

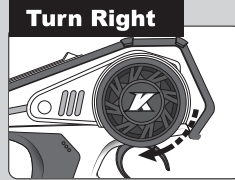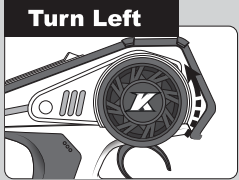

   3. Use the Accelerator Trigger to drive the Vehicle Forward, Stop and Backward

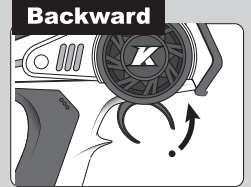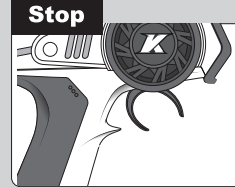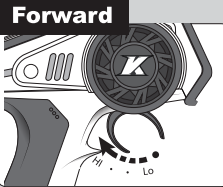

4. If the vehicle does not run in a straight line, adjust the Direction Adjustment on the Vehicle chassis.
5. Play on smooth surface to have the optimum performance.
6. Remember to switch OFF the power of the Vehicle and Transmitter after playing.
7. The optimum control range is up to 30m/98ft outdoor.

Braking Action

Pull the trigger to drive forward and push the trigger to brake. Position the trigger to the neutral or center position, then push it again to move backward.

Performance Tips

1. Do not drive on grass, dirt, sand, dusts, carpet or go through water.
2. Do not drive in windy or rainy weather.
3. Avoid direct impact the Vehicle with obstacles.
4. Switch OFF the power when not in use to prevent damage of Vehicle and Transmitter due to leakage of electrolyte from batteries.
5. Remove all batteries from the Vehicle and Transmitter when not in use for long period.
6. Keep fingers, hair and loose clothing away from wheels.
7. The operating range can be affected by a variety of factors.
 - a) Low Voltage of batteries in Transmitter or Vehicle
 - b) Interference from other items that emit radio frequency signals
8. Outdoor usage is recommended in order to get optimum control range.
9. Recommend to play the vehicle on a clean and smooth surface.
10. Clean the battery compartment to make sure it is free from dust to prevent poor contact of batteries.

FCC label compliance statement:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna
 - Increase the separation between the equipment and receiver
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
 - Consult the dealer or an experienced radio/TV technician for help

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RSS-210 Compliance Statement:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Declaration of Conformity

The product is in conformity with the requirement of EU Directive 2014/53/EU.

Environmental notes:

The whole product also does not belong to household waste at the end of the product life.



You can return it at collection points for the recycling of electronic and electrical instruments

The symbol on the item, instruction manual, hangtag or packing is showing this clearly.

Materials should be recycled according to their respective markings. Recycling of old devices or other re-use of materials contained therein represents an important contribution to environmental protection. Please ask at your local community for the correct collection point.



Disposal of batteries

Batteries should not be disposed of in the household waste. As the consumer you are legally obliged to return batteries containing harmful substances and all other used batteries. You can hand in your old batteries at public collection points in your area or wherever batteries are sold. You will find these chemical abbreviations along with a crossed-out refuse bin on batteries containing harmful substances:

Pb=Battery contains lead

Cd=Battery contains cadmium

Hg=Battery contains mercury

تحذير! مخاطر الاختناق أجزاء صغيرة غير مناسبة للأطفال دون سن الثالثة
WARNING: CHOKING HAZARD - Small parts not suitable for children under 3 years

معلومات التعميل
يرجى الاطلاع على التعليمات الواردة في المصطلح.
تحذير! غير مناسبة للأطفال تحت سن 3 سنوات بسبب خطر الاختناق.
لا تدنك الاذن والاصابع عن اجزاء اللعبة.
حيث يعلق ويترد الاطفال، قد يؤدي الى اصابة، اذا لم يتم ذلك.
ممنوعة في الصين
يجب الاطلاع على التعليمات باء على تعليمات اللعبة.



P&C International Development Ltd.
Room 902A, 9/F, Empire Centre, 68 Mody Road
Tsim Sha Tsui, Kowloon, Hong Kong
info@pnctoy.com.hk
http://www.pnctoy.com.hk
service@pnctoy.com.hk
Made in China



Conforms to the safety requirements of ASTM F963

