


Hisense Air Fryer

Quick Start Guide

WHAT'S IN THE BOX

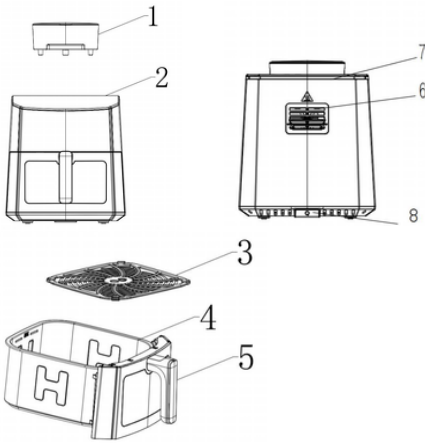


Steam Air Fryer

1. Water tank
2. Digital Control Panel
3. Frying tray
4. Basket
5. Basket Handle
6. Air Outlet
7. Air Inlet
8. Power Cord

WATER TANK INSTRUCTIONS

Setup & Filling

1. Remove the water tank, open the cap, and fill with tap water.
2. Secure the cap, then place the tank back into the top mount until it clicks.

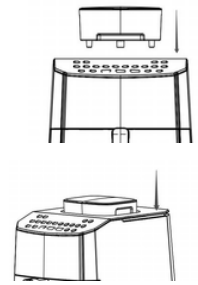

Usage Notes

1. Refill before each use (required for steaming function).
2. Clean if unused for long periods to prevent mold from residual water.
3. Use only water; distilled/purified water is recommended for efficiency and hygiene.
4. Avoid temperatures below 5°C (slower steaming) or 0°C (water freezes, no steam).

Safety

After cooking, hot water may remain in the fry basket drawer. Do not tilt it—use tongs (not included) to remove food.

CONTROL PANEL INSTRUCTION



Initial Setup

Plug in the appliance: it will beep once, and the **Power** button will light up.

Power On/Off & Mode Selection

1. Press the **Power** button to activate the screen.
2. Choose cooking mode: **Air Fryer**, **Steam**, or **Hybrid**.
3. Select a preset menu or manually adjust settings.



Power



Air Fryer



Steam



Hybrid

Temperature & Time Adjustment

Temperature: Press +/- buttons. Short press: $\pm 5^{\circ}\text{C}$; long press: rapid $\pm 5^{\circ}\text{C}$.

Time: Press +/- buttons. Most functions: short press $\pm 1\text{min}$ /long press rapid $\pm 1\text{min}$;

Dried Fruit: short press $\pm 30\text{min}$ /long press rapid $\pm 30\text{min}$.



Up



Down



Up



Down

Start/Pause

- 1. Press **Start/Pause** to begin cooking; press again to pause.
- 2. To change cooking functions mid-cycle: Press **Start/Pause** to end the current cycle first.
- 3. Opening the fry basket drawer pauses cooking until closed securely.



Start/Pause

Light

Press the **Light** button to turn on the interior light for 20 seconds; press again to turn off.



Light

Note: The light auto-activates for 30 seconds at the start of cooking. After two manual presses, the light will disable for 1 minute to protect the bulb.

FUNCTION DESCRIPTIONS

Air Fryer Mode

Features: Uses high-temperature air circulation for oil-free, fast cooking. Steam function is disabled; air fryer indicator remains lit.

Operation:

- 1. Press the **Air Fryer** mode button.
- 2. Select a preset menu or manually adjust temperature/time.
- 3. Press **Start/Pause** to begin.

Refer to the user manual for additional details.



Air Fryer



Start/Pause

Hybrid Mode

Features: Alternates between air frying and steaming for diverse cooking methods and flavors. Both air fryer and steam indicators remain lit.

Operation:

- 1. Press the **Hybrid** mode button.
- 2. Select a preset program or manually adjust temperature/time.
- 3. Press **Start/Pause** to begin.

Water Tank Alert: If the tank is empty, the device pauses and the **Start/Pause** button flashes. After refilling, press **Start/Pause** to resume—water pump will cool the heating element before restarting.

Refer to the user manual for additional details.



Hybrid



Start/Pause



Water injection indicator light

Steam Mode

Features: Water from the tank is pumped to a steam generator, producing hot steam to cook food. Air fryer function is disabled.

Operation:

- 1. Press the **Steam** mode button.
- 2. Select a preset program or manually adjust temperature/time.
- 3. Press **Start/Pause** to begin.

Water Tank Alert: Same as Hybrid mode (pauses when empty; resume by pressing **Start/Pause** after refilling).

Refer to the user manual for additional details.



Steam



Start/Pause



Water injection indicator light

One-Click Cleaning

In setting mode, press the **Clean** button. Add cleaning solution (e.g., lemon water) to the tank for automatic steam cleaning. Temperature/time cannot be adjusted during cleaning; press **Power** to stop early. Auto-shuts down after completion (ensure tank is filled).



Clean

Preset Menus

Preset menus vary slightly by mode (Air Fryer, Hybrid, Steam) and include common options like chicken drumsticks, fries, steak, shrimp, fish, and dried fruit, with mode-specific parameters—refer to the user manual for details.

