



# 彩色印刷, 120g铜版纸正反面印刷

### OPERATING INSTRUCTIONS

- 1 -

### BUTTON FUNCTION

- 2 -

### HOW TO CONNECT

Open settings and select Accessibility.  
- 3 -

### HOW TO CONNECT

then follow the small print instructions below to double-tap the screen with three fingers.  
- 4 -

### HOW TO CONNECT

Find the device and connect  
**No further steps are required for Android systems, but iOS systems require one more step to use.**  
- 5 -

## 正面

### HOW TO CONNECT

Open Zoom and enable it  
- 6 -

### BUTTON FUNCTION

Photo button	Click to take a single photo, double-click to focus.
	Double-click quickly to like on TikTok
	Press and hold to power off, then press any key to power on and wake up.
Up key	Tap to scroll up in the TikTok video / Long press the volume up button
Down key	Click to scroll down in the TikTok video / long press the volume button.
left key	Click to turn left on the TikTok video.
right key	Click to turn right on the TikTok video / Double-click to pause & play.

- 7 -

### OTHER FUNCTION DESCRIPTIONS

**Bluetooth name**  
PH156

**wake up from sleep**  
In sleep mode, pressing any key will illuminate the indicator light briefly.  
1. If the previously paired phone has Bluetooth enabled, it will automatically connect.  
2. If the previously paired phone has Bluetooth disabled, the indicator light will continue to flash, searching for a pair.

**Turn off Bluetooth on your phone when connecting**  
When the remote control and mobile phone are connected, manually canceling the selfie stick pairing in the mobile phone will cause the selfie stick to directly enter Bluetooth search mode.

**Cancel Bluetooth pairing when connecting**  
When the remote control and mobile phone are connected, manually canceling the selfie stick pairing in the mobile phone will cause the selfie stick to directly enter Bluetooth search mode.

**Connection distance**  
1. Default range is within 10 meters.  
2. When the remote control and mobile phone are connected, if the selfie stick is too far away from the phone and the connection is lost, the selfie stick will directly enter Bluetooth search mode.

- 8 -

### FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

- 9 -

## 反面