

**SENCOR®**

**Let's live!**

Tablet  
**Element 10.1Q001**

**USER'S MANUAL**  
**EN**





**ATTENTION:**

**THE USER PROPERTIES OF THIS TABLET MAY BE AFFECTED BY THE SOFTWARE THAT IS INSTALLED. THIS USER'S MANUAL MAY DESCRIBE FUNCTIONS AVAILABLE ONLY IN DESIGNS DIFFERENT TO YOUR SPECIFIC MODEL.**

## TABLE OF CONTENTS

1.	Important safety instructions.....	3
2.	Description of the device.....	8
3.	Basic operation.....	9
3.1.	Using the touchscreen.....	9
3.2.	Using the buttons on the screen.....	9
3.3.	Memory cards.....	10
3.4.	Turning on the tablet.....	10
3.5.	Turning off the tablet.....	11
3.6.	Charging the battery.....	11
3.7.	Main screen.....	12
4.	Using the basic tablet functions.....	14
4.1.	Entering text.....	14
4.2.	Data connection.....	15
4.3.	Browser.....	15
4.4.	Camera.....	16
4.5.	Play Store.....	16
4.6.	Email.....	17
4.7.	Alarm, stopwatch, countdown.....	17
4.8.	Connect to PC.....	18

5. Tablet settings.....	19
5.1. Wi-Fi connection and networks.....	19
5.2. Device.....	20
5.3. Personal.....	20
5.4. System.....	22
6. Troubleshooting.....	23
7. Technical specifications.....	25

# 1. Important safety instructions

If you want to use this product correctly, carefully read this user's manual and store it for future reference. If you give (sell) the device to somebody, please also include all the documentation together with this device, including this user's manual. The software installed by the manufacturer and the user may significantly affect the properties of the device. Follow the instructions and manuals for the installed software.

We reserve the right to make changes leading to improvements in the properties or operation of the device without prior notice.

We recommend backing up important data on a regular basis as well as before changing software in any way. Neither the distributor nor vendor is responsible for such loss of data.



This symbol indicates important operating or repair instructions in the device's documentation.

## General safety instructions

- Read this user's manual. Follow the instructions contained in this user's manual.
- Heed all warnings.
- Adhere to all instructions.
- Use only accessories determined by the manufacturer.
- An open flame must not be placed on the device, e.g. burning candle.
- Use the device in a temperate climate zone, in domestic conditions, unless expressly instructed otherwise.
- Under no condition does the manufacturer or the vendor of the device take responsibility for any direct or indirect damages caused by not adhering to instructions for installation, setup, use, repair or cleaning of this device as described in this user's manual.
- Protect the device against being knocked, dropped, hit, shaken and against vibrations, humidity and dust.
- Do not use excessive force/pressure on any part of the device, namely the buttons, connectors, touchscreen surfaces.
- Before allowing children to use the device, they must be appropriately to their age, informed about the correct and safe use of the device.

## Practical use

- Protect the device against falls and impacts and protect it against being hit by blunt or sharp objects. Depending on your typical use of the device, use a suitably rigid or otherwise soft case/cover.
- Protect the touchscreen surface against scratching and excessive pressure.
- Only install software with the power adapter connected as this will prevent potential installation errors or damage to the device resulting from an incomplete installation due to a weak power supply
- Do not use the radio function of the device (Wi-Fi, etc.), or completely turn off the device in places where it is required by general or special regulations, for example in aeroplanes, medical surgeries.
- When using personal medical aids (pacemakers, hearing aids), please inform yourself about possible restrictions relating to the operation of electronic equipment in their vicinity and modify your tablet operating mode if necessary.
- **In the event of problems with the operation of the device, fully charge the batteries and perform a factory reset (renew factory settings).** Attention: This factory reset will delete all your personal data, entered accounts, user-installed applications and will restore the system to the same condition as when it left the factory.

## Safe operation

- Install the device according to the instructions in the user's manual.
- Do not install the device in direct sunlight or near sources of heat, such as heaters, heat exchangers, stoves or other appliances (including amplifiers) producing heat. High temperatures may reduce the lifetime of electronic components in the device. Do not use or leave the device in the vicinity of an open fire.
- The device must not be exposed to dripping or running water and objects filled with water must not be placed on it, e.g. vases. Protect the device against rain, spray or contact with any other liquid, do not leave or install the device outdoors. Do not use the device outdoors. Not adhering to these instructions creates a risk of electrical shock or fire hazard.
- Before connecting the device's power adapter to a power socket, check that the voltage in your power socket corresponds to the voltage on the rating label found on the power adapter.
- Make sure that the power cord is not stepped on or compressed, particularly near the power plug, power socket and at the point where it exits the device or the adapter. The power plug (adapter) is used as a disconnection device and must be easily accessible.
- Firmly insert the power plug into the power socket on the device until it is fully pushed in. Do not use excessive force to insert the plug.

- Do not handle the tablet while it is charging to prevent mechanically damaging it – breaking out connectors or breaking cables.
- Remember to always disconnect the power plug (adapter) from the power socket before disconnecting the power cable from the rear side of the device.
- Disconnect the device or the adapter from the power socket during storms or if you will not be using it for a longer period of time.
- Avoid moving the device from a cold environment to a warm one or vice versa, and do not use the device in a very humid environment. Air humidity may condense on some components inside the case of the device and the device may stop working temporarily. If this occurs leave the device in a warm and well ventilated place and wait 1 – 2 hours until the moisture evaporates and the device can once more be used as usual. Take care especially during the first use of the player immediately after its purchase during a cold season.
- Do not use the headphones with a high volume level over the long term so as to prevent hearing damage.
- Do not use the device during activities requiring concentration, for example driving transport vehicles, walking on footpaths and other travel ways (roads, railway lines, escalators, etc.), or work with tools that could cause injuries.
- To achieve the maximum battery lifetime, fully charge the batteries if you will not be using the device for an extended period of time.
- Under no condition does the manufacturer or the vendor of the device take responsibility for any direct or indirect damages caused by not adhering to instructions for installation, setup, use, repair or cleaning of this device as described in this user's manual.

## Repairs and maintenance

- To prevent risk of injury through electrical shock or the creation of a fire, do not disassemble the device or the adapter - there are no parts inside that are repairable or adjustable by the user without relevant equipment and qualifications. Should the device require adjustment or repair, contact a professional service centre.
- Have old batteries replaced at a professional service centre in order to maintain the full functionality of the device and for the ecological disposal of old parts.
- In the case of any unusual events occurring during the use of the device, e.g. if there is a distinct smell of burning insulation or smoke comes out of the device, immediately turn off the device, disconnect the device from the power source and do not use the device until you have received the results of the inspection performed by the employees of the professional service centre.
- Have all repairs carried out by qualified personnel. Repairs are necessary if the device has been damaged in any way, for example if the power cord is damaged, liquid was poured on the device, foreign objects have entered the device, the device has been exposed to rain or moisture, if the device is not working as usual or if it has fallen.

- Before cleaning, carrying, taking discs and memory cards out of the device or other maintenance, disconnect the plug (adapter) from the power socket.
- Backup your data before any intervention (maintenance, etc.) is performed.
- Clean the device only with a dry cloth.
- For cleaning do not use petrol, thinners or any other solvents or use any abrasive cleaning agents, steel wool or any sponges with steel wool.

**Notes on the USB connector:**

USB flash drives must be inserted into the device directly or using the supplied cable. To prevent data transmission failure or its interference do not use a different USB extension cable. Electrostatic discharges may cause the device to malfunction. In such a case, the user must restart the device.

Before permanent use of a USB device, test its ability to communicate with the device and its data reading and writing speed. The performance of the memory device (e.g. speed and available space) may, apart from the properties of the memory hardware, also depend on the software that is used. Find out the properties and hardware demands of the software that is used.

The USB connector is the standard type and is not able to power a USB device with a high power usage (e.g. hard disk drives HDD). Use devices with independent power supplies and power them from their own power supplies.

The device was designed to achieve maximum compatibility with memory devices. With respect to the variety of devices on the market it is not possible to guarantee compatibility with every USB device. In the event of difficulties try formatting the flash drive directly in the device. If problems persist, use a different memory device.

**Due to the wide range of microSD cards / USB devices available on the market it is not possible to guarantee the compatibility of the device with all microSD cards / USB devices.**

**Serial number of the device**

The serial number of the device is unique and unequivocally identifies your device. Enter the serial number of your device together with other details necessary for the definite identification of your device below.

Serial number: \_\_\_\_\_

Date of purchase: \_\_\_\_\_

## Supplement to LCD

### Measures to take when a static image is displayed; red/blue/green pixels on the screen

#### A static image can permanently damage the display part of the television

 
- Do not leave a static image on an LCD screen for longer than 2 hours, because this could damage the screen. This type of damage is known as "screen burn-in".
- Damage to the screen resulting from the above mentioned causes is not covered by the warranty!



#### Red/blue/green/black pixels may appear on the screen

- This is a characteristic feature of liquid crystal displays and does not represent a problem. LCD screens are manufactured using a very precise technology in order to achieve a very fine picture resolution. From time to time several inactive pixels may appear on the screen as a permanently red, blue, green or black pixel (up to 0.001% of the total number of pixels on the screen). This does not in any way affect the features and performance of your television.

## 2. Description of the device

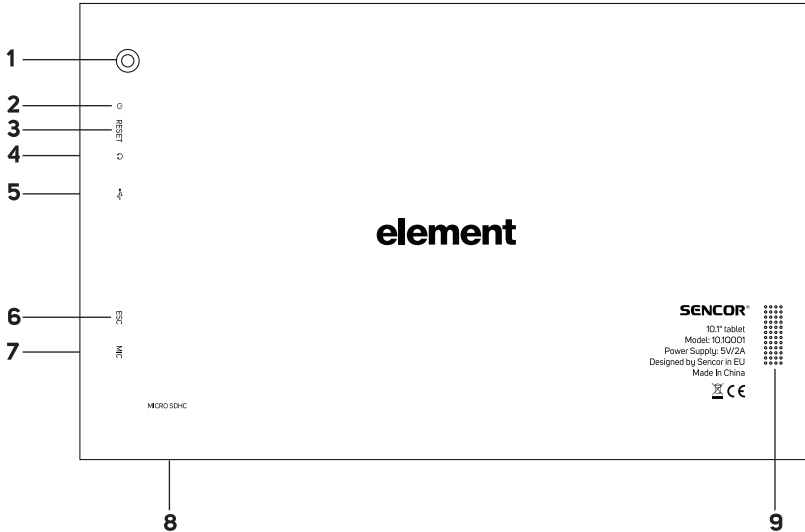

1. **Camera**
2. **Power button:**  
serves to turn the display on/off (when tapped) and to open the quick select screen for shutting down or restarting the tablet (when button is held down).
3. **RESET button:**  
reset using a thin instrument. **Attention: Back up data on to an external storage device before resetting the tablet. Resetting the tablet may result in loss of stored data or tablet settings.**
4. **Headphone jack**
5. **Charging connector**
6. **Escape button**
7. **Microphone**
8. **Memory card slot**
9. **Speaker**

## 3. Basic controls

### 3.1. Using the touchscreen

 
- **Tap** on the respective icon on the main screen or in a tablet menu to launch/open an application, select a desired item from a list or to perform an action (e.g. Edit, Save).
- **Drag an icon** to the main screen by touching, holding down and then dragging the icon to a different location. When viewing websites or stored images, you may move around by **sliding fingers** on the screen (top down, bottom up or side to side).
- **To zoom in/out** of a website or photograph, place your thumb and index finger on the screen and **move them towards or away from each other** to change the image scale.
- **Auto-rotate screen** – set this function in the menu Settings – Display.

#### Note:

The high sensitivity of the capacitive touchscreen display may affect the accuracy of entry, and likewise current or personal conditions or inappropriate protective foils. Try it out and learn to control it by means of touch. Always use the tablet in a dry environment without gloves or other obstacles.

### 3.2. Using the buttons on the screen

- **Volume** buttons (No. 1 and 5 on picture below) are used to change the volume level of the tablet.
- Press the **Back** button (No. 2) to return back by the last performed step depending on the currently active application (this does not apply in the case of confirming a command to uninstall an applications, etc.).
- Press the **Home** button (No. 3) to leave the currently running application and to display the home screen.
- Press and hold the **Running applications** button (No. 4) to show a list of recently launched applications. Press the respective application to re-open it. Slide the running application out of the list (tap and drag it to the side) to shut it down and free up resources (memory) that it was using.



Display the options and settings menu for a selected application by tapping the icon with three dots, as a rule located in the top right corner of the screen in the case where other settings are available.

### 3.3. Memory cards

To insert memory cards, use the slot on the underside of the tablet marked as TF CARD. The memory card is inserted with the contacts facing downwards towards the LCD screen. The cut-out on the memory card points towards the longer side of the tablet. Insert the memory card gently into the slot and use your nail or a blunt instrument to push it in until a gentle click is heard. To take the card out, proceed as follows: push the card in towards the tablet using your nail or a blunt instrument and then release the pressure. The card will be released from the lock and is ready for removal.

**Attention:**

When removing the memory card, it may quickly jump out of the tablet, so always gently hold the memory card back. Never replace the memory card in a location where it could be lost or damaged. Pay increased attention when handling the memory card to prevent damaging it or the slot where it is inserted.

### 3.4. Turning on the tablet

If you wish to turn on a turned off tablet, hold down the **Power** button for a few seconds until the tablet turns on. Then the operating system and other parts of the tablet will start loading. Wait until it loads up fully and the home screen or security message (e.g. screen lock) appears.

#### Turning on for the tablet for the first time

If you are turning on a new tablet for the first time, a "Settings wizard" will guide you through the first start-up and basic settings. The tablet settings that you make before the first start-up (language, WiFi networks, etc.) can be changed at any time in the tablet Settings.

In the first step, select a language for the tablet. The "Settings wizard" will then continue in this language. The wizard consists of several screens, which you may navigate by pressing the buttons at the bottom of the screen "Next"/"Back" or "Skip".

The following messages may appear while the tablet is starting up:

- **"Input Lock Code" (Enter the lock code into the tablet)** - The tablet is locked. Enter the appropriate code for unlocking the tablet.

**Tip:**

Short press the **Power** button to "wake up" the tablet when it is turned on but running in the sleep mode to save battery power by turning off the display.

### 3.5. Turning off the tablet

If you wish to turn off the tablet, press the **Power** button until an options window appears on the screen. Select the option **Power off**. After pressing and holding down the **Power** button, you may also select the option **Restart** the tablet.

**Tip:**

To save battery power, short press the **Power** button to "put to sleep" a running tablet.

### 3.6. Charging the battery

- Insert the charger connector into the tablet and plug the charger into a power socket. On a turned on tablet, the tablet charging process will be indicated in the batter icon in the status bar. On a turned off tablet, a large charging icon (a battery) will appear briefly.
- In the event that the tablet is used up until the battery is completely discharged, it may take some time (several minutes) until the charging icon appears on the screen. A tablet with a completely flat battery cannot be turned on until the battery is charged to a minimum level that is necessary for starting up the tablet.
- The tablet is equipped with a powerful battery for satisfactory operation in ready mode (Sleep/Standby) as well as operation with a turned on screen and running applications. The battery takes several hours to charge (initially quickly, then slowly in the end) to ensure maximum battery life and utilisation of its capacity. We recommend charging the battery only after the tablet first gives a weak battery notification (typically 15 %) and to charge it fully (100 %).
- We recommend that the first three charging cycles are performed completely without interruption (charge up to 100 % and discharge through normal use until it turns itself off). In this way, you will achieve improved battery performance for a longer product lifetime. The tablet and charger heat up during the charging process, which is normal.
- The full battery capacity icon on the screen indicates that the battery is fully charged and to stop charging the tablet.
- When the charging process is complete, unplug the charger from the power socket and disconnect the connector from the tablet.

**Attention:**

 
Charging must be performed in a well ventilated area at an ambient temperature of between -10°C and +45°C. The original charger supplied with the tablet must be used. Using a different charger may be dangerous or may result in not achieving the expected performance or may lower, in particular, the lifetime of the battery. If the tablet turns itself off automatically or the message "Battery is low" appears, you should charge the battery. If the battery was not completely flat before charging, the time until it is fully charged will be shorter.

### 3.7. Main screen


**Attention:**

Do not use force and do not push on the display when using touch controls. If the system response time is not up to your expectations, remove the cause (e.g. moisture on the display, gloves) or wait for a system response in the case where it is busy with another application or activity.

- The **Status bar** (top row on the screen, No. 1 on the picture below) may show, for example, battery level, WiFi network connection and notifications about installed applications.
- **The Home screen** (default) contains the icons of the most frequently used items. The left side panel (No. 2) offers easy access to Google applications (search the internet, voice recorder). You may place your applications, widgets (No. 3), folders or shortcuts (No. 5 and 6) on the home page to enable their fast start-up. The right side panel (No. 4) contains icons for starting basic tablet functions (e.g. Settings, Gallery). Applications in this panel can be changed as required (see Using the touchscreen – moving icons). In the event of a large number of items, you may use the wide area of the home screen (the home screen contain several areas, which you navigate by sliding your finger from right to left and vice versa). The graphical indicator on the screen always shows your location on the screen (No. 7).

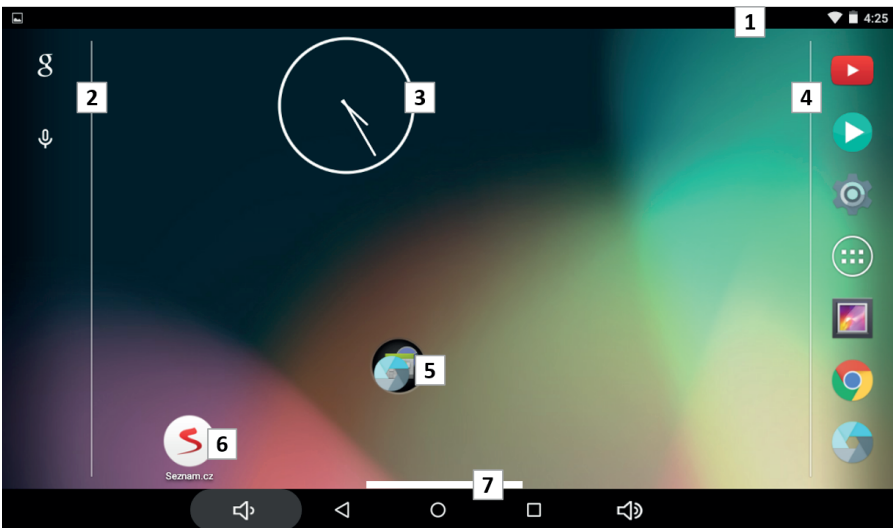

- **Display the Information panel** containing information about current application notifications by sliding the status bar downwards. Display the quick select menu by repeatedly pulling down the top panel.
- **The quick select menu** enables quick activation/deactivation of selected tablet functions or displaying of detailed information. The quick select menu consists of: settings (No. 1), brightness (No. 2), WiFi (No. 3), Bluetooth (No. 4), Flight mode (No. 5), Auto-rotate screen (No. 6), location (No. 7), cast screen to another device (No. 8).

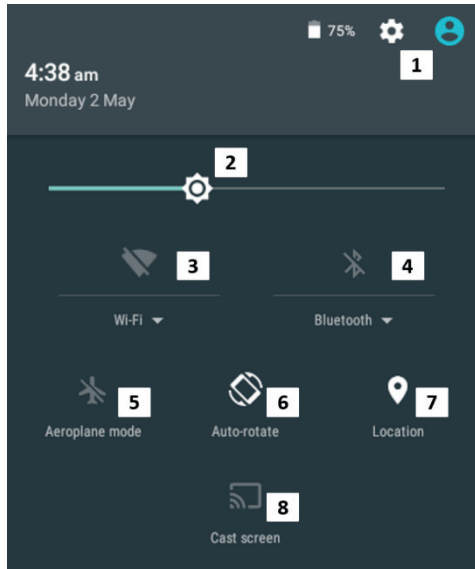 

## 4. Using the basic tablet functions

Certain applications are already pre-installed when the device is purchased.

### Note:

 
The operating system is under continuous development and its parts may change (namely the graphical interface) or new parts may be added or old parts removed. You are regularly informed about such changes, pay attention to this information. After these changes are made, the appearance or controls may differ slightly from what is described in this user's manual.

### Attention:

The contents of remote preset services and access to them is administered by third parties and this is not guaranteed by the manufacturer of the device (e.g. YouTube, Google Chrome). The manufacturer of the device does not provide any basic or supplemental licences to content provided by third parties.

### 4.1. Entering text

- The keyboard automatically appears on the screen when it is necessary to enter text or numbers (as a rule when the required application or text entry function is pressed, e.g. the web address entry field is pressed in the browser, No. 1 in the picture below). The size of the keyboard on the screen can be changed by rotating the tablet to "landscape" (when the auto-rotate screen function is enabled).
- **Hold down and drag** to select the character with a diacritical symbol (e.g. letter "š" after pressing, hold and drag the selection for letter "s") or number (number "2" in the menu for letter "w").
- Remove incorrect characters using the **"Backspace"** button on the top right side of the keyboard (left arrow with cross). If you need to delete or enter characters in the higher located text, select the desired location by pressing with your finger, edit as required and then press the location where you wish to continue with the text.
- When the **special character** buttons ("**?123**" and ". ") are held down, they will display an offer of punctuation characters. Use the **Space bar** to make a space between entered text. To change the keyboard settings, press and hold down the forward slash key ("/").
- **Press the key "?123"** to toggle to a keyboard with special characters, press "ABC" to toggle back to the keyboard with letters. Press the **"Shift"** key (up arrow on the right and left side of the keyboard) to toggle to the capital letter mode. Press and hold to activate capital letters until this key is pressed again.

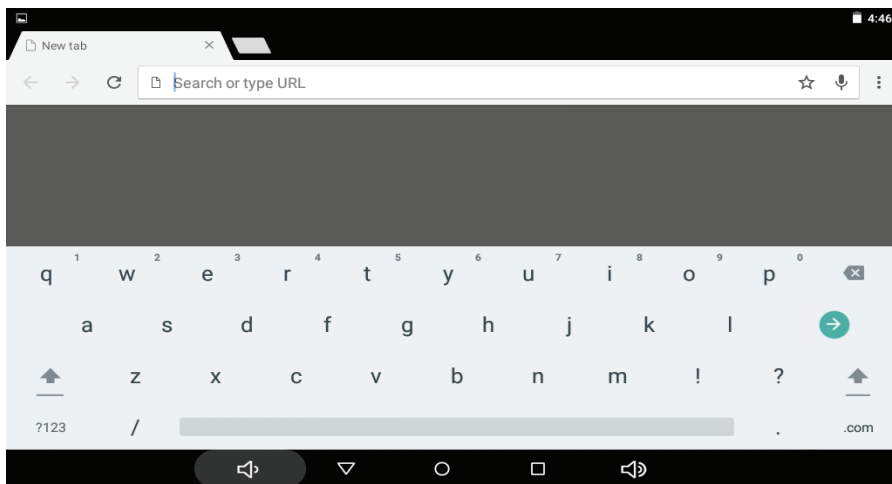

## 4.2. Data connection

Your tablet can connect to the internet via a WiFi network. You can enable/disable data transfer in the tablet settings (Wireless and networks) or in the quick select menu. Ongoing data transfer will be indicated in the status bar on the WiFi icon with small arrows.

## 4.3. Browser

The tablet has the Google Chrome browser pre-installed. It is used for accessing the internet and viewing websites. This browser may not be able to display all types of websites correctly. For the Browser to function properly, you must have an active data connection.

Press the browser icon to launch the application. The address entry field is located at the top of the screen. To display a selected website, press the address entry field of the browser and use the keyboard to enter the address of the website. Confirm your choice by selecting from the offered list that is based on the text you entered into the address field.

Press the icon with three dots on the right of the address field to display the browser options (e.g. open new tab, history, settings).

## 4.4. Camera

To zoom in/out, place your thumb and index finger on the screen (moving them towards or away from each other will change the image scale). Take a photograph by pressing the camera icon.

To show the camera to video recorder toggle menu, slide a finger from left to right along the display (by dragging the screen from the left part of the display).

The taken photographs/videos can be immediately displayed in the Gallery application after sliding a finger from right to left along the display (by dragging the screen from the right part of the display). The Camera application (and similarly also the Gallery viewing application) stores photos and recordings in memory preset for storage (Settings/Storage) by the user, or in the tablet's internal memory, or on to an inserted memory card.

A menu can be displayed on the camera home screen (icon with three dots) to access other options, e.g. to toggle between the front and rear camera, to display a grid or to set a self timer.

## 4.5. Play Store

The Play Store application allows you to download applications on to your tablet. A stable internet connection is required to search for and download applications.

### Downloading an application

Tap on the Play Store icon and select the application that you wish to download from the default groups or you can search for it by name in the upper part of the screen by entering its name after pressing the magnifying glass icon.

#### Note:

If you are logging in to the Play Store for the first time, it is necessary to register with a Google account. Enter your email account and in the next step enter your password or create a new account using the wizard. Then tap on "Next". To complete the registration, it is necessary to confirm agreement with the contractual conditions. After logging in for the first time, you will be requested to enter your credit card details. If you do not wish to use a credit card, select the option "Remind me later".

Select an application that you wish to download and tap on "Install" and then "Accept". As soon as the downloading process starts, the download results information window/bar will appear. Once the application is downloaded, it is installed and a confirmation symbol will appear on the information bar at the top of the screen.

Upon completion, show the details by pulling down the information bar. Tap on the successfully installed item to launch the application.

### Uninstalling an application


In the top left corner of the Play Store application, press the Menu icon (three row icon). In the application menu under the tab "My applications", you can display a list of installed applications. Here you can also Uninstall a selected application after clicking on its icon.

## 4.6. Email

Upon first start-up, enter your email address and tap on the "Next" button and in the next step select the email account type (IMAP, POP3, Exchange). Then enter the password of the email account and set the parameters of your account. If problems occur, please contact your email service provider.

When using multiple email accounts, it is possible to set them up and to switch between them using the menu located in the top left corner of the screen (three row icon), which also serves to show the email message folders of the currently displayed email folder. The Settings tab is the last item displayed in the menu (at the end of the available folders for work with email).

## 4.7. Alarm, stopwatch, countdown

**Setting the alarm clock** - In the Clock application under the alarm tab (top left icon)  press the "plus" icon and drag your finger along the dial to set the desired alarm time. In the next step, you can activate/deactivate the set alarm (by pressing the toggle button located on the right of the set alarm time), select repetition for individual days of the week, select a ringtone for the alarm and enable/disable vibrations during an alarm.

**Tip:**

In the Clock application you can also see an overview of the current time in set cities, a countdown function or a stopwatch (following the top icons behind the alarm icon at the top of the screen from left to right).



## 4.8. Connect to PC

Connect a USB cable to a computer and your tablet. Wait until your computer's operating system installs the necessary drivers for communicating with the tablet. To display stored files and to work with them on your computer, open the information panel menu on the tablet's home screen and select the option "USB connected" and then confirm the option "Activate USB storage".

**Attention:**

Connection of the tablet to a computer is supported by Microsoft operating systems Windows 7 and higher.

**Note:**

While there is a software connection of the internal memory or memory card to the computer system, this memory will not be accessible to the tablet. It will not be possible to use certain tablet applications, e.g. camera. After disconnecting from the computer, the tablet will renew access to this memory.

## 5. Tablet settings

The options for tablet settings are separated into several sections. Below you will find the most frequently used settings for your tablet.

### 5.1. Wi-Fi connection and networks

- **WiFi** – the icon for enabling/disabling a WiFi connection is located on the top right. When a WiFi connection is activated, a list of the available networks is shown once all are loaded and identified. To activate a new connection, tap on the selected WiFi network and enter the password if required. If problems occur, please contact the administrator of the WiFi network to which you are unable to connect.
- **Bluetooth** – the icon for enabling/disabling a Bluetooth connection is located on the top right. When activated, the tablet will perform a scan and attempt to identify devices that are set as Visible. To activate a new connection, tap on the selected device and enter the pairing code if required.
- **Transferred data** – this function serves to provide information about the history of the number of data transfers and an overview of the utilisation of data volumes by individual applications installed on the tablet in the selected period (custom setting possible) as calculated by the tablet. Master systems may, however, also count certain service related transfers that are not accessible in the tablet itself.

#### Other...

- a) **Flight mode** - here you can enable/disable the Flight mode (the tablet is not logged into the network of the operator and data transfers do not function, other applications can be used)
- b) **Tethering and portable hotspots** – with this function, you can create your own WiFi/Bluetooth hotspot and share a data connection with those nearby. In this mode, the tablet changes roles from being a user (client) to the role of a provider (of WiFi/BT). To resume the role of a client, it is necessary to disable tethering.

## 5.2. Device

- **Display** – serves to adjust settings for wallpaper, brightness, auto-rotate screen, sleep mode, screensaver and font size. Using the Screen stream function, you can stream your tablet's screen using a WiFi connection to a remote device (e.g. supported TV monitor).
- **Sound and notifications** – here you can change sound settings and their volume.
- **Storage** – the default memory for storage can be set (memory of the tablet or SD card), show an overview of memory use, use the safe SD card removal function or delete memory card function if a memory card is inserted in the tablet. Data deleted from a memory card cannot be undeleted.

### Attention:

The total shown storage capacity of the tablet is also used for system resources and therefore it cannot be fully utilised. When updating applications, ensure that there is sufficient space available in the internal memory. It is recommended to install your own applications in external storage.

- **Battery** – show an overview of individual applications and their share of battery use.
- **Applications** – displays a list of downloaded / launched and installed applications on the tablet. To display selected categories, tap and drag the screen from right to left or from left to right. Tapping on the selected application will show details about the application including the option to uninstall/remove the application from the tablet. Preset applications cannot be uninstalled.

## 5.3. Personal

- **Location** – to function correctly, certain applications require the location of the tablet to be determined via WiFi hotspots. The enable/disable icon is located on the top right. The location mode offers the option to set how location information is to be obtained.
- **Security** – manage security, option to lock screen after a given time interval or set a password for the tablet. It is also possible to set Device (application) managers, permission for installation of applications from unknown sources, installation of suspicious files and modification of rights of applications to use certain tablet functions.

**Tip:**

By filling in the items "Owner information", it is then possible to display the owner's contact details on a locked tablet screen in the event that your tablet is lost.

Accounts - the tablet supports simultaneous connection to several different email accounts using protocols IMAP, POP3 and/or Exchange in the case of a company email account. Please contact the administrator of your email server for correct setup of your email account. In order to fully utilise all the functions of your tablet (e.g. Play Store services, photo and document synchronisation, Google Maps) it is appropriate to connect the tablet to a Google account. You can add a new or already existing account. In the Add account options, navigate between the individual settings steps using the arrows at the bottom of the screen (step back/forward).

- **Connecting to an already existing Google account** – fill out the login details for the Google account that you use (email address and in the following step your password).
- **Creating a new Google account** – select the option "Create a new account" and fill in your name and surname, select a suitable unique username (email address) and enter your login password (enter the password twice to eliminate the possibility of an accidental typing error). You can also fill in your contact details for renewing a forgotten password by means of an SMS or an alternative email address. Certain steps in the settings can be skipped entirely or postponed until later without affecting the basic functionality of the Google account (e.g. account upgrade, payment details settings).

**Tip:**

You do not need to enter your bank card details into your account if you are not planning to use them for purchasing paid applications in the Play Store.

**Attention:**

A reliable internet connection is required while creating your new account.

- **Language and input** – here you can change the tablet's language, keyboard and text input methods.
- **Backup and data reset** – the function "factory data reset" will restore the tablet's default factory settings and irretrievably delete all data stored on the tablet (e.g. music, contacts, photographs).

**Tip:**

Before launching this function, back up all the data on the tablet on to an external device away from the tablet where the reset to factory settings is performed.

## 5.4. System

- **Date and time** – you can manually change the current date and time of the tablet including its display format.
- **Accessibility** – serves to adapt the tablet in the event of difficulties with its controls (e.g. gestures for zooming in, large font, speaking a password, delay period for tapping and holding).
- **Print** – this menu item is prepared for the case of a printing service being installed.
- **Information about the tablet** – here you will find system information about the device.

## 6. Troubleshooting

**Attention:**

Under no circumstances should you attempt to repair the device yourself as it contains no parts that users can repair themselves. Always take the device to an authorised service centre if repairs, adjustment or other regular services are necessary. Unauthorised tampering with the device is considered to constitute a breach and shall void the warranty policy. Neither the importer, supplier, distributor or vendor bear any responsibility for any losses caused by a breach of the provisions specified in this user's manual. Do not open the device as there is a risk of injury by electric shock. If the device malfunctions, first check the following list of problems and their solutions. If you are not able to remedy the fault with the help of the following tips, contact your vendor.

**The device does not connect to Wi-Fi.**

- Check that Wi-Fi works on another device.
- Make sure that the respective Wi-Fi router is within sufficient range of the tablet. Walls and other obstacles may reduce signal strength.
- Check that you have entered the correct password.

**It is not possible to turn on the device.**

- The battery is almost flat and it is not possible to turn on the device. Connect the power adapter and charge the battery. Check that the power adapter is correctly connected.
- Hold down the main power button for about 10 seconds to restart the device.

**Device heating up**

- The device heats up during use, when the highest screen brightness is set and while charging. This is normal.

**The system exhibits anomalies and does not work correctly.**

- The installation of third-party applications may cause the system not to function. Hold down the main switch for about 10 seconds to restart the device.

**It is not possible to log into email or to download an application.**

- Check that the device is connected to Wi-Fi and that the internet is working.
- Check that you have entered the correct login details for your email website.
- Check that the system time is the same as local time.

**The operating time is too short.**

- Battery life may vary depending on temperature and other parameters. Battery life will be affected by temperature that is too low or too high. We recommend that you use the device at normal room temperature.
- The life of the battery depends on the way it is used. High volume, Wi-Fi and frequent use may cause the battery to go flat quickly.

**No sound is reproduced in the connected headphones.**

- Check the volume.
- Use a different audio device to check that the audio file is not damaged.

**Colour disproportions of video files or images.**

- Hold down the main power button for about 10 seconds to restart the device.

**It is not possible to copy files.**

- Check that the device is correctly connected to the computer.
- Check the memory status.
- Check whether the USB cable is damaged.

**Other problems**

- In the event of other problems, perform the following steps before sending the device to an authorised service centre.
- Step 1: Hold down the main switch for about 10 seconds to restart the device. Check whether the given function now works correctly.
- Step 2: Backup the data stored in the device and perform a factory data reset in Settings/Backup&Reset/Factory Data Reset.

## 7. Technical specifications

Display: 10.1" TN display (5 point touch)  
Weighing sensitivity: 1024 x 600 pixels  
CPU: Allwinner A33, 1.5 GHz QUAD CORE  
GPU: Mali-400MP2  
RAM: DDRIII 1GB (3D accelerator suitable for 3D games and 3D films)  
Integrated memory: 8 GB e-Nand  
Micro SDHC slot (up to 32 GB)  
Front/rear camera (0.3/2.0 megapixels)  
Built-in WiFi (802.11 b/g/n)  
Bluetooth 4.0  
OS: Android 5.1.1  
Support for Android applications (via Google Play)  
Multi-language menu  
Video: MPEG-4 H.264/H.263, AVI, MKV, WMV, MOV, MP4, FLV, MPG, etc.  
Audio: MP3, WAV, AAC, AMB, FLAC, etc.  
Image - JPEG, BMP, GIF, PNG, etc.  
E-Book - EPUB, PDF, FB2, PDB, CHM, HTML, TXT, UMD, WORD, EXCELL, etc.  
Recording functions: MP3, WAV  
High-speed portable USB 2.0 (storage/USB host)  
Built-in battery: polymer lithium (5 000 mAh)  
Accessories: USB cable, charger (5 V DC, 2 A), user's manual  
Dimensions: 257.5 x 148.5 x 10.5 mm  
Weight: 488 g

The technical specifications provided above may change without prior notice.  
The original version is in the Czech language.

Address of the manufacturer: FAST ČR, a.s., Černokostecká 1621, Říčany CZ-251 01

The CE symbol displayed on the unit, in the user's manual and on the packaging shows that the unit meets the basic requirements of the R&TTE Directive, 1995/5/EC, Directive for low voltage 73/23/EEC. The declaration of conformity can be found at [www.sencor.cz](http://www.sencor.cz).

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.



### **DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**

This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these products to determined collection points. Or as an alternative in some European Union states or other European countries you may return your products to the local retailer when buying an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

#### **For business entities in European Union states**

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

#### **Disposal in other countries outside the European Union**

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives that apply to it.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make these changes.

# SENCOR®

## EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

### **This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be identified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

### **Authorized service centers**

Visit [www.sencor.eu](http://www.sencor.eu) for detailed information about authorized service centers.

# SENCOR®

Let's live!



[www.sencor.cz](http://www.sencor.cz)

Designed in Europe by Sencor®, Made in China

