

SENCOR®

SBU 7730NP

SBU 7790NP



EN ■ Super Blender

READ CAREFULLY AND STORE FOR FUTURE USE.


- This appliance may be used by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the appliance in a safe manner and understand the potential dangers.
- Children must not use this appliance or play with it. Keep this appliance and the power cord out of reach of children.
- This appliance is designed for domestic use and is used for blending food.
- Before connecting this appliance to a power socket, make sure the voltage stated on its rating label corresponds to the voltage in your power socket.
- Only use the appliance with the original accessories that came with it.
- Before putting the appliance into operation, check that it is correctly assembled and that the blending jar is properly closed.
- Never start the appliance unless the outer lid is properly secured to the blending jar.
- Do not attempt to blend ingredients that are too hard, e.g. stones contained in apricots, peaches, avocado, etc., walnut shells or bones. Otherwise the appliance may be damaged.
- Do not pour liquids hotter than 80°C into the blending jar. Hot steam or splashing hot liquids may cause scalding.
- Always start blending hot liquids and foodstuffs at a low speed.
- When blending hot liquids and foodstuffs, the inner cap must be inserted inside the outer lid and locked in firmly.
- When using the pusher attachment while blending, the blending jar should be filled to no more than $\frac{2}{3}$ of its maximum capacity.
- The maximum continuous operating time of the appliance is 6 minutes. Before turning it on again, allow it to cool down for at least 5 minutes. After three consecutive cycles allow the appliance to cool down for 15 minutes.
- When using the pusher attachment, in order not to overload the motor, do not run the appliance continuously for longer than 1 minute.
- Do not blend dry foodstuffs (grains, etc.) for longer than 2 minutes, otherwise this may damage the blender. Frequent blending of dry foodstuffs may result in increased wear on the blade assembly and changes to the visual appearance of the blending jar.
- The appliance must not run without a load. The incorrect use of the appliance may negatively affect its lifetime.
- You may add ingredients into the blender jar while blending through the hole in the outer lid or use the pusher attachment to speed up the blending process. Do not put your hands or items, such as kitchen knives, forks, wooden spoons, etc. into the blending jar.

**Warning:**


Incorrect use may lead to injuries.

- Be especially careful when emptying the jar and when cleaning to prevent injury on the blade assembly.
- Always turn off the appliance and disconnect it from the power socket if you will not be using it and if you will be leaving it without supervision, before assembly, disassembly, cleaning or moving it.
- Check that the motor unit is turned off, disconnected from the power socket and that the rotating parts have come to a complete stop before removing the blending jar from the motor unit.
- Do not submerge the motor unit and its power cord in water or any other liquid, or wash these parts under running water.
- If the power cord is damaged, have it replaced at a professional service centre. It is forbidden to use the appliance if it has a damaged power cord or plug.
- Do not use the appliance when it is not functioning properly or showing signs of damage.
- In order to prevent a hazardous situation arising, do not repair the appliance yourself or modify it in any way. Have all repairs or adjustments performed at an authorised service centre.

A

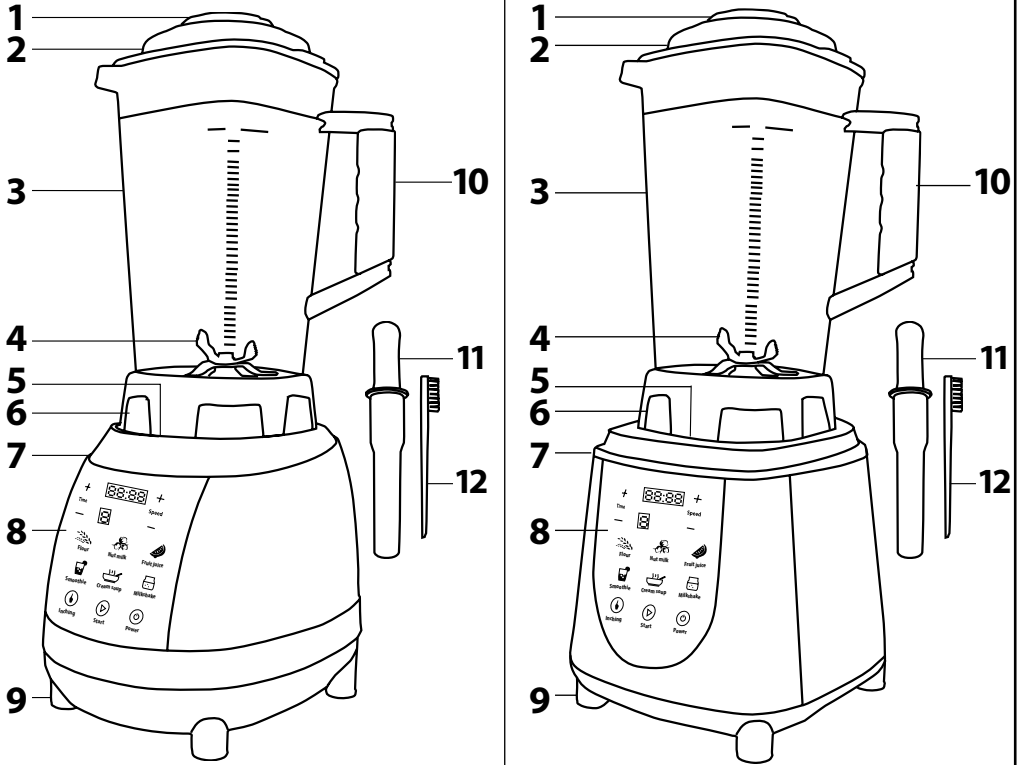

B

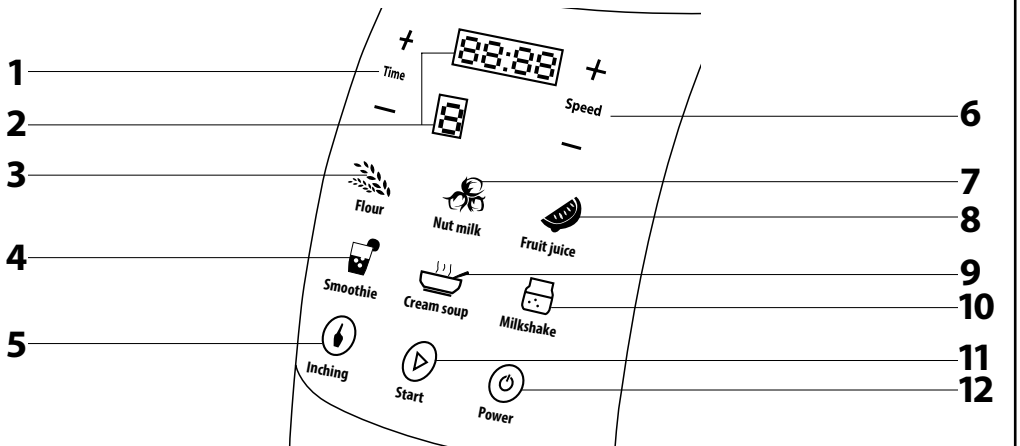

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future reference. We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE APPLIANCE

- A1** Inner cap
can be used to add ingredients to the blending jar while the blender is running.
- A2** Outer lid with hole
After removing the cap, you may add ingredients into the blending jar while blending or you may use the pusher attachment to speed up the blending process.
- A3** 2-litre blending jar
it is made from very durable plastic Tritan, which does not absorb flavours or odours and does not contain toxic Bisphenol A.
- A4** Six blade assembly
it is an integral part of the blender jar.
- A5** Safety mechanism
prevents the blender from being turned on when the blending jar is not correctly seated on the motor unit.
- A6** Silicone pad
- A7** Motor unit
- A8** Control panel with display
- A9** Anti-slip feet
- A10** Handle
- A11** Pusher attachment
its length is designed in such a way that after being inserted into the hole in the outer lid, it will not come into contact with the blade assembly.
- A12** Cleaning brush
-
- B1** Touch button +/- for setting blending time from 5 seconds to 6 minutes
- B2** LCD display
shows blending time and speed.
- B3** Touch button for setting operating mode "Flour"
- B4** Touch button for setting operating mode "Smoothie"
- B5** Touch pulse button for running the blender in short bursts at maximum speed
- B6** Touch button +/- for setting speed from 1 to 8
- B7** Touch button for setting operating mode "Nut milk"
- B8** Touch button for setting operating mode "Fruit juice"
- B9** Touch button for setting operating mode "Cream soup"
- B10** Touch button for setting operating mode "Milkshake"
- B11** Touch button START
serves to start the blender.
- B12** Touch button POWER
serves to turn the blender on and off or to stop the blender.

PURPOSE OF USE AND APPLIANCE FEATURES

- This multifunction blender represents a revolutionary solution in food processing. Within a few short moments you will prepare a whole range of meals and beverages, such as fresh nutritious drinks, milkshakes, cream soups, sauces, spreads, blended baby food; you will grind meat, nuts or grains, or create nut or soya milk, crushed ice or outstanding creamy ice cream or sorbets.
- Thanks to its powerful 1800 W motor, this blender will handle even larger pieces of fruit and vegetables, including soft kernels and peels. In this way, you will give your body the valuable nutrients that are found in the pulp, kernels and peels in the form of an easily digestible nutritious drink without having to laboriously cut the fruit and vegetables into small pieces in advance. The pusher attachment will make blending large food pieces easier and will speed up the blending of frozen foods to prevent them from thawing. The two-part lid enables the addition of ingredients into the blending jar while blending or the preparation of hot meals in the blending jar thanks to steam release holes in the lid. Its anti-slip feet provide stability to the blender during its operation.

BEFORE FIRST USE

- Take the appliance and its accessories out of the packaging materials.
- Thoroughly wash all parts intended for contact with food, the (inner cap **A1**, outer lid **A2**, blending jar **A3** with blade assembly **A4**, and the pusher attachment **A11**, using warm water and a neutral kitchen detergent. Then rinse them with clean water and dry thoroughly with a fine wiping cloth.



Attention:

When cleaning the blending jar **A3**, be very careful not to injure yourself on the sharp edge of the blade assembly **A4**.

ASSEMBLING AND DISASSEMBLING THE APPLIANCE

- Before you start assembling or disassembling the appliance, check that the motor unit **A7** is turned off and disconnected from the power socket and that the rotating parts have come to a complete stop.
- Place the motor unit **A7** on a stable, even, dry surface, for example on a kitchen countertop. Seat the blending jar **A3** on to the motor unit **A7**. The blender is equipped with a safety mechanism **A5** that will prevent it from being turned on unless it is correctly assembled.
- Place the outer lid **A2** on to the blending jar **A3** and firmly push it down along its entire perimeter.
- Insert the inner cap **A1** into the outer lid **A2** and turn it all the way clockwise. This will lock it in place.
- To disassemble proceed in the reverse sequence.

OPERATING THE APPLIANCE

- Make sure that the motor unit **A7** is turned off and disconnected from the mains power socket. Place the ingredients that you wish to blend into the blending jar **A3**. Assemble the blender according to the instructions in the chapter Assembling and disassembling the appliance.



Attention:

To achieve optimal results, the blending jar should be filled to at least 1/4 of its capacity.

The maximum capacity of the blending jar **A3** is 2 litres. Do not fill it past the maximum mark.

If you wish to blend hot liquids, prepare soya milk or use the pusher attachment **A11** while blending, do not fill the blending jar **A3** to more than 3/4.

- Connect the power cord to a power socket. The control panel **A8** lights up for a short moment. Then the blender switches to stand-by mode. Button **B12** starts flashing. To turn on the blender, press button **B12**. The preset operating mode touch buttons will light up and the blending time 00:00 and speed level 4 will appear on the display.
- To select a preset operating mode, use the touch buttons **B3-4** and **B7-10**. You will find an overview of all the operating modes in chapter Quick guide to processing ingredients. To start the blender, press button **B11**. In all the operating modes, the blending speed and duration are automatically regulated. While blending, we recommend to use your hand to hold down the jar from above. After the preset blending time has elapsed, an acoustic signal will be made and the blender will automatically stop running. If you wish to stop the blender sooner, press the button **B12**. After being idle for two minutes, the blender will automatically switch to the stand-by mode. The control panel with display **A8** will turn off and the button **B12** will start flashing.
- If you do not wish to take advantage of the available preset modes, you may use buttons **B1** and **B6** to set the blending time and speed manually.
- The pulse button **B5** is used for running the blender at maximum speed in short intervals. The blender will run as long as the button **B5** is pushed down. The maximum continuous operating time in this mode is 1 minute.
- While blending or after pausing, you may add ingredients into the blending jar **A3** through the hole in the lid **A2**. While blending hot liquids and meals, the inner cap **A1** must remain locked in place.
- If while blending, the ingredients are not circulating inside the blending jar **A3**, remove the inner cap **A1** and use the pusher attachment **A11** to push the ingredients towards the blade assembly **A4**. The pusher attachment **A11** is designed in such a way that after being inserted into the hole in the outer lid **A2**, it will not come into contact with the blade assembly **A4**. Never put the pusher attachment **A11** into the blending jar **A3** unless it is closed with the outer lid **A2**.



Attention:

The maximum operating time is 6 minutes. Then allow it to cool down for 5 minutes. After three consecutive cycles allow the appliance to cool down for 15 minutes.

To avoid overloading the motor, do not use the pusher attachment **A11** continuously for longer than 1 minute.

- If ingredients stick to the blade assembly **A4** or the inside walls of the blending jar **A3**, switch it off and unplug it from the power supply. Make sure that the blade assembly **A4** has stopped rotating. Carefully remove the blending jar **A3** from the motor unit **A7**. Take off the lid, and using a plastic spatula, clean the blade assembly **A4** and the walls of the blending jar **A3**. Put the lid back on and seat the blending jar **A3** back on to the motor unit **A7**. Plug the power cord into a power socket and continue blending.
- After you finish using it, disconnect the blender from the power socket. Check that the blade assembly **A4** has stopped rotating and take the blending jar **A3** off the motor unit **A7**. Use a plastic spatula to remove food from the blending jar **A3**. Disassemble and clean the appliance according to the instructions in chapter Cleaning and maintenance.

BUILT-IN THERMAL FUSE

- The thermal fuse protects the motor against overheating. If the appliance automatically turns off during operation, unplug the power cord from the power socket. Take the blending jar **A3** off the motor unit **A7** and check that the blade assembly **A4** is not blocked by ingredients inside of the blending jar **A3**. Wait approximately 15 minutes until the motor unit **A7** cools down. Then you may continue using the blender.

QUICK GUIDE TO PROCESSING INGREDIENTS

| Button | Operating mode | Duration of operating mode | Speed level | Recommended purpose of use |
|--------|----------------|----------------------------|-------------|--|
| B3 | "Flour" | 2 minutes | 6, 8 | Grinding grains |
| B4 | "Smoothie" | 30 seconds | 8 | Preparing smoothies, crushed ice, sorbets, creamy ice creams and blending other frozen foods |
| B7 | „Nut milk“ | 4 minutes | 6, 8 | Preparing nut or soya milk |
| B8 | "Fruit juice" | 2 minutes | 6 | Preparing fresh fruit juices and nutritional drinks |
| B9 | "Cream soup" | 5 minutes | 4, 8 | Blending creamy soups, sauces, etc. |
| B10 | "Milkshake" | 70 seconds | 4, 8 | Preparing milkshakes |

CLEANING AND MAINTENANCE

- Before cleaning the appliance, always turn it off and disconnect it from the power socket. Make sure that the rotating parts have stopped, and disassemble the blender into its individual parts.
- We recommend cleaning the appliance immediately after using it to prevent food from drying on.
- Thoroughly wash the blending jar **A3**, inner cap **A1** and outer lid **A2** and the pusher attachment **A11** using warm water and a neutral kitchen detergent, rinse under clean running water and dry thoroughly with a fine wiping cloth or allow to dry naturally. You may use the included brush **A12** to clean the blade assembly **A4**. Likewise, after using it, you may clean the blending jar **A3** by running the blender at maximum speed for approximately 10 seconds filled with half a litre of clean lukewarm water with the addition of a few drops of kitchen detergent. To run the blender at maximum speed for a short interval, use the pulse button **B5**. This will remove the food remains stuck on the inner wall of the blending jar **A3** and on the blade assembly **A4**. After using kitchen detergent, thoroughly rinse the blending jar **A3** with clean water.



Attention:

When cleaning, be very careful not to injure yourself on the sharp edge of the blade assembly **A4**.

- To clean the outer surface of the motor unit **A7**, use a cloth lightly dipped in a weak detergent solution. After applying the kitchen detergent, wipe the surface with a cloth lightly dampened in clean water and then wipe dry. Do not submerge the motor unit **A7** and its power cord in water or any other liquid, or rinse these parts under running water.
- Do not use solvents or abrasive cleaning products for cleaning. Otherwise, the surface of the appliance may be damaged.

STORAGE

- If you will not be using the appliance, store it in a dry place out of children's reach. We recommend storing the blending jar **A3** slightly open to enable air to freely circulate and to prevent the formation of undesirable odours inside.

TECHNICAL SPECIFICATIONS

| | |
|---------------------------|-----------|
| Rated voltage range | 220–240 V |
| Rated frequency..... | 50/60 Hz |
| Rated power | 1 800 W |
| Noise level..... | 85 dB(A) |

The declared noise emission level of the appliance is 85 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

Changes to text and technical parameters are reserved.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.