 


# 7" PERSONAL ELECTRIC SKILLET

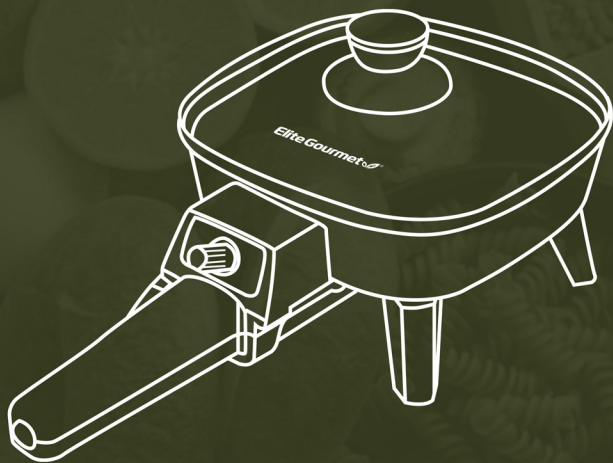

**INSTRUCTION MANUAL**

MODEL: EFS059

# THANK YOU

for your purchase!

FOLLOW US FOR MORE KITCHEN  
TIPS, HACKS, & INSPIRATIONS!



[shopelitegourmet](#)

## LET'S GET COOKING!

---



**Maxi-Matic, USA**  
18401 E. Arenth Ave  
City of Industry, CA  
91748-1227



[shopelitegourmet.com](#)  
Visit our website to  
contact us for support.  
Register your product online!

# 7" PERSONAL ELECTRIC SKILLET

|                                     |    |
|-------------------------------------|----|
| important safeguards .....          | 3  |
| parts identification.....           | 6  |
| attache/detach handle.....          | 7  |
| how to use your skillet.....        | 8  |
| cleaning and maintenance.....       | 9  |
| warranty and customer service ..... | 10 |



## **READ ALL INSTRUCTIONS BEFORE USE**

To ensure your safety and enhance your experience with this product, always read the instruction manual before using.

# important safeguards

The Elite Brand takes consumer safety very seriously. Products are designed and manufactured with our valued consumers' safety in mind. Additionally, we ask that you exercise a level of caution when using any appliance by following all instructions and important safeguards.

When using kitchen appliances, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS CAREFULLY.
2. Wash the Lid and Skillet before using for the first time.
3. Do not use this product for anything other than intended purpose.
4. Keep this product out of the reach of children and pets. This product is not intended for use by children.
5. Close supervision is necessary when this product is used near children.
6. Do not leave the product unattended while it is in use. Always unplug the product from the electrical outlet when it is not in use.
7. Place the product on a dry, flat, stable, heat-resistant surface.
8. Use in a well-ventilated area.
9. Do not place the product on or near gas or electric burners. Do not place the product inside or on top of a heated conventional oven, microwave oven, or other heat source.
10. Keep the Power Cord and product away from heated surfaces.
11. Do not submerge, immerse or expose the Handle/Temperature Control or Power Cord of this product to water or other liquids.
12. Do not touch hot surfaces. Always touch this product by its Handle and Knobs to avoid burns. Use protective oven mitts or gloves to avoid burns or serious personal injury.
13. Do not move the product while it is in operation.
14. Stay clear of the steam during cooking, as steam may cause serious burns.
15. Always ensure the Handle/Temperature Control is securely attached to its Base before each use.
16. Plug the product into a standard 120V AC electrical outlet.

## important safeguards (cont.)

17. Do not use attachments not sold or recommended by the manufacturer; fire, electrical shock or serious personal injury may result.
18. Never operate the product while standing/sitting in a damp or wet area.
19. To avoid a circuit overload, do not operate another electrical product on the same electrical circuit as this product.
20. Do not let the Power Cord hang over the edge of a table or counter where it may be tripped over or pulled.
21. Do not use outdoors.
22. Disconnect the plug (do not pull on Power Cord) from the electrical outlet. Do not put any stress on the Power Cord where it connects to the product, as the Power Cord could fray and break.
23. Do not attempt to repair this product yourself. Return the product to a service center for examination and repair.
24. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
25. Some countertop and table surfaces, such as Corian®, wood and/or laminates, are not designed to withstand prolonged heat generated by certain appliances. It is recommended that a hot pad or trivet be placed under your appliance to prevent possible damage to the surface.

**SAVE THESE INSTRUCTIONS  
THIS PRODUCT IS FOR  
HOUSEHOLD USE ONLY**

## short cord purpose

**NOTE:** A short power cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

**Longer power-supply cords or extension cords may be used if care is exercised in their use.**

 
If an extension cord is used: (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the product; (2) the extension cord should be arranged so that it will not drape over the countertop or tabletop where it can unintentionally be pulled on or tripped over by children or pets.

## polarized plug

If this appliance is equipped with a **polarized plug** (one blade is wider than the other), please follow the below instructions:

To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If you are unable to fit the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug of the product or any extension cord being used with this product. Do not attempt to defeat the safety purpose of the polarized plug.

# parts identification



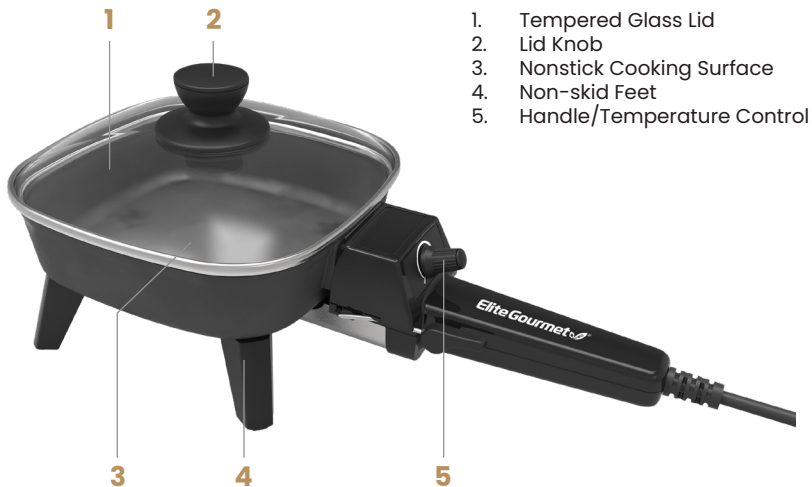


# attach/detach handle

**CAUTION:** Ensure the Temperature Dial is set to "OFF", the Power Cord is unplugged from the electrical outlet, and the product has thoroughly cooled before attaching or detaching the handle.

## TO ATTACH:

   1. Align the electrical pins of the Base with the electrical pinholes of the Handle. Ensure the Locking Lever is in the raised/angled position. (Fig. 1)
2. Slide the Handle until it locks into position on the Base. (Fig. 1)
3. Push down the Locking Lever so it securely locks into the tab recess. (Fig. 2)
4. The handle should be securely fastened to the base. If the handle is loose, then the locking lever was not properly engaged. Return to step-1 and repeat steps 1-3.

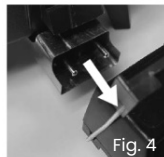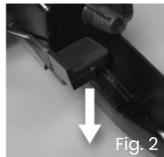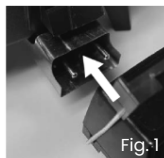

## TO DETACH:

1. Slightly push the Locking Lever tab away from the tab recess.
2. Push the Locking Lever to its raised/vertical position. (Fig. 3)
3. Remove the Handle from the Base. (Fig. 4)  
**NOTE:** Do not twist or bend the Handle when removing it from the Base, as product damage may result.
4. Push down the Locking Lever so it securely locks into the tab recess, for proper storage.

# how to use

1. Thoroughly clean the product before using it for the first time.
  2. Place the product on a dry, flat, stable, heat-resistant surface.
  3. Ensure the product is unplugged from the electrical outlet and the Temperature Dial is in the "OFF" position.
  4. Follow the "Attach/Detach Handle" procedure to attach the Handle (pg. 7).
  5. Lightly coat the entire cooking surface with cooking oil.
  6. Plug the Power Cord into a standard 120V AC outlet.  
**CAUTION:** Do not touch hot surfaces. Always use the handle and knob of the product. Use protective oven mitts to avoid burns.
  7. Always ensure to preheat the skillet uncovered before cooking.
  8. Preheat at MAX temperature setting for 3-minutes.
  9. Add ½ tablespoon of cooking oil and place the food to be prepared into the skillet.
  10. Set the Temperature Dial to the desired cooking temperature and cook the food or ingredients until done.  
**CAUTION:** Be careful of hot steam when removing the lid. Allow the product to thoroughly cool before handling.  
**NOTE:** The optimal cooking temperature is the 1/3 point to 2/3 point on dial (see Figure 1). High temperature levels may cause discoloration or shorten the life of the non-stick surface.
11. Once cooking is complete, set the Temperature Dial to the "OFF" position and unplug the Power Cord from the electrical outlet.

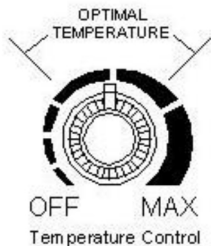 


Figure 1

## how to use (cont.)

### COOKING UTENSILS:

- Use only heat safe plastic, silicone or wooden cooking utensils with the non-stick surface of the skillet.
- Never use sharp-edged metal utensils (i.e., forks, knives, mashers, beaters, or food choppers), as they will scratch the non-stick surface.

## cleaning & maintenance

1. Clean the product after each use.
2. Set the Temperature Dial to the "OFF" position, unplug the Power Cord from the electrical outlet, remove the handle from the product, and allow the product to cool completely before cleaning.  
*CAUTION: Do not clean while the product is hot and while it is plugged into an electrical outlet.*
3. Drain the excess oil or wipe the interior surface of the skillet with a paper towel.  
*NOTE: Do not use abrasive chemicals or scouring pads to clean the product, as the non-stick surface may be damaged.*  
*NOTE: Do not use household bleach to clean the skillet surface, as it will permanently fade the non-stick finish.*  
*CAUTION: Do not pour cold water onto the product while it is still hot as the sudden temperature change may damage the product and create a burn/fire hazard.*
4. Clean the skillet with a damp soapy dishcloth.
5. **DO NOT wash the any part of this product in a dishwasher.**
6. Wash the lid using warm soapy water.
7. DRY ALL PARTS THOROUGHLY BEFORE OPERATING OR STORING THE PRODUCT.
8. Dry the terminal guard and pins immediately after cleaning the skillet.
9. Store the product in a cool, dry place.

**LIMITED WARRANTY\* ONE (1) YEAR WARRANTY IS ONLY VALID WITH  
PROOF OF PURCHASE FROM AN AUTHORIZED DEALER  
PLEASE DO NOT RETURN TO STORE OF PURCHASE.**

If you have any problems with this unit, contact Customer Service for support.

1. Your small kitchen appliance is warranted to the original purchaser to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. This Warranty applies only to the original purchaser of this product.
2. Retail stores/merchants selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.
3. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service.
4. At its sole discretion, Maxi-Matic USA will either repair or replace the product found to be defective during the warranty period.
5. The repaired or replacement product will be in warranty for the remaining balance of the one-year warranty period and an additional one-month period.
6. Consumer's remorse is not an acceptable reason to return a product to our Service Center.
7. This limited warranty covers appliances purchased and used within the 50 U.S. states plus the District of Columbia and does NOT cover normal wear of parts or:
  - Product Purchases that were listed as USED, LIKE NEW, OPEN BOX, or REFURBISHED from Outlet Shops or Online Retailers.
  - Damages caused by unreasonable use, neglect, normal wear and tear, commercial use, improper assembly or installation of product.
  - Damages caused in shipping.
  - Damages caused by replacement or resetting of house fuses or circuit breakers.
  - Defects other than manufacturing defects.
  - Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
  - Lost or missing parts of the product. Parts will need to be purchased separately.

- Damages of parts that are not electrical; i.e. cracked or broken plastic/glass, scratched/dented inner pots.
- Damage from service or repair by unauthorized personnel.
- Extended warranties purchased via a separate company or reseller.
- Acts of nature such as fire, floods, hurricanes, tornadoes, etc.

8. This warranty does not apply to re-manufactured merchandise.

Maxi-Matic, USA shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty.

\*One Year Limited Warranty valid only in the 50 U.S. states plus the District of Columbia, excluding Puerto Rico and the Virgin Islands.

This warranty is effective only if the product is purchased and operated in the USA; product usage which is in violation of the written instructions provided with the unit will void this warranty. For international warranty, please contact the local distributor.

This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary by state, province, and/or jurisdiction.

\*\*Any instruction or policy included in this manual may be subject to change at any time.

**MAXI-MATIC, USA**  
**18401 E. Arenth Ave. City of Industry, CA 91748**  
**Visit: [shopelitetourmet.com](http://shopelitetourmet.com) to contact us for support**

# return

**A.** Any return of defective merchandise to Maxi-Matic, USA must be processed accordingly by first contacting customer service to obtain an RA # (Return Authorization Number). We will not accept any returns of merchandise without an applicable RA #.

**B. IMPORTANT RETURN INSTRUCTIONS.** Your Warranty depends on your following these instructions if you are returning the unit to Maxi-Matic, USA:

1. Carefully pack the item in its original carton or other suitable box with sufficient cushioning to avoid damage in shipping.
2. Before packing your unit for return, be sure to enclose:
  - a. Your name, full address with zip code, daytime telephone number, and RA#,
  - b. A sales receipt or PROOF OF PURCHASE from an authorized dealer,
  - c. The model number of the unit and the problem you are having (Enclose in an envelope and tape directly to the unit before the box is sealed,) and
  - d. Any parts or accessories related to the problem.
3. Maxi-Matic, USA recommends that you ship the package via UPS ground service for tracking purposes. We cannot assume responsibility for lost or damaged products returned to us during incoming shipment. For your protection, always carefully package the product for shipment and insure it with the carrier. C.O.D shipments cannot be accepted.
4. All return shipping charges must be prepaid by you.
5. Once your return has been received by our warehouse, Maxi-Matic, USA will repair or replace the product if it is defective in material or workmanship, subject to the conditions in paragraph B.
6. Maxi-Matic will pay the shipping charges to ship the repaired or replacement product back to you.





# ELITE CUSTOMER SERVICE CENTER

---



Maxi-Matic, USA  
18401 E. Arenth Ave  
City of Industry, CA  
91748-1227



[shopelitegourmet.com](https://shopelitegourmet.com)  
Visit our website to contact  
us for support.  
Register your product online!



We take pride in the fact that Elite Gourmet products are continuously improving. To keep you well informed of these changes and to reduce paper consumption, we've included this QR code for you to scan and easily download the most recent updates to your product to your mobile device. Just access your camera, point at the QR code & your mobile device will do the rest.

FOLLOW US FOR MORE KITCHEN  
TIPS, HACKS, & INSPIRATIONS!



[shopelitegourmet](https://shopelitegourmet.com)

---

Elite is a registered trademark of Maxi-Matic, USA.  
Copyright Elite by Maxi-Matic.

Actual product may vary from the images/illustrations in this manual due to continual product improvement.



**Elite Gourmet**