 



Product Illustration

Thanks for purchasing the NEEWER Eave Light Set. You can use the NEEWER Home app to control this product and elevate your home décor.


Package Contents



 
String Lights



Extension cable

 

Power Adapter

 


Controller



User Manual

Product Overview

 EN

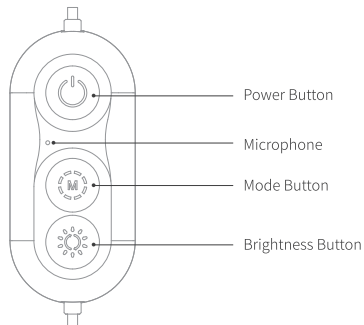

Power Button: Power on/off (short press).
Reset (long press for 5 seconds).

 
Microphone: For the Music Modes.

Mode Button: Short press to cycle through 7 modes: Warm White, Cool White, Scene 1, Scene 2, Scene 3, Music Mode 1, Music Mode 2.


Brightness Button: Short/long press to adjust brightness.

Assembly Guide

1. Connect the string lights as shown below.

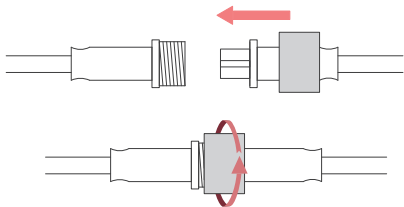

 2. Connect to the power source and check that the lights turn on correctly.
3. Attach the lights to the eave and secure them with screws (it is recommended to secure every bulb with screws if the lights are going to be a more permanent fixture).

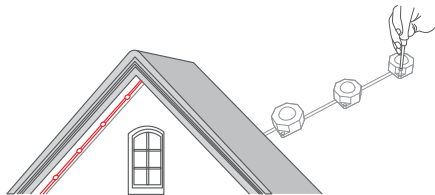

Directions for Use

Pairing the lights with the **NEEWER Home** app.

1. Download "**NEEWER Home**" from App Store (iOS) or Google Play (Android).
2. Enable Bluetooth on your phone. Open the app, tap "+" icon at the upper right corner and search for "NR02". Tap the device name and add.
3. Only supports 2.4GHz Wi-Fi routers (802.11 b/g/n). 5GHz is not supported



Android



iOS

Specifications

Mode	NR02
Input	28V/1A (2PCS 30LED) ; 28V/2A (4PCS 60LED) ; 28V/3A (6PCS 90LED) ; 28V/4A (8PCS 120LED) ;
Light color	RGBCW
Waterproof rating	IP65 (LED bulbs), controller
Operating temperature	-4~122°F/-20~50°C

Note

1. Do not drop the product, subject it to collisions, or severe impacts.
2. Keep away from inflammable and explosive items.

Troubleshooting

EN

1. Lights won't turn on

- a. Check the power supply first. Long press the power button for 5 seconds to reset, then short press it to power on.
- b. Make sure the contacts are connected properly.

2. Can't pair with the NEEWER Home app

- a. Make sure Bluetooth is enabled on the phone.
- b. Keep the pairing distance within 20m. If an error occurs with the paired device, delete it from the app and pair again.
- c. Make sure your Wi-Fi router is 2.4GHz (5GHz is not supported).
- d. Make sure the password is correct when setting the Wi-Fi network.