

SENCOR®

SKS 8200



KITCHEN SCALE RECHARGEABLE 20KG

Translation of the original manual




SENCOR®


SKS 8200



A

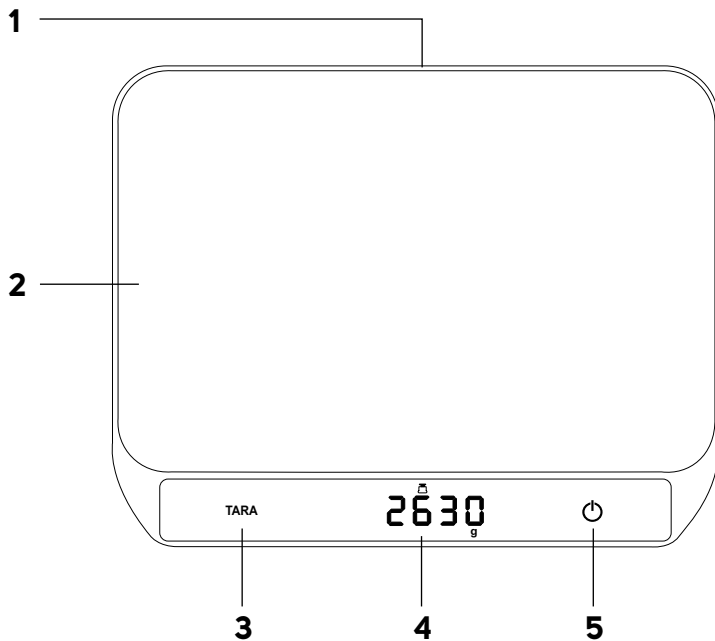

B

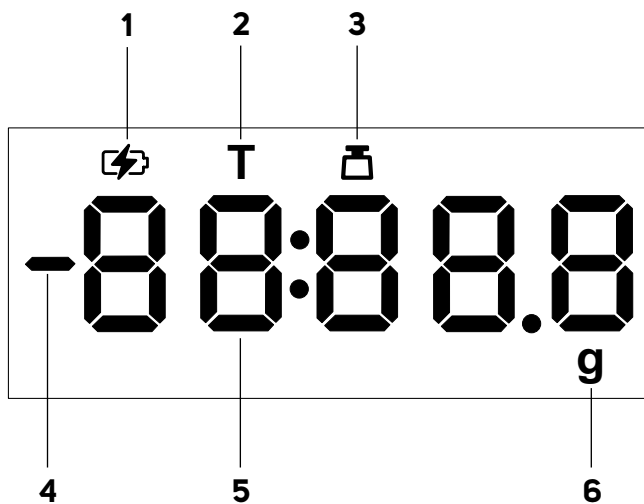

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised. Take care of their safety.
- Children must be supervised to ensure that they do not play with the appliance.
- If the charging cable is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to charge the appliance if the charging cable is damaged.
- Keep the charging cable out of the reach of children. There is a risk of strangling.
- This appliance is designed for weighing raw materials and smaller household items. Do not use the appliance for any other purposes than those intended. Do not use it for commercial purposes, in industrial surroundings or for weighing animals.
- Carefully unpack the product and take care not to throw away any part of the packaging until all the parts of the appliance have been identified.
- In use, it must be ensured that the appliance is placed on an even, smooth, hard and stable surface. Otherwise, inaccuracies in weighing may occur.
- If the maximum weighing capacity is exceeded, remove the ingredient or object of excessive weight from the weighing area to avoid possible damage to the appliance.
- Do not use the appliance to support various items. When storing, it must be ensured that no objects are placed on the appliance.
- Keep the appliance away from extreme temperatures, direct sunlight and excessive humidity and do not place it in an overly dusty environment.
- Do not place the appliance near heaters, open fires or other sources of heat. Only use and store the product away from flammable or volatile substances.
- Prevent the appliance from falling or another object from falling on it. Do not expose the appliance to excessive impacts.
- Do not use a damaged or deformed appliance.
- Keep the appliance clean. When cleaning, follow the instructions in the chapter "CLEANING AND MAINTENANCE".
- Do not immerse the appliance in water or other liquids or rinse it under running water.
- The manufacturer takes no responsibility for any damages caused by incorrect use of the appliance.
- Under no circumstances should you repair or alter the appliance yourself. Have all repairs or adjustments of the appliance performed at a specialized company or an authorised service centre.
Tampering with the appliance during the warranty period may void the warranty.

Safety instructions when charging the appliance

- Use only the supplied charging cable to charge.
- Before connecting the charging cable to the charging source (USB charging adapter, not included), make sure that the input rated voltage stated on the appliance's rating label matches the voltage on the adapter's rating label.
- Make sure that the charging cable does not hang over the edge of the table or touch hot surfaces or sharp objects.
- Disconnect the charging cable from the appliance by pulling the connector. Do not pull the charging cable.
- Only handle the charging adapter with dry and clean hands.
- Do not cover the appliance or the charging cable during charging.
- The appliance, charging cable or adapter may heat up while charging. This is normal. Make sure to leave a clear space around the appliance to allow proper dissipation of excess heat. Do not charge the appliance if it is located in an enclosed area.
- After charging the appliance, disconnect the charging cable from the appliance connector and the charging source. Allow it to cool down before storing it. Always store in a dry and well-ventilated place.
- If you will not be using the appliance for an extended period of time (longer than 3 months), we recommend recharging it regularly anyway to extend the life of the built-in battery.

Special Safety Instructions for the Li-ion Battery

- The Li-ion battery is built into the appliance and is an integral part of it, which the user is not allowed to remove.
- Follow all the instructions provided in this user's manual.
- Avoid using or storing the appliance in environments where flammable, volatile, or explosive substances are used and/or stored.
- In the event of a battery fluid (electrolyte) leak, do not touch the battery with your bare hands. Use protective aids (gloves, a protective mask, goggles, etc.). The liquid inside the battery is toxic and may cause health problems even with slight contact of the bare skin with it.
- We recommend opening windows or doors to ensure adequate ventilation of the space.
- Contact a specialist hazardous waste disposal company or use a hazardous waste collection facility. Do not dispose of the damaged battery or accumulator in ordinary household waste.
- In case of skin or eye splashes, rinse with plenty of water and seek medical attention. If ingestion occurs, seek immediate professional medical help.

EXPLANATION OF SYMBOLS PLACED ON THE PRODUCT OR IN THE ACCOMPANYING DOCUMENTATION



The product meets all the basic requirements of the applicable EU directives.



This symbol on products or accompanying documents means that used electric or electronic products must not be added to ordinary municipal waste.




This symbol on the accumulator or battery means that the used battery must not be added to normal municipal waste.



.....

- Thank you for purchasing our SENCOR product; we hope it will serve to your satisfaction.
- Prior to using this appliance, please read the user manual thoroughly, even in cases when you are already familiar with the use of similar types of appliances. Use the appliance only as described in this user manual. Keep the manual for future reference. If you pass the appliance on to another person, ensure that this user manual is included.
- Carefully unpack the appliance and make sure not to discard any part of the packaging material until you have removed all its components. It is recommended that you keep the original packaging, packing material, receipt and confirmation of the extent of the seller's liability or warranty certificate at least for the duration of the legal right to file a defect claim or the quality warranty. When transporting the appliance, we recommend repackaging it in the original box provided by the manufacturer.

DESCRIPTION OF THE SCALE

- | | |
|--|---|
| A1 USB-C charging connector | A4 Display |
| A2 Weighing area | A5  button to switch the scale on/off |
| A3 TARA button for zeroing the weight of the item placed on the scale and weighing the ingredients | Without illustration: charging cable (USB-A/USB-C) |

DISPLAY DESCRIPTION

- | | |
|---|--------------------------|
| B1 Battery charging icon  | B4 Negative value |
| B2 Tara icon T | B5 Numeric value |
| B3 Weighing mode icon  | B6 Unit of weight |



PURPOSE OF USE

- The kitchen scale is designed to be used for weighing food and small items up to 20 kg (maximum).

BEFORE FIRST USE

- Remove the scale and charging cable from the packaging. Check that the scale or the charging cable are not damaged.
- Remove the protective foil or labels from the scale.
- Wipe the scale with a soft dry cloth and allow it to charge. Follow the instructions in the "**CHARGING**" section below.

CHARGING

- Charge the built-in battery to the full before first use.
- Plug the USB-C end of the charging cable into the (A1) USB-C connector at the top of the scale. Plug the other end of the charging cable (type USB-A 2.0) into the connector of the mains adapter (not included). The recommended voltage of the mains adapter is 5V/1-2 A.
- The  icon will light up and the  will flash.
- Once **FULL** is displayed, the battery is fully charged. Disconnect the charging cable from the scale and the mains adapter.
- Charging time is usually 2 to 3 hours.
- If **Lo** is shown on the display, you need to charge the scale.



Note:

The scale can be used during the charging process. However, due to the attached cable, the weighing may be less accurate. In this case, we recommend keeping the charging cable stable.



Note:



Wait until "**Lo**" is shown on the display. Do not charge the scale after each use.



Note:

If the scale is not to be used for a long time, we recommend charging it regularly (at least once every three months) to extend the life of the battery.

USING THE SCALE

- Place the scale on a flat and stable surface.
- Press the  button to turn the scale on.
- As soon as the display shows "0" and the symbol lights up, the scale is ready for use.
- Place the ingredients to be weighed in the centre of the area. The weight of the weighed ingredient will be displayed on the display.
- If you need to weigh several ingredients in a row and always start from scratch, after weighing one ingredient, press the **TARA** button to reset the value on the display and be able to weigh other ingredients.
- After weighing, short press the  button to turn off the scale.

Automatic Shut-off

- The scale is equipped with an automatic shut-down function. In the event of inactivity for more than 2 minutes, it will turn off automatically.

CLEANING AND MAINTENANCE

- Before cleaning, make sure the scale is switched off and not charging.
- Use a soft sponge slightly dampened in warm water to clean the scale. Wipe dry with a clean cloth.



Caution:

Do not immerse the scale in water or other liquid or rinse it under running water.



Caution:

Do not use wire cloths, abrasive cleaners, thinners, etc. for cleaning. Otherwise the surface may be damaged.

Storage

- Place the dry and clean scale with the charging cable in its original packaging or other suitable packaging material and store it in a dry and well-ventilated place out of the reach of children or pets.

.....

ERROR MESSAGES

Display	What to do
Lo	The battery is almost flat. Charge it.
Err	You have exceeded the maximum weighing capacity of the scale. Remove the ingredients from the area of the scale so as not to damage it.

.....

TECHNICAL SPECIFICATIONS

Battery.....	Li-Ion, 3.7 V 400 mAh
Charging time.....	2.5 hours
Operating time (full charge).....	up to 4 months
Weight capacity.....	20 kg
Weighing accuracy.....	1 g
Dimensions.....	24 × 19.5 × 2.5 cm
Weight.....	530 g
Charging cord length.....	1 m

.....

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at the designated municipal waste disposal site.

.....

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT

Used electrical and electronic products must not be disposed of in ordinary municipal waste. To enable the proper disposal, renewal and recycling of these products, deliver them to the designated collection points. Alternatively, in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. By disposing of this product correctly, you help to conserve valuable natural resources and prevent any potential adverse impact on the environment and human health that could result from improper waste disposal. For more details, contact your local authority or nearest collection point. Fines may be imposed for the improper disposal of this type of waste as per national regulations.

For business entities in European Union States

If you wish to dispose of electrical and electronic equipment, please request the necessary information from your retailer or supplier.

Disposal in other countries outside the European Union

To dispose of this product elsewhere, request the necessary information on the correct disposal method from local authorities or your retailer.

.....

BATTERY DISPOSAL

The battery is intended for take-back and ecological disposal. Hand over the product with the battery to the designated collection point. Here, it will provide for its ecological disposal. The battery contains environmentally harmful substances.

.....

Changes to text and technical parameters are reserved.

FAST ČR, a.s.
U Sanitasu 1621
CZ-251 01 Říčany
www.sencor.com
info@sencor.cz