



# HARMONICS Y2

Wireless Stereo Headset


User Manual

### Package Contains :

1. Harmonics Y2
2. Charging Cable
3. Earbuds
4. User Manual

### Product Discription :

- A. Earbuds
- B. Magnetic Earbuds
- C. Volume Up/Next Track
- D. MFB (Multifunctional) Button
- E. Volume Down/Previous Track
- F.Type-C Charging Port

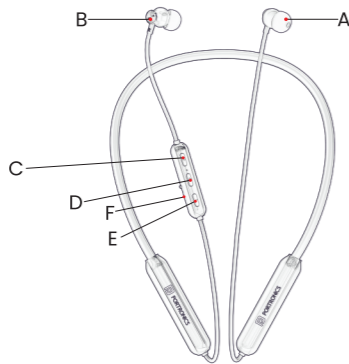

### Charging & LED Indicators :

Status	Operation	LED Indicator	Voice Prompt
Charging	Plug in with Type-C cable	Red LED stays ON	-
Fully Charged	Takes ~upto 4 hours	Blue LED stays ON	-
Pairing Mode	Long press MFB (2s)	Red & Blue LEDs flash alternately	Voice: "Pairing"
Power Off	Long press MFB (4s)	LED turns OFF	Voice: "Power off"
Disconnected	Out of range/ disconnected	Red & Blue LEDs flash alternately	Voice: "Disconnected"

### Controls & Functions :

Action	How to Do It
Game/Music Mode	Triple click MFB
Volume Up	Short press volume+ button
Volume Down	Short press volume- button
Next Track	Long press volume+ button
Previous Track	Long press volume- button
Play/Pause Music	Short press MFB
Activate Voice Assistant	Long press MFB (2s)
Power Off	Long press MFB (4s)

**Dual Pairing:** Connect to Device 1 -> Turn off Bluetooth on Device 1 -> Pair with Device 2 -> Turn Bluetooth back on for Device 1 -> Both devices stay connected.

### Call Management :

Function	How to Use
Answer Call	Single press MFB
End Call	Single press MFB
Reject Call	Long press MFB (2s)
Redial Last Number	Double press MFB

### Battery Info :

- Earbuds auto power off if not paired within 5 minutes
- "Battery low" prompt alerts when power is low

### Charging Input Requirement :

Type-C input | 5V=1A

### Technical Specification :

- Bluetooth Version -5.4
- Driver Size - 10mm
- BT Mode- A2DP/AVCRP/Handsfree/Headset
- Wireless Frequency - 2402MHz-2480MHz
- Working Distance - 10M
- Charging Port - Type C
- Battery -560mAh
- Playtime - Upto 70 Hours
- Working Temperature- 5°C - 50°C

### Cautions :

1. Avoid extreme heat, cold and humidity.
2. Avoid dropping or crushing the Earphones, stressing the cable by rapid pulling or extreme force or bending the cable at a sharp angle.
3. Wax may build up in the Earphones tips, lowering the sound quality. Carefully remove the wax with a cotton swab or other small tool to improve the sound quality.
4. If you experience discomfort or pain, try lowering the volume or discontinuing use temporarily.



www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245

(Working Hours : Monday - Saturday, 10:00am - 6:00pm)



E-Waste Management  
E: info@3rrecycler.com

For E-Waste & ROHS compliance refer to www.portronics.com/ewaste

