


amazonbasics

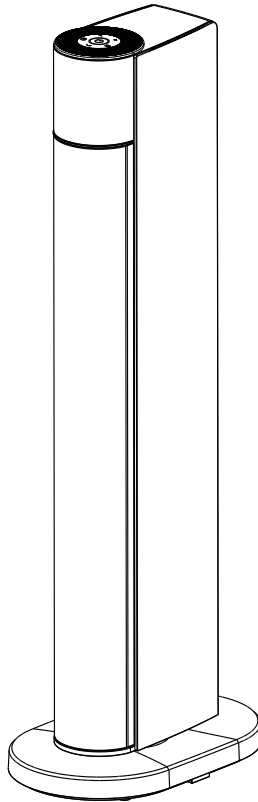

**34" Premium Ceramic Tower Heater**

**Calentador de Torre Cerámico Premium de 34 Pulgadas (86 cm)**

**Tour de Chauffage en Céramique Premium de 34 po (86 cm)**

**B07SJGN17C**

English .....	3
Español .....	12
Français .....	21

# IMPORTANT INSTRUCTIONS



Read these instructions carefully and retain them for future use. If this product is passed to a third party, then these instructions must be included.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

- Read all instructions before using this product.
- This product is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this product.
- Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 m) from the front of the product and keep them away from the sides and rear.
- Extreme caution is necessary when the product is used by or near children, people with reduced physical, sensory or mental capabilities and whenever the product is left operating and unattended.
- Always unplug the product when not in use.
- Do not operate the product with a damaged cord or plug or after the product malfunctions, has been dropped or damaged in any manner. Discard the product or return to authorized service facility for examination and/or repair.
- Do not use outdoors.
- This product is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate the product where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect the product, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the product.





- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
- Use this product only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.
- Always plug the product directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit the outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
- A heater may include an audible (a visual) alarm to warn that parts of the heater are getting excessively hot. If the alarm sounds (flashes), immediately turn the heater off and inspect for any objects on or adjacent to the heater that may cause high temperatures. **DO NOT OPERATE THE HEATER WITH THE ALARM SOUNDING (FLASHING).**
- Place the product on a flat and stable surface to avoid risk of tipping it over.
- This product draws up to 1500 W of power. To prevent overloading of the electrical circuit, do not plug the product into a circuit with other appliances already connected.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

## SAVE THESE INSTRUCTIONS

### Battery warnings

- Always insert batteries correctly with regard to polarity (+ and -) marked on the battery and the product.
- Exhausted batteries should be immediately removed from product and properly disposed.

## Intended Use

- This product is intended for temporarily heating residential rooms with an effective area coverage of 120-160 ft<sup>2</sup> (11-15 m<sup>2</sup>).
- This product is intended for household use only. It is not intended for commercial use.
- This product is intended to be used in dry indoor areas only.
- No liability will be accepted for damages resulting from improper use or non-compliance with these instructions.



## Before First Use

- Check the product for transport damages.
- Before connecting the product to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the product rating label.



**⚠ DANGER Risk of suffocation!** Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.


### Inserting the batteries

- Open the battery compartment located in the back of the remote control.
- Insert two LR03/AAA 1.5 V batteries (not provided). Always insert batteries correctly with regard to polarity (+ and -) marked on the battery and the product.
- Close the battery compartment.

**NOTICE** Replace the batteries if the range of the remote control decreases noticeably or if the product cannot be controlled via remote control.



## Product Description

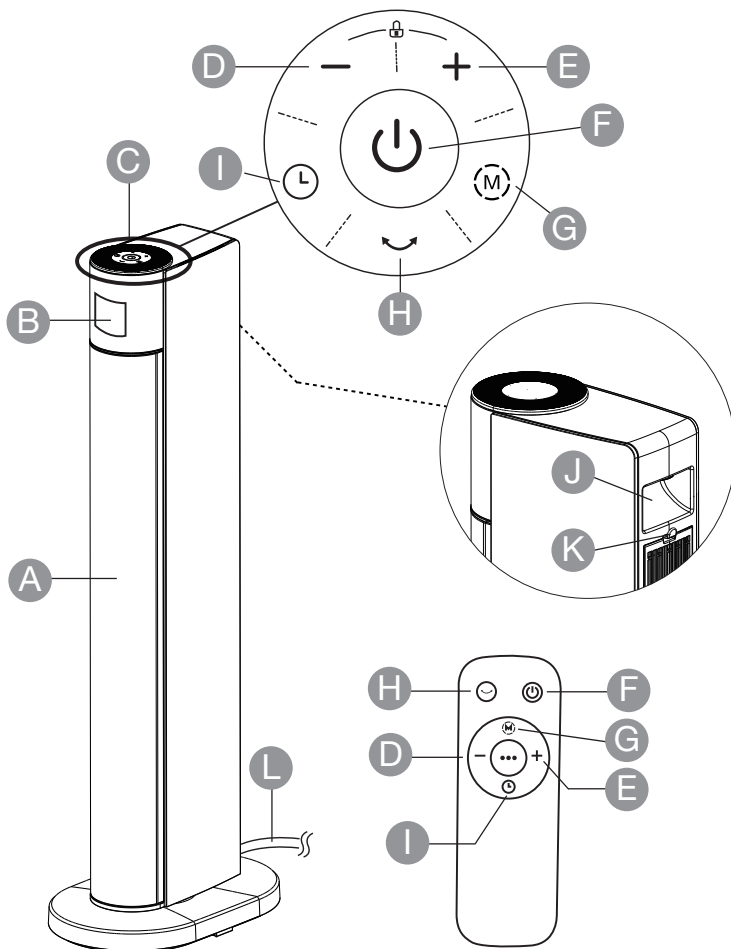


- |                                |                                     |
|--------------------------------|-------------------------------------|
| <b>A</b> Front grill           | <b>G</b> Mode button                |
| <b>B</b> Display               | <b>H</b> Oscillation button         |
| <b>C</b> Control panel         | <b>I</b> Timer button               |
| <b>D</b> Decrease value button | <b>J</b> Remote control compartment |
| <b>E</b> Increase value button | <b>K</b> Air filter notch           |
| <b>F</b> Power button          | <b>L</b> Power cord with power plug |



## Operation

### Switching on/off





- Connect the power plug (L) to a suitable outlet. The product beeps and the power indicator  lights up on the display (B).
- To switch on, press the power button (F). The current temperature and mode indicator light up on the display (B).
- To switch off, press the power button (F) again. The product switches off after 15 seconds of cooling down. The current temperature and mode indicator go off.

**NOTICE** If no button is pressed for 60 seconds, the temperature indicator goes off.

**NOTICE** After switching off, the product starts operation with the last set temperature, mode and oscillation setting.

### Setting the mode

Press the mode button (G) repeatedly to toggle between the modes:



Symbol	Mode	Description
	ECO mode	The product adjusts the mode automatically according to the set temperature to optimize energy consumption.
	Fan	Fan only, no heating.
	Low heating	Low heating power.
	High heating	High heating power.

### Setting the temperature



- To set the temperature, press the increase (E) or decrease button (D). The temperature indicator flashes and then goes off once the temperature is set.
- When the room reaches the set temperature, its indicator flashes for 10 seconds and goes off. The product enters the standby mode.
- When the room temperature decreases, the product switches on again automatically.

**NOTICE** You can also press and hold the increase (E) or decrease button (D) to quickly set the temperature. The temperature can be set between 40-95 °F (4.5-35 °C).



### Setting the timer (automatic switch off)

- When the product is switched on, press the timer button (I). The  h starts flashing.
- Press the increase (E) or decrease button (D) to set the timer.
- After 5 seconds the set time stops flashing. The timer indicator  lights up.
- The product switches off automatically after the set time.

### Setting the timer (automatic switch on)

- When the product is switched off, press the timer button (I). The  h starts flashing.
- Press the increase (E) or decrease button (D) to set the timer.
- After 5 seconds the set time stops flashing. The timer indicator  and the timer setting light up.
- The product switches on automatically after the set time.

### Oscillation function


- To switch on the oscillation function, press the oscillation button (H). The oscillation indicator  lights up.
- To switch off the oscillation function, press the oscillation button (H) again. The oscillation indicator  goes off.

### Temperature indicator automatic switch off



The product features the temperature indicator automatic switch off function. If no button is pressed for 60 seconds, the temperature indicator goes off.

- To switch off the function, press and hold the timer (I) and decrease buttons (D) for two seconds. The product beeps twice. The temperature indicator is constantly on.
- To switch the function back on, press and hold the timer (I) and decrease buttons (D) for two seconds again. The product beeps twice.

### Tip-over protection

- If the product tips-over, it enters the tip-over protection mode. The product beeps and the display (B) flashes .
- Place the product on its stand to deactivate the tip-over protection mode.

## Child lock protection

- To enter the child-lock protection mode, press and hold the increase (E) and decrease buttons (D) for 2 seconds. The product beeps twice and the child-lock indicator  lights up.
- To exit the child-lock protection mode, press and hold the increase (E) and decrease buttons (D) for 2 seconds again. The product beeps twice and the child-lock indicator  goes off.

**NOTICE** When in the child-lock protection mode, the product can only be switched off.

## Sound and control panel illumination

The buzzer sound and the control panel (C) illumination can be switched off.

- When the product is switched on, press and hold the timer (I) and mode buttons (F) for 2 seconds. The control panel illumination and buzzer are off.
- Press and hold the timer (I) and mode buttons (F) for 2 seconds again. The product beeps and the control panel illumination and buzzer are on.

## Cleaning and Maintenance

**⚠ WARNING Risk of electric shock!** To prevent electric shock, unplug the product before cleaning.

**⚠ WARNING Risk of electric shock!** During cleaning do not immerse the product in water or other liquids. Never hold the product under running water.

### Cleaning the product

- To clean the product, wipe with a soft, slightly moist cloth.
- Dry the product after cleaning.
- Never use corrosive detergents, wire brushes, abrasive scourers, metal or sharp utensils to clean the product.

### Cleaning the filter

- Press down the air filter latch (K) to open the cover of the air filter. Remove the filter.
- Tap on the filter to remove the dirt.
- If the filter is heavily soiled, rinse it with warm water and let it dry.
- Reinsert the filter and the cover.





## Storage

- Store the product in a dry, safe place away from children.

## Troubleshooting

Problem	Solution
The product does not switch on.	<ul style="list-style-type: none"> <li>• Check if the plug is connected to the outlet. Check if the outlet works.</li> </ul>
The product does not heat.	<ul style="list-style-type: none"> <li>• The set temperature is lower than current room temperature. Set a higher temperature.</li> </ul>
The product suddenly stops operation and <b>FF</b> flashes on display. The buttons do not work.	<ul style="list-style-type: none"> <li>• The product has overheated. The overheating protection has been activated. Unplug the product and let it cool for at least 10 minutes.</li> </ul>
The product suddenly stops operation and <b>E1</b> or <b>E2</b> flashes on display. The buttons do not work and alarm rings 10 times. Short-circuit in the temperature sensor.	<ul style="list-style-type: none"> <li>• Do not try to repair the product yourself. Consult a qualified electrician.</li> </ul>
Bad smell.	<ul style="list-style-type: none"> <li>• It is the result of dust or other debris accumulating on the heating element. This is normal during first use and after prolonged storage. Place the product in a well ventilated area. Keep the product switched on, until the smell disappears.</li> </ul>



## Specifications

Rated voltage:	120 V~, 60 Hz
Power consumption:	800 W (low speed) 1500 W (high speed)
Current consumption:	12.5 A
Area coverage:	120-160 ft <sup>2</sup> (11-15 m <sup>2</sup> )
Battery type:	2 x LR03/AAA 1.5 V
Protection class:	Class II
Net weight:	11 lbs (5 kg)
Dimensions (W x H x D):	8 x 33.7 x 12.6" (20.3 x 85.5 x 32 cm)

## Feedback and Help

Love it? Hate it? Let us know with a customer review.

AmazonBasics is committed to delivering customer-driven products that live up to your high standards. We encourage you to write a review sharing your experiences with the product.



[amazon.com/review/review-your-purchases#](https://amazon.com/review/review-your-purchases#)



[amazon.com/gp/help/customer/contact-us](https://amazon.com/gp/help/customer/contact-us)



amazonbasics

[amazon.com/AmazonBasics](https://amazon.com/AmazonBasics)

MADE IN CHINA

HECHO EN CHINA

FABRIQUÉ EN CHINE

V05-08/19