





IMPORTANT SAFETY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE USE FOR HOUSEHOLD USE ONLY

	Read and review instructions for operation and use.
	Indicates the presence of a hazard that can cause personal injury, death, or substantial property damage if the warning included with this symbol is ignored.
	Combustible material. May burst if heated. (Indicated by a flame symbol with white background, surrounded by a red diamond.)
	Flammable material. (Indicated by a flame symbol with yellow background, surrounded by a black triangle.)



For indoor and household use only.

When using electrical appliances, basic safety precautions should always be followed, including the following:



ADANGER: Risk of fire or explosion. Flammable refrigerant used. DO NOT puncture refrigerant tubing. Dispose of product properly in accordance with the applicable federal or local regulations pertaining to flammable refrigerants.



AWARNING: To reduce the risk of injury, fire, electrical shock or property damage, basic safety precautions must always be followed, including the following numbered warnings and subsequent instructions.


- 1 Read all instructions prior to using the appliance and its accessories.
- 2 Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
- 3 Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- 4 Turn the appliance OFF, then unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the outlet. NEVER unplug by grasping and pulling the flexible cord.
- 5 Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.
- 6 DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damage in any manner. This appliance has no user-serviceable parts. If damaged, contact Dealer for servicing.

- 7 This appliance has important markings on the plug. The entire supply cord is not suitable for replacement. If damaged, please contact Dealer for service.
- 8 Extension cords should NOT be used with this appliance.
- 9 To protect against the risk of electric shock, DO NOT submerge the appliance or allow the power cord to contact any form of liquid.
- 10 DO NOT allow the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.
- 11 DO NOT allow the unit or the cord to contact hot surfaces, including stoves, and other heating appliances.
- 12 ALWAYS use the appliance on a dry and level surface.
- 13 DO NOT allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- 14 This appliance is NOT intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 14 ONLY use attachments and accessories that are provided with the product or are recommended by Dealer. The use of attachments not recommended or sold by Dealer may cause fire, electric shock, or injury.
- 15 Keep hands, hair, and clothing out of the container when loading and operating.
- 16 During operation and handling of the appliance, avoid contact with moving parts.
- 17 DO NOT microwave the containers or accessories provided with the appliance.
- 18 ALWAYS keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- 19 DO NOT use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- 20 DO NOT damage the refrigerant circuit. This warning is only applicable for appliances with refrigerating circuits which are accessible by the user

- 21 DO NOT use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- 22 DO NOT add frozen fruit, frozen vegetables, or ice to the unit.
- 23 DO NOT add hot ingredients to the unit.
- 24 DO NOT submerge the motor base or control panel in water or other liquids.
- 25 DO NOT fill vessel past the MAX FILL line.
- 26 NEVER leave the appliance unattended while in use.
- 27 Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
- 28 DO NOT carry the unit by the bail handle. Hold the unit by grasping both sides of the unit under the motor base.
- 29 DO NOT process hard, loose ingredients or ice. This appliance is not intended to process loose frozen fruit, a block of solid ice, or ice cubes.
- 30 ALWAYS keep the unit upright.
- 31 After unboxing the unit for the first time, ensure the unit is upright for at least 12 hours before operating to let the refrigerant oils settle in the air conditioning system for best performance.
- 32 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 33 The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- 34 Keep rear and sides of the unit open in order for the compressor to operate properly and not over heat. 36 Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- 37 DO NOT use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- 38 DO NOT damage the refrigerant circuit. This warning is applicable only for appliances with refrigerating circuits that are accessible by the user.

39 When using appliance, make sure both sides and back of it are at least four inches away from walls.

PARTS

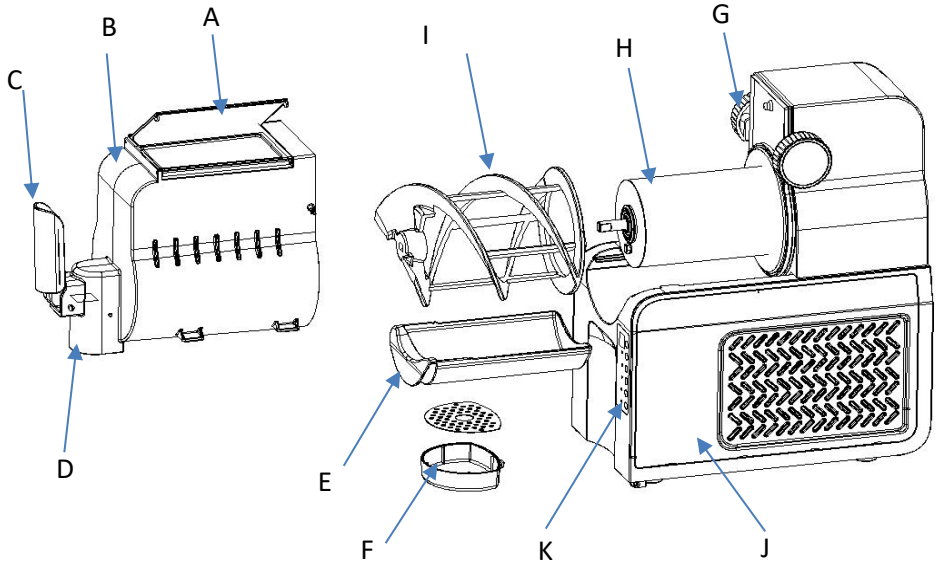

- A Easy-Fill Port and Cover
- B Vessel
- C Comfort Handle
- D Pour Spout with Removable Shroud
- E Condensation Catch
- F 2-Part Drip Tray
- G Turnbuckle
- H Evaporator (Attached to Motor Base)
- I Mixing blade

J Motor Base

K Control Panel

*16-oz minimum liquid capacity. 68-oz maximum liquid capacity


BEFORE FIRST USE

IMPORTANT: Review all warnings at the beginning of this Owner's Guide before proceeding.

- 1 Remove all packaging materials from the unit.
- 2 Wash all parts in warm, soapy water.
- 3 Thoroughly rinse and air-dry all parts.
- 4 Wipe control panel, motor base, and evaporator with a soft cloth. Allow to dry completely before using.
- 5 Place the unit on countertop for at least 12 hours before operating. This allows the refrigerant to settle in the condenser for optimal and safe use.

NOTE: All attachments are BPA free. Accessories are dishwasher safe but should NOT be cleaned with a heated dry cycle.

USING THE CONTROL PANEL

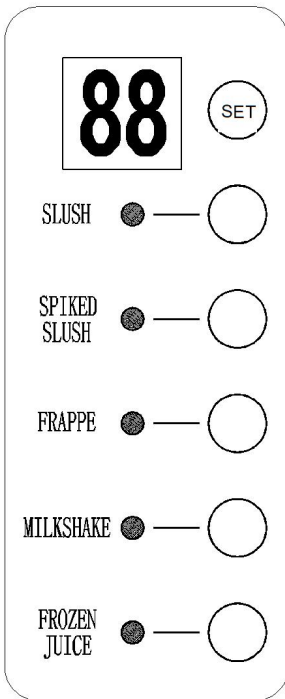

Switch on/off at any preset time.

Press and hold the setting button for 3 seconds.

Press the setting button to adjust the consistency of the smoothie from level 1 to level 10.

PRESETS

5 unique presets use RapidChill Technology to determine the perfect temperature for the ideal frozen drink

TEMPERATURE CONTROL SETTING

Each preset will start at a default/optimal temperature for ideal texture, if desired, adjust the temperature for your perfect frozen drink texture

For sippable frozen drinks, decrease the temperature level by pressing the bottom arrow on the control panel.

For thicker, colder frozen drinks, increase the temperature level by pressing the top arrow on the control panel.

TROUBLESHOOTING TIPS

Q TROUBLESHOOTING TIPS

RECIPE NOT SLUSHING? If your recipe has not reached desired texture after 60 minutes, increase the temperature by one level. Wait 10-15 minutes to test recipe texture. If still not desired, increase by one level again. Repeat until desired texture is achieved.

SLUSH NOT DISPENSING? For the best dispensing experience, fill the unit to the max fill line and ensure the unit is running. For a smoother dispense experience, decrease the temperature level by pressing the bottom arrow on the control panel. More sippable frozen drinks will dispense smoother.

PRESETS

Each preset will start at a default/optimal temperature for ideal texture. If desired, adjust the temperature for your perfect frozen drink texture.

PRESET	DEFAULT/OPTIMAL TEMPERATURE	DESIGNED FOR	RECIPE EXAMPLES
SLUSH	3	Transforming your everyday beverages	Soda, lemonade
SPIKED SLUSH	6	Beverages with alcohol content	Margarita, rosé
FRAPPÉ	2	Coffee shop lovers to make frozen treats	Store-bought frappé
MILKSHAKE	5	Dairy- and creamier-based beverages	Chocolate milk, blended milkshake
FROZEN JUICE	1	Naturally sweetened beverages	Orange juice, apple cider

REQUIRED SUGAR CONTENT

Too little sugar or too much alcohol will prevent proper freezing of a slush output. Follow guidelines below for a perfect slush every time.

All inputs must contain at least 4% sugar.

NOTE: Pre-frozen ingredients taste sweeter. Worried your drink might be too sweet? Don't worry, it won't taste as sweet after you freeze and slush it into a frozen drink.

SUGAR GUIDELINES

Refer to drink/liquid nutrition label to ensure sugar content meets the recommended minimums below:

SERVING SIZE	Minimum Total Sugar Amount
8 oz (240 ml)	8g
12 oz (355 ml)	11g
20 oz (591 ml)	18g

TIPS & TRICKS

- Keep unit upright for at least 2 hours before first use.
 - DO NOT add hot ingredients.
 - DO NOT add ice or solid ingredients like fruit, ice cream, or frozen fruit.
 - Pre-frozen ingredients taste sweeter. Worried your drink might be too sweet? Don't worry, it won't taste as sweet after you freeze and slush it into a frozen drink.
 - All inputs must include at least 4% sugar.
 - When using the Spiked Slush preset, all premade inputs must contain between 2.8% and 16% alcohol. . For best results, chill liquid(s) or blended ingredients before adding to the unit.
 - For the frostiest results, chill serving glasses before dispensing your frozen drink.
 - For your ideal frozen drink texture, use the temperature control setting to adjust.
 - When using the Milkshake or Frappé preset, dispense contents within 30 minutes of the preset ending to avoid a foamy output.
 - For the best dispensing experience, fill the unit to the max-fill line (68 oz).
 - You can run the unit up to 12 hours.
 - All parts except the motor base, including the evaporator, are dishwasher safe but should NOT be cleaned with a heated dry cycle.
-
-

Minimum input = 2 cups (16 oz) Maximum input = 9 cups (68 oz)

This is NOT a blender.

DO NOT process a solid block of ice or ice cubes.

DO NOT make a smoothie or process hard, loose ingredients.

DO NOT attempt to blend or macerate non-liquid ingredients.

IMPORTANT: Review all warnings at the beginning of this Owner's Guide before proceeding.

NOTE:

- Minimum 16-oz input required for using the unit.
- Maximum 68-oz liquid capacity.
- DO NOT add ice or solid ingredients like fruit, ice cream, or frozen fruit.
- DO NOT add hot ingredients.

- 1 Ensure all parts are fully cleaned and the motor base is level on a flat, solid surface.
- 2 Install the condensation catch under the evaporator by sliding it into the rail grooves. Figure 1
- 3 Install the auger by sliding it over the evaporator and rotating until it fits into place onto the pin. Figure 2
- 4 With the bail handle up, slide the vessel over the installed auger and evaporator. Figure 3
- 5 Lock the vessel in place by pushing the bail handle back to seal the vessel.

- 6 Insert the drip tray in front of the motor base until it clicks in place.
Figure 4

NOTE: Make sure the unit has been sitting upright on the countertop for at least 2 hours before first use, so the refrigerant can settle in the condenser for optimal and safe use.

- 7 Plug the unit in.
- 8 Open the cover on the top of the vessel. Figure 5
- 9 Add liquid(s) and/or blended ingredients through the easy-fill port and close the cover
- 10 Press the power button to turn the unit on.
- 11 Choose your desired preset. Figure 6
- 12 The preset will start at the default/optimal temperature for ideal texture. If desired, adjust the temperature for your perfect frozen drink texture.

NOTE:

- Temperature Control Setting LEDs will pulse while frozen drink is freezing to your set temperature level. Once frozen drink reaches the desired temperature, LEDs will remain solid and unit will beep. Unit will continue running to keep your frozen drink at the ideal temperature and be ready to dispense.
- Creating drinks can take up to 15-60 minutes depending on ingredients, volume, and starting temperature.
- Pre-frozen ingredients taste sweeter. Worried your drink might be too sweet? Don't worry, it won't taste as sweet after you freeze and slush it into a frozen drink.

-
- 13 Place a cup on the drip tray, under the handle.
 - 14 To dispense, slowly pull the handle. To stop, release the handle back in place.

Figure 7

- 15 Enjoy your latest frozen drink creation.
- 16 Run the unit for up to 12 hours.

NOTE: DO NOT turn off preset until all frozen drink has been dispensed.

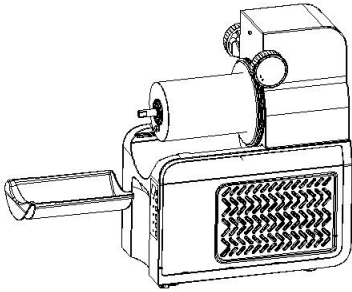


Figure 1

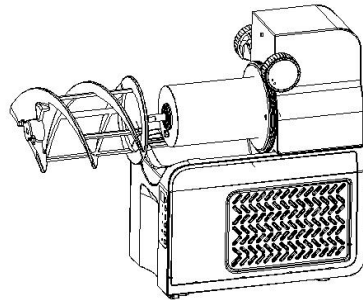


Figure 2

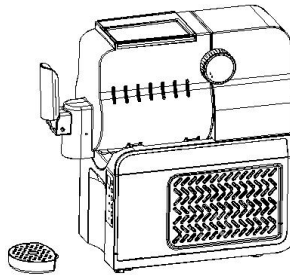
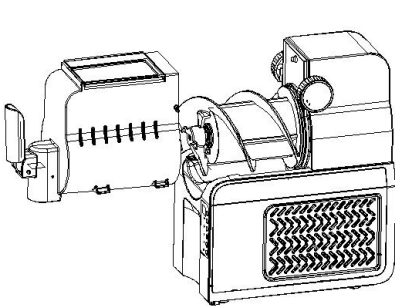


Figure 3

Figure 4

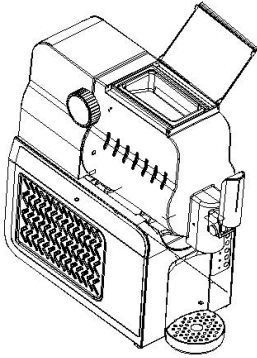


Figure5

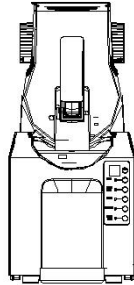


Figure6

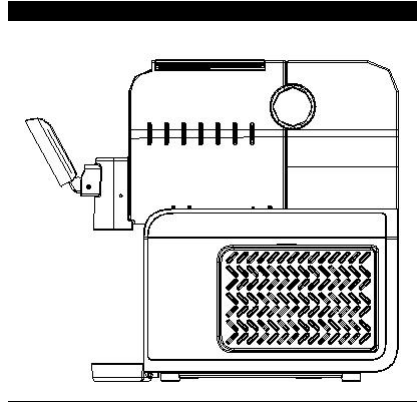


Figure7

AWARNING: To reduce the risk of shock and unintended operation, turn power off and unplug unit before troubleshooting.

unit is difficult to remove from counter for storage.

- Place your hands underneath both sides of the motor base and gently pull the unit up and toward you.

Can I add frozen fruit or ice?

- No. DO NOT add frozen ingredients or ice when using this unit.
- With the bail handle up, slide the vessel over the installed auger and evaporator.
- Lock the vessel in place by pushing the bail handle back to seal the vessel.
- Press the Power button to turn unit on, and the preset LEDs will illuminate, indicating the unit is ready for use.

Low-sugar alert: If the sugar content of the input is too low, the unit will detect it and provide an alert. Temperature Control LEDs will flash one at a

time in descending order starting with the top LED, preset LEDs will flash, and the unit will beep every minute for 15 minutes.

- Check the sugar content in your recipe to ensure it contains at least 4% sugar.
- If using a premade beverage, check the ingredient list to ensure the sugar content is at least 4% and ensure the beverage doesn't include artificial sweeteners. Refer to the Required Sugar Content section for more details.
- If a drink does not meet minimum requirements of total sugar, add 1-2 tablespoons flavored syrup, juice, sugar, date sugar, coconut sugar, maple syrup, agave, simple syrup, or honey per serving. . Reset the unit by pressing the preset. Restart by pressing the preset again to resume creating your frozen drink.

High-alcohol/high-sugar alert: If the alcohol and sugar content of the input is too high, the unit will detect it and provide an alert. Temperature Control LEDs will flash one at a time in ascending order starting with the bottom LED, preset LEDs will flash, and the unit will beep every minute for 15 minutes.

- Check the alcohol content in your recipe to ensure it contains between 2.8% and 16% alcohol.
- If using hard alcohol/spirits (35% +), use 4 oz for every 24 oz of total recipe size. Refer to the Alcohol Guidelines section for more details.
- If a drink exceeds the maximum alcohol amount, add $\frac{1}{4}$ cup water, soda, tonic water, seltzer, or coffee/tea per serving to dilute the input.
- Reset the unit by pressing the preset. Restart by pressing the preset again to resume creating your frozen drink.

Motor stall alert: If the motor stalls while running, the unit will detect it and provide an alert. Every Temperature Control LED will flash, and the unit will beep every minute for 15 minutes.

- This unit features a unique safety system that prevents damage to the motor and drive system should you inadvertently overload it. If the unit is overloaded, the motor will be temporarily disabled.
- Unplug the unit from the electrical outlet.
- Allow the unit to cool for approximately 15 minutes.
- Remove all parts and accessories. Ensure no ingredients are jamming the auger. . Plug in the unit again and reassemble all parts to resume unit use.

Unit failure alert: If the unit fails, the unit will detect it and provide an alert.

Every other Temperature

Control LED will flash alternately, and the unit will beep every minute for 15 minutes.

- If the unit fails, please call Customer Service at XXXXXXXX

Unit sideways alert: If the unit is on its side during use, the unit will detect it and provide an alert. The top 5 and bottom 5 Temperature Control LEDs will flash alternately, and the unit will beep every minute for 15 minutes.

- Place the unit upright and let it stand for at least 12 hours before using.

The One (1) Year Limited Warranty applies to purchases made from authorized retailers of Operating LLC. Warranty coverage applies to the original owner and to the original product only and is not transferable.

Warrants that the unit shall be free from defects in material and workmanship for a period of one (1) year from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, we's sole discretion, will be repaired or replaced up to one (1) year from the original purchase date.
2. In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. we reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as blending vessels, lids, cups, blades, blender bases, removable pots, racks, pans, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty.
2. Any unit that has been tampered with or used for commercial purposes.

- 3 Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by we. These defects include damages caused in the process of shipping, altering, or repairing the we product (or any of its parts) when the repair is performed by a repair person not authorized by we
- 6 Products purchased, used, or operated outside North