

# SENCOR®

# SLE 40F21



EN ■ QUICK GUIDE

CZ ■ RYCHLÝ PRŮVODCE

SK ■ RÝCHLY SPRIEVODCA

HU ■ GYORS ÚTMUTATÓ

PL ■ KRÓTKI PRZEWODNIK

LED TV

LED TV

LED TV

LED TV

LED TV

## 1. Safety instructions

To be able to use this product properly, read this user's manual carefully and keep it for future reference. If you plan to give (sell) this device to a third person, include all documentation, including this manual, with the transaction.



The lightning symbol inside a triangle indicates the device has dangerous voltage that may cause electric shock.



The exclamation point symbol inside an isosceles triangle indicates important operation and repair instructions in the included device documentation.

### WARNING

#### RISK OF ELECTRIC SHOCK - DO NOT OPEN!

**TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK SIDE). THERE ARE NO PARTS INSIDE WHICH COULD BE REPAIRED BY THE USER. FOR REPAIRS AND SERVICE, CONTACT AN AUTHORIZED SERVICE CENTRE.**

#### WARNING:

To prevent risk of fire or electric shock, do not expose the device to rain or moisture. The batteries must not be exposed to excessive heat, for example sunlight, fire, etc.



**This symbol indicates the device has double insulation between dangerous voltage from the network and user-accessible parts. Replace parts with identical spare parts only.**


- Do not leave a static image on the LCD panel for more than 2 hours. This may result in a damaged panel.
- LCD screens are made using precision technology to provide even the finest image details. Several defective pixels can appear on the screen from time to time, indicated as red, blue, green or black dots (up to 0.001% of the total pixel count of the screen). This does not affect the characteristics and the effectiveness of your TV set.
- The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

Before using, read the detailed safety information in full user manual available at websites [www.sencor.com](http://www.sencor.com)

## 2. Assembling the stand and connection

For stand attach use the supplied or recommended screws. Make sure that the supports are connected correctly so that the TV is stable. You can then connect the TV to the power supply.

Note: The following is only functional schematic, And the actual position and arrangement of different models may be different. For some models with an AC switch, please turn on the AC switch first, then press the power on/off button!

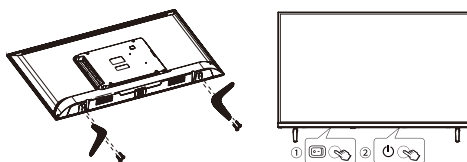

## 3. Insert batteries

To open the battery compartment, remove the back cover. Insert two batteries size AAA. Replace the cover.


## 4. TV connectors



1. **HEADPHONE IN**
2. **OPTICAL OUTPUT:** Connect the SPDIF receiver.
3. **CVBS IN:** AV input
4. **HDMI:** connection of a device with HDMI
5. **RF IN/ANTENNA IN:** connection to the antenna or to the cable television system
6. **RF IN (S2)/ANTENNA IN (S2):** connection to the antenna LNB for satellite
7. **USB:** connection of a USB flash drive for playback of supported multimedia content
8. **CI:** input CI  
Note: If the model has a CI card slot on its top and includes a silicone plug in the packaging, please insert the silicone plug into the slot when no CI card is in use. No action required for models with a slot but without a silicone plug.

## 5. Remote control

1. Set your TV to power on or standby mode.
2. Press to mute the sound. Press again or press VOL+ to unmute.
3. **0-9:** Press 0-9 to select a TV channel directly while watching TV. The channel will change after 2 seconds. Applicable for entering page number in teletext mode and so on.
4. **DTV/ATV:** Switch between Analog and Digital TV
5. Return to the previous viewed program.

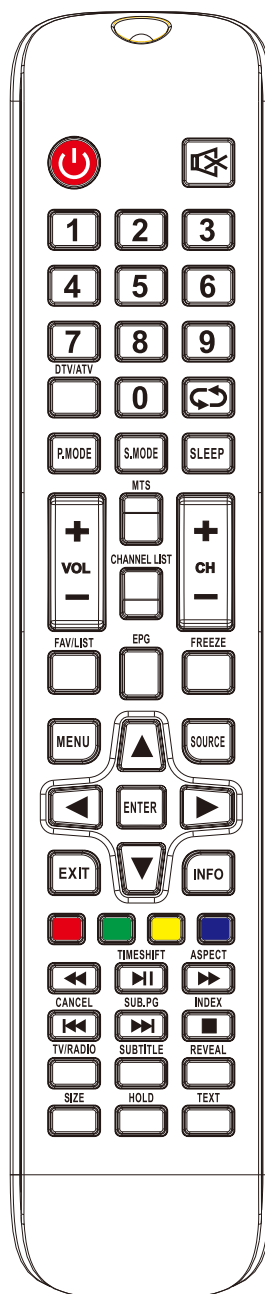

6. **S.MODE:** Press to cycle through the different sound settings
7. **SLEEP:** Select amount of time before TV turn itself off automatically.
8. **MTS:** Press to search the NICAM modes.
9. **P.MODE:** Press to cycle through the different picture settings
10. **MENU:** Allow you to navigate the on-screen menus.
11. **SOURCE:** Open the main menu, press to list the sources
12. **▲▼◀▶ENTER:** Allow you to navigate the on-screen menus and adjust the system settings to your preference.
13. **EXIT:** Exit from the menu or sub-menu and cancel the function in process (if applicable)
14. **DISPLAY:** Press to display the source and channel's info.

## 6. First time installation

After switch on the TV for the first time, a welcome screen appears, where you can select your language and country. Next, select the receive source and perform the initial tuning according to the on-screen instructions.

## 7. Included accessories

- Remote control
- Quick guide
- 2× AAA batteries
- Mini AV cable
- Mini YPbPr cable
- Stand with screws

## 8. USB Playback

Before you use the **Media** menu, connect the USB device and then press **SOURCE** and set the input source to Media. Compatibility with all USB devices is not guaranteed. Use the FAT32 file system, one partition, without protection. Formatting will permanently erase all the contents of the storage device! Test each USB device for recording speed and reliability first. If the result is unsatisfactory, replace it with another, especially faster one. USB speed memory is an essential parameter of reliable recording and time shift.

### Supported USB formats

Video: HEVC, AVI, MP4, MOV

Audio: MP3, AAC

Picture: JPEG, JPG

Text: TXT

## 9. Information sheet

Product Information Sheet					
COMMISSION DELEGATED REGULATION (EU) 2019/2013 with regard to energy labelling of electronic displays					
Parameter	Parameter or value and precision			Unit	
1.	Supplier's name or trademark.	SENCOR			
	Supplier's address.	SENCOR, U Sanitasu 1621, 251 01 Říčany, CZ			
2.	Model identifier	SLE 40F21			
3.	Energy Efficiency Class for Standard Dynamic Range (SDR)	E			
4.	On mode power demand in SDR	36,0		W	
5.	Energy Efficiency Class for High Dynamic Range (HDR)	n.a.			
6.	On mode power demand in HDR, if implemented	n.a.		W	
7.	Off mode, power demand, if applicable	0,0		W	
8.	Standby mode power demand, if applicable	0,5		W	
9.	Networked standby mode power demand, if applicable	n.a.		W	
10.	Electronic display category	Television			
11.	Size ratio	16	:	9	
12.	Screen resolution	1 920	x	1 080	pixels
13.	Screen diagonal	101,0		cm	
14.	Screen diagonal	40		inches	
15.	Visible screen area	42,6		dm <sup>2</sup>	
16.	Panel technology used	LED LCD			
17.	Automatic Brightness Control (ABC) available	No			
18.	Voice recognition sensor available	No			
19.	Room presence sensor available	No			
20.	Image refresh frequency rate (default)	60		Hz	
21.	Minimum guaranteed availability of software and firmware updates (from the date of end of the placement on the market)	8		Years	
22.	Minimum guaranteed availability of spare parts (from the date of end of the placement on the market)	7		Years	
23.	Minimum guaranteed product support	8		Years	
	Minimum duration of the general guarantee offered by the supplier	2		Years	
24.	Power supply type	Internal			
25.	External power supply (non standardized and included in the product box)				
	<i>i</i>	-			
	<i>ii</i>	Input voltage	- V		
	<i>iii</i>	Output voltage	- V		
26.	External standardised power supply (or suitable one if not included in the product box)				
	<i>i</i>	-			
	<i>ii</i>	Required output voltage	- V		
	<i>iii</i>	Required delivered current (minimum)	- A		
	<i>iv</i>	Required current frequency	- Hz		

## INSTRUCTIONS AND INFORMATION ON DISPOSING OF USED PACKAGING MATERIALS

Take the packaging material to a designated municipal waste facility.

### DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to standard municipal waste. For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. Correct disposal of this product helps save valuable natural resources and prevents damage to the environment caused by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

#### For business entities in European Union states

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

#### Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



Hereby, FAST ČR, a. s. declares that the radio equipment type SLE 40F21 is in compliance with Directive 2014/53/EU.

Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

Importer: FAST ČR, a.s.

Address: U Sanitasu 1621, Říčany 25101, Czech Republic

Email: info@sencor.com



1. Choose a good location for the television, in a clean place, away from sources of heat (sun, radiators, fireplaces), plants (pollen, dust, water) and the ground (risk of knocks, dust).



2. Do not place cloth, paper or other materials over the openings on the top, sides or bottom of the appliance.



3. Switch off the television after use (unless the manufacturer's operating instructions advise against it, as is usually the case for OLED televisions) and unplug it if it is not going to be used for (if it is an OLED television, leave it on standby before unplugging it).



4. Store the remote control carefully, do not expose it to liquids and check the condition of the remote control batteries regularly to prevent corrosion of the contacts.



5. Clean the screen with a soft, dry cloth after switching off and unplugging the television, and avoid glass sprays and other household cleaning agents.

# SENCOR<sup>®</sup>

## EN Warranty conditions

### Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

### This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

### Manufacturer:

FAST ČR, a.s., U Sanitasy 1621, Říčany 251 01, Czech Republic  
info@sencor.com

### Authorized service centers:

Visit [www.sencor.com](http://www.sencor.com) for detailed information about authorized service centers.

The original version of the instructions is in the Czech language, other language versions are made by the appropriate translation.

**FAST ČR, a.s.**, U Sanitasu 1621, Říčany CZ-251 01