

S7

Portable Bluetooth Speaker



Product manual

 
Send your Amazon ORDER ID to: support@ohayo.com.cn,
we will activate the warranty for your order,
and you can get a headphone.

Dear Customers :

Thank you for choosing our portable Bluetooth speaker . In order to let you experience the product easily, we have provided this detailed instructions Before you use the machine, please read the instructions carefully. Thank you for your support.

If you have any problems, please feel free to contact us via:
support@ohayo.com.cn,
we are always here to RESEND/REFUND you.

Product Host And Accessories



Speakers * 1



Power Data Cable * 1

 


Audio Cable * 1



Product Description * 1

Button Description



Hanging rope hole

1. Press and hold for 2 seconds to turn on/off,
2. Short press to switch light mode.
3. Continuously click twice: Change the EQ (Two EQ mode: Bass mode, Music mode)

Waterproof silicone plug

RGB ambient light

Short Press	1. When playing music: Play and pause functions. 2. When there is a call, short press to answer the call. During a call, short press to end the call
Long Press	1. Press and hold for 2 seconds to connect to the TWS, and press and hold for 2 seconds to disconnect the TWS connection. 2. When there is a call: press and hold for 2 seconds to reject the call 3. Press and hold for 5 seconds to clear pairing information and restore the default volume, which will automatically shut down.



Short press to increase volume, long press to switch to the next song

Short press to decrease the volume, long press to switch to the previous song.

1. Short press to switch playback modes: bluetooth, TF, AUX.
2. In Bluetooth connection mode: Press and hold for 2 seconds to disconnect the Bluetooth connection.

Instruction

- **SWITCH ON/OFF:** long press the  key to turn on and off, short press the  key to switch the light mode.
- **Bluetooth connection:** After turning on the device, switch it to Bluetooth mode, and the indicator light  will flash blue, indicating waiting for connection. Turn on the Bluetooth function of your phone, search for **S7**, click on Connect, the audio indicator light  slowly flashes, And with a successful connection prompt tone, you can play music on your phone.


Hands-free calls: After the Bluetooth connection of the mobile phone is successful, when making a call using the phone, the speaker will automatically enter a hands-free call state. When there is a call, short press  to answer and long press  for 2 seconds to reject the call. When a call is in progress, briefly press  to end the call. In music mode, quickly double-click to automatically make the last call.

- **TWS Dual Wireless Interconnection:**

1. Turn on the two **S7** and switch them to the Bluetooth mode. Do not connect other Bluetooth devices at this time.
2. Select one of the speakers and press and hold the  button for 2 seconds to enter the TWS pairing state.
3. Wait for 30 seconds, and the prompt tone will be heard after the TWS connection is successful.
4. After the connection is successful, one of **S7** becomes the main speaker, which is the left channel, and the other is the right channel.
5. Turn on the Bluetooth function of the mobile phone or other playback device, search again and connect the main speaker: **S7**. After successful connection, you can enjoy the surround stereo sound field composed of two speakers.
6. Disconnect TWS: In the TWS connection state, press and hold the  button for 2 seconds to disconnect the TWS interconnection. Long press and hold the  button for 5 seconds to clear the Bluetooth connection and reset the speaker.

(This function requires two **S7** speakers to be used)

Instruction

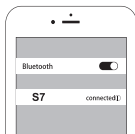

Power and Bluetooth indicator lights


Type c charging interface

TF Card interface(32G max)

AUX interface (3.5mm)

● TF Card Display

Insert the TF card, and the speaker will automatically switch to the memory card mode and start playing. Memory card mode supports MP3/WMA/WAV/APE/FLAC format audio source, and TF memory card supports a maximum capacity of 32G.

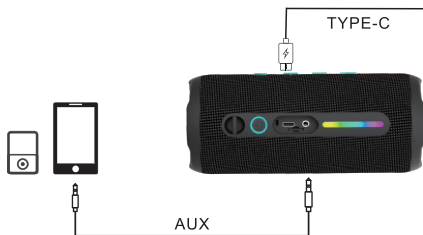

● AUX Audio Input

Insert the 3.5mm audio cable into the headphone output hole of the mobile phone/computer, and insert the other end into the AUX connector of the speaker. Press the "Z" key to switch to the AUX mode. Now the speaker plays audio as the external audio of the mobile phone or computer.

● Party lighting control

In the power-on state, short press "⏻" to switch the light mode or turn off the light.

Instruction

Charging Instructions

- Use the power data cable to connect the speaker and the computer USB interface(conforming to the standard of 5V 1A power adapter).
- Use a power adapter that complies with local national standards ($\leq 5V$ 2A), and connect the speaker with the power data cable for charging.
- When charging, the power indicator is red.
- After fully charged, the red charging indicator light goes out.

The charging indicator is: 



Product Technical Parameters

Input Voltage	DC5V	Bluetooth Version	5.3
Input Current	$\leq 2A$	Rated Power	24 W
Speaker Impedance	4 Ω	Battery Capacity	5200mAh
Product Weight	480g	Frequency Response	70-20KHZ
Product Size	75*75*178(mm)	Input Interface	TYPE-C/TF/AUX
Bluetooth Name	S7	Charging Time	<3 Hours

Troubleshooting

1. What if Bluetooth can't connect and play music silently?

- (1) Please first confirm that the speaker is in Bluetooth mode, and then confirm that your playback device supports Bluetooth connection function, and turn it on.
- (2) Check whether the speaker is in the Bluetooth search status. If there are too many Bluetooth devices around, it may be difficult to search. Please turn off other Bluetooth devices.
- (3) If you have successfully connected and cannot reconnect now, please delete the old Bluetooth name in the playback device and

support@ohayo.com.cn

Basic Product Information

search for the connection again.

2. What if the TF card or USB flash disk fails to play?

- (1) Please check whether the TF card or U disk has quality problems, and check whether the audio files stored are MP3/WMA/WAV/APE/FLAC format.
- (2) If the above problems are excluded, it may be the compatibility problem of TF card . It is suggested to change the format of TF card into FAT32 file format to improve its compatibility.



Precautions For Use

1. If the speaker is not used for a long time, please be sure to charge the unit at least once within 2 months to prevent excessive battery consumption and damage.
2. Please use the machine under normal temperature, and do not use it in dusty, humid, dry or overheated environment.
3. Avoid falling or hard objects hitting the machine during use, which may cause damage to the appearance or components of the machine.
4. Do not disassemble or repair the machine without permission, which may cause product damage or personal injury.

All information provided in this print has been carefully checked for accuracy. If there are any printing or translation errors, the Company will not bear the consequences arising therefrom. The Company reserves the right to change the product design and specifications without prior notice. The product pictures are only for reference, and the specific specifications and appearance (including but not limited to color) shall be subject to the actual products sold.

Product Basic Service Regulations

- ① The company to provide after-sales service
 - (1) Replacement service: In case of any quality problem caused by the manufacturer during the replacement period, the user can go to the dealer to replace the product for free (only for warranty treatment if the appearance is damaged)
 - (2) Warranty service: For products within the warranty period, if there are quality problems, users can send the products back to the after-sales service center for free warranty service, or entrust dealers to provide warranty service.

Product Basic Service Regulations

- (3) Repair service: In case of quality problems with products beyond the warranty service, the user can send the products back to the after-sales service center for repair service or entrust the dealer with repair service.
- ② From the date of purchase, if the product has quality problems under normal use, the whole machine will be guaranteed free of charge within one year.
- (1) The date of purchase shall be subject to the date of purchase invoice. If there is no purchase invoice or purchase voucher, but it can prove that the product is within the warranty period, free maintenance can be provided. If no voucher can be provided, only paid maintenance service can be provided.
- (2) For products without barcode and serial number, our company will not undertake after-sales service tasks.
- (3) The quality problem does not include the user's subjective objection to the sound quality, timbre, etc.
- (4) Replacement and warranty services are only valid for general use; All man-made damages (such as user's disassembly, improper connection, access to power supply with improper voltage, use not in accordance with the instructions, etc.), damage caused by transportation and other accidents, force majeure such as natural disasters, repair and modification not recognized by the company are not covered by the warranty, and maintenance services will be charged appropriately.
- (5) For discontinued models, the company only performs functional repair (the appearance may be different from the original product).
- (6) Warranty and maintenance services do not include product appearance, instructions and packaging.
- ③ Please bring this card and the original purchase invoice when requesting service. Please properly keep the purchase invoice of this card. This card cannot be altered, or it will be invalid.
- ④ Before using this product, please carefully read the operation guide of this product.