 
 
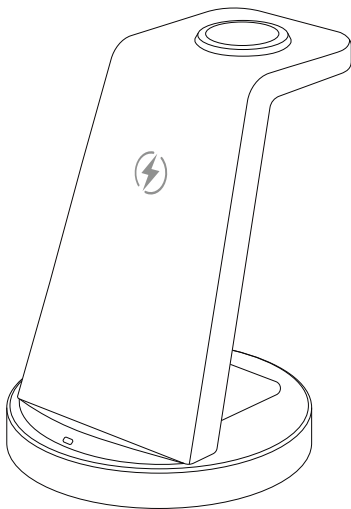 


3-In-1 Wireless Charger

 
Quick Start Guide

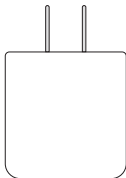

Package Contents

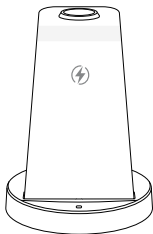

Quick Charger

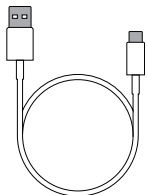

Charging Cable



7.5W

For iPhone 11 to 16 Series
For iPhone 8 & X Series
For iPhone SE (2nd & 3rd Gen)



10W/15W

For Android Phones That Support Wireless Charging
For Galaxy S8 & S9, S20 to S24 Series
For Galaxy Note 8-10 & 20 Series



2.5W

For iWatch SE & Ultra Series
For iWatch 2 to 10 Series



3W

ONLY SUPPORT

For AirPods Pro 1-2
For AirPods 2-4 with MagSafe or Wireless Charging Case

NOT SUPPORT

For AirPods 1-3 with Lightning Charging Case
For AirPods 4 with USB-C Charging Case

How to Use



Standby

(Auto Off After 10s)



White

Charging

(Auto Off After 10s)



Blue

FOD Alarm

 
(Foreign Object Detection)




Red




Cases Should Avoid




Metallic Design

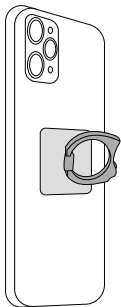 

Pocket Case

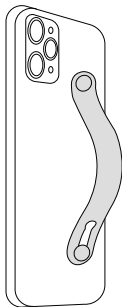 

Uneven Surface

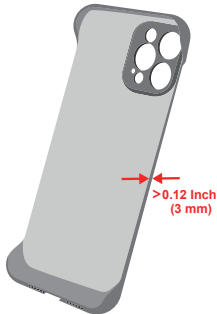 

Case > 3mm



Troubleshooting for Charging Issues

Phone Not Charging Consistently

1. Make sure the case less than 3mm, and remove metal objects.
2. Adjust phone to the correct charging position.
3. Unplug the charging adapter and plug it back in.

AirPods Not Charging

1. AirPods Pro 1-2 or AirPods 2-4 with MagSafe/Wireless cases are compatible.
2. AirPods 1-4 with Lightning/USB-C cases are not compatible.
3. Check your AirPods package or order to make sure your AirPods support wireless charging.

Watch Not Charging

1. Unplug the charging adapter and plug it back in.
2. Update watch software through Watch app on the Phone > General > Software Update.

- Increase the separation between the equipment and receiver.-
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.