


WASHER DRYER**Front Loading****USER MANUAL****Read This Manual**

Read all instructions and explanations for the installation before use. Follow the instructions carefully. Keep the operation instructions handy for later use. If the appliance is sold or passed on, ensure that the new owner always receives this operation instructions.

**CAUTION: HOT SURFACE !****CAUTION: RISK OF FIRE !****MODEL:
MFV3ED80BA10**

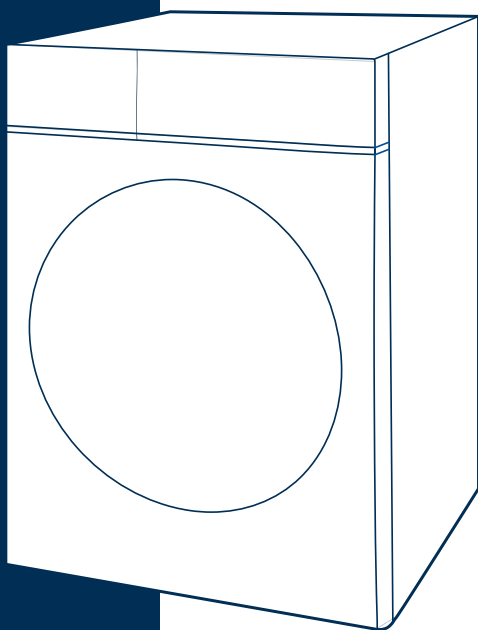

THANK YOU LETTER

Thank you for choosing us! Before using your new product, please read this user manual thoroughly to ensure that you know how to operate the features and functions that your new washer dryer offers in a safe way.

CONTENTS

THANK YOU LETTER	01
SAFETY INSTRUCTIONS	02
SPECIFICATIONS	06
PRODUCT OVERVIEW	07
QUICK START GUIDE	08
PRODUCT INSTALLATION	11
OPERATION INSTRUCTIONS	15
CLEANING AND MAINTENANCE	30
TROUBLE SHOOTING	35
TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT	36
DISPOSAL AND RECYCLING	37
DATA PROTECTION NOTICE	38
WARRANTY CARD	39



CAUTION: HOT SURFACE !



CAUTION: RISK OF FIRE !

SAFETY INSTRUCTIONS

Intended Use

The product is intended only for home use and for textiles in household amounts suitable for washing. This appliance is for indoor use only and not intended for built in use. Only use according to these instructions. The appliance is not intended for commercial use.

Any other use is considered as improper use. The producer is not responsible for any damage or injury that may result from it.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments;
- Areas for communal use in blocks of flats.

Explanation of Symbols



DANGER

This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.



WARNING OF ELECTRICAL VOLTAGE

This symbol indicates that there is a danger to life and health of persons due to voltage.



WARNING

The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.



CAUTION

The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



NOTE

The signal word indicates important information (e.g. damage to property), but not danger.



OBSERVE INSTRUCTIONS

This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Please read the following safety information thoroughly and follow it strictly to minimize the risk of fire or explosion, electric shock and to prevent property damage, personal injury or loss of life. Failing to follow these instructions shall void any warranty.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

WARNING: Electric Shock Hazard

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If the machine is damaged, it must not be operated unless repaired by the manufacturer, its service agent or similarly qualified persons.
- Risk of electric shock!
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised that they do not play with the appliance.
- Children 3 years and under shall be kept away from the appliance or continuously supervised.
- Animals and children may climb into the machine. Check the machine before every operation.
- Do not climb or sit on the appliance.

Installation Location and Surrounding

- All washing and additional substances are to be kept in a safe place out of the reach of children.
- Do not install the machine on a carpet floor.
- The obstruction of the openings by a carpet can damage the machine.
- Keep the appliance clear from heating sources and direct sunlight to avoid plastic and rubber parts to corrode.
- Do not use the appliance in humid environments or rooms containing explosive or caustic gas. In case of water leakage or water splashes, let the appliance dry in the open air.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the machine .
- Do not operate the machine in rooms with a temperature of below 5°C. This can cause damages to parts of it. If it is unavoidable, make sure to drain the water completely from the appliance after every use (see“Maintenance - Cleaning of drain pump filter”) to avoid damages caused by frost.
- Never use flammable sprays or substances in the immediate proximity of the appliance.
- That lint must not be allowed to accumulate around the washer dryer (not applicable for appliances intended to be vented to the exterior of the building).

Installation

- Remove all packaging material and transport bolts before using the appliance. Otherwise, serious damage may result.
- This appliance is equipped with a single inlet valve and can be connected to the cold water supply only.
- Mains plug must be accessible after installation.
- Before washing clothes for the first time, the product shall be operated once throughout all the procedures without any clothes inside.
- Before using the machine, the product shall be calibrated.
- Do not put any excessively heavy objects on the appliance, like water containers or heating devices.

- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- Max. Inlet water pressure 1 MPa. Min. inlet water pressure 0.05 MPa.

Electrical Connection

- Make sure the supply cable is not trapped by the machine, or it can get damaged.
- Connect the product to a grounded outlet protected by a fuse complying with the values in the "Technical specifications" table. The grounding installation has to be made by a qualified electrician. Ensure that the machine is installed in accordance with the local regulations.
- Water and electrical connections must be carried out by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.



WARNING:

- Don't use multiple plugs or extension cords.
- The appliance must not have an external switching device such as a timer or connected to a circuit that is regularly switched on and off.
- Do not pull the plug out of the mains outlet if there is flammable gas around.
- Never pull out power plug with wet hands.
- Always pull at the plug, not at the cable.
- Always unplug the appliance if it is not being used.

Water Connections

- Check the connections of the water inlet tubes, the water tap and the outlet hose for possible problems due to changes of water pressure. If the connections loosen or leak, close the water tap and get it repaired.
- Do not use the appliance before the pipes and hoses are installed properly by qualified persons.
- Glass door may become very hot during the operation. Keep children and pets far away from the machine while it is operating.
- The water inlet and outlet hoses have to be safely installed and remain undamaged.
- Otherwise, water leakage can occur.
- Do not remove the drain pump filter while there is still water in the appliance. Big quantities of water can leak out, and there is a risk of scalding due to hot water.

Operation and Maintenance



WARNING:

- Never stop the machine before the end of the drying cycle unless all items are quickly removed and spread out so that the heat can dissipate.
- The machine is not to be used if industrial chemicals have been used for cleaning. Risk of explosion.


- Never use any flammable, explosive or toxic solvents. Do not use gasoline and alcohol etc. as detergents. Only select detergents that are suitable for machine washing.
- Make sure that all pockets are emptied. Sharp and rigid items such as coins, brooches, nails, screws, stones etc. may cause serious damages to this machine.
- Remove all objects from pockets such as lighters and matches before use the appliance.
- Thoroughly rinse items that have been washed by hand.
- Do not dry unwashed items in the appliance.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, wax and wax removers should be washed in hot with an extra amount of detergent before being dried in the appliance.
- Items containing foam rubber (latex foam), shower caps, water proof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the machine.
- Fabric softeners or similar products should be used are recommended in their instructions.
- Never try to open the door forcefully.
- The door will unlock shortly after the end of a cycle.
- Please do not close the door with excessive force. If it is found difficult to close the door, please check if the clothes are properly inserted and distributed.
- Always unplug the appliance and close the water tap before cleaning and maintenance and after each use.
- Never pour water over the appliance for cleaning purpose. Risk of electric shock!
- Repairs shall only be carried out by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The producer will not be responsible for damages caused by the intervention of not authorized persons.

Transport

- Before Transport:
 - Bolts shall be reinstalled to the machine by a specialized person;
 - Accumulated water shall be drained out of the machine.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door can not be used as a handle.

Model	Washing/Drying Capacity
MFV3ED80BA10	8.0/6.0kg

SPECIFICATIONS

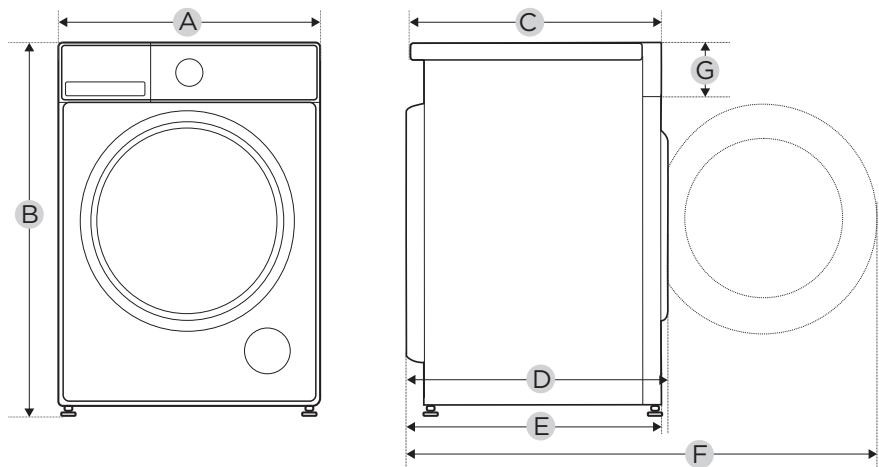


Model	MFV3ED80BA10
Power Supply	220-240V~, 50Hz
MAX.Current	10A
Standard Water Pressure	0.05MPa~1MPa
Washing Capacity	8.0kg
Drying Capacity	6.0kg
Dimension	
A	595mm
B	850mm
C	475mm
D	545mm
E	521mm
F	985mm
G	135mm
Weight	63kg
Rated Power	1900W
Drying Power	1300W

NOTE

The washing capacity is the maximum load quantity in kg dry weight that can be washed at one time. Make sure that the laundry loaded into the appliance does not exceed the rated capacity.

PRODUCT OVERVIEW

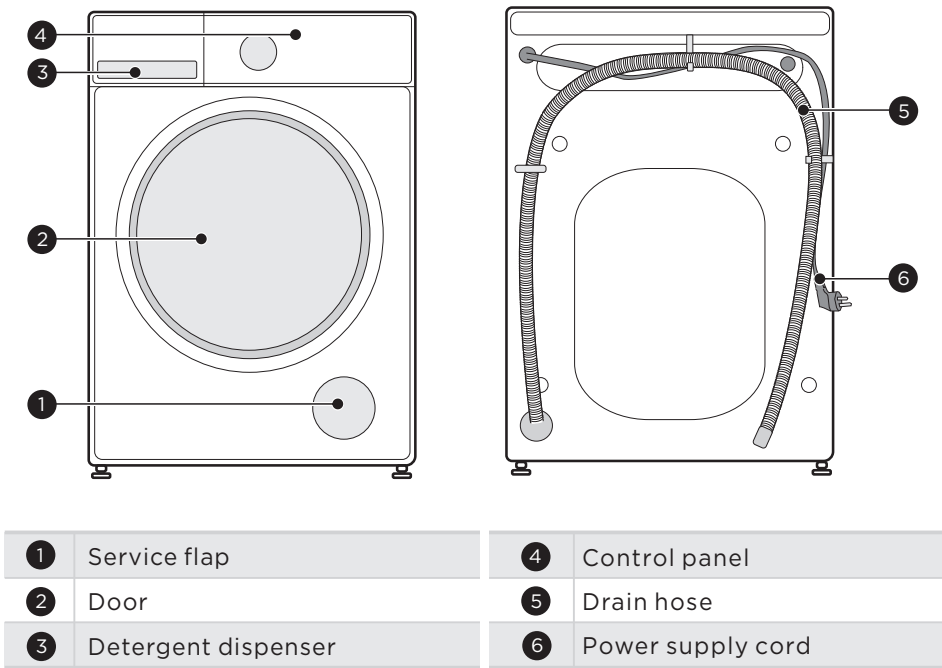

NOTE
The product picture is for illustration only, please refer to real product as reference.

Accessories

4 x Cover caps	1 x Supply hose cold water	1 x User Manual	Acoustic panel (optional)	Spanner (optional)

QUICK START GUIDE


WARNING

Before operation, please make sure the machine is installed properly. See chapter product installation.

Calibration of Washer Dryer

The washer dryer is able to detect the amount of laundry loaded to optimize performance by minimizing energy and water consumption, saving you money and time. For this reason, it's recommended to calibrate the washer dryer for best use.

1. Remove all accessories from the drum and close the door.
2. Insert the mains plug to the socket.
3. Switch on the washer dryer, press the option "Water Level" and "Spin" simultaneously until "t19" is displayed.

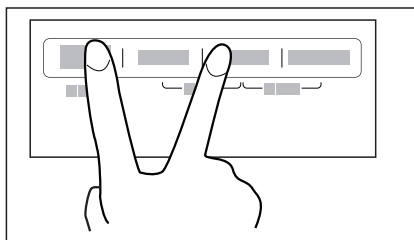

4. Start the calibration program by pressing ▷||. The washer dryer is successfully calibrated when "PAS" will be displayed.

CAUTION


When "FAL" will be displayed, the calibration of washer dryer failed. Repeat the calibration of washer dryer. If situation persists, please contact the customer service.

Drum Clean


Your washer dryer was thoroughly checked before it left the factory. To remove any residual water and to neutralize potential odors, it's recommended to clean your washer dryer before first use. For this reason, clean the washer dryer by running the "DRUM CLEAN" program or "COTTON" program with the optional temperature of 90°C. Always run the DRUM CLEAN program without laundry and add 1 table spoon of heavy-duty detergent.

1. Before Washing


1. Insert the mains plug

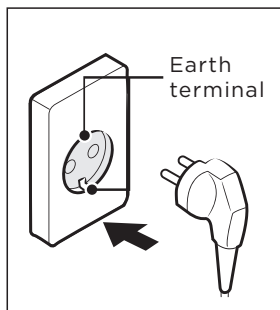


2. Open the water tap

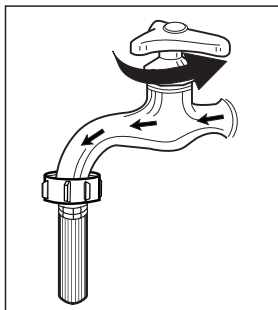


3. Load the laundry

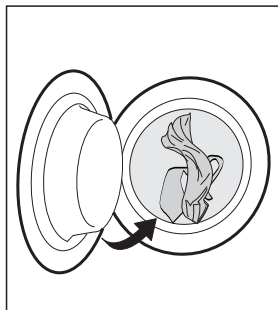

4. Close the door

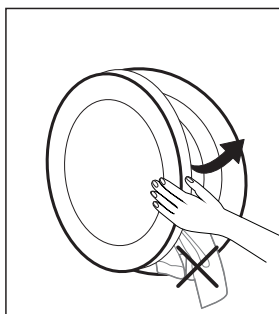

5. Add the detergents and washing aids

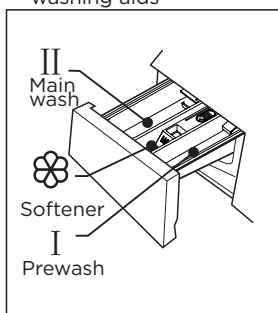


NOTE


- When closing the door, please make sure that your clothing does not get caught between the sealing ring and the washer dryer door to prevent water from leaking during operation or damaging the sealing ring by pulling.

2. Washing


1. Select program

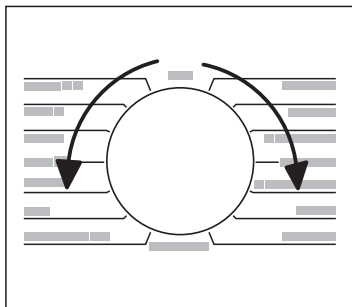

2. Select function or remain default settings

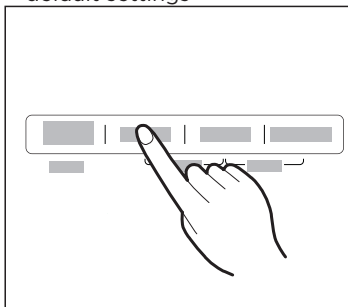

3. Press Start/Pause to start the program

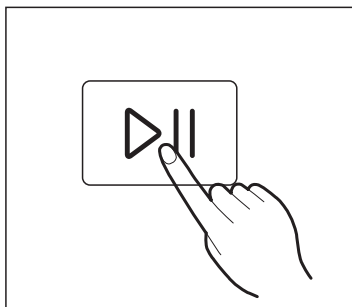

NOTE


The illustration above is for reference only. Please take the appearance of the actual product as reference.

3. After Washing

An acoustic signal is given and “End” will be displayed.

PRODUCT INSTALLATION

Tools Needed If Installation By Yourself

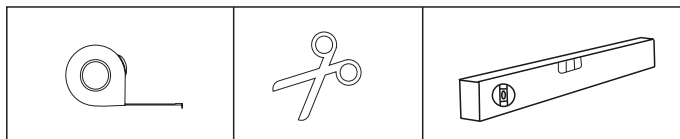

Tape measure



Scissors or Knife

Spirit level

Installation Area

WARNING


- Stability is important to prevent the product from moving!
- Make sure the washer dryer is standing leveled and stable.
- Make sure that the product does not stand onto the power cord.
- Make sure to maintain the minimum distances from the walls as shown in the picture.

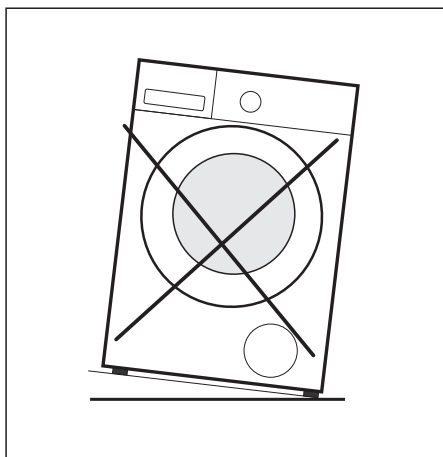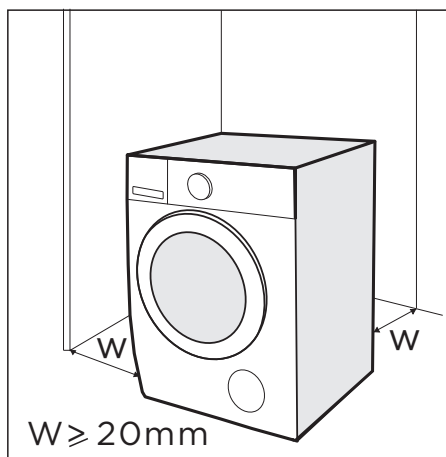

Before installing the washer dryer, the location characterized as follows shall be selected:

1. Rigid, dry, and level surface.
2. Avoid direct sunlight.
3. Sufficient ventilation.
4. Room temperature is above 5 °C .
5. Keep far away from the heat sources such as coal or gas burning washer dryers.

Unpacking the Washer Dryer

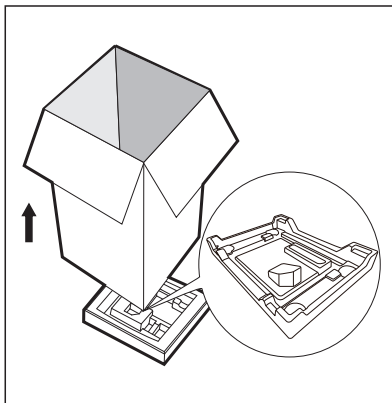

WARNING

- Packaging material (e.g. foils, styrofoam) can be dangerous for children.
- There is a risk of suffocation! Keep all packaging well away from children.
- Children can become entangled in the packaging film or swallow small parts and suffocate. Do not allow children to play with the packaging.

1. Remove the cardboard box and styrofoam packing.
2. Lift the washer dryer and remove the base packaging.
3. Remove the tape securing the power supply cord and drain hose.
4. Remove the inlet hose from the drum.

Disposal of packaging material


- The packaging is designed to protect the washer dryer from damage during transportation. The packaging materials are environmentally friendly and should be recycled. Recycling the packaging can reduce the use of raw materials in the manufacturing process and the amount of waste in landfill sites.

Remove Transport Bolts


WARNING

You must remove the transport bolts from the backside before using the product.


1. Loosen the 4 transport bolts with a spanner.

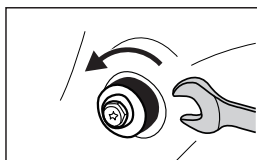

2. Remove the bolts including the rubber parts and keep them for future use.

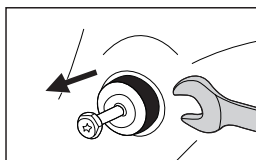


3. Close the holes by using the cover caps.

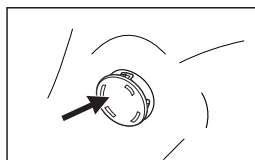

Levelling the Washer Dryer

WARNING

The lock nuts on all four feet must be screwed tightly against the housing.

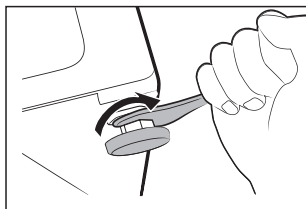


1. Loosen the lock nut.
2. Turn the feet until it reaches the floor.
3. Adjust the feet and lock the nuts with a spanner. Make sure the washer dryer is level using a spirit level.

Connect the Water Supply Hose


WARNING

To prevent leakage or water damage, follow the instructions in this chapter.

- Do not kink, crush or modify water inlet hose.

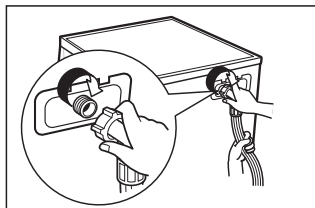

Connect the angled end of the water supply hose to the water inlet valve of the washer dryer. Connect the other end of the water inlet hose to the cold water tap connection.

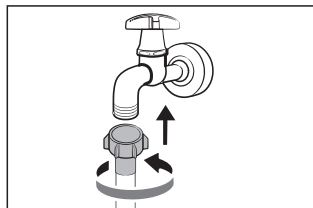

NOTE

- Tighten the connecting screw hand-tight. Check if the connections are tight.


Drain Hose

WARNING


- Do not kink or protract the drain hose.
- Position drain hose properly, otherwise damage might result in water leakage.
- It is not allowed to remove the buckle of drain pipe.

There are two ways to place the end of drain hose:

1.Put it into the water drain.

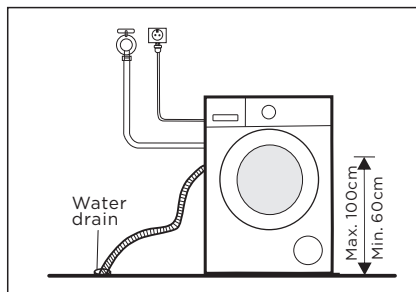


2. Connect it to the branch drain pipe of a sink.

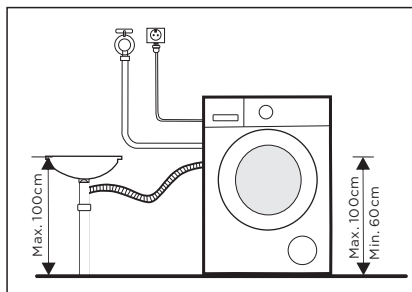

Acoustic Panel

NOTE

- Please make sure to assemble the acoustic panel, which can effectively reduce the noise caused by the machine while working, in order to provide you with a more peaceful and quiet living environment.

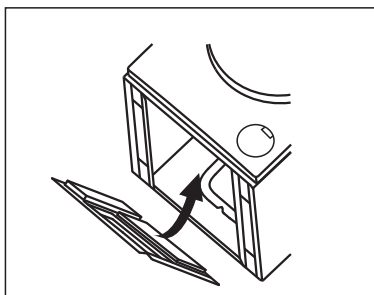


1. Get the machine laid on the floor, using some soft material like foam or clothes between the machine and floor for a protection;
2. Stick the acoustic panel to the bottom of machine.

OPERATION INSTRUCTIONS


Before Each Washing

- The ambient temperature of the washer dryer should be between 5°C and 40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the washer dryer is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the dosing recommendation of the detergent manufacture before wash. Use non-foaming or less-foaming detergent suitable for washer dryer properly.


1. Take all items out of the pockets

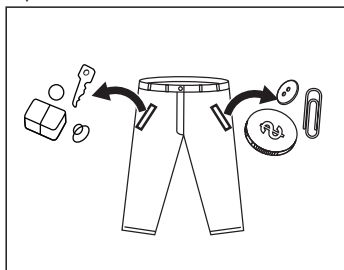


2. Sort laundry according to color and type of fabric

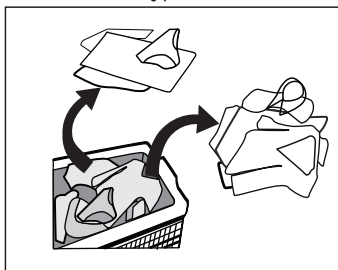

3. Tie together long textile strips and belts, close zips and button

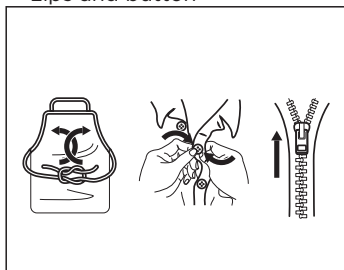

4. Put small items into a laundry bag

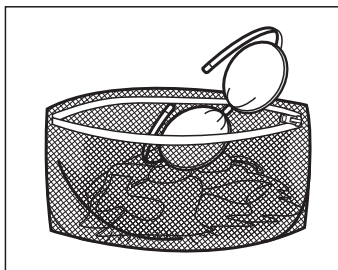


WARNING

- Do not wash textiles to which adhered any volatile or flammable substance such as cleaning agent, dry cleaning agent, spot remover, acetone, gasoline, kerosene, beauty oil, massage oil, animal oil, machinery oil, dry cleaning oil, volatile agent, alcohol, turpentine, wax, wax remover, banana water, disinfectant tablets, resin, etc.
- Washing single clothes items may easily create big eccentricity. Therefore it is suggested to add one or two more laundry items to the wash so that spin can be done smoothly.
- Do not wash, spin or dry water-proof seats, mats, or clothing.

Detergent Dispenser

- I Pre wash
- II Main wash
- Softener
- Release button to pull out the dispenser

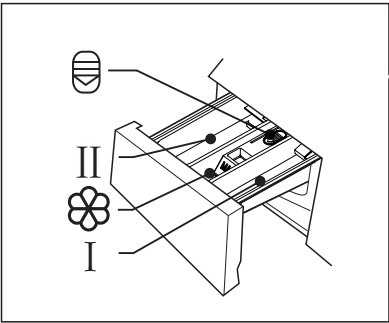

CAUTION

- If you use detergent pods or similar, place them directly in the washer dryer drum.

Program	I	II / 		Program	I	II / 	
COTTON		●	○	RINSE & SPIN			○
MIX		●	○	SPIN ONLY			
SPORTS		●	○	WASH AND DRY		●	○
WOOL		●	○	DRY ONLY			
DELICATE		●	○	BED LINEN		●	○
20°C		●	○	ECO40-60		●	○
HEALTH GUARD		●	○	QUICK 15'		●	○
DRUM CLEAN							

● Means must ○ Means optional

Detergent Recommendation

Recommended washing detergent	Type of laundry and textile	Wash cycles	Washing temp. °C
Heavy-duty detergent with bleaching agents and optical brighteners	White laundry made from boil-proof cotton or linen	COTTON, ECO 40-60, MIX	40
Colour detergent without bleaching agent and optical brighteners	Coloured laundry made from cotton or linen	COTTON, ECO 40-60, MIX	40
Color or mild detergent without optical brighteners	Coloured laundry made from easy care fibres or synthetic materials	20°C	20
Mild washing detergent	Delicate textiles, silk, viscose	QUICK 15'	Cold
Special wool detergent	Wool	WOOL	40

NOTE

- Agglomerating or ropy detergent or additive can be diluted in some water before pouring it into the detergent dispenser, to avoid its inlet to get blocked and thus cause a water overflow.
- Please choose the suitable type of detergent to get a maximum of washing performance and a minimum of water and energy consumption.
- To achieve the best cleaning result a proper detergent dosing is important.
- Use a reduced detergent amount if the drum is not filled completely.
- Always adjust the amount of detergent to the water hardness, if your tap water is soft, use less detergent.
- Dose according to how dirty your laundry is, less dirty clothes require less detergent.
- Highly concentrated (compact detergent) requires particularly accurate dosing.


Following symptoms are a sign of detergent overdosing:

- heavy foam formation
- poor washing and rinsing result

Following symptoms are a sign of detergent under dosing:

- laundry turns grey
- built-up of limescale deposits on the drum, the heating element and/or the laundry

Control Panel

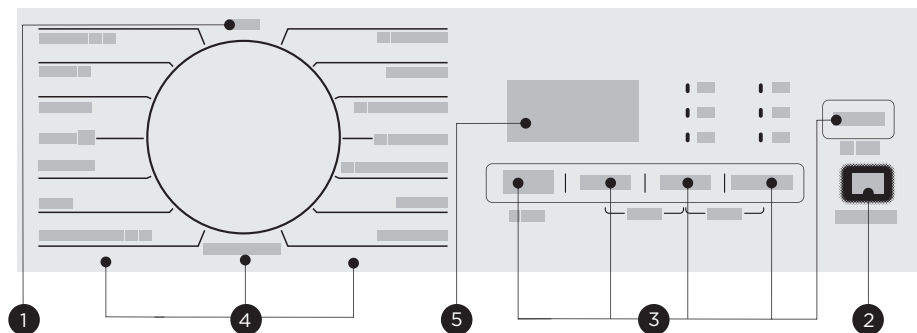

1 OFF

Turn the appliance off.

2 Start/Pause

Start or pause your program.

3 Option

This allows you to select additional functions.

4 Program

Choose appropriate program according to the laundry type.


5 Display

The display shows settings, estimated remaining time, options and status messages.

NOTE

- The illustration above is for reference only. Please take the appearance of the actual product as reference.

Display

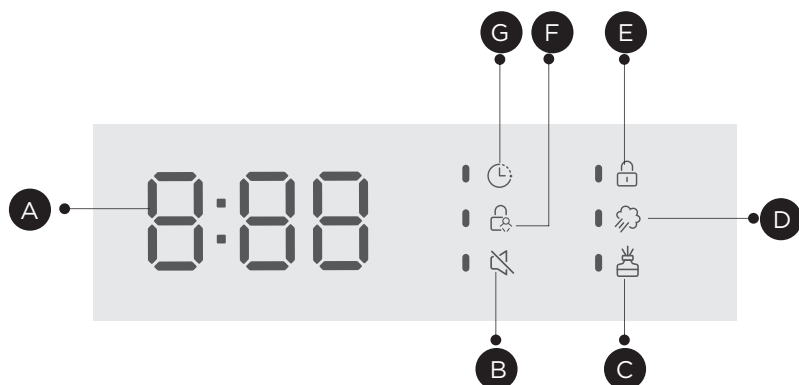

A Display

Wash Time

1:25

Speed

400

Error

E 30

Delay end

24

End

End

Temp

30

B Mute

C Perfume+

D Steam

E Door Lock

F Child Lock

G Delay end

Program Settings

	Program	Wash/Dry Load (kg)	Display Time (h:min)
		8.0/6.0	8.0
☀	COTTON	8.0/6.0	3:00
☀	MIX	8.0/6.0	1:30
	SPORTS	4.0/--	0:47
	WOOL	2.0/--	1:03
	DELICATE	2.5/--	0:50
	20°C	4.0/--	1:01
☀	HEALTH GUARD	4.0/3.0	2:39
	DRUM CLEAN	--	1:18
	RINSE & SPIN	8.0/--	0:20
	SPIN ONLY	8.0/--	0:12
☀	WASH AND DRY	6.0/6.0	5:16
☀	DRY ONLY	--/6.0	4:09
☀	BED LINEN	8.0/6.0	1:48
	ECO40-60	8.0/--	3:38
☀	QUICK 15'	2.0/1.0	0:15

NOTE

- Loading the household appliance up to the load quantity indicated for the respective programs will contribute to energy and water savings.
- The washing capacity is the maximum load quantity in kg dry weight that can be washed at one time. Make sure that the laundry loaded into the appliance does not exceed the rated capacity.

Consumption Data

The listed consumption data are measured in accordance with EN 60456. The actual consumption data may vary from the given data. The load quantity, type of fabric, composition of the laundry, selected level of soiling and options as well as ambient conditions can influence the consumption data.

MFV3ED80BA10							
Cycle	Nominal capacity in kg	Temperature setting in °C	Cycle duration in hours and minutes	Energy consumption in kWh/operating cycle	Water consumption in liter/operating cycle	Highest temperature in °C ¹⁾	Residual moisture in %/spin speed ²⁾
COTTON	8.0	60	3:05	1.429	71	60	53%/1400
MIX	8.0	40	1:30	0.772	71	40	53%/1400
20°C	4.0	20	1:01	0.183	44	20	65%/1000
QUICK 15'	2.0	Cold	0:15	0.030	31	Cold	70%/800
BED LINEN	8.0	40	1:48	0.803	71	40	65%/1000
ECO 40-60 ³⁾	8.0	--	3:38	0.695	63.0	37	53.9%/1351
	4.0	--	2:48	0.354	43.0	28	53.9%/1351
	2.0	--	2:48	0.186	35.0	24	53.9%/1351
WASH AND DRY ⁴⁾	6.0	--	9:30	3.825	104.0	28	3%/1400
	3.0	--	7:00	1.948	69.0	25	3%/1400

- The above data is for reference only, and the data may change due to different actual use conditions.
- The values given for program other than the ECO 40-60 program and the WASH AND DRY cycle are indicative only.
- 20°C is able to clean lightly soiled cotton laundry, at a nominal temperature of 20°C, which complies with the regulation (EU) 2019/2023.
- Concerning to EN IEC 62512:2020/A12:2023, EN 60456:2016/A12:2023 With (EU)2019/2014, (EU)2019/2023, (EU)2021/340, (EU)2021/341, The EU energy efficiency class is: D
Energy test program: ECO 40-60. Other as the default.
 Half load for 8.0Kg machine: 4.0Kg.
 Quarter load for 8.0Kg machine: 2.0Kg.
Energy test program: Wash and Dry; Dry level: d-3 (Extra Dry). Other as the default.
 Dry load for 8.0Kg machine: 6.0Kg, Half dry load machine: 3.0Kg.

Consumption Data

1. The highest temperature reached by the laundry in the wash cycle for at least 5 minutes.
2. Residual moisture after the wash cycle in water content percent and the spin speed at which this was achieved.
3. The ECO 40-60 program is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle. This program is used to assess the compliance with the regulation (EU) 2019/2014, (EU) 2019/2023, (EU) 2021/340, (EU) 2021/341.
4. The Wash and Dry program, dry level setting d-3 (Extra Dry) is able to clean normally soiled cotton laundry declared to be washable at 40°C, together in the same cycle, and to dry it in such a way that it can be immediately stored in a cupboard. This program is used to assess the compliance with the regulation (EU) 2019/2014, (EU) 2019/2023, (EU) 2021/340, (EU) 2021/341.

The most efficient programs in terms of energy consumption are generally those that perform at lower temperatures and longer duration.

Loading the household machine up to the capacity indicated for the respective programs will contribute to energy and water savings.

Noise and remaining moisture content are influenced by the spinning speed: the higher the spinning speed in the spinning phase, the higher the noise and the lower the remaining moisture content.

CAUTION

- If there is any break in the power supply while the machine is operating, a special memory stores the selected program. The machine will continue the program when the power supply is re-established.

Program Description

The chart describes the characteristics of the individual programs.

Programs

COTTON	This program is suitable for washing heavy-duty cotton items. Note: Use Mix program to wash mixed loads type made of cotton and synthetics.
MIX	For washing mixed loads made of cotton, synthetic including mixed fabric.
SPORTS	Special program for iron-free sportswear and active wear. Note: Do not use fabric softener. Close hook and loop fasteners and zippers.
WOOL	Gentle wash program to prevent shrinkage for machine-washable wool or wool blend fabrics. Note: Reduce the spin speed for very delicate woolen garments.
DELICATE	For washable delicates, e.g. made of silk, satin, viscose fiber or blended fabrics. Note: Reduce the spin speed for crease sensitive delicates.
20°C	Able to clean lightly soiled cotton laundry at a nominal temperature of 20 °C. Note: Do not exceed the maximum loading quantity.
HEALTH GUARD	For washing mixed loads made of cotton, synthetic including mixed fabric. Particularly suitable for increased hygiene requirements. Note: Do not exceed the maximum loading quantity.
DRUM CLEAN	Special cleaning program for your washing machine to remove dirt and limescale deposits. Clean your washing machine regularly to keep laundry washing sustainable. Note: Always run the Drum Clean program without laundry and add 1 table spoon of heavy-duty detergent.
RINSE&SPIN	For barely worn and new garments that need to be rinsed. Note: You can use fabric softener to freshen up your garments.
SPIN ONLY	For textiles that need to be spun. Note: Only pumping takes place at a set spin speed of 0 rpm.
WASH AND DRY	The standard energy program for washing and drying.
DRY ONLY	Select it to dry clothes. The drying time according to the load.
BED LINEN	This program is specially designed for washing bed linen. Note: For drying bed linen, it is recommended to select the "DRY ONLY" program or use the "Dry" function and set the dry level to "d-3".
ECO 40-60	Able to clean normally soiled cotton laundry. For loads that can be washed at 40 °C or 60 °C in the same program. Energy saving washing program.
QUICK 15'	An extra short program for barely worn and new garments that need to be rinsed. Note: You can use fabric softener to freshen up your garments.



WOOLMARK
WOOL CARE

WOOL HAND WASH SAFE

The wool wash cycle of this machine has been tested and approved by The Woolmark Company for the washing of wool garments labelled as "hand wash" provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine.

M1909: MFV3ED80BA10

Option

The charts shows which program offers which option for adjustment.

Program	Default Temperature(°C)	Default spin speed(rpm)	Additional Options
		1400	
COTTON	40	14-	   
MIX	40	14-	   
SPORTS	20	800	 
WOOL	Cold	800	
DELICATE	30	800	
20°C	20	10-	
HEALTH GUARD	60	800	   
DRUM CLEAN	90	--	
RINSE & SPIN	--	10-	
SPIN ONLY	--	10-	
WASH AND DRY	40	--	 
DRY ONLY	--	12-	 
BED LINEN	40	10-	   
ECO40-60	--	--	
QUICK 15'	Cold	800	 

NOTE

In "Default spin speed" 14-, 12-, and 10- mean speeds of 1400, 1200, and 1000.

	Spinning If needed, the spin speed can be adjusted in the following steps by pressing the button: 0-400-600-800-1000-1200-1400.
	Temperature If needed, the washing temperature can be adjusted in the following steps by pressing the button: Cold - 20°C - 30°C - 40°C - 60°C - 90°C.
	Water Level Adjust the water level of the main wash. Water Level: AU, L-1, L-2, L-3, L-4
	Perfume+ The function helps to modify the water flow mode and time. Then help the fibers to absorb softener more efficiently. As a result, with dosing the same amount of softener, we can achieve better fragrance left on the cloths.
	Steam Special pre-treatment of textiles in which warm steam penetrates deep into the textile fibers to increase the effectiveness of the washing performance.  Press the Dry button for 3 seconds until the Steam indicator lights up. The Steam function is now activated.
	Delay end This function is used to set a time-delayed end of the wash program. 1. Select a program. 2. Press the water level button for 3 seconds and select a time between 0 and 24 hours. 3. Press [Start/Pause] to start the time-delayed end program.      Choose program Setting time Start To cancel the delayed end function, press the “Water Level” button for 3 seconds again before starting the program until the display shows 0 hours.
	Child Lock The child lock is intended to prevent children from using the controls inappropriately. This setting deactivates the function of all buttons with the exception of the On/Off button.    Press [Temp] and [Spin] simultaneously for 3 seconds until the buzzer beeps. The child lock is now activated. The child lock can only be deactivated again by pressing the two buttons simultaneously again!

CAUTION

When the Child Lock is activated, the display will alternately show “CL” and the remaining time.
 Pressing any other button will cause the Child Lock indicator to flash. When the program ends, “CL” and “End” will alternate on the display.



Mute the buzzer



Choose the Program



3sec

Press [Spin] and [Perfume+] simultaneously for 3 seconds, until the buzzer is mute.

To act the buzzer function, press the two buttons again for 3 seconds. The setting will be kept until the next reset.



CAUTION

- After Muting the buzzer function, the sounds will not be activated any more.



Reload

You can use this function to add forgotten laundry items. After starting the wash program, the door releases, provided the water level and temperature do not pose a risk.

1. press the [Add Item 3 sec] button for 3 seconds
2. the washing program is paused and the door is released
3. reload the laundry and close the door
4. press the [Start/Pause] button and the wash program will continue



Press Reload



Reload the laundry



Start



CAUTION

- Don't use the Reload function when the water level over the edge of the inner tub or the temperature is higher.



NOTE

Usage counter

1. Please press "Water Level" and "Dry" on control panel simultaneously and continuously for around 5 seconds until the device display shows digits--the value can indicate the times of equipment usage.
2. Press "Water Level" and "Dry" on control panel simultaneously and continuously for around 5 seconds and customer can resume to normal operation.



Dry

Press the Dry button continuously to choose the dry level: Less Dry / Normal Dry/ Extra Dry/ Time Dry.

d-1: Less Dry

d-2: Normal Dry

d-3: Extra Dry

Time Dry: Drying your laundry and finish within given time (30/60/90/120/180 minutes). This program contains 10 minutes of default dehydration time, so the actual display time is 40/70/100/130/190 minutes.



NOTE

- Drying hints
 - Clothes could be dried after spinning
 - To ensure quality dry the textiles, please classify them according to their kinds and the drying temperature.
 - Synthetic should be set the proper drying time .
 - If you want to iron the clothes after drying, please put them for a while.
 - Clothes not suitable for drying
 - Particularly delicate items such as synthetic curtains, woolen and silk, clothes with metal inserts, nylon stockings, bulky clothes, such as anoraks, bedcovers, quilts, sleeping bags and duvets must not be dried.
 - Clothes padded with foam-rubber or materials similar to foam-rubber must not be machine dried.
 - Fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours.
-

Product Information Sheet

Supplier's name or trade mark(*),(°):						
Supplier's address(*),(°):						
Model identifier(*):MFV3ED80BA10						
General product parameters:						
Parameter	Value		Parameter	Value		
Rated capacity(kg)	Rated capacity(°)	6.0	Dimensions in cm(°),(°)	Height	85	
	Rated washing capacity(°)	8.0		Width	60	
Energy efficiency index	EEL _w (°)	46.6		Energy efficiency class	Depth	48
	EEL _{wd} (°)	66.9	EEL _w (°)		A	
Washing efficiency index	I _w (°)	1.031	Rinsing effectiveness (g/kg dry textile)	EEL _{wd} (°)	D	
	J _w (°)	1.031		I _r (°)	5.0	
Energy consumption in kWh per kg per cycle, for the washing cycle of the household washer-dryer, using the eco 40-60 programme at a combination of full and partial loads. Actual energy consumption will depend on how the appliance is used	0.424		Energy consumption in kWh per kg per cycle, for the wash and dry cycle of the household washer-dryer at a combination of full and half loads. Actual energy consumption will depend on how the appliance is used	3.074		
Water consumption in litre per cycle, for the eco 40-60 programme at a combination of full and partial loads. Actual water consumption will depend on how the appliance is used and on the hardness of the water	48		Water consumption in litre per cycle, for the wash and dry cycle of the household washer-dryer at a combination of full and half loads. Actual water consumption will depend on how the appliance is used and on the hardness of the water	90		
Maximum temperature inside the treated textile (°)(°C)	Rated washing capacity	37	Maximum temperature inside the treated textile (°C) for the washing cycle of the household washer-dryer, using the wash and dry cycle	Rated capacity	28	
	Half	28		Half	25	
	Quarter	24				
Spin speed(rpm)(°)	Rated washing capacity	1351	Weighted remaining moisture content (%) (°)	53.9		
	Half	1351				
	Quarter	1351				
Eco 40-60 programme duration (h:min)	Rated washing capacity	3:38	Spin-drying efficiency class (°)	B (°)		
	Half	2:48				
	Quarter	2:48				
Airborne acoustical noise emissions during the spinning phase for the eco 40-60 washing cycle at rated washing capacity (dB(A) re 1 pW)	72		wash and dry cycle duration (h:min)	Rated capacity	9:30	
				Half	7:00	
Type	free-standing		Airborne acoustical noise emission class for the spinning phase for the eco 40-60 programme at rated washing capacity	A (°)		
Off-mode (W) (if applicable)	0.50		Standby mode (W)(if applicable)	N/A		
Delay start (W) (if applicable)	4.00		Networked standby (W)(if applicable)	N/A		
Minimum duration of the guarantee offered by the supplier (*),(°):						
This product has been designed to release silver ions during the washing cycle			NO			

⌚ this item shall not be considered relevant for the purposes of Article 2(6) of Regulation (EU) 2017/1369.

⌚ for the eco 40-60 program.

⌚ for the wash and dry cycle. Dry level: d-3 (Extra Dry).

⌚ changes to this item shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369.

⌚ if the product database automatically generates the definitive content of this cell the supplier shall not enter these data.

- 1) The actual energy consumption will depend on how the appliance is used.
- 2) The actual water consumption will depend on how the appliance is used and on the hardness of the water.
- 3) Delivery of the spare parts within 15 working days after having received the order.

Product Data Sheet concerning (EU) 2019/2014, (EU) 2019/2023, (EU) 2021/340, (EU) 2021/341.

The product data sheet for your appliance can be found online.

Go to <https://eprel.ec.europa.eu> and enter the model identifier for your appliance to download the data sheet.

The model identifier for your appliance can be found in the technical specifications section.

CLEANING AND MAINTENANCE

Cleaning and Care


Clean your appliance regularly to keep laundry washing sustainably. The cleaning recommendation is described in the corresponding chapter.

WARNING

- Always unplug the appliance and close the water tap before cleaning and maintenance.

Cleaning the Cabinet

Proper maintenance of the appliance can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a towel to wipe it off immediately. Never use sharp items to clean the appliance. It's recommended to clean the cabinet as needed.

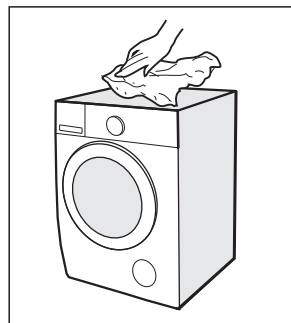

CAUTION

- Never use abrasive or caustic agents. Such as formic acids or its diluted solvents or similar substances, like alcohol or chemical products.

Cleaning the Drum

Any rust stains left inside the drum must be removed immediately using chlorine-free cleaning agents. Never use steel wool for cleaning the drum!

After 60 wash programs, U01 is displayed as a reminder on the control panel.

Please follow the reminder and carry out the cleaning of the drum to ensure normal operation of the appliance.

NOTE


- Keep any laundry away from the machine while cleaning the drum.

Cleaning the Door Seal and Glass

Wipe the glass and seal after each wash to remove lint and stains. If lint builds up it can cause leakages.

Remove any coins, buttons and other objects from the seal after each wash.


After 60 wash programs, U01 is displayed as a reminder on the control panel. Please follow the reminder and carry out the cleaning of the door seal to ensure normal operation of the appliance.

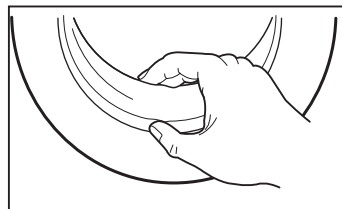


Cleaning the Inlet Filter

Clean the filter as needed. A diminishing water flow is a sign that the filter may be blocked.


1. Close the tap and remove the water supply hose from it.

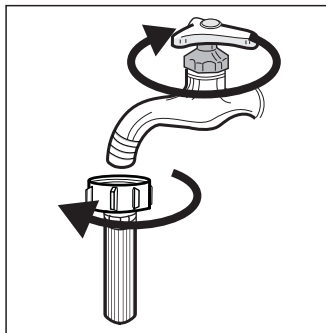


2. Clean the filter with a brush.

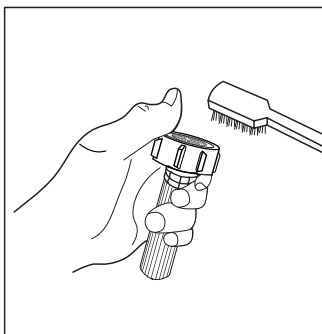

3. Unscrew the water supply hose from the backside of the appliance.

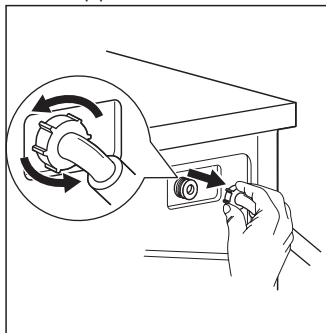

4. Clean the filter with a brush.

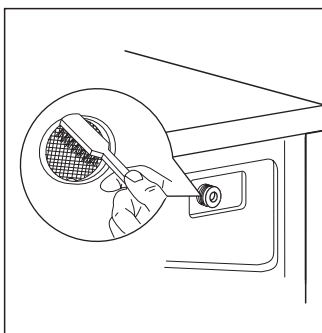

5. Reconnect the water supply hose again.


6. After 60 wash programs, U01 is displayed as a reminder on the control panel. Please follow the reminder and carry out the cleaning of the inlet filter to ensure normal operation of the appliance.

Cleaning the Detergent Dispenser


Limescale and detergent residues can build up on the detergent dispenser. It's therefore recommended to clean the detergent dispenser if needed.

- Press down the release [] on the softener cover and pull the detergent dispenser out of the detergent box.
- Lift the softener cover off the detergent dispenser and wash both items with water.
- Clean the inside of the detergent box with a brush.
- Restore the softener cover and push the dispenser back into the detergent box.


1. Press the release and remove the detergent dispenser

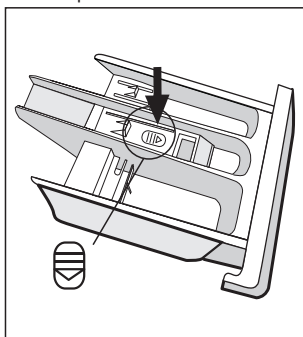


2. Clean the detergent dispenser and the softener cover under water

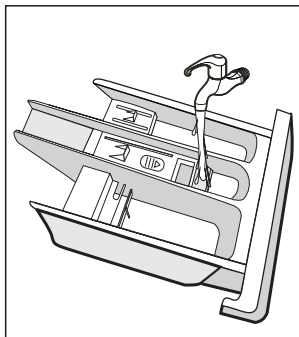

3. Clean the detergent box with a soft brush

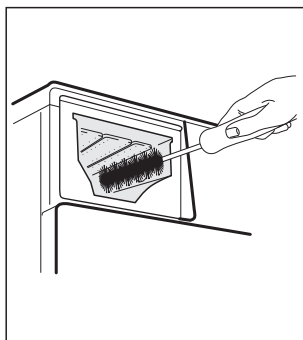

4. Insert the detergent dispenser

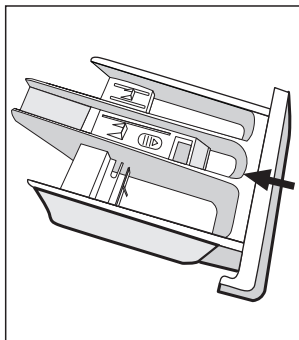

NOTE


- Do not use abrasive or caustic agents to clean plastic parts.
- After 60 wash programs, U01 is displayed as a reminder on the control panel. Please follow the reminder and carry out the cleaning of the detergent dispenser to ensure normal operation of the appliance.
- Always leave the detergent drawer slightly open so that it can dry properly.

Cleaning the Drain Pump Filter


If there is a problem with the drain pump, clean it according to the following cleaning instructions.

WARNING


- Make sure that the appliance has finished the washing program and load is removed of drum. Switch it off and unplug the appliance before cleaning the drain pump filter.
- Be careful of hot water. Wait for water cooling down. Risk of scalding!
- After 60 wash programs, U01 is displayed as a reminder on the control panel. Please follow the reminder and carry out the cleaning of the drain pump filter to ensure normal operation of the appliance.

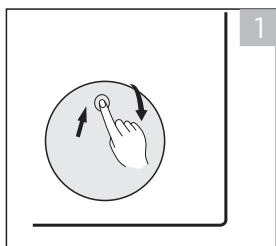


Open the lower cover cap

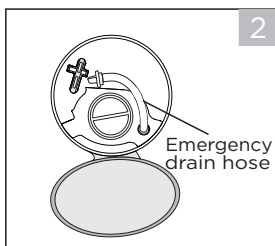


Pull out the emergency drain hose, and take off the hose cap

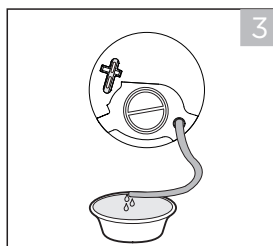


After the water has flown out completely, reinsert the drain hose

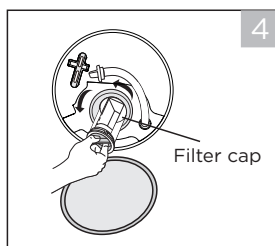

Open the pump filter by turning to the counter clockwise

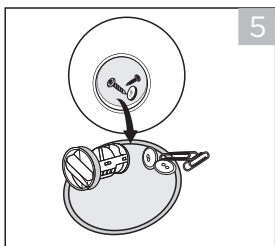

Remove extraneous objects

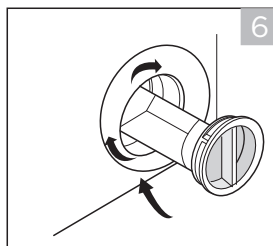

Carefully reinsert the pump filter and screw the lower cover cap in clockwise


NOTE

- Make sure that hose cap of emergency drain hose are reinstalled properly, otherwise water may leak.
- Some appliances don't have emergency drain hose, so step 2 and step 3 can be skipped.
- When the appliance is under operation and depending on the program selected there can be hot water in the pump. Never remove the pump cover during a washing program, always wait until the appliance has ended the operation and load is removed of drum.


Emergency Door Release

In case of power failure or other circumstances and door cannot be opened. If it is necessary to open the door under this circumstances, please pull down the pull cord inside emergency door and restore the pull cord after opening the door.


Emergency door pull cord

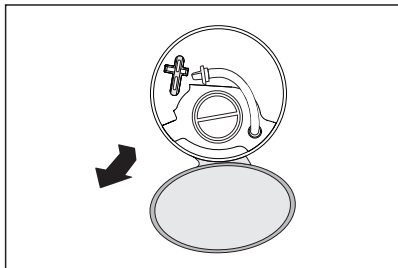

1. Open filter door.

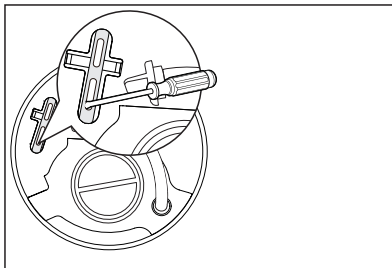

2. Using a straight screwdriver (or other non-sharp tool), insert into the emergency door pull cord.

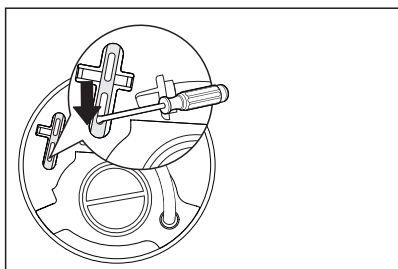

3. Pull down the emergency door pull cord (refer to direction of the arrow in the picture).
If unlocked successfully, you will find the door lock icon will go out.

CAUTION

The machine is not allowed to use the emergency switch pull cord during washing. If need to run machine urgently, it is recommended to open door after water is cooled, to avoid getting burn caused by high temperature residual water outflow from the machine tub.

TROUBLE SHOOTING

Whenever there is a problem with the appliance, check if you can solve it following the tables below. If the problem persists, please contact the customer service.

Description	Possible Cause	Solution
Appliance does not start	Door is not closed properly. Clothes are stuck.	Check the laundry. Close the door properly and restart.
Door can't be opened	Safety protection is activated.	Disconnect the power and restart.
Water leakage	Connections are not tight enough.	Check and fasten the water inlet hose. Check and clean the outlet hose.
Detergent residues in the detergent dispenser	Detergent is damp and/or clotted.	Clean and wipe the detergent dispenser dry.
Indicator or display does not work	PC board or harness have connection problems.	Switch off the power and check if the mains plug is connected properly.
Abnormal noise	Fixing bolts are still in place. Floor is not solid or level.	Check if the fixing bolts have been removed. Make sure the appliance is installed on a solid and level floor. Leveling the appliance again.

Error Codes

Description	Possible Cause	Solution
E30	Door is not closed properly.	Close the door properly and restart.
E10	Water injecting problem during washing program.	Check if the water pressure is high enough. Straighten the water pipe. Clean the inlet valve filter.
E21	Overtime water draining	Check the drain hose and pump filter for blockage.
E12	Water overflow	Restart the appliance.
EXX	Others	Restart the appliance. If problem persists, please contact the customer service.

TRADEMARKS, COPYRIGHTS AND LEGAL STATEMENT

 Midea logo, word marks, trade name, trade dress and all versions thereof are valuable assets of Midea Group and/or its affiliates (“Midea”), to which Midea owns trademarks, copyrights and other intellectual property rights, and all good will derived from using any part of an Midea trademark. Use of Midea trademark for commercial purposes without the prior written consent of Midea may constitute trademark infringement or unfair competition in violation of relevant laws.

This manual is created by Midea and Midea reserves all copyrights thereof. No entity or individual may use, duplicate, modify, distribute in whole or in part this manual, or bundle or sell with other products without the prior written consent of Midea.

 
All the described functions and instructions were up to date at the time of printing this manual. However, the actual product may vary due to improved functions and designs.

DISPOSAL AND RECYCLING

Important Instructions for Environment

Compliance with the WEEE Directive and Disposing of the Waster Product:
This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waster electrical and electronic equipment (WEEE).

This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.



Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Package Information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



DATA PROTECTION NOTICE

For the provision of the services agreed with the customer, we agree to comply without restriction with all stipulations of applicable data protection law, in line with agreed countries within which services to the customer will be delivered, as well as, where applicable, the EU General Data Protection Regulation (GDPR).

Generally, our data processing is to fulfil our obligation under contract with you and for product safety reasons, to safeguard your rights in connection with warranty and product registration questions. In some cases, but only if appropriate data protection is ensured, personal data might be transferred to recipients located outside of the European Economic Area.

Further information are provided on request. You can contact our Data Protection Officer via **MideaDPO@midea.com**. To exercise your rights such as right to object your personal data being processed for direct marketing purposes, please contact us via **MideaDPO@midea.com**. To find further information, please follow the QR Code.

WARRANTY CARD

NOTES

We provide a guarantee for this machine in accordance with the following conditions: You have a manufacturer's warranty of _____ years from the date of purchase (proof of purchase must be provided). Our General Terms and Conditions apply.

Your device / serial number

Purchase date:

Place of purchase:

Do you have any questions ?

We are happy to support you !

<http://www.midea.com>

Customer Service

Spare parts for your appliance are available for a minimum of 10 years following EU COMMISSION REGULATION 2019/2023 ANNEX II Ecodesign requirements.

In case of questions, please contact our local customer service center.

WARNING

Risk of electric shock

- Never try to repair an appliance which is defective or presumed to be defective. You may put your own and future users' lives in danger. Only authorised specialists are allowed to carry out this repair work.
- Improper repair will void the warranty and subsequent damages can't be recognized!

Transport

IMPORTANT STEPS WHEN MOVING THE APPLIANCE

- Unplug the appliance and close the water inlet tap.
- Check if the door and the detergent dispenser are closed properly.
- Remove the water inlet pipe and the outlet hose from the house installations.
- Let the water drain completely from the appliance (see "Cleaning the Drain Pump Filter")
- Important: Re-install the 4 transport bolts in the back of the appliance.
- This appliance is heavy. Transport with care. Never hold any protruding part of the appliance when lifting. The appliance door can not be used as a handle.

CAUTION

- When lifting the machine, there is a risk of cuts in the lower area. Protective gloves must be worn.



make yourself at home