 


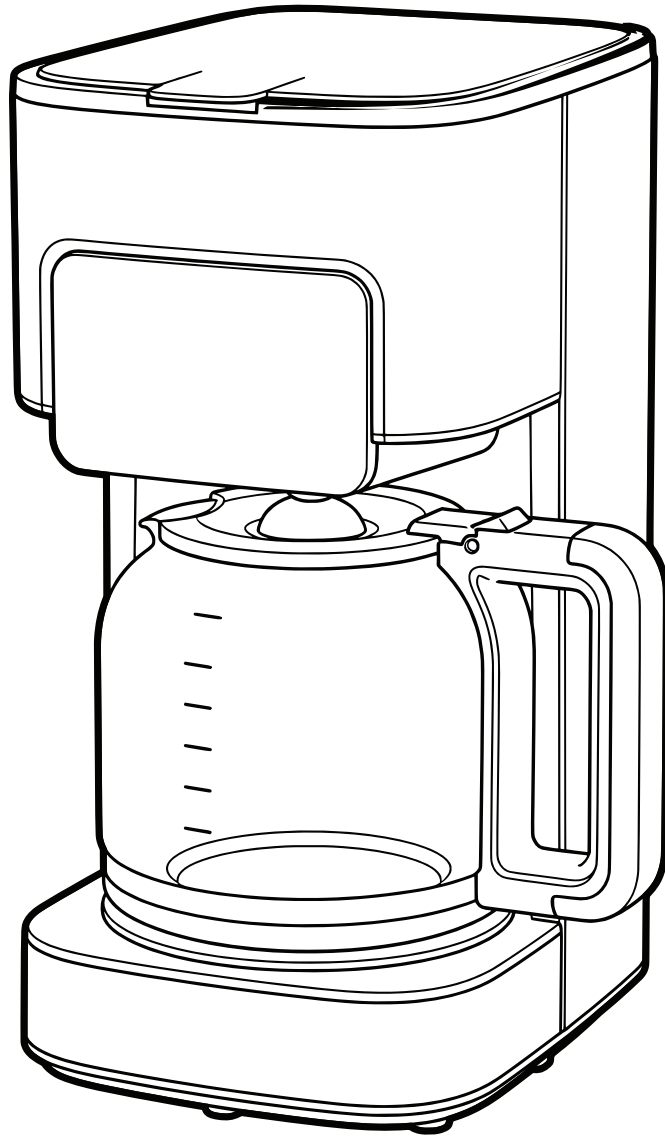

1.5L MATTE BLACK COFFEE MACHINE

Product Instructions

Product No. 2000375

vonshef

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

 
SCAN ME



Need further help?
support@vonhaus.com





See our full range at
www.vonhaus.com

Components

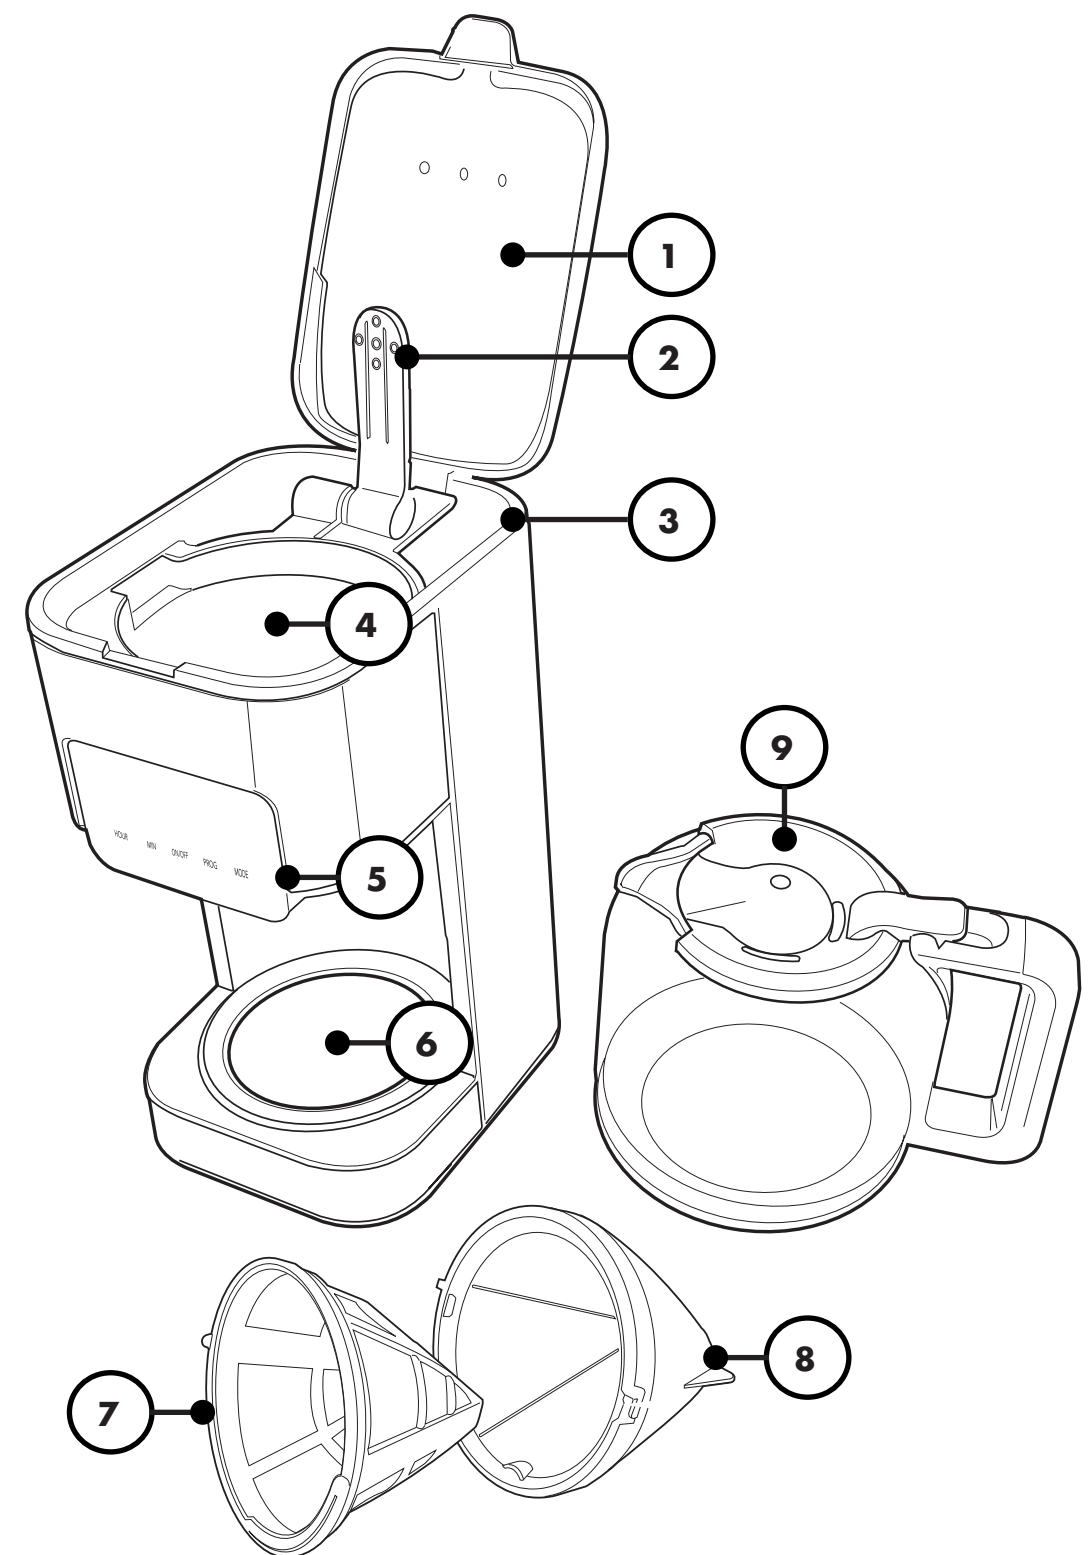

- | | | |
|-----------------|-------------------------|------------------|
| 1. Lid | 4. Funnel Housing | 7. Filter Basket |
| 2. Water Outlet | 5. Control Panel | 8. Funnel |
| 3. Reservoir | 6. Carafe Warming Plate | 9. Carafe |

   
 
Assembly

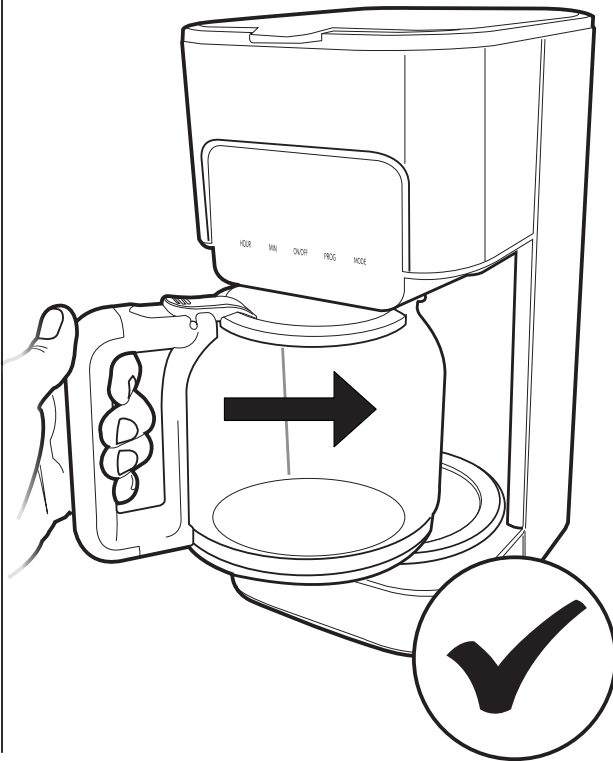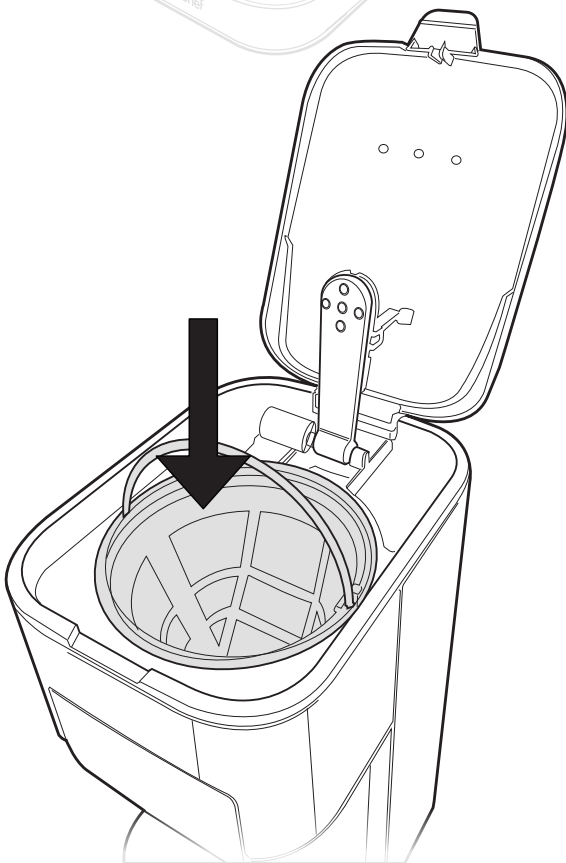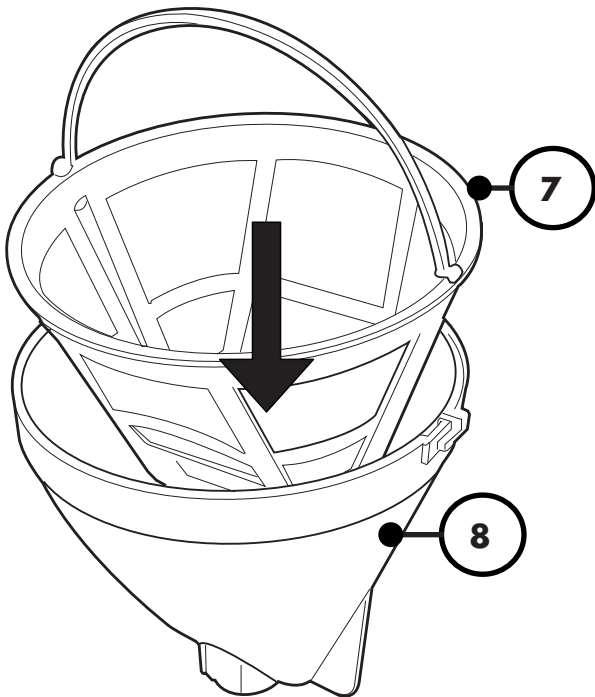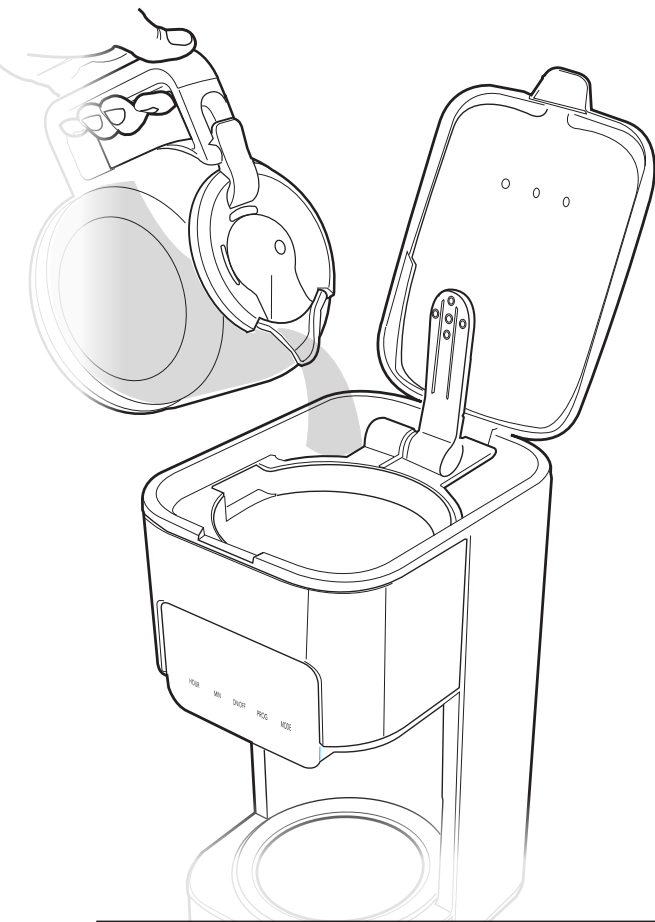


Operation

IMPORTANT: Before using the appliance for the first time, it is important you flush out the system 2-3 times to clear away any

  manufacturing residue. To do this, simply follow the instructions below.
NOTE: DO NOT add any coffee for this step.

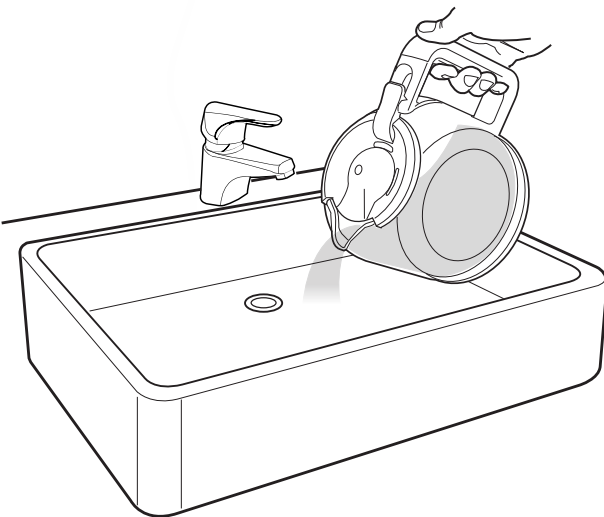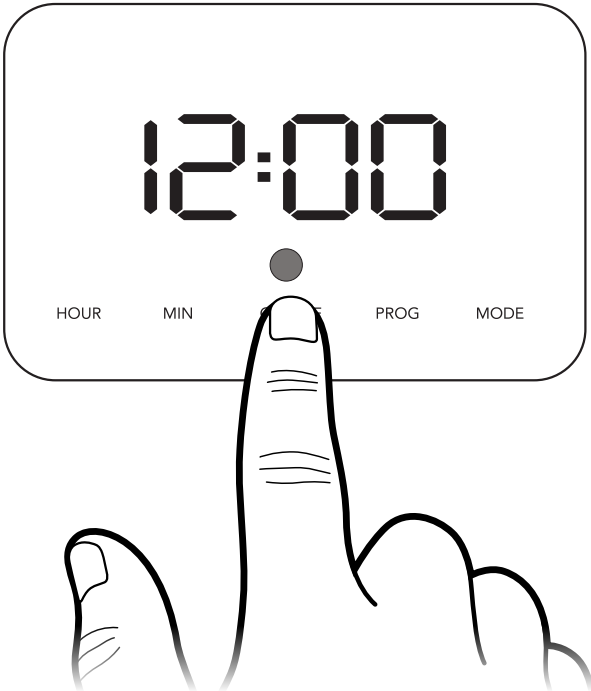

Control Panel

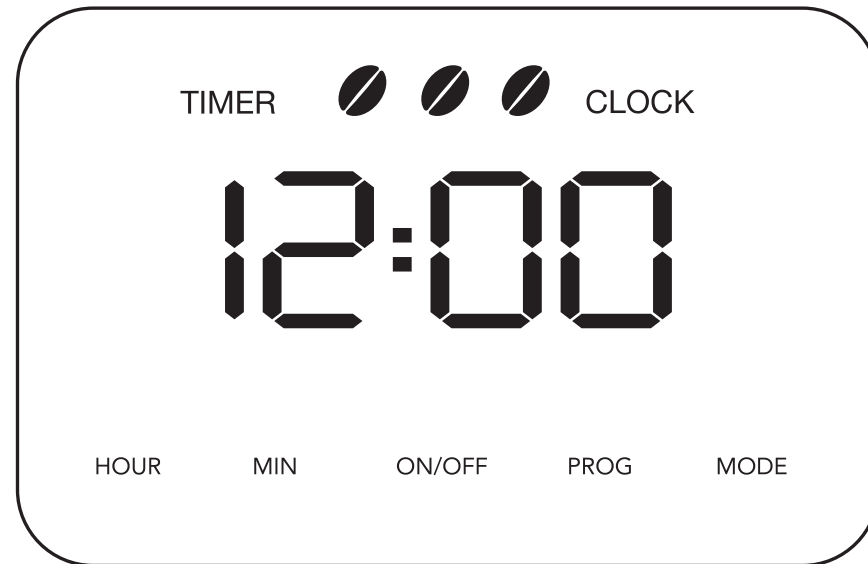 

- **HOUR:** Press to adjust the hour digit to set the current time or desired working time.
- **MIN:** Press to adjust the minute digit when setting the current time or required working time.
- **ON/OFF:** Once connected to a suitable mains outlet, press once to switch on the appliance. 12:00 will be displayed.
- **PROG:** Toggle between the 'TIMER' and 'CLOCK' functions before setting the current time or required working time.
- **MODE:** Selects the desired strength/aroma of the coffee produced. This is indicated by the coffee beans displayed at the top of the LCD screen. Press once for a weak coffee, twice for a mild coffee and three times for a strong coffee.

Delay Function

NOTE: To use the 'DELAYED FUNCTION' program, you must first set the current time by pressing the **PROG BUTTON**. The word **CLOCK** will display indicating you can input the time using the **HOUR** and **MIN BUTTONS**.

 
Press the **PROG BUTTON** again until **TIMER** is shown, then enter the desired working time.

Pressing the **ON/OFF BUTTON ONCE** will start an 'instant' brewing cycle. This will be indicated by a small red indicator light.

Pressing the **ON/OFF BUTTON TWICE** will enter the delayed function state. This will be indicated by a blue indicator light and will automatically begin a brewing cycle once the desired set time has been reached. After the cycle is complete, the appliance will automatically switch off after 35 minutes.





Press the **ON/OFF BUTTON** for a **THIRD** time to switch the appliance off.

Operation

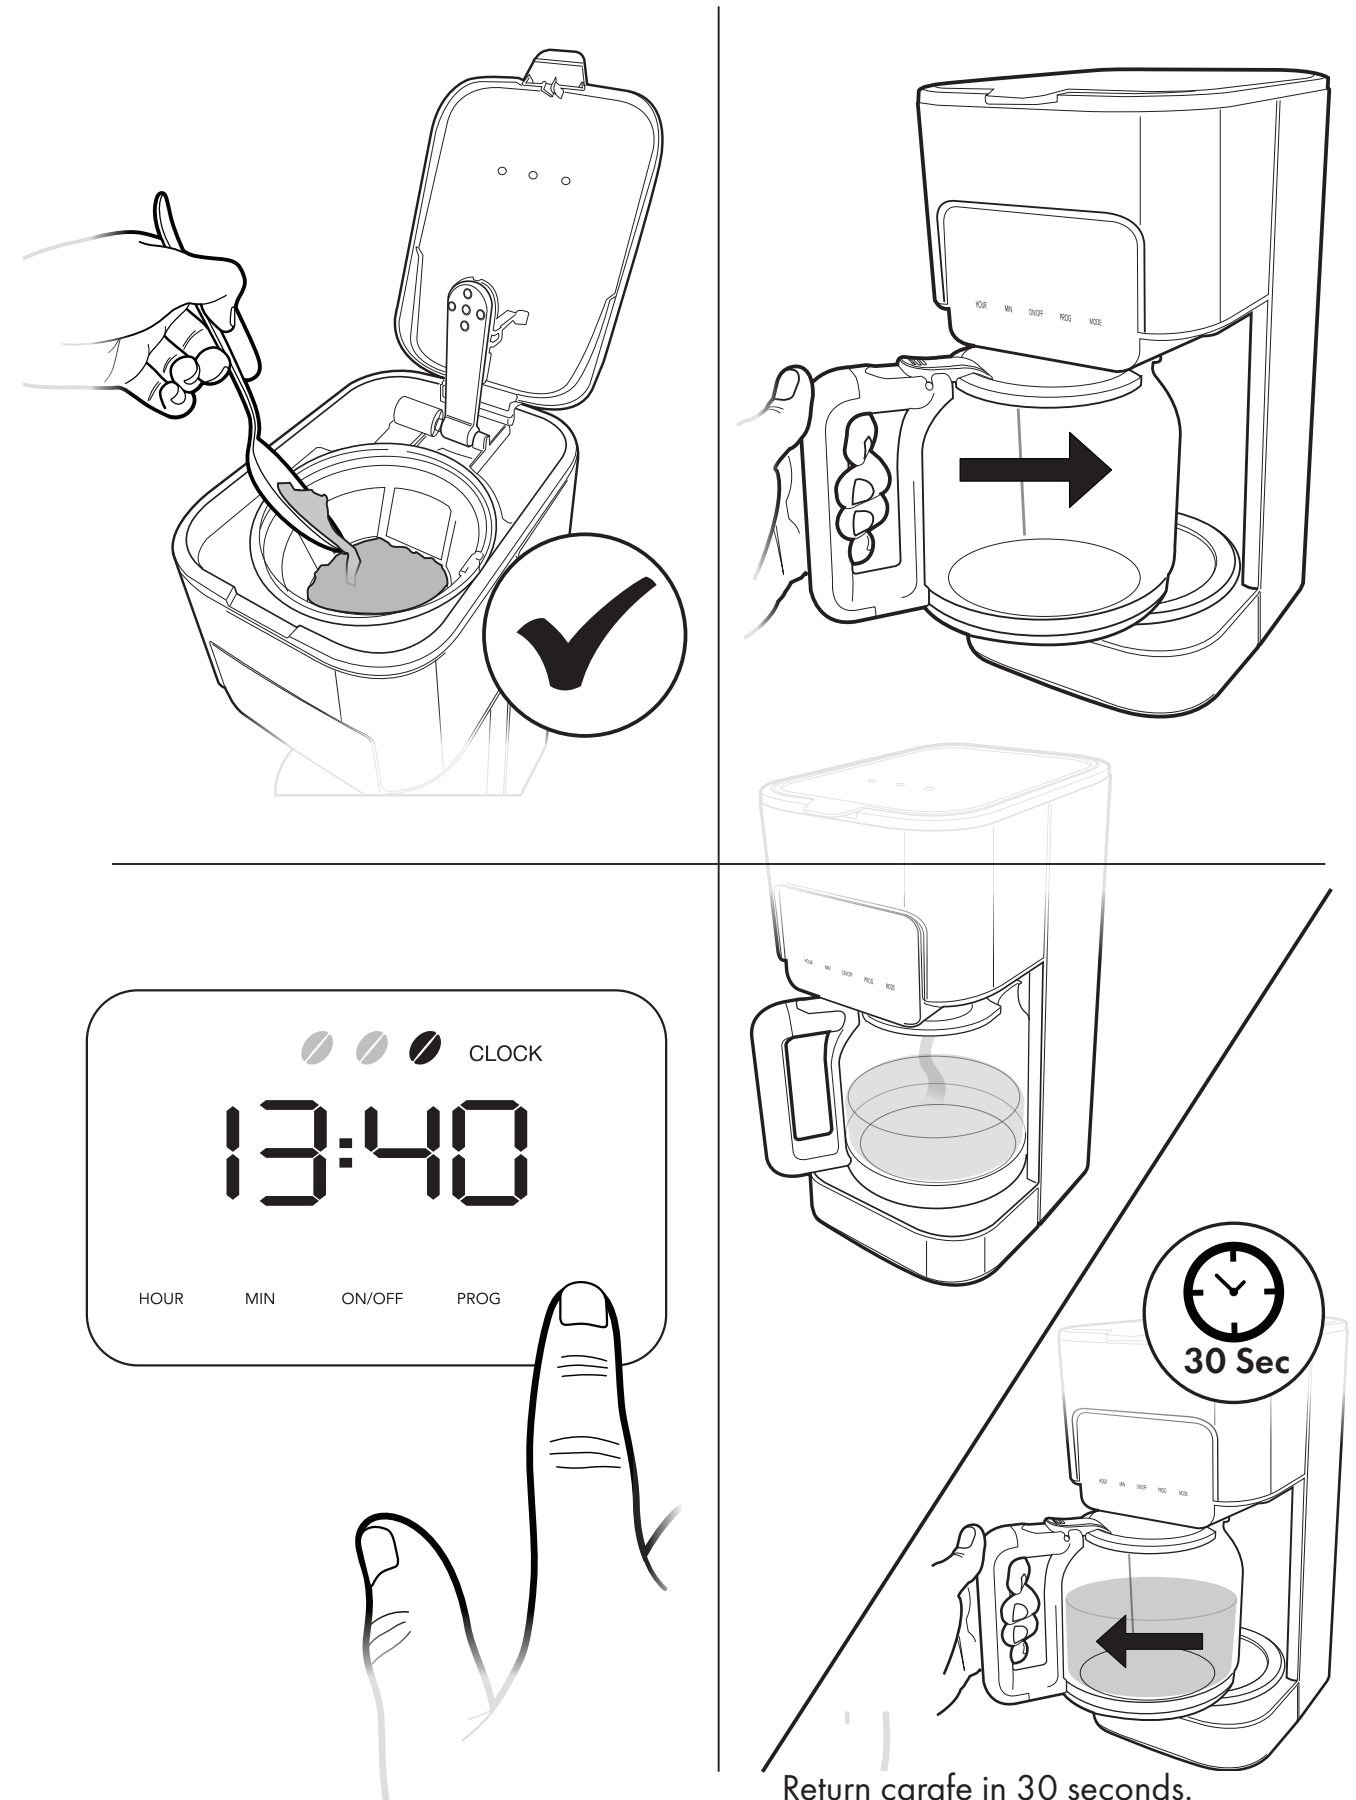

Return carafe in 30 seconds.

    Cleaning

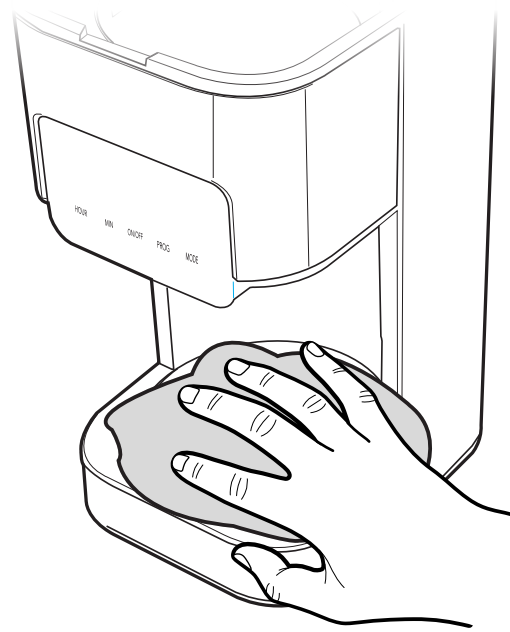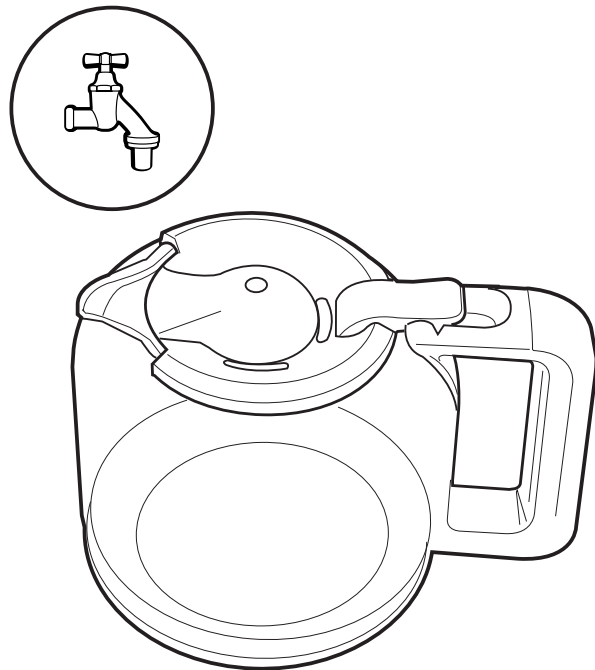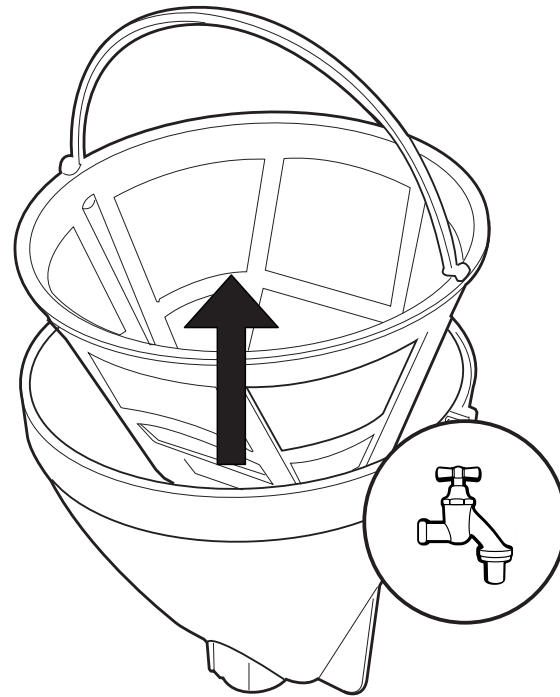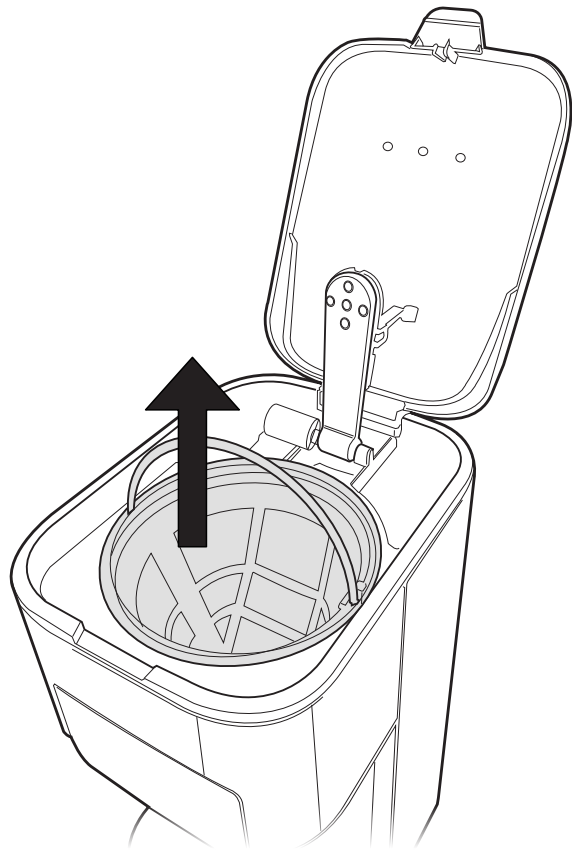

Information

Important Safety Notice

This product is not suitable for use by children or by individuals with physical, sensory, or mental impairments that may limit their ability to operate the equipment safely, unless they have been given supervision or instruction concerning the safe use of the product by a person responsible for their safety.

Improper use may result in serious injury. Always ensure the operator is capable of understanding and following all safety instructions provided in this manual.

General Safety

Do not allow to be used as a toy. Children should be supervised to ensure they do not play with the appliance. If the appliance is not functioning properly, has been dropped, damaged, left outdoors, or immersed in liquid, do not use, contact DOMU Brands Customer Services. Do not use the appliance if any parts appear to be faulty, missing or damaged. Ensure all parts are securely attached as instructed by this instruction manual before use.

Cables & Plugs

Check to ensure your electricity supply matches that shown on the rating plate. This product should only be used as rated. Preferably, the socket outlet should be protected by a Residual Current Device RCD (UK/EU) Ground Fault Indicator (US). Do not use with a damaged cable or plug. If the supply cable is damaged, it must be replaced by a qualified engineer or authorised service agent in order to avoid a hazard. The use of an extension cable is not recommended. Do not handle the plug or appliance with wet hands. Keep

the cable away from heated surfaces. Do not let the cable hang over the edge of the table or countertop where it could be pulled on inadvertently by children or pets. Do not pull the cable around sharp edges or corners. Do not leave unattended when plugged in. Unplug from outlet when not in use. Turn off all controls before unplugging. Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable. Always unplug before performing user maintenance, connecting or disconnecting attachments, or changing accessories. Ensure the cable is stored safely to prevent hazards.

Risk of Personal Injury

Always locate your appliance away from the edge of the worktop, on a firm, flat, heat-resistant surface with sufficient space around all sides. Do not insert any objects into openings or cover the appliance. Do not place any cardboard, plastics or paper inside or on the appliance unless stated in the instructions. Do not use the appliance near any combustible surfaces. Only use suitable cookware where applicable. Do not use outdoors or near heat sources. Take care not to touch any surfaces that may get hot when in use. Take care not to touch any surfaces that may remain hot for a period of time after use. Never operate the appliance when empty. Do not overload/overfill the appliance. When using for the first time your appliance may give off a 'new' smell or vapour. This will dissipate after a few uses. Do not lift or move the appliance whilst in use. Do not operate continuously for periods longer than those marked on the product or indicated in the instructions. Ensure the appliance is switched off and unplugged before changing accessories or cleaning. Use only as described in this manual and with recommended attachments only.

Information

Cleaning & Maintenance

Never soak or immerse electrical or heating components and or a component that has a plug attached. Hand washing recommended; soak in warm soapy water and wipe down using a soft sponge. To remove stubborn stains, use a non abrasive cleaning brush. Do not use abrasive, harsh cleaning solutions or metal scouring pads. Never wash any electrical or heating components and or a component that has a plug attached in a dishwasher.

Technical Specification

Rated Voltage: 220-240V
Rated Power: 900W
Rated Frequency: 50/60Hz

Usage & Safety



Please read all instructions carefully before use and retain for future reference.



 
CAUTION: Hot surfaces.



Do not immerse in water.



Hot water risk of scalding.

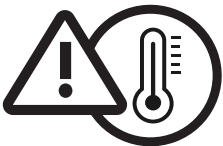

ATTENTION This appliance has a thermal cut out switch. The thermal cut out will activate and shut down the appliance should the appliance overheat.

Unplug from the mains and or battery and allow to cool for 30-40 minutes before re-use.

Information

Customer Service

If you are having difficulty using this product and require support, please contact support@vonhaus.com

Warranty

To register your product and find out if you qualify for a free extended warranty please go to www.vonhaus.com/warranty

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately.

Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returns

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

Copyright

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

Thank You

Thank you for purchasing your product/appliance.

Should you require assistance with your purchase, please contact us at support@vonhaus.com

Vonhaus is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands Ltd.
Unit 30, Stakehill Industrial Estate
Middleton, Manchester, M24 2RW

EU Authorised Representative

Authorised Representative Service
77 Camden Street Lower
Dublin, D02 XE80
Ireland

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME

