




Electrolux

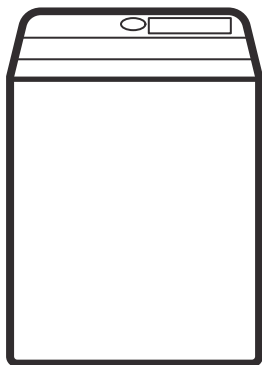

owner.electrolux.com/product-care/registration



A32889201

1. IMPORTANT SAFETY INSTRUCTIONS	2	5. DAILY USE	12
2. FEATURES	6	6. CARE AND CLEANING	16
3. PRE-INSTALLATION REQUIREMENTS		7. TROUBLESHOOTING	17
	7	8. LIMITED WARRANTY	19
4. INSTALLATION	8	9. QUEBEC RIGHT TO REPAIR	21

1. IMPORTANT SAFETY INSTRUCTIONS

1.1 Keep a record for quick reference

Model number
.....
Serial number
.....
Purchase date
.....
Model and series (can be found on the inside frame of the appliance, example ELVW7405AW = 400 Series
WARNING – To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

**WARNING!**

Read all instructions before using the appliance.

Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they give off vapours that could ignite or explode.

Do not add gasoline, dry cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapours that could ignite or explode.

Under certain conditions, hydrogen gas may be produced in a hot-water system that has not been used for 2 weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot-water system has not been used for such a period, before using a washing machine, turn on all hot-water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As

the gas is flammable, do not smoke or use an open flame during this time.

Risk of Suffocation and Injury from Entrapment: Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.

Before the appliance is removed from service or discarded, remove the door.

Do not reach into the appliance if the tub or agitator is moving.

Do not install or store this appliance where it will be exposed to the weather.

Do not tamper with controls.

Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.

Do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).

SAVE THESE INSTRUCTIONS

Read all instructions before using this appliance. Keep this user manual for future reference.

Warnings and important instructions appearing in this guide are not meant to cover all possible conditions and situations that may occur. Common sense, caution, and care must be exercised with installing, maintaining, or operating your appliance.

1.2 Safety definitions

 This is the safety alert symbol. It is used to alert of potential personal injury hazards. Follow all safety messages that follow this symbol to avoid possible injury or death.



WARNING!

Indicates a potentially hazardous situation which, if not avoided, may result in death or serious injury.

CAUTION!

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

IMPORTANT

Indicates installation, operation, or maintenance information which is important but not hazard-related.

NOTE

Indicates a short, informal reference – something written down to assist the memory or for future reference.

1.3 Protect children

WARNING!

Risk of suffocation! Destroy the carton, plastic bag and other packing materials after the appliance is unpacked. Cartons covered with rugs, bedspreads or plastic sheets can become airtight compartments.

Risk of child entrapment! Do not leave the door open if there are small children or pets present. An open door could entice children to hang on the door or crawl inside the washer. If there are no small children present, you may leave the door ajar to prevent odor build up.

CAUTION!

Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children. As children grow, teach them the proper, safe use of all appliances.

Keep laundry products out of children's reach. To prevent personal injury, observe all warnings on product labels. Before the appliance is removed from service or discarded, remove the appliance door to prevent accidental entrapment.

Failure to comply with these warnings could result in serious personal injuries.

1.4 Important instructions for unpacking and installation

WARNING!

Remove all tape and packaging before using the appliance. Recycle the carton and plastic bags after unpacking the appliance. Never allow children to play with packaging material. Do not remove the wiring label and other literature attached to the appliance. Do not remove model/serial number plate.

WARNING!

Before use, the appliance must be properly installed as described in this user manual.

The appliance is heavy. Two or more people may be required to install or move the appliance to avoid the risk of injury. Do not install or store this appliance where it will be exposed to the weather or freezing temperatures below 33°F. Do not modify or alter the construction of the appliance by removing the leveling legs, panels, wire covers, anti-tip brackets/ screws, or any other part of the appliance.

WARNING!

Make sure the water supply hose connectors are properly tightened to avoid the risk of property damage or injury. Open the faucet and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the appliance.

1.5 Electrical information

WARNING!

This appliance must be properly grounded.

Make sure that the socket you use is properly grounded in accordance with local and national codes. If you are in doubt, contact a qualified electrician or service technician.

Improper grounding may result in electric shock, fire, explosion or problems with the product.

⚠ WARNING!

Plug the power cord into an AC 120V/ 60Hz wall socket rated at 15 amps or higher. Use the socket for this washer only. Do not use multi-plug adapters and extension cables

Do not modify the plug provided with the appliance. If the power plug or power cord is damaged, contact a qualified electrician or service technician.

Connect the plug to the socket only at the end of the installation. Make sure that there is access to the plug after the installation.

Do not pull or excessively bend the power cord. Do not twist or tie the power cord.

Do not disconnect the appliance by pulling on the power cord. Always pull on the plug.

Do not use an electric transformer. It may result in electric shock or fire.

⚠ WARNING!

Do not, under any circumstances, cut, remove, or bypass the grounding prong (A). Always use the power cord with a three-prong grounded plug and grounding type wall receptacle.



1.6 Important instructions for using the appliance

⚠ WARNING!

Read and follow the below instructions and precautions for unpacking, installing, and servicing your appliance to reduce the risk of fire, electric shock, or injury to persons.

Do not install or use a damaged appliance to avoid the risk of electric shock, fire, or death.

Use this appliance only for its intended purpose as described in this user manual.

This appliance is not designed for maritime use or for mobile installations such as in RVs aircraft and other mobile platforms.

⚠ WARNING!

All repairs and servicing must be performed by an authorized service technician unless specifically recommended in this user manual. Use only authorized factory parts.

Do not use replacement parts that have not been recommended by the manufacturer(e.g. parts made at home using a 3D printer).

Always follow the fabric care instructions supplied by the garment manufacturer.

Do not stand on top of the appliance or place objects.

Do not tamper with the controls and latch. If the appliance is flooded, cut the power immediately and contact your nearest service center.

⚠ WARNING!

To reduce the risk of fire or explosion

Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, other flammable or explosive substances as they emit vapors that could ignite or explode.

Do not store or use gasoline or other flammable vapors and liquids near this or any other appliance.

Keep the area under and around the appliance free from items that could obstruct the flow of combustion and ventilation air (such as lint, paper, and rags).

Do not place items exposed to cooking oil in the appliance. Items contaminated with cooking oil may contribute to a chemical reaction that could cause a load to catch fire.

Under certain conditions, hydrogen gas may be produced in a hot-water system that has not been used for 2 weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot-water system has not been used for such a period, before using the appliance, turn on all hot-water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.

 WARNING!

Do not operate the appliance with wet hands to avoid the risk of electric shock. Do not press the buttons using sharp objects such as pins, knives, or fingernails to avoid the risk of electric shock or injury. Do not spray volatile materials, such as insecticides, on the appliance to avoid the risk of electric shock, fire, or product damage.

Do not place an object that generates an electromagnetic field near the appliance. This may result in injury due to a malfunction.

Do not touch the water drained during a high temperature wash to avoid the risk of burns or injury.

 WARNING!

Insert laundry fully into the appliance to prevent it from getting caught in the lid, which may cause damage to the laundry or the appliance, or result in water leakage.

Do not wash, spin or dry water-proof seats, mats or clothing.

Do not wash thick, hard mats even if the appliance mark is on the care label. This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.

Do not operate the appliance when the detergent dispenser is removed to avoid the risk of electric shock or injury due to water leakage.

Do not insert your hand into the detergent dispenser after opening it. This may result in injury because your hand may be caught.

Do not place any non-laundry objects, such as shoes, food waste or animals into the appliance. This can cause abnormal vibrations that can damage the appliance, and in the case of pets, cause severe injury or death.

 WARNING!

Do not use hot water from water cooling/heating devices. This may result in problems with the appliance.

Do not wash laundry contaminated by oils, creams or lotions usually found in skin-care shops or massage clinics. This may result in the rubber seal becoming deformed and water leakage.

Make sure that the water inlet pipe is connected and the tap is opened before

washing clothes.

Do not leave metal objects (safety pins, hair pins, and so on) or bleach in the tub for long periods of time. This may cause the tub to rust.

Never use a metal brush to clean the tub surface. Use a neutral cleaning agent and a sponge instead.

 WARNING!

Do not use natural hand-washing soap in the appliance. If it hardens and accumulates inside the washer, it may cause problems with the product, discoloration, rust or bad odors.

Do not wash laundry items such as bedding in the washing net to avoid the risk of injury due to abnormal vibrations.

Place only smaller items such as lace socks and lingerie in the washing net.

Do not use hardened powdered detergent. If it accumulates inside the appliance, it may result in water leakage.

Do not wash throw rugs or doormats. Doing so may cause sand to accumulate inside the washer, resulting in mechanical problems.

 WARNING!

Always check the inside of the appliance for foreign objects before loading laundry. Keep the lid closed when not in use.

Ensure pockets are free of hard objects and foreign materials (e.g., coins, knives, pins) to prevent appliance damage.

Do not reach into the appliance if the drum is moving.

Do not clean the appliance by spraying water directly onto it.

Do not use benzene, thinner or alcohol to clean the appliance. This may result in discoloration, deformation, damage, electric shock or fire.

Turn off the water faucets and unplug the appliance when not in use for extended periods, such as during vacations.

Do not wash water-resistant and water-repellent type clothing.

Failure to closely follow these instructions may result in an abnormal vibrating and out-of-balance condition that could result in physical injury, property damage and/or appliance damage.

WARNING!

Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product manufacturer.

If the appliance is contaminated with foreign substances such as detergent, dirt, or food waste, unplug the appliance and clean it with a soft, damp cloth. Failure to do so may result in discoloration, deformation, damage, or rust.

Use the appliance with care, the transparent portion of the lid may break under strong impact. Cracks or breakage may result in injury.

Open the faucet slowly after a water supply failure, prolonged non-use, or reconnecting the water supply hose to prevent damage or water leakage caused by air pressure.

Check for drainage if a drain error occurs during operation. Operating the appliance while flooded may cause electric shock, fire, or injury. Do not insert hands or metal objects under the washer.

Grounding Instructions

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinance.

WARNING!

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt

as to whether the appliance is properly grounded.

Do not modify the plug provided with the appliance – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

WARNING!

Harmful vapor hazard! Do not use or mix liquid chlorine bleach with other household chemicals such as toilet cleaners, rust removers, acids such as vinegar, or products containing ammonia. These mixtures can produce dangerous fumes which can cause serious injury or death.



WARNING!

Risk of injury! Do not wash water resistant, water repellent clothing or other materials. Failure to follow these instructions may result in an abnormal vibrating and out of-balance condition that could result in physical injury, property damage, and/or appliance damage.

WARNING!

State of California Proposition 65 Warnings: Cancer and reproductive harm <http://www.P65Warnings.ca.gov>

1.7 Disposal of the appliance

Before the appliance is removed from service or discarded:

- Remove the electric power cord
- Remove the lid from the washing compartment
- Secure all hoses and drain pipes to prevent water from leaking out and creating a slip hazard.

2. FEATURES


2.1 Package contents

Make sure that the following items came with your washer:

- Drain hose guide (x1)
- User manual
- Tie (x1)
- Filter (x2)

-  Use the filters to replace the rubber washers in the water hoses (faucet sides). It is recommended to clean the filters every 6 months, especially NEW CONSTRUCTION homes.

2.2 General overview

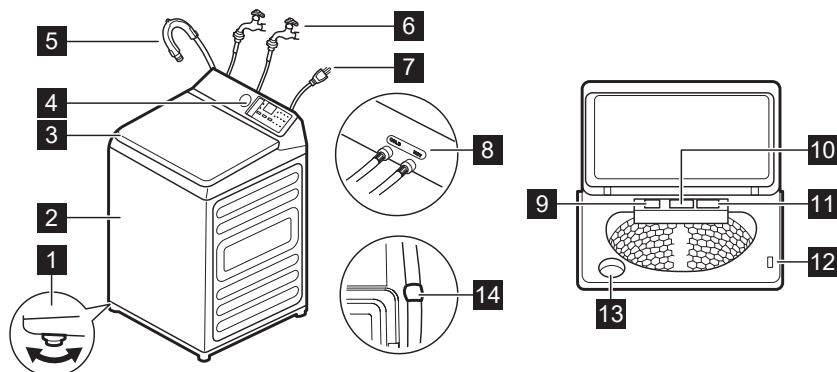

- | | |
|---|--|
| 1 Adjustable leg (Four legs) | 8 Water inlet valves (on the back) |
| 2 Cabinet | 9 Fabric softener compartment |
| 3 Top lid | 10 Detergent compartment |
| 4 Control panel | 11 PODS® compartment |
| 5 Drain hose and holder | 12 Lid lock |
| 6 Faucets and water inlet hoses (not included) | 13 Bleach compartment |
| 7 Power cord | 14 Secure the hose clamp to the predrilled hole using a screw |

3. PRE-INSTALLATION REQUIREMENTS

3.1 Electric requirements

WARNING!

Failure to closely follow these instructions may result in an abnormal vibrating and out-of-balance condition that could result in physical injury, property damage, and/or appliance damage.

Use a 120 V, 60 Hz, 15 A fuse or circuit breaker. We recommend an individual branch circuit that serves only your washer. Never use an extension cord.

Electrical grounding is required for your washer.

You must ground your washer. In the event of a malfunction or breakdown, grounding reduces the risk of electric shock by providing a path of least resistance for the electric current.

Your washer is equipped with a power cord with a three-pronged grounding plug for use in a correctly installed and grounded outlet.

The outlet must be correctly installed and grounded in accordance with all local codes and ordinances.

Note!

- Because of potentially inconsistent voltage capabilities, the use of this washer with power created by gas powered generators, solar powered generators, wind powered generators or any other generator other than the local utility company is not recommended.

WARNING!

You are responsible for providing adequate electrical services for your washer. An incorrectly connected equipment-grounding conductor can increase the risk of electrical shock. Check with a qualified electrician or serviceman if you are not sure whether your washer is grounded correctly.

Do not modify the power cord plug that came with your washer. If the plug does not fit the outlet, have the correct type outlet installed by a qualified electrician. To prevent unnecessary risk of fire, electrical shock or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/FNPA, No.70 Latest Revision and local codes and ordinances. Never connect the ground wire to plastic plumbing lines, gas lines or hot water pipes.

3.2 Water requirements

- Hot and cold water faucets must be installed within hose length of your washer's water inlet. The faucets must be $\frac{3}{4}$ inch (1.9 cm) with threading for laundry hose connection.
- To fill your washer in the correct amount of time, the water pressure needs to be between 14 and 116 psi (100 to 800 kPa).

If the water pressure is less than 14 psi (100 kPa):

- The water valve may fail or may not shut off completely.

- The time it takes to fill your washer may be longer than the time your washer controls allow. Your washer will turn off and report an error. A time-limit is built into the controls to prevent flooding in your home if a hose becomes loose.
- Water inlet hoses must be purchased separately. You can buy inlet hoses in various lengths up to 8 feet (240 cm).

To avoid the possibility of water damage:

- Make sure that the water faucets are easily accessible.
- Turn off the faucets when you are not using your washer.
- Periodically check to make sure that water is not leaking from the water hose fittings.

3.3 Drainage requirements

The recommended height for the drain standpipe is 48 inches (122 cm).

The drain hose must be routed through the drain hose clip to the standpipe.

The standpipe diameter must be greater than or equal to 1-1/4 inch (3.18cm).

4. INSTALLATION

4.1 Unpacking your washer

⚠ WARNING!

Packing materials can be dangerous to children. Keep all packing materials (plastic bags, polystyrene, etc.) well out of the reach of children.


Do not operate your washer on the foam base cushion. Doing so will result in serious vibration, which could cause equipment damage or result in physical injury.

⚠ CAUTION!

EXCESSIVE WEIGHT HAZARD

To avoid back or other injury, have more than one person move or lift the washer.

Remove the packing box and lift the washer up and away from the foam base cushion. Open the lid of the washer to take out all accessories including the protective foam.

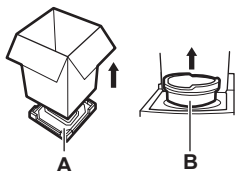

- A. Base foam cushion
- B. Protective foam

📦 IMPORTANT

Save styrofoam base and shipping materials for use to help prevent washer damage during any future moves.

4.2 Choosing a location

⚠ CAUTION!

Do not install your washer in areas where water may freeze, because your washer always retains some water in its water valve, pump and hose areas. Frozen water can damage the valve, pump, hoses and other components.


Never install on a platform or weakly supported structure.

For best performance, you must install your washer on a solid, level floor. Wooden floors may need to be reinforced to minimize vibration or unbalanced load situations. Carpeting and soft tile surfaces can contribute to excessive vibration, which can cause your washer to move slightly during the spin cycle.



Ensure the installation location:

- 1. Is a hard, level surface without carpeting or soft flooring that can obstruct ventilation.
- 2. Is away from direct sunlight.
- 3. Has adequate ventilation.
- 4. Is not exposed to freezing temperatures (32°F or 0°C).
- 5. Is away from heat sources such as oil or gas.
- 6. Has enough space so that the washer does not rest on its power cord.
- 7. Is not in an area exposed to dripping water or outside weather conditions.
- 8. Do not install your washer with less than 1 inch (2.5 cm) of clearance from a dryer or any other machine in any direction.

Washer dimensions and installation measurements

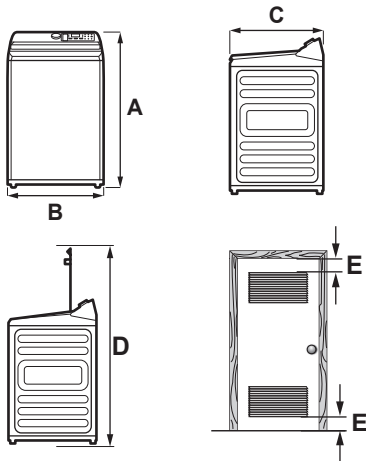

- A. 43.11 inch (1095 mm)
- B. 27.13 inch (689 mm)
- C. 28.07 inch (713 mm)
- D. 57.13 inch (1451 mm)
- E. 3 inch (76 mm)

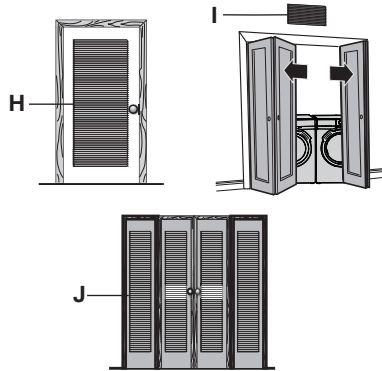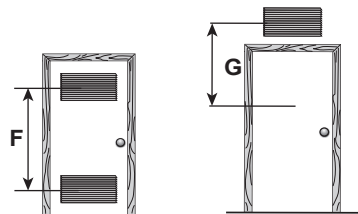

- F. 120 sq. inches equally divided split vent door (60 sq. inches each)
- G. Solid door with wall ventilation (120 sq. inches)
- H. Louvered door (120 sq. inches minimum louvered opening)
- I. Solid Bi-Fold doors with no ventilation (120 sq. inches of wall venting)
- J. Bi-Fold louvered doors with 120 sq. inches of ventilation


If you install your washer in an alcove or closet, the front of the closet must have two unobstructed air openings for a combined minimum total area of 120 sq. inches (774 sq. cm) with a minimum clearance of 3 inch (76 mm) at the top and bottom. A slatted door with equivalent space clearance is acceptable.

Installing in an alcove or closet

Minimum clearances between the dryer and adjacent walls or other surfaces


Sides	1 inch (25 mm)
Top	24 inches (610 mm)
Rear	6 inches (152 mm)
Closet front	2 inches (51 mm)
Gap between the end of water valve and the wall	6 inches (152 mm)

If you install your washer and dryer side-by-side in a closet, the closet front must have an unobstructed air opening of at least 120 sq. inches (774 sq. cm).

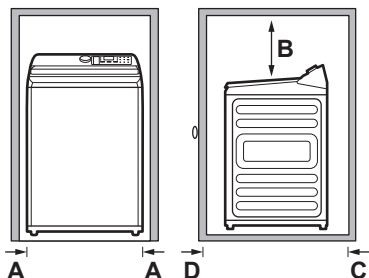

- A. 1 inch (25 mm)
- B. 24 inches (610 mm)
- C. 6 inches (152 mm)
- D. 2 inches (51 mm)

4.3 Tools and materials needed for installation

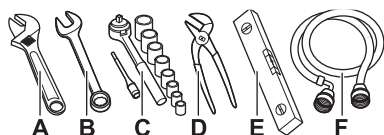

- A. Adjustable wrench
- B. 3/8 inch or 10 mm box wrench
- C. Ratchet and socket set
- D. Adjustable pliers
- E. Carpenter's level
- F. Inlet hose (x2)

① Hoses are not included with washer purchase.

4.4 Connecting the water

⚠ CAUTION!

Use new water supply hoses. Using old hoses can result in leakage or overflow that can damage your property. Do not connect multiple water supply hoses together to increase the length of the hose. Hoses connected this way can leak and cause electrical shock. If a hose is too short, replace the hose with a longer, high-pressure hose.


1. Run some water from the hot and cold faucets to flush the water lines and remove particles that might clog the water

valve screens and to determine which faucet is hot and which is cold supply.

2. Check to ensure that the inlet hoses have the rubber washer firmly in place.




3. Tighten the hose and faucet fittings by hand until they are snug, then tighten them an additional two-thirds of a turn with pliers or a wrench. Pull the water supply hoses downwards to make sure that they are connected securely.

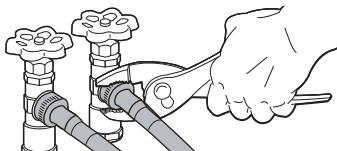

Do not overtighten the fittings or apply tape or sealant to the faucets or water supply intake. This can damage the fittings.

4. Connect the hot inlet hose (B) to the hot inlet connection on the washer and the cold inlet hose (A) to the cold inlet connection on the washer.

Tighten these hoses in the same fashion as outlined in the previous step

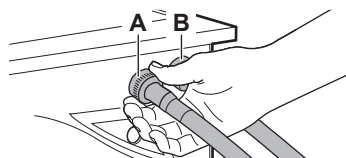

① If you do not want to use the hot water supply hose, insert a water intake cap into the hot water supply intake hole. In this case you must select the Tap Cold option for the water temperature. No intake cap is provided with your washer. It must be purchased separately. To ensure the correct water usage, connect both hot and cold water faucets. If either or both are not connected, an error code could occur.

5. Turn on the water and check for leaks.

⚠ WARNING!

Make sure the water supply hose connectors are properly tightened to avoid the risk of property damage or injury.

Open the faucet and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the appliance.

4.5 Connecting the drain

Remove the drain hose from the shipping clip.


Position the other end of the drain hose. It can be positioned in three ways.

⚠ CAUTION!

Ensure that the connection between the drain hose and the wash basin, standpipe, or laundry tub allows air to flow.


Over the edge of wash basin

Secure the guide to the side of the basin wall with a hook, tape it or tie it with a piece of cord to prevent the drain hose from moving.

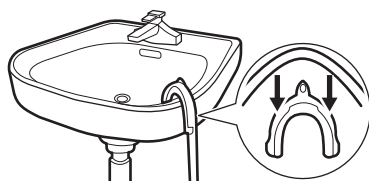

In a standpipe


The standpipe must be no shorter than 39 inches (99 cm) and no longer than 96 inches (244 cm).

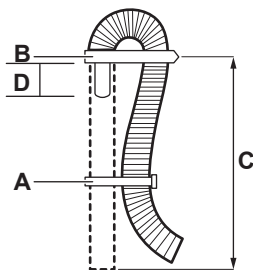

- A. Tie strap
- B. Hose retainer
- C. 39 inches (99 cm) minimum and 96 inches (244 cm) maximum
- D. Insert less than 8.5 inches (21.5 cm)

In a laundry tub

The laundry tub must be no shorter than 39 inches (99 cm) and no higher than 96 inches (244 cm) maximum.

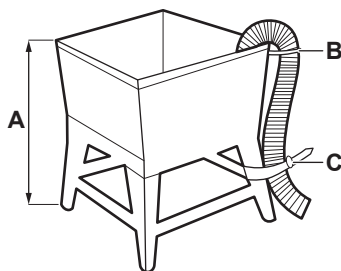

- A. 39 inches (99 cm) minimum and 96 inches (244 cm) maximum
- B. Hose retainer
- C. Tie strap



4.6 Leveling the washer

Do not operate your washer without leveling it first. If the washer is not level, it may:



- Vibrate excessively, which can cause malfunctions.
- Make excessive noise.
- Display error codes during operation.

Slide the washer into position.

Open the lid of the washer, then pour water into the tub to the leveling circle (A). If the washer is level, the water will touch the leveling circle all the way around. If the washer is not level, the water will only touch part of the leveling circle.

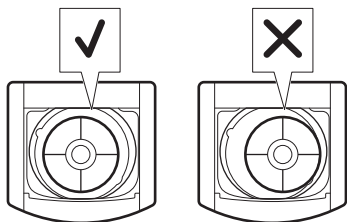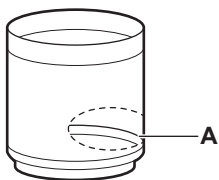

If your washer is not level, carefully tilt your washer just enough to adjust the leveling feet on the bottom front of your washer. Extend the feet only as much as is necessary. If the feet are extended too much, your washer may vibrate.

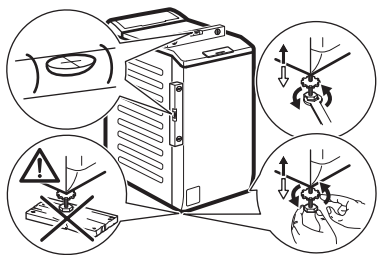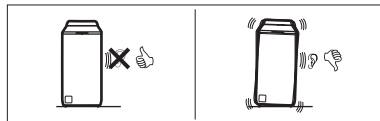

4.7 Completing the installation

⚠ WARNING!

ELECTRICAL SHOCK HAZARD

- Improper connection of the equipment grounding conductor can result in a risk of electrical shock. Check with a licensed electrician if you are in doubt as to whether the appliance is properly grounded.
- Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing. Service Personnel – Do not contact the following parts while the appliance is energized: electrical valve, drain pump, main motor, retractor, capacitor and controller cover.

1. Plug the power cord into a grounded outlet.
 2. Turn on the power at a circuit breaker / fuse box.
 3. Carefully slide the washer to its final position. Recheck for level and rock corners for stability. Refer to Leveling the washer. Remove and discard door tape.
 4. Run the washer through a complete cycle, checking for water leaks and proper operation.
- Load about 6 pounds (2.7 kg) of laundry into the tub.
5. If you have any questions during initial operation, refer to Troubleshooting section before calling for service.
 6. Place these instructions in a location near the washer for future reference.

⚠ CAUTION!

If you detect any water leaks while the washer is filling or draining, check the water connections. Refer to Connecting the water and Connecting the drain sections. If the washer rocks and/or vibrates excessively, level it again. Refer to Leveling the washer section.

5. DAILY USE

5.1 Preparing and sorting laundry

- Sort laundry by fabric type, soil level, color, and load size.
- Pre-treat any visible stains before washing.
- Empty all pockets to remove coins, keys, and other hard objects.
- Close all zippers and fasten hooks.

⚠ CAUTION!

Hard objects and unfastened zippers may damage clothes and the washer drum.

- Place the sorted items loosely into the wash drum. (Maximum load capacity 12.5kg).
- When washing big, bulky items such as rugs or pillows, or a few smaller items like

stuffed toys, add a few towels to improve spin performance and maintain balance.

- Always select the Bedding cycle for large or bulky items.

⚠ WARNING!

To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS before operating this appliance.

⚠ WARNING!

Failure to closely follow these instructions may result in an abnormal vibrating and out-of-balance condition that could result in physical injury, property damage, and/or appliance damage.

5.2 Loading examples

Load type Examples

Workwear	Jeans, work shirts, work pants, casual work wear, coveralls
Linens	Bath sheets, bath towels, washcloths, hand towels, flat sheets, fitted sheets, pillowcases, bath mats
Mixed Load	Shirts, casual wear, shorts, t-shirts, sweatshirts, pairs of socks
Delicates	Bras, panties, slips, camisoles, nightgowns
Quick Wash (less than 6 lbs)	Soccer uniforms, pair of pants, khakis or twills, t-shirts, pairs of shorts, pairs of boxers

❗ Overloading may reduce washing efficiency, cause excess wear, and possibly cause creasing or wrinkling of the load. Wash delicate items such as bras, hosiery, and other lingerie on the Delicates cycle with similar lightweight items.


5.3 Selecting a detergent

Your washer is designed to use High Efficiency  detergents.

🔑 IMPORTANT

We recommend that you do not use a regular detergent.  detergents contain suppressors that reduce or eliminate suds. When fewer suds are produced, the load tumbles more efficiently and cleaning is maximized. Reducing the amount of detergent may reduce the quality of cleaning.

5.4 Adding laundry products

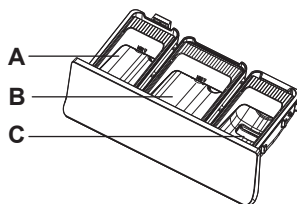

A. Softener compartment

B. Detergent compartment

C. PODS® compartment

Determine the type of detergent you are using (liquid, powder, or PODS®).

⚠ WARNING!

Keep laundry products out of the reach of children. Observe all warnings on product labels and follow them. Failure to do so may result in serious injury.

Liquid or powder detergent

Always use High Efficiency  detergents for the best cleaning results.

Pour the recommended amount of laundry detergent directly into the detergent compartment before starting the washer.

If your specific model does not have a detergent compartment, add the detergent directly into the wash tub.

⚠ CAUTION!

Do not use hardened powdered detergent or natural hand-washing soap. These can accumulate inside the washer and cause water leakage, mechanical problems, discoloration, rust, or bad odors.

Detergent PODS®

Please place the PODS® into their corresponding PODS® boxes.

Select the PODS® option on the control panel before starting the wash cycle.


📌 NOTE

Using PODS® setting may increase fast wash time by several minutes.

Please place the PODS® into the dedicated PODS® compartment in the washing machine drawer. Before washing, select the PODS® function on the control panel and make sure the washing machine is connected to a hot water supply. Otherwise, the PODS® may not dissolve completely, leaving residues.

❶ PODS® is a registered trademark of Procter & Gamble Company, Cincinnati OH, used under license by Electrolux.

Liquid chlorine bleach

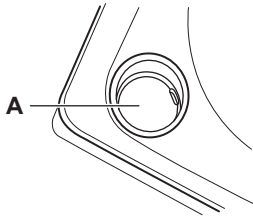

A. Bleach compartment

Add liquid chlorine bleach directly to the bleach compartment (A). Do not fill above the MAX fill line. Avoid splashing or overfilling, as the bleach is directly loaded into the tub.

Color-safe bleach

Add it with the detergent to the detergent compartment. Both products must be in the same liquid form. Do not pour color-safe bleach into the bleach compartment.

⚠ WARNING!

Do not mix chlorine bleach with ammonia or acids such as vinegar. Incorrect usage can produce poisonous gas, resulting in serious injury or death.

⚠ CAUTION!

Never pour undiluted liquid chlorine bleach directly onto the load or into the tub. Doing so can damage fabrics, weaken fibers, or strip color.


⚠ CAUTION!

Do not leave bleach in the tub for long periods of time. This may cause the stainless steel tub to rust.

Liquid fabric softener

Pour the recommended amount of liquid fabric softener into the softener compartment. Do not fill above the MAX fill line. Dilute very thick softeners with water so they flow easily into the dispenser and do not clog the compartment.

5.5 Control Panel

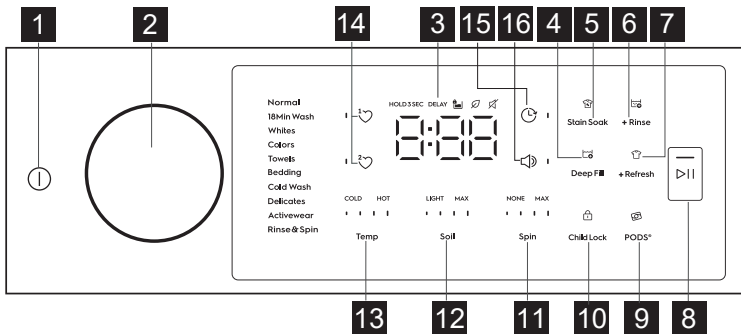

1 Power

Press Power to turn the washer on or off. If you do nothing for 10 minutes, the washer turns off automatically.

2 Cycle selector

Turn the dial to select a wash cycle. The cycle sets the wash pattern.

3 Digital display

The display first shows total cycle time, then the cycle step and remaining time.

4 Deep Fill

Press to increase the water level in the wash tub for bulky loads.

5 StainSoak

Select to soak clothes before the main wash cycle. Suitable for heavily soiled items.

6 +Rinse

Select to add an extra rinse to the cycle.

7 +Refresh

Select this option to perform an additional spin if the laundry is not removed within 6 hours (up to two spin within 12 hours).

8 Start/Pause

Press once to start the cycle. Press again to pause the cycle. If you pause the cycle,

you can add or remove items, but you cannot change any settings. Press again to restart the cycle.

- 9

PODS®
Press this button when using a detergent pack. This option optimizes the wash cycle settings to ensure the detergent pack, placed in the dispenser compartment labeled for PODS® dissolves completely for best cleaning performance.
- 10

Child Lock
Press and hold 3 seconds use this function. When Child Lock is on, you can use only the **Power** button and the **Child Lock** button.
- 11

Spin
Press to select the desired spin setting.
- 12

Soil
Press to select the soil level.
- 13

Temp
Press to set the wash water temperature. The rinse water is always cold.
- 14

 &  **Favorite Cycles**
Press and hold for 3 seconds to save the selected cycle settings as a favorite. Each button stores 1 favorite. A new favorite will save over the current one. Press once to select your saved favorite cycle settings.
- 15

 **Delay Time**
Press to select a time when you want the cycle to begin
- 16

 **Mute/Unmute**
Press this button to mute or unmute the sounds

5.6 Washing cycles

Press the **Power** button to turn on the unit. Then, turn the cycle selector in either direction to scroll to the desired cycle.

Cycle	Load type
Normal	Normally soiled cotton clothing, mixed loads and bedding except comforters.
18Min Wash	Small lightly soiled loads.
Whites	White cotton, heat-resistant and washable loads”
Colors	Lightly soiled dark or dyed fabrics.
Towels	Towels and bedding including comforters.
Bedding	Large, bulky items such as blankets, comforters, and sleeping bags.
Cold Wash	All types of clothing, mixed loads and bedding except comforters.
Delicates	Small lightly soiled loads (delicate fabrics).
Activewear	Effectively clean and refresh athletic clothing, removing sweat, odors, and bacteria, while protecting the stretch and elasticity of performance fabrics.
Rinse & Spin	Rinse and spin only (cold rinse or add fabric softener).

5.7 Options and setting table

- ☐ or  (Light half on) = Available selections.
- ☒ or  (Light on) = Default settings
- ☒ or  (Light off) = Unavailable selections.

Program	Temp		Soil		Spin		StainSoak	Deep Fill	+Rinse	+Refresh	PODS®	Child Lock
Normal	COLD	HOT	LIGHT	MAX	NONE	MAX	☐	☒	☐	☐	☐	☐
	 	 	 	 	 	 	☐	☒	☐	☐	☐	☐
18Min Wash	COLD	HOT	LIGHT	MAX	NONE	MAX	☒	☐	☒	☐	☐	☐
	 	 	 	 	 	 	☒	☐	☒	☐	☐	☐
Whites	COLD	HOT	LIGHT	MAX	NONE	MAX	☒	☐	☐	☐	☐	☐
	 	 	 	 	 	 	☒	☐	☐	☐	☐	☐
Colors	COLD	HOT	LIGHT	MAX	NONE	MAX	☐	☐	☐	☐	☐	☐
	 	 	 	 	 	 	☐	☐	☐	☐	☐	☐

Program	Temp		Soil		Spin		StainSoak	Deep Fill	+Rinse	+Refresh	PODS®	Child Lock
Towels	COLD ■ ■ ■ ■	HOT ■ ■ ■ ■	LIGHT ■ ■ ■ ■	MAX ■ ■ ■ ■	NONE ■ ■ ■ ■	MAX ■ ■ ■ ■	☐	☒	☐	☐	☐	☐
Bedding	COLD ■ ■ ■ ■	HOT ■ ■ ■ ■	LIGHT ■ ■ ■ ■	MAX ■ ■ ■ ■	NONE ■ ■ ■ ■	MAX ■ ■ ■ ■	☐	☐	☐	☐	☐	☐
Cold Wash	COLD ■ ■ 0 0	HOT 0 0	LIGHT ■ ■ ■ ■	MAX ■ ■ ■ ■	NONE ■ ■ ■ ■	MAX ■ ■ ■ ■	☐	☐	☐	☐	☐	☐
Delicates	COLD ■ ■ ■ 0	HOT 0	LIGHT ■ 0 0 0	MAX 0 0 0	NONE ■ ■ ■ 0	MAX 0	☐	☐	☐	☐	☐	☐
Activewear	COLD ■ ■ ■ 0	HOT 0	LIGHT ■ ■ ■ ■	MAX ■ ■ ■ ■	NONE ■ ■ ■ ■	MAX ■ ■ ■ ■	☐	☐	☒	☐	☐	☐
Rinse & Spin	COLD ■ 0 0 0	HOT 0 0	X		NONE ■ ■ ■ ■	MAX ■ ■ ■ ■	X	☐	☒	☐	X	☐

5.8 Running a wash cycle

- 1. Press the **Power** button to turn on the washer.
- 2. Turn the Cycle selector to choose the desired wash cycle.
- 3. Modify the default cycle settings (Temp, Soil, Spin) if needed for your specific load.

- 4. Select any additional wash options such as Deep Fill or PODS.
- 5. Press the **Start/Pause** button to begin the wash cycle.

6. CARE AND CLEANING

**WARNING!**
Refer to Safety chapters.

6.1 Cleaning the exterior

**CAUTION!**
Turn off the water taps after use to prevent leaks. Keep the lid open to let the washer interior dry.

**IMPORTANT**
Always wear rubber or latex gloves and protect floor and clothing from damage.

Wipe up detergent, bleach, and other spills with a soft, damp cloth as soon as they occur. Clean the cabinet with mild soap and water. Never use harsh or gritty cleansers.

6.2 Cleaning the interior (Tub)

Clean the washer interior regularly to remove hard water deposits, dirt, and odor-causing residue. We recommend cleaning the tub about once a month.

**CAUTION!**
Never run a cleaning cycle with laundry inside. This can damage the load and the washer.

- 1. Remove any garments or objects from the washer and ensure the tub is completely empty.
- 2. Add one cup of liquid chlorine bleach directly to the bleach compartment. Do not use powdered bleach.
- 3. Press the **Power** button to turn on the washer.
- 4. Select a cycle with the hot water temperature setting (e.g., the Allergen cycle).



5. Press **Start/Pause** to begin the cycle and let it run to completion.

⚠ WARNING!

Certain internal parts are intentionally not grounded and may present a risk of electric shock only during servicing. Service Personnel –Do not contact the following parts while the appliance is energized: Electrical Valve, Drain Pump, Main Motor, Retractor, Capacitor and Controller Cover.

6.3 Cleaning the control panel

Clean the control panel and buttons with a soft, damp cloth.

Do not use abrasive cleaners or scouring pads.

Do not spray cleaners directly onto the control panel. Some products can damage the finish or internal electronics.

Apply stain removers or pretreatments away from the washer and wipe up any spills immediately.

6.4 Cleaning the dispensers

Detergent and fabric softener may build up in the dispenser compartments over time. Residue should be cleaned regularly to prevent clogs.

Wipe the inside of the detergent, softener, and bleach compartments with a damp cloth to remove any chemical buildup.

For hard-to-reach areas, use a small soft brush (like a clean toothbrush) dipped in warm water to scrub away residue.

Dry the compartments thoroughly with a clean towel.

6.5 Water inlet hose inspection

Regularly check all water inlet hoses for leaks, cuts, corrosion, or bulges. Replace any damaged hoses.

Replace all hoses every 5 years. Ensure proper installation by not overtightening, keeping hoses clear of sharp objects, and verifying that rubber gaskets are intact.

When replacing hoses, refer to the Installation sections of this User Manual for proper installation instructions.



Rubber washers (A) must be present. Replace hoses every 5 years.

6.6 Storing your washer

Proper preparation is necessary if your washer will be stored in an unheated location or will not be used for an extended period of time (e.g., during vacations).

1. Turn off the hot and cold water taps.
2. Disconnect the water inlet hoses from the washer to drain any standing water.
3. Run a short cycle (such as 18Min Wash or Rinse & Spin) with no load. Press **Start/Pause** and let the washer run for a few minutes to pump out remaining water, then cancel the cycle.
4. Unplug the washer from the electrical outlet.
5. Leave the lid open to allow air circulation and prevent mold and odor buildup.

⚠ CAUTION!

If the washer was stored in freezing temperatures, let it thaw and dry completely at room temperature before using it again.

7. TROUBLESHOOTING

⚠ WARNING!

Refer to Safety chapters.

The appliance doesn't start

- Ensure that the power cord is plugged into a working, grounded outlet.
- Check the household fuse or reset the circuit breaker.
- Ensure that the lid is completely closed.
- Press the **Start/Pause** button. Note that clicking sounds before the washer fills are normal.

- Ensure that the Child Lock feature is turned off.
- Ensure that the Delay option is not active.

No water or low water supply

- Turn both hot and cold water taps fully on.
- Ensure that the household water pressure meets the specified requirements.
- Check the water inlet hoses for kinks and straighten them if necessary.
- Disconnect the inlet hoses and clean the inlet screens, as they may be clogged with hard water deposits or debris.

The appliance is noisy or vibrates

- Ensure the washer rests on a solid, level surface. Adjust the leveling feet as necessary.
- Keep the washer away from walls or other objects to prevent rattling.
- The load may be unbalanced. The washer will try to balance the load automatically, but if it fails, pause the cycle, manually redistribute the garments evenly in the tub, and restart.
- Normal operating sounds include the lid lock clicking, a high-pitched whine during the spin cycle, and rhythmic thumping during the wash phase.

The appliance stops during a cycle

- Ensure that the power supply has not been interrupted. Check the fuse or breaker.
- Make sure the lid is securely closed, then press **Start/Pause**.
- Brief pauses between cycle phases and clicking sounds before filling are normal operations.
- Clean the inlet hose screens regularly to prevent water restriction, which can cause the machine to pause.

Lid is locked or not opening

- For safety reasons, the lid stays locked during the entire wash operation.
- To open the lid, press **Start/Pause** to pause the washer, and wait a few seconds for the lid mechanism to unlock.
- Do not force the lid open. If the washer is turned off or there is a power outage, the lid will unlock automatically when power returns or after the system resets (this may take up to three minutes).

The appliance does not drain or spin

- Check the household fuse or reset the circuit breaker.
- Straighten the drain hose if it is kinked or crushed.
- Adjust the drain hose to the correct height (between 39 and 96 inches). If it is pushed

too far down the standpipe, it can cause a siphoning issue.

- Contact a plumber if you suspect the household drain pipes are clogged.
- Close the lid and press **Start/Pause**.

Incorrect water temperature

- Ensure the household water heater is set to deliver water at a minimum of 120°F (49°C) to the tap.
- Fully open both hot and cold water taps.
- Ensure each hose is connected to the correct tap and washer inlet (Hot to Hot, Cold to Cold).
- Disconnect the hoses and clean the inlet screens.

Load is wet after the cycle

- Use only high-efficiency (HE) detergent to reduce suds. Excess suds can prevent the washer from spinning at full speed.
- Very small loads can become unbalanced and may not spin out completely. Add a few similar items, such as towels, to balance the load and run a Rinse & Spin cycle.
- Ensure you have selected a high enough spin speed for the load type.

Water leaks

- Tighten all water inlet hose connections at the taps and at the back of the washer. Do not overtighten.
- Ensure the drain hose is correctly inserted and secured in the standpipe or laundry tub.
- Do not overload the washer.
- Use only high-efficiency (HE) detergent to prevent oversudsing, which can cause water to leak from the tub area.

Oversuds condition

- Use only the manufacturer-recommended amount of high-efficiency (HE) detergent.
- If you have soft household water, reduce the amount of detergent used.
- To clear excess suds, run a Rinse & Spin cycle with the tub empty.

7.1 Error Codes

If the washer detects an issue, it will display an error code on the control panel. Try the suggested solutions below. If the problem persists after resetting the appliance, contact an authorized service center.

Code	Possible Cause	Solutions
E11	Water fill error. The washer is taking too long to fill with water.	Ensure both water taps are fully open. Check the inlet hoses for kinks. Clean the water inlet filters.
E21	Drain error. The washer is taking too long to drain.	Check the drain hose for kinks or blockages. Ensure the drain hose is installed at the correct height.
E41	Lid error. The lid is open or not closed properly.	Close the lid completely. Check whether laundry is preventing the lid from closing. Press Start/Pause to resume.
EF5	Unbalanced load. The washer cannot distribute the laundry evenly.	Press Start/Pause, redistribute the load evenly in the tub, close the lid, and restart the cycle.
E5	During the dehydration process, the barrel collision switch signal interruption time exceeds 2 seconds.	Unplug the washer for 1 minute, then plug it back in and restart the cycle. If the code appears again, contact an authorized service center.
E91	Electronic control board error. The washer detected an internal control fault.	Communication error between the driver board and the display board has persisted for over 100 seconds.
E42	Door lock alarm	Cancel the cycle, unplug the washer for 1 minute, reconnect it, and restart. If the code returns, contact an authorized service center.
EC6	Control Lock active. This is not a fault code.	Press and hold the Child Lock button for 3 seconds to deactivate the function.
E31	Water level sensor alarm	Replace the water level sensor.
E35	Overflow alarm	The appliance can only be turned off when in alarm status.

8. LIMITED WARRANTY

For the applicable warranty period as set forth below, as measured from your original date of delivery, Electrolux will repair or replace any parts of this appliance that prove to be defective in materials or workmanship when such appliance is installed, used and maintained in accordance with the provided instructions.

Warranty Periods

All parts – One year including labor. In addition, your appliance is covered by a one year, parts only, limited warranty. During the 2nd year from your original date of delivery, Electrolux will pay for parts needed for this appliance that have proven to be defective in materials or workmanship when your appliance is installed, used, and maintained in accordance with the provided instructions.

Exclusions

This warranty does not cover the following:

1. Products with original serial numbers that have been removed, altered or cannot be readily determined.
2. Product that has been transferred from its original owner to another party or removed outside the USA, Puerto Rico, or Canada.
3. Rust on the interior or exterior of the unit.
4. Products purchased “as-is” are not covered by this warranty.
5. Products used in a commercial setting.
6. Service calls which do not involve malfunction or defects in materials or workmanship, or for appliances not in ordinary household use or used other than in accordance with the provided instructions.

7. Service calls to correct the installation of your appliance or to instruct you how to use your appliance.
8. Expenses for making the appliance accessible for servicing, such as removal of trim, cupboards, shelves, etc., which are not a part of the appliance when it is shipped from the factory.
9. Service calls to repair or replace appliance light bulbs, air filters, water filters, other consumables, or knobs, handles, or other cosmetic parts.
10. Pickup and delivery costs; your appliance is designed to be repaired in the home.
11. Surcharges including, but not limited to, any after hour, weekend, or holiday service calls, tolls, ferry trip charges, or mileage expense for service calls to remote areas, including the state of Alaska.
12. Damages to the finish of appliance or home incurred during installation, including but not limited to floors, cabinets, walls, etc.
13. Damages caused by: services performed by unauthorized service companies; use of parts other than genuine Electrolux parts or parts obtained from persons other than authorized service companies; or external causes such as abuse, misuse, inadequate power supply, accidents, fires, or acts of God.

Disclaimer of implied warranties; Limitation of remedies

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW, BUT NOT LESS THAN ONE YEAR. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS

WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

If You Need Service

Keep your receipt, delivery slip, or some other appropriate payment record to establish the warranty period should service be required. If service is performed, it is in your best interest to obtain and keep all receipts. Service under this warranty must be obtained by contacting Electrolux at the addresses or phone numbers below.

This warranty only applies in the USA, Puerto Rico and Canada. In the USA and Puerto Rico, your appliance is warranted by Electrolux Major Appliances North America, a division of Electrolux Home Products, Inc. In Canada, your appliance is warranted by Electrolux Canada Corp. Electrolux authorizes no person to change or add to any obligations under this warranty. Obligations for service and parts under this warranty must be performed by Electrolux or an authorized service company. Product features or specifications as described or illustrated are subject to change without notice.

USA & Puerto Rico

1-877-435-3287

Electrolux Consumer Products, Inc.

North America

10200 David Taylor Drive

Charlotte, NC 28262

Canada

1-800-265-8352

Electrolux Canada Corp.

5855 Terry Fox Way

Mississauga, Ontario, Canada L5V 3E4

9. QUEBEC RIGHT TO REPAIR

<https://www.electrolux.ca/EN/OWNER-SUPPORT/RIGHT-TO-REPAIR/>

Though Electrolux makes every effort to make replacement parts, repair services and information necessary to maintain or repair our products available to consumers, parts, service and information are not guaranteed, pursuant to section 39 of the Consumer Pro-



tection Act, CQLR, c. P-40.1 and sections 79.18 to 79.20 of the Regulation respecting the application of the Consumer Protection Act, CQLR, c P-40.1, r. 3.



