

Wanbo Projector Mozart 1 Pro

Introduction Manual

Before using this product, please read this product manual carefully

Thank you for purchasing our products. For your safety and benefit, please read this product manual carefully before using. If you fail to follow the product instructions or precautions, and use any personal injury, property or other losses, the company will not bear any responsibility.

Important Safety Precautions

 
You are recommended to use the projector in a dark room to achieve the best effect.

1. Please don't install in places that directly blown by cold and warm air of air-conditioning, water condensation or high temperature may lead to failure to the machine.
2. Ensure adequate ventilation and vent are not blocked to prevent heat accumulation inside the machine.
3. Please prevent foreign matters such as nails or paper scraps from falling into the machine. Do not insert any metals such as iron wire or screwdriver into the machine. Please turn off the power immediately and turn to professional technician to remove it if any foreign matters fall into the body.
4. Do not place any liquid on this machine to avoid risk of electric leakage.
5. Please use soft packaging materials to move the projector, install lens protection cover to protect the lens from scraping, in addition, keep the projector from violent vibration.
6. Areas near the exhaust will become hot during and after we use the projector, it may lead to scald if we touch with hand.
7. Please don't watch lens directly when it's on so as to protect our eyes from damage.


Note:

- Don't open the shell to prevent electric shock, Please turn to qualified professional maintenance personnel for the maintenance as there are no parts in the machine that users can repair themselves.
- Don't expose the machine to rain or moisture so as to prevent misfire or electric shock.
- The product is applicable to be used under a temperature of 0-35 °C for a safe side.


Important Safety Precautions

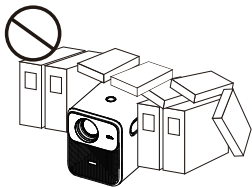

 
Don't install in places with poor ventilation

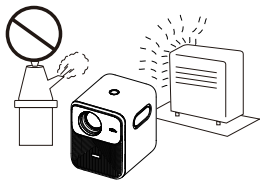

 Don't install in places that hot and humid




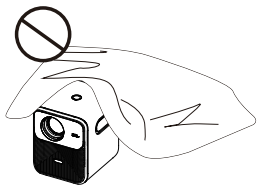


Don't block the vent (Inlet or Outlet)

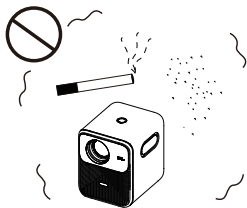 

Don't install in dusty and smoky areas

    Projector Part Name and Function

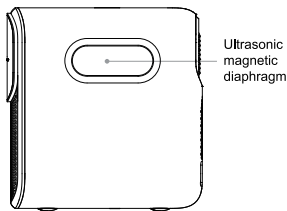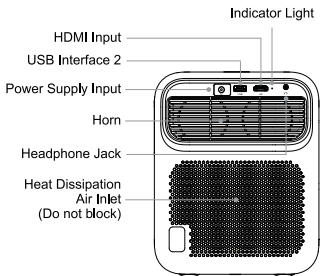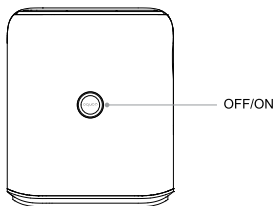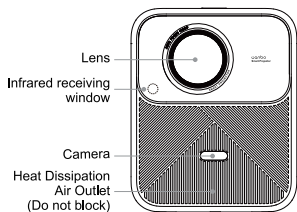


Installation and Adjustment

1. Device Power-On and Power-Off

Power-On

Method 1: Press the power button on the projector to start.

 Method 2: Point the remote control to the projector and press the power key to turn it on.

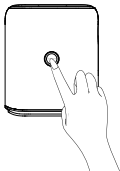

Power-Off

Short press the power button or the "⊙" key on the remote control, once shutdown prompt box appears, short press the power button or the power key on the remote control again.



2. Adjusts Focal Length




Schematic diagram of blurred image



Focus Length: When the picture image is blurred (indicated as the right picture), adjust the lens focus through "F+" "F-" on the remote control to achieve the best definition.

Projector hanger installation steps

 1



Remove the 4 pads

2



Adjust hanger angle to align with the hole and then tighten screws

3




Fixed the hanger

Basic Parameters

Product Name	Wanbo Projector	Display Principle	LCD
Light Source	LED	Horn	8W*2
Operation Mode	Remote Control	Working Environment	0-35 ° C
Output Port	Headphone Audio Output	Input Port	HDMI/USB
Net Weight	3.3kg	Machine Size	209*176*223mm
Accessory	User Manual / Remote Control / Power Cord / Power adaptor		

 Remote Control

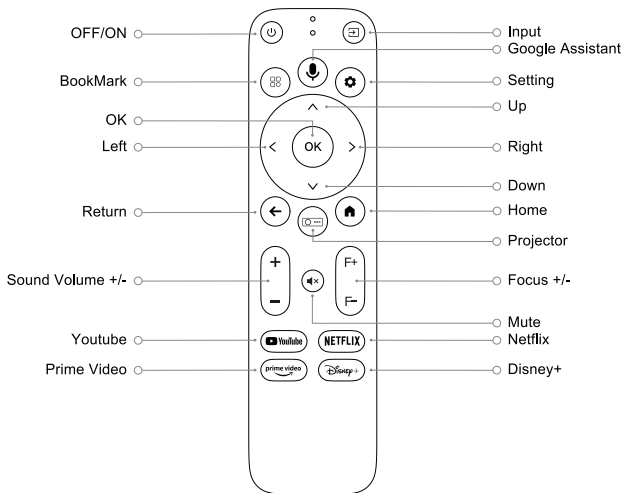

Instructions

- Indicator Light:** Indicator light on the remote control flashes when press any key and flashes quickly under low battery.
- Bluetooth Pairing:** Pressed the “Projector” + “Return” keys together on your Remote Control for 10 seconds.
- Google Assistant:** Press the Google Assistant button on your remote to talk to Google.

Mobile Phone with the Same Screen

The following steps can help us to display content of our mobile phone to projection screen synchronously through wireless wifi, just enjoy with a larger picture (Applicable for intelligent Android version only).

Equipment requirements: support devices above IOS6 and Android 5.3 Min.



iPhone

Support for IOS6 or Over IOS6



Android

Support for Android 5.3 Min

Same Screen User Instruction – Android Devices

1. Ensure the Phone and Projector under the same WIFI.
2. Open Projection function via setting in the phone.
3. Find the projection name "D1221" corresponding to the projector, click connect to complete same screen process.

 
Same Screen User Instruction - IOS Devices

1. Ensure the Phone and Projector under the same WIFI.
2. Download "AirScreen" in Google Play Store of the Projector.
3. Open "AirScreen", follow App prompts.
4. Open console of the Phone, click "AirPlay" to search and connect the device.
5. Find the projection name "AS-D1221" corresponding to the projector, click connect to complete same screen process.

IOS Old Version



IOS New Version



How to be with the same screen for iPhone under status of No Wifi

1. If there has no WIFI, firstly open 4G network of iPhone, then open WIFI hot spot in the "Settings" interface of the phone.
2. Download "AirScreen" in Google Play Store of the Projector.
3. Open "AirScreen", follow App prompts.
4. Open console of the Phone, click "AirPlay" to search and connect the device.
5. Find the projection name "AS-D1221" corresponding to the projector, click connect to complete same screen process.

Mobile Phone Projection

How to "push" contents to the projector

* Note: Advantage of push is it does not affect normal use of the mobile phone.

1. Ensure the Phone and Projector are under the same WIFI.
2. Open video software of the mobile phone and finds the TV push icon in the four corners (it's usually on the top right or on the bottom right) (Each APPs have different push icon design).

* Note: Not all video software have function of push.

3. Click this icon to push videos to the projector. At the same time, we can have other. operations on the phone, it will have no conflict.



Schematic diagram of some push icons

Singal Source Setting

Enter Setting interface in the main screen and  select input source. Enter into AV/HDMI signal channel, Press "OK" " to switch input source.

Note:

If you want to return to the previous layer, please press the return key;

If you want to return to the main interface, please press the main screen key.

U Disk Support Format

File Type	File format supported
Picture	JPG/PNG/BMP
Video	AVI,DAT,FLV,MKV,MOV,MPG,MPEG,MP4,RM,RMVB,SWF,3GP,TS,VOB
Audio	AMR,FLAC,M4A,MP3,MP2,OGG,WAV

Note: Specific operation contents are subject to actual situation due to irregular update of the product system.

Projection Distance Reference

Projection size (under status of no keystone correction / Inch)	Screen length * width (cm)	Lens ~ screen (m)
55	122 × 68	1.49
60	133 × 74	1.63
70	155 × 87	1.9
80	177 × 100	2.17
90	199 × 112	2.44
100	221 × 125	2.71
110	244 × 137	2.98
120	266 × 149	3.25

Note: Projection size and distance are calculated according to projection ratio, which may have a deviation and subject to actual status.

Cleaning Method

Please make sure the power plug is unplugged before cleaning.

Do not use pesticides or other volatile chemicals on the projector or lens. Do not let rubber or vinyl products contacts the projector for a long time, which will damage the coating and make it peeled off.

· Clean the Projector

1. Wipe with a soft, dry cotton cloth. If it's dirtied seriously, we can wipe with soft cloth that stuck with diluted neutral detergent, then dry with a clean and dry cloth. Please pay more attention if used with chemical fiber cloth.
2. Don't use thinner, benzene or any other solvents to avoid quality reduction or coating peeling off etc.
3. A brush can be inserted into the front of the vacuum cleaner to remove dirt inside the vents. Please don't use vacuum cleaner with no connector, or clean with vents directly.
4. Please don't scrape the machine with nails or any other hard objects so as to avoid scratches.

· Lens Cleaning

1. Clean lens with the same method for camera lens: please use professional blow dryer or cleaning paper for glasses, ensure lens are not scratched.

· Inlet and Outlet Dust Cleaning

1. Dust in the inlet and outlet will prevent ventilation and increase the internal temperature, which will cause defect.
2. Disconnect power line after turn off the projector.
3. Clean the exterior with an electric vacuum cleaner, please install brush head adapter on the vacuum cleaner first. Kindly take note: don't use vacuum cleaner with no connector or brush.

Poisonous and Harmful Substance, Element Name and Content

Part name	Hazardous substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Shell	○	○	○	○	○	○
Optical Machine	○	○	○	○	○	○
Circuit Board	○	○	○	○	○	○
Fan	○	○	○	○	○	○
Other Wires	X	○	○	○	○	○
Remote Control	○	○	○	○	○	○
Power Supply	○	○	○	○	○	○

O: Content of the hazardous substance in all homogeneous materials of the component is under the limits of SJ/T11363-2006.

X: Content of the hazardous substance exceeds the limit requirements specified by SJ/T11363-2006 in at least one homogeneous material of the component. The components labeled "X" have no substitutive due to global technology development limits. Circuit board assembly *: including printed circuit board and its components, electronic components, etc.



The number in the logo represents the normal environmental service life of the product. (Battery Excluded)

Warranty Card

1. We offer "three guarantees " for this product, One year warranty for non-artificial damaged since purchasing (subject to purchase record).
2. We will provide warranty service for any default caused by product technical reasons during warranty period.
3. Following situations are out of the range of guarantee:
 - ① Accessories out of the mainframe
 - ② Unauthorized disassembly and repair without our consent.
 - ③ Damage that caused by external force and other natural disasters.
4. Please fill this card and contact your distributor when products have quality problem
5. This warranty is limited to product maintenance during the warranty period, no other liability

After-Sale Service Card

Customer Name: _____ Purchase of Shop: _____

Customer ID : _____ Customer Tel: _____

Fault Description (Please describe in detail for quick maintenance):





Facebook



Twitter



Instagram

Shenzhen Wanbo Technology Co., Ltd.
www.wanbo.cn