

Fast Pairing and binding way



Please use the camera on your iPhone to scan this QR code and subsequently open the "FindMy" app to complete the link binding process.

Method 1: Use your iPhone camera to scan this QR code and click the text "Find My" Text on the page.

Method 2: Use your iPhone camera to scan this QR code and click the QR code icon on the page, and then choose "Open in Find My".

Loshall Anti-lost Device
User Manual

Index

1. Before You Start
2. Getting started.
3. Adding this device.
4. Locating this device.
5. Notifications.
6. When this device is lost.
7. Resetting this device.
8. Extras.
9. About Apple's Find My.
10. The Fine Print.

01 Before you start

This device is a smart finder that uses Apple's Find My™ service, paired with the "Findmy" app on your Apple™ devices, to quickly and securely locate your personal items on Apple™ Map. All location information remains private, and even Apple™ cannot access it.

1.1 This device only supports Apple's devices. It is compatible only with Apple's devices running iOS 14.5 or higher.

1.2 To use the Apple's "Findmy" app to locate this device, the latest version of iOS, iPad OS, or Mac OS is recommended. The "Find Items" app on Apple Watch requires the latest version of Watch OS.

1.3 Please check your Apple device and ensure the Bluetooth function, Wi-Fi function, and location function of it have been enabled and working in normal states.

02 Getting started

2.1 Power on
Press and hold the power button for 3s to turn on this device.

2.2 Power off
Press the power button twice rapidly, and on the third press, hold it down continuously until you hear the power off sound.

2.3 Check the device's working states
Double-click the power button of this device. When you hear a confirmation sound, this indicates that the device has been successfully activated and is now in its normal operating state.

2.4 Factory resetting
Press the power button four times rapidly, and on the fifth press, hold it down continuously until you hear the reset sound.

03 Adding this device

3.1 Press the power button for about 3s to activate this device.

3.2 Launch the "Findmy" app or "Find Items" app on your supported Apple device, select the "Items" tab:

3.3 Tap on the "+", and then tap on "Add other item" on your screen.

3.4 Once this device is located, tap on the "connect".

3.5 Enter a name and select an emoji icon for this device, and then tap on the "Continue".

3.6 Find My will ask for confirmation to add this device to your Apple ID, tap on the "Agree".

3.7 Tap on the "Finish" and this device will be set up and ready to be applied.

04 Locating this device

4.1 Launch the "Findmy" app or "Find Items" app on your supported Apple device, select the "Items" tab:

when it is nearby:

Tap on this device from the list.
Tap on "play sound" to make this device beep.
Tap on "stop sound" to stop the beeps once you find this device.

when it is far away:

Tap on this device from the list.
The location of this device will appear on the map with a time stamp of when this device was located.
To navigate to the location of it, tap on the "Directions" to open Apple Map.

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

05 Notifications

5.1 Enabling "Notify When Left Behind":

Launch the "Findmy" app or "Find Items" app on your supported Apple device, select the "Items" tab:
Tap on this device from the list.

Under "Notifications", enable the "Notify When Left Behind" toggle.
You will receive a notification when you leave this device behind and it's no longer in range of your Apple device.

5.2 Enabling "Notify When Found":

Under "Notifications", enable the "Notify When Found" toggle.
When this device is seen by another Find My network device, you will receive a notification of its location.

Note: "Notify When Found" can only be activated when this device is out of range.

06 When This Device Is Lost

6.1 Enabling "Lost mode":
Launch "Find My" app and select the "Items" tab or open the "Find My Items" app on your Apple Watch.

Tap on this device from the list.
Under "Lost Mode", tap on the "Enable".
A screen detailing lost mode will pop up. Tap on "Continue", enter your phone number or email address, and then tap on the "Next".

You may enter a message that will be shared with the person that finds this device or your item with it.
Tap on the "Activate" to enable "Lost mode".

Note:
When "Lost mode" is enabled, "Notify When Found" is automatically enabled.
When "Lost mode" is enabled, this device is locked and cannot be paired to a new device.

07 Resetting This Device

7.1 Remove this device from "Find My" app

Launch "Find My" app and select the "Items" tab or open the "Find My Items" app on your Apple Watch.

Tap on this device from the list.
Please ensure "Lost Mode" is disabled.
Scroll to the bottom of the screen and tap on the "Remove item".
A summary will appear, and then tap "Remove" to confirm.

7.2 Factory Reset this device.

After successfully removing this device from "Find My" app, press the power button four times rapidly, and on the fifth press, hold it down continuously until you hear a ringing chime.

08 Extras

8.1 Unwanted tracking

If any Find My network accessory separated from its owner is seen moving with you over time, you will be notified in one of two ways:

a. If you have an iPhone, iPad, Find My will send a notification to your Apple device. This feature is available on iOS or iPad OS 14.5 or later.

b. If you don't have an iOS device or a smart phone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved.

These features were created specifically to discourage people from trying to track you without your knowledge.

09 About Apple's Find My

The Apple's Find My network provides an easy, secure way to locate compatible personal items on a map using the Find My app on your iPhone, iPad, or Mac. Simply pair your compatible product with the Apple Find My app to view it right alongside your Apple devices. If your item ever goes missing, you can put it in Lost Mode to display a message and contact information to anyone who might find it. The Find My network is encrypted and anonymous. So, no one else, not even Apple or the maker of your personal item, can view its location.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPad OS, Mac, Mac OS and watch OS are the trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S and other countries and is used under license.

10 The Fine Print

FCC Statement

1. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules.
These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
. Reorient or relocate the receiving antenna.
. Increase the separation between the equipment and receiver.
. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
. Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.



Warning: Don't ingest battery;
Chemical burn hazard.

Choking hazard

This Loshall anti-lost device may contain a coin cell battery. Keep batteries away from children. Do not ingest battery. If ingested or placed inside body, seek medical attention immediately. Ingesting can cause severe chemical burns in just two hours and result in serious injury or death. If the battery compartment does not close securely, stop using the device and keep away from children.

Loshall anti-lost device, the battery compartment door, the battery and case may present a choking hazard or cause other injury to kids. Keep these items away from kids.