

PAPAGO![®]

Quick Start Guide



dashcam

GoSafe 200

Table of Contents

Disclaimer	2
Safety Instructions	3
Warnings	3
Caution	4
Product Overview	5
Packaging Contents	5
Dashcam Illustration	6
Installation Guide	7
Installation Position	7
Installation Method	8
MicroSD Installation	9
Operating the Dashcam	10
Turning Dashcam On	10
Turning Dashcam Off	10
Button Functions	11
Indicators	12
Screen Icons	12
Recording	13
Snapshot	13
Playback	14
PC Mode	14
AV Output	15
Firmware Upgrade	15
Settings	16
Useful Information	19
Cleaning	19
Preservation	19
Troubleshooting	19

 
Disclaimer

1. Please follow the set-up and usage instructions in the print material that came with this Dashboard Camera (dashcam) product.
2. You should not set/install this dashcam at a place that would obstruct or reduce a driver's view; make sure your usage comply with pertinent vehicle codes of your state, province, territory or country.
3. You should post the required notices of recordation to occupants inside the vehicle, if voices or other information/signal pertaining to in-vehicle activities will be recorded.
4. You should not change the dashcam's setting or mode of operation or when the vehicle is in motion.
5. The optional driving warning signals, including any visual or audible reminding signals, should not replace your decision-making and judgment that are needed for the proper operation of the vehicle.
6. You should not leave the dashcam in a visible spot when no one is inside the vehicle, to avoid attracting break-ins to steal the unit, or other property.
7. You should avoid extended exposure of the dashcam to direct sunlight or extreme temperatures (either high or low temperature) which tend to degrade or damage the unit and its normal functionality.
8. You should examine, check and/or verify the dashcam at least every six (6) months, including the associated memory cards, to ensure the video reception and recording are working properly. For each use, you should verify that the dashcam unit, the visible lights and the audible sounds are working normally. If there are signs of non-operation or mal-function, you should immediately seek to replace the product and check to see if the product is covered under any applicable warranty.
9. The dashcam unit may have additional functionality, such as transmission and recordation of audible or GPS signal or other identification information. If you have privacy concerns about these functions, make sure you follow the instruction to disable these functions.
10. You should use the dashcam unit in the way it is intended. You should not use the dashcam unit in a way that would be illegal or that tends to physically damage the unit, or tends to cause danger to the safe operation of the vehicle or the occupants.

Safety Instructions

Warnings

- Do not install or operate the Dashcam with wet hands.
- Do not install the Dashcam in places with high humidity, flammable gases, liquids, and positions blocking the sight of drivers or the safety area.
- Do not expose the Dashcam in high temperature inside a sealed compartment for a long time.
- Do not use the Dashcam in excess of the rated voltage.
- The cigarette lighter socket of your car continues to supply electricity after the engine is off, please disconnect the Dashcam plug from the socket before leaving the car to prevent the automotive battery from depletion or other accidents.
- Keep the Dashcam, accessories, and package away from children!
- Use only the charging cable provided by the manufacturer. This company assumes no responsibility for any damage caused by the use of non-genuine charging cables.
- Do not disassemble the Dashcam or the charging cable.

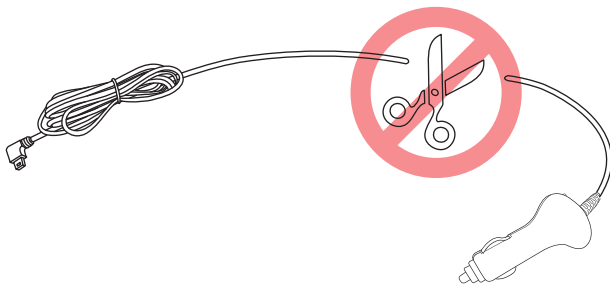

 **Do not cut the charging cable!**

Damage caused to the Dashcam as a result is not covered by the warranty!

- Please recycle the battery in accordance with local laws and regulations.
- Please do not attempt to disassemble, modify or heat up the battery.
- Do not replace the battery by yourself. Improper battery replacement may result in explosion!
- Keep the battery away from water (e.g. seawater) and other liquids.
- Prevent short circuit on the battery.
- Keep the battery away from direct sunlight, a fire, or an environment with excessive heat to prevent explosion.
- Do not throw the battery in a fire to prevent explosion.

Caution

- Do not forcefully press the lens.
- Do not prick the Dashcam or accessories with an awl or sharp object.
- Do not immediately remove the MicroSD from a shutting down Dashcam to prevent the file from damage.
- Please use a Class 6 MicroSD with at least 8GB (maximum 32GB).
- Before using the MicroSD on the Dashcam for the first time, please format the MicroSD with the Dashcam to ensure read/write stability.
- Do not disconnect power during system upgrade! The Dashcam may be unable to boot afterwards!
- Contents of this manual are subject to change without prior notice.

 
Product Overview

Package contents


- Dashcam



- Car Charger

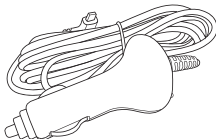


- Rear-View Mirror Clip

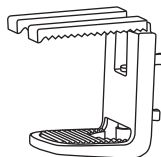 

- Quick Start Guide




 - Warranty Card



 Packaging contents are subject to change without prior notice.

 
Dashcam Illustration

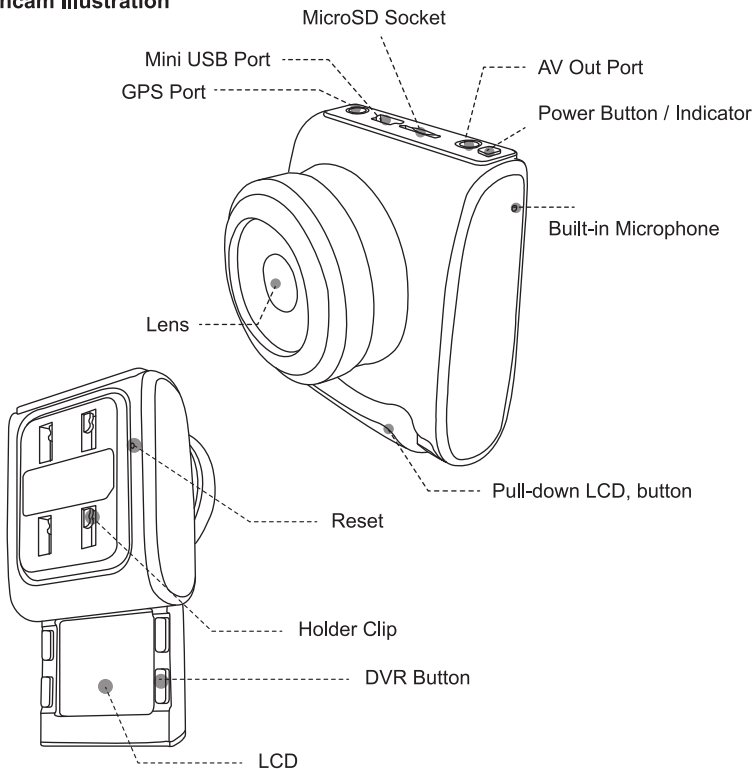

Installation Guide

Installation Position

 
- Do not install the Dashcam in a position that will block the sight of drivers or in the safety area.
- Install the Dashcam near the rearview mirror with the best vision available.
- Install the Dashcam within the wiper area to ensure clear vision on rainy days.
- Do not install the Dashcam near the airbag operating range.
- Do not install the Dashcam on the windscreen protection film to prevent damage on the protection film.
- Install the Dashcam in a position away from protection film impact or the influence of any electronics.

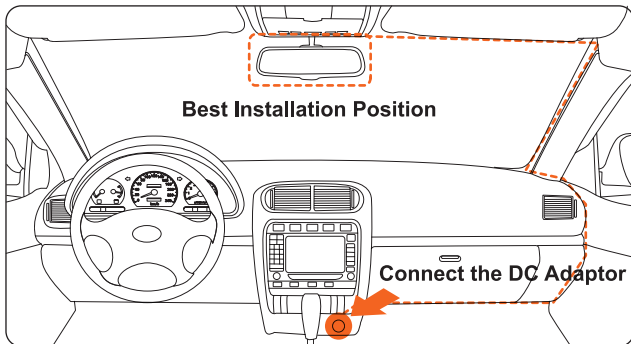

⚠ Do not install the Dashcam on top of the airbag cover or the airbag operating range. This company assumes no responsibility for injury or death caused by car impact or airbag problems.


Installation Method

- 1.Connect the holder hooks with the holder clip.
- 2.Pull the two legs on the Dashcam back upward to extend the leg range.
- 3.Install the Dashcam in a suitable position on the back of rearview mirror, with the lens facing the windscreen. Squeeze the legs to secure the Dashcam on the rearview mirror.
- 4.Adjust the Dashcam angle to center the head of the car.
- 5.Connect one end of the DC adapter to the cigarette lighter socket and the other end to the Mini USB port on the Dashcam.

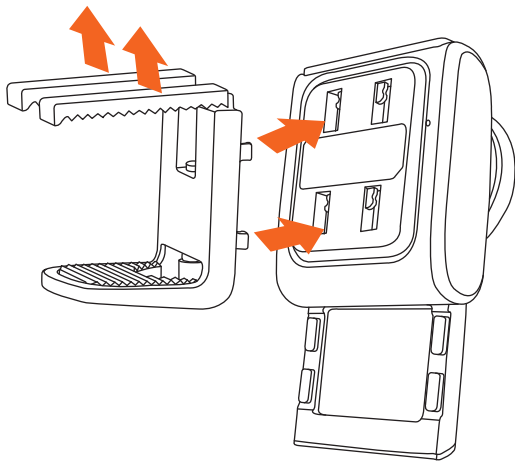

MicroSD Installation

Install the MicroSD in the MicroSD socket with the pins facing upwards.

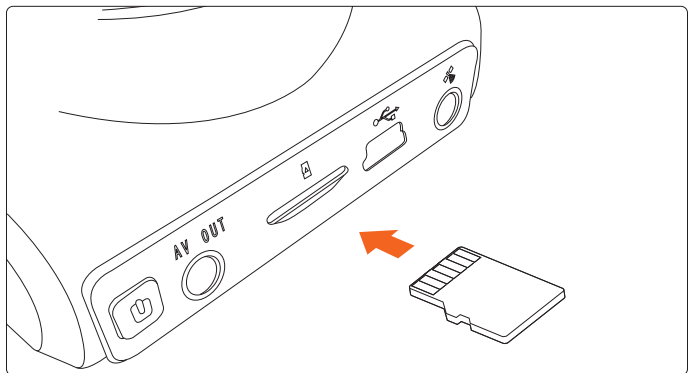

Operating the Dashcam

Turning the Dashcam on

- Auto ON

Insert the MicroSD in the MicroSD socket on the Dashcam. Connect one end of the DC adaptor to the cigarette lighter socket and the other end to the Mini USB port on the Dashcam. Start the car and the Dashcam will be turned on automatically.

- Manual ON

After connecting the Dashcam to a power source, press the power button “  ” on the Dashcam to turn on the Dashcam.

Turning Dashcam Off

- Auto OFF

When the Dashcam is turned on, after turning off the engine and unplugging the adaptor, the Dashcam will be turned off automatically (motion detection is disabled).

 **Remove the MicroSD from the Dashcam only after the Dashcam is turned off completely to prevent files from becoming damaged. Do not remove the MicroSD from an operating Dashcam to prevent system damage.**

 **Turn off the Dashcam manually on cars whose cigarette lighter socket is not disconnected from electricity after the engine is off.**

- Manual Off

When the Dashcam is on, press and hold the power button “  ” for 5 seconds to turn off the Dashcam.

Button Functions

● Recording mode



Manual Emergency Recording



Enter "Setup Mode"
(press and hold for 3 sec.:
Photograph the current scene)



Enter "Playlist"



Turn screen display ON/OFF
(press and hold: turn voice
recording on/off)

● Playlist



Enter "Recording Mode"



Next Page



Previous Page



Select Video/Photo

● Playback mode



Enter "Playlist"(press and hold:
enter "Recording Mode")



Lock/unlock the selected
video/photo



Delete the selected video/photo



Pause/Play

● Settings



Previous Menu



Next Page



Previous Page

 


Confirm

Indicators

Color	Status	Definition
Red	On	Charging in progress
	Off	Charging completed
Green	On	Non-recording mode
	Blink	Recording mode
	Off	System off

Screen Icons

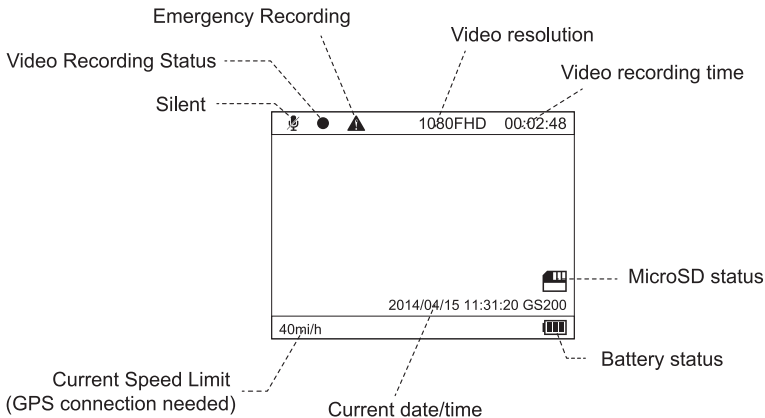

Recording

- Repeat Recording
 - Insert the MicroSD in the MicroSD socket. Loop recording begins after the Dashcam is turned on.
 - The default length of each session is 3 minutes.
 - When the MicroSD is full, new recordings will replace old recordings.

 **Remove the MicroSD from the Dashcam only after the Dashcam is turned off completely to prevent files from becoming damaged. Do not remove the MicroSD from an operating Dashcam to prevent system damage.**

- Emergency Recording
 - Auto Emergency Recording

When “G-Sensor” is enabled, the Dashcam will automatically lock on the current recording after detecting an impact to prevent the recording from being replaced in the loop-recording mode.

 **Set the sensitivity of impact detection from “Settings—G-Sensor”.**

- Manual Emergency Recording

During a recording session, press the “ ” to write-protect the current recording and to prevent the recording from being replaced in the loop recording mode.

Snapshot

- During a recording session, press and hold the “ ” for 3 seconds to switch the current recording into snapshot mode.
- The snapshot function will not affect video recording.

Playback

In the recording mode, press the “” button to enter the “Playlist” After selecting a video/photo, press the “” button to play the selected video/photo.

In the playback mode, press the “” button to select the video/photo you wish to delete.

 **Videos/photos indicated by the “” icon are locked (protected) videos/photos.**

 **Locked videos/photos cannot be deleted. Please unlock them before deletion.**

PC Mode

- 1.Connect the Dashcam to a PC over the Mini USB port.
- 2.Press the power button “” to turn on the Dashcam.
- 3.The Dashcam will be detected by the PC as a “Removable Drive”.
- 4.Enter the “CARDV” folder.
- 5.Copy the required data to the PC.

 **MOVIE Folder: Video files (including both ordinary and emergency recordings)**

 **PHOTO Folder: Photo files**

AV Output

- 1.Connect the Dashcam to an output device with the AV port.
- 2.Set the signal source on the output device to AV.
- 3.Instead of the Dashcam LCD, image will be displayed on screen of the output device.
- 4.It supports video/photo recording, playback, and deletion.

Firmware Upgrade

- 1.Visit the PAPAGO official website at <http://us.papagoinc.com>.
- 2.Go to the “GoSafe 200 Product Page—Support Tab”.
- 3.Download the latest version of the GoSafe 200 firmware and extract it in the root directory of the MicroSD.
- 4.After copying, insert the MicroSD in the MicroSD socket.
- 5.Turn on the Dashcam.
- 6.When the LED indicator begins to blink, this means that the firmware is uploading correctly.
- 7.After firmware upgrade, the Dashcam will reboot again.
- 8.Enter “Settings—Version” to check if the firmware is up-to-date.



Before upgrading firmware from the MicroSD, please format the MicroSD on the Dashcam to ensure read/write stability.



Do not disconnect power supply during firmware upgrade! The Dashcam will be unable to boot!

Settings

Press the “” button to enter “Settings”.

- Resolution

Set recording resolution. Options include: 1080FHD 1920x1080, 720P60 1280x720, 720P 1280x720, WVGA 848x480, and VGA 640x480.

- Movie Length

Set the recording length of each session. Options include 3 minutes, 5 minutes, and 10 minutes.

- Date/Time

Set date, time, and date format.

- Date Stamp

Enable or disable date stamp on recordings.

- Record Audio

Enable or disable voice recording.

- Button Sound

Enable or disable button sound.

- EV—Exposure Value

Adjust EV for better effect in different lighting condition. Options include: -1.0, -2/3, -1/3, 0, +1/3, +2/3, and +1.0.

- Frequency

Set the frequency of light source in the environment. Options include 50Hz and 60Hz.

- GPS

Enable and disable the GPS function (to be purchased separately).

- G-Sensor

Set the impact sensitivity of the G-sensor. Options include: Low, Medium, High, and OFF.

- Video Output Format

Set video output format. Options include NTSC or PAL. Usually NTSC is used in the North America as well as most of South America.

- Display Language

Set display language. Options include 简体中文, 繁體中文, English, Français, Español, Deutsch, Italiano, 日本語, Português, and Русский.

- Screen Saver

Set screen time-out. Options include 1 minute, 3 minutes, and OFF.

- Motion Detection

After enabling motion detection, the Dashcam will start recording. If no motion is detected in the scene for 60 minutes, the Dashcam will stop recording. If a motion is detected in the scene, the Dashcam will start recording again, etc.

- Format SD Card

 **All data on the MicroSD will be deleted.**

 **Data is irrecoverable after formatting. Please make a backup copy of the videos and photos before formatting the MicroSD.**

- Format Prompt

Set format prompt interval. Options include 15 days, 30 days, 60 days, or OFF.

- Factory Default

Reset all values to factory default.

- Version

Check the current firmware version.

Useful Information

Cleaning

- If there is dirt on the lens, do not remove it directly with fingers to prevent affecting the shooting effect.
- If foreign objects have entered the Dashcam, please contact us. Do not attempt to disassemble the Dashcam or the adapter by yourself!

Preservation

- If you leave the car for a long time, please remove the Dashcam and unplug adapter.
- Avoid storing the Dashcam in a humid or hot place.
- To ensure MicroSD functions, please remove the MicroSD from the socket if it is not used for a long time.

Preservation

- Troubleshooting
 - Check if the adapter is (properly) connected or the battery level is too low.
 - Press the “ RESET  ” button to reboot the DVR.
- No synchronous display during recording
 - In the recording mode, check if the LCD is turned off. Press the “  ” button to turn on the LCD.
 - Check if the screen saver is activated. Change settings from “Settings—Screen Saver”.

- SD Full
 - Delete unwanted videos/photos from the Dashcam.
 - Connect the MicroSD to a PC and delete unwanted videos/photos from the Dashcam.
 - Format the MicroSD.

 **Locked videos/photos cannot be deleted. Please unlock them before deletion.**

 **Data is irrecoverable after deletion and formatting. Please make a backup copy of the videos and photos before formatting the MicroSD.**

- No playback on the Dashcam
 - Check if the filename of the videos/photos or the folder name in the MicroSD have been modified from a PC.
 - Check if the videos/photos in the MicroSD have been modified from a PC or the videos/photos in the MicroSD are not produced with the Dashcam.
 - MicroSD has crashed.

Please contact your dealer or our company if your problem persists.